



AUG A1

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.


HOP-UP SYSTEM

Produced By Classic Army, Hong Kong



1 Outlook / Structure of AUG A1

Always set the safety switch to the safe position when you are not firing or during storage

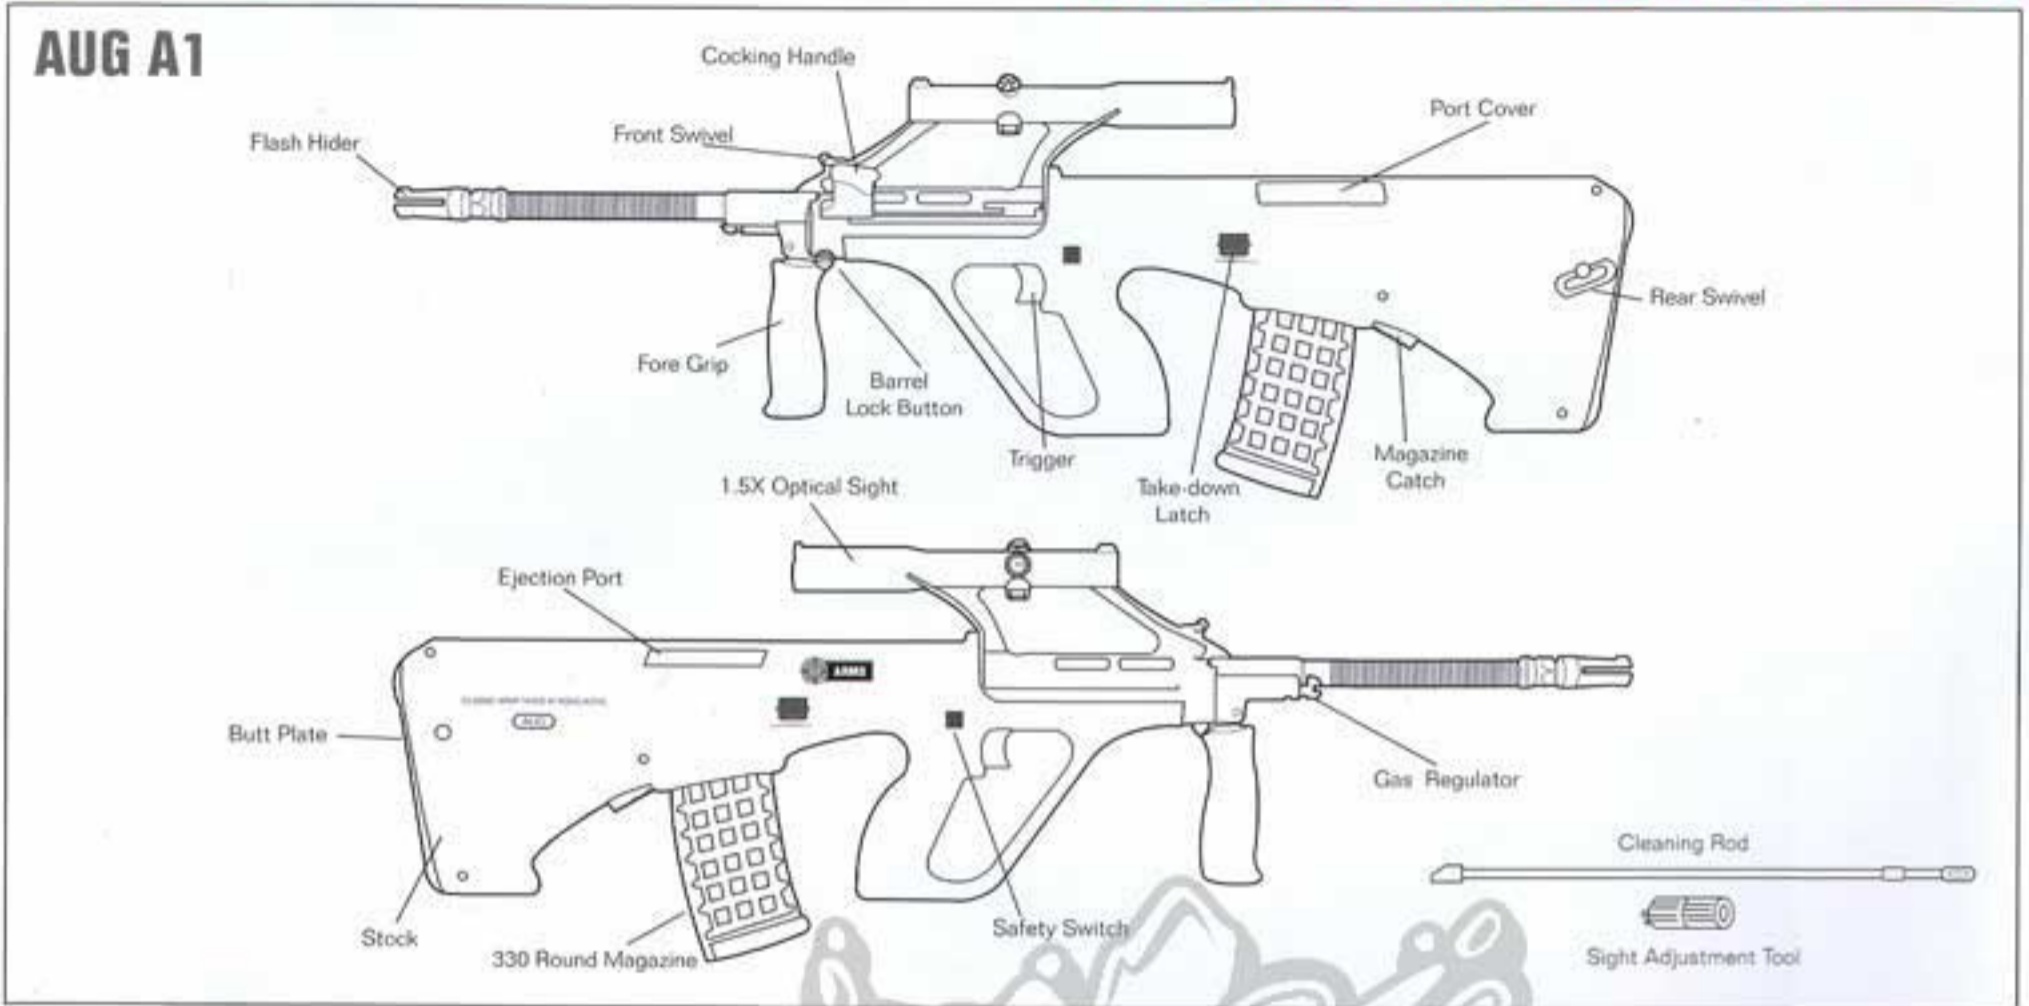


2 Specification

Data of Automatic Electric Gun

Name	AUG A1
Weight	3.3 kg
Barrel Length	510mm
Barrel Caliber	6.08mm
Pellet Capacity	330Rd
Pellet	6mmBB
Initial Pellet Speed	85 - 95 m/s
Battery Type	Mini Type 8.4v

3 Operation

1 How to use the trigger

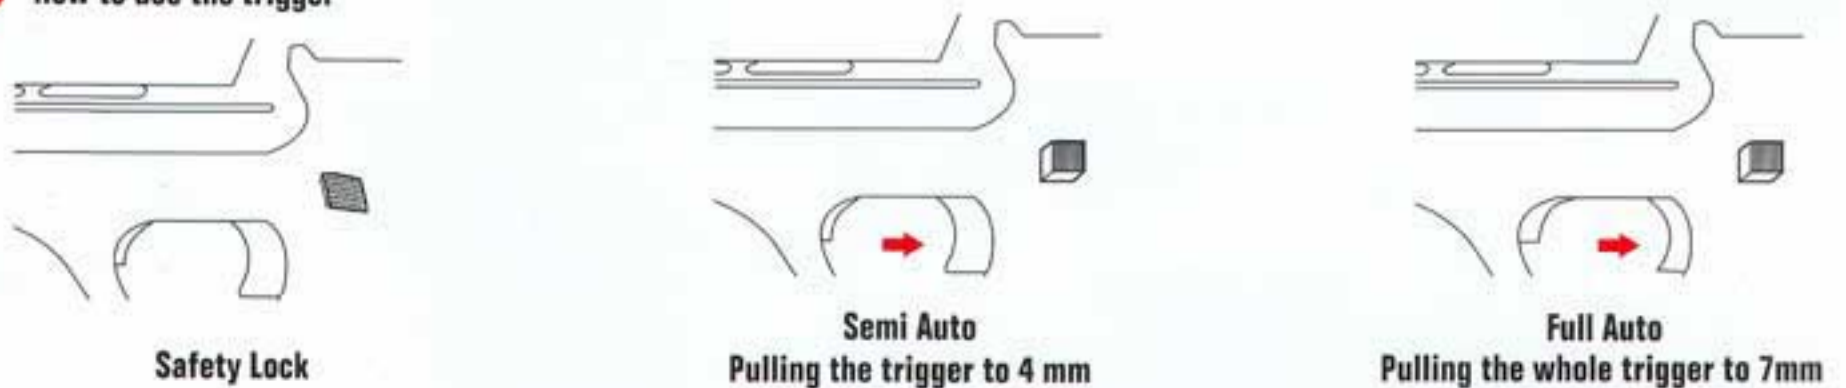

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid insertion of dust and dirt into the magazine to prevent malfunctions.

Action against problem

Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.



About 30 pellets remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.


Ensure Smooth Pellet Feeding

- Occasionally give slight shocks to the gun or shake vertically for ensuring smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets for ensuring smooth pellet feeding.

1 Press the magazine catch to detach the magazine



2 Open the top hatch and insert BB pellets. About 330 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

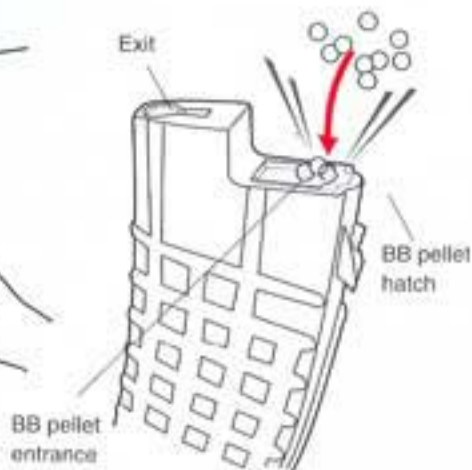

3 Close the hatch



- Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

4 Hold the magazine with BB pellet entrance facing upward. Turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)



5 Check the BB pellets whether they are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

3 How to insert battery

Set the battery after charging

1

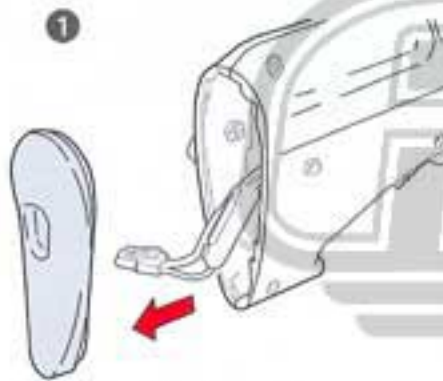


Take off the butt plate



- Be careful with your fingers
- Assure the connector and fuse box placing in the proper position

2

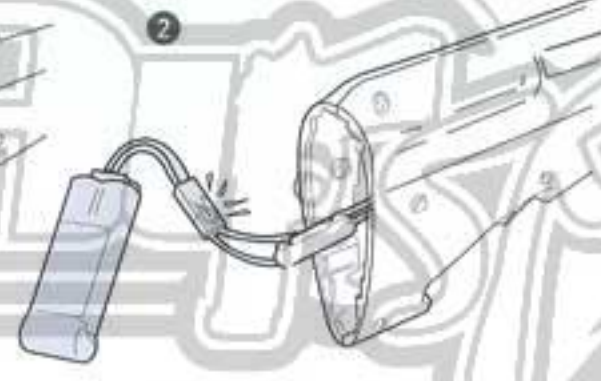

Pull out the connector and connect with the battery

3



Insert the battery and the connector inside the stock

4



Close the butt plate

4 How to adjust the hop up system

Right Side View

Hop Up Adjustment Lever

Hop

Normal

Ejection Part

- Keep pulling the cocking lever while adjusting the lever.
- Turn the hop up adjustment lever gradually.
- Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment lever when pellets fly horizontally.




Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.


The port cover may be removed and attached to the left ejection port.

5 How to fold the grip


1 Pull the grip downward and fold the grip under the barrel.

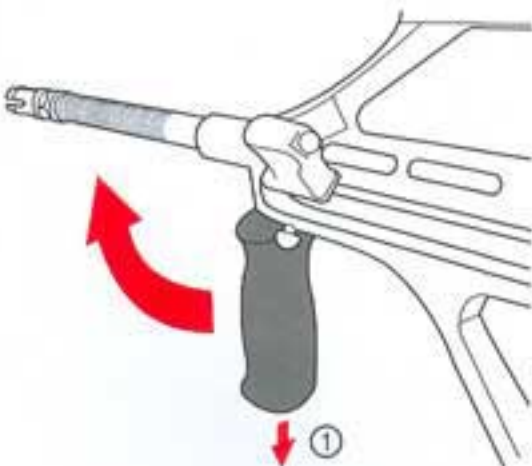

2 Three positions can be used.

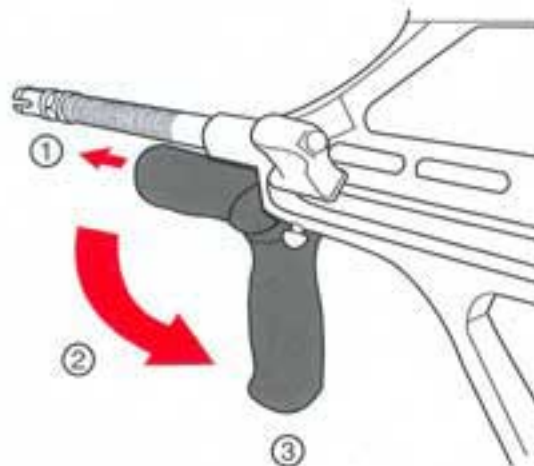

6 How to fire

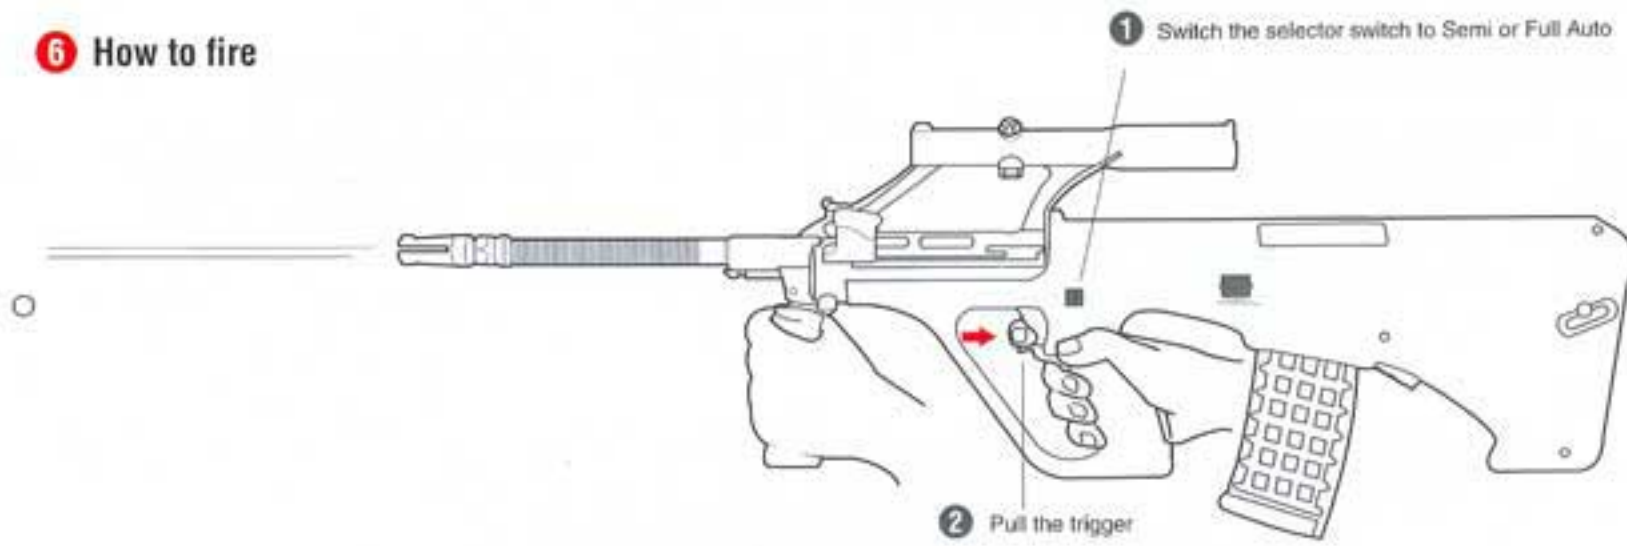

CAUTION

• There are possibilities that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.

CAUTION

• Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.

CAUTION

• The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery


- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)

4 Maintenance

1 How to use a cleaning rod

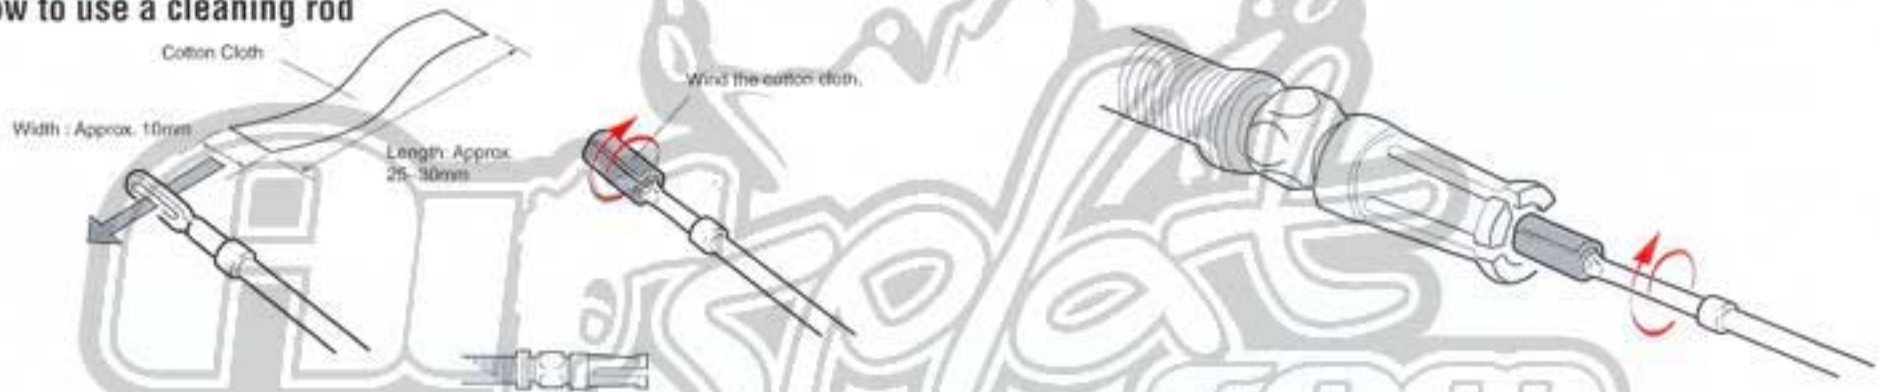

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of cloth for smooth entry into the barrel)

Hold the tip of the rod and insert it with turning motion.



CAUTION

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.


CAUTION

CAUTION: The chamber is a precision component. Never use any used BB pellets. * The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

CAUTION

Inserting the rod will be difficult if you hold the rod at the end.

- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

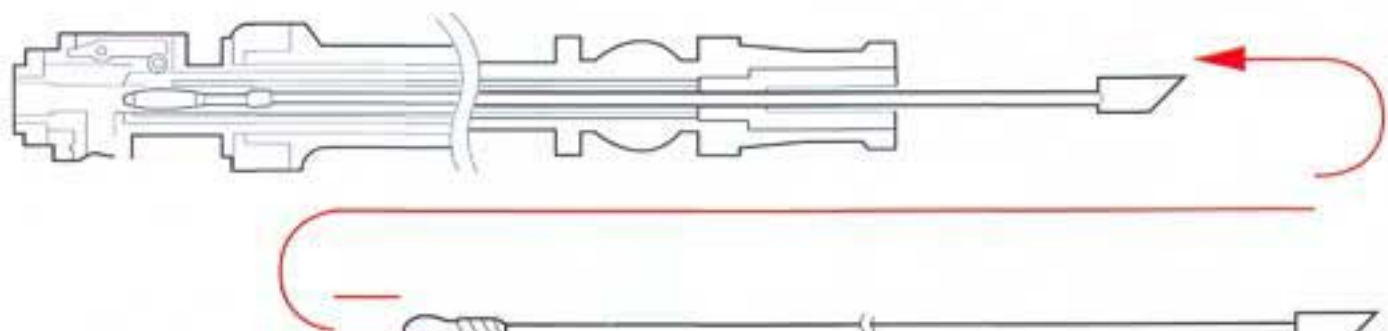

CAUTION


CAUTION: Always begin the maintenance by returning the hop up adjustment lever to Normal.

2 How to replace the fuse

1 Open the cover and pull out the fuse box

2 Change the fuse and place the fuse box back under the rib

20A Glass Tube Fuse is used

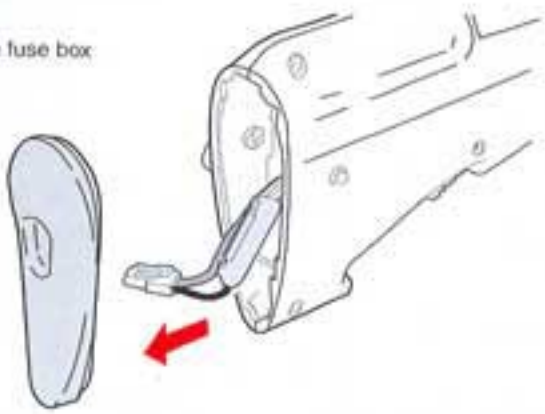


CAUTION Never use any used BB pellets



Using new 6mm BB pellet is a must



Please don't use any BB pellet which is not completed.

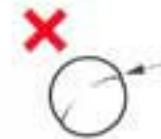

Please don't use any broken BB pellet.



Please don't use any BB pellet which diameter exceeds 6mm.

5 Normal Disassembly for Overhaul

1 How to Remove the Barrel Assembly



CAUTION

Assure sure to remove the magazine beforehand.





CAUTION

Be careful so as not to damage the chamber.

- 1 Pull the cocking handle and hook it to the receiver nail.
- 2 Press down the barrel lock button at an angle and maintain it there.
- 3 Viewing from the front. Turn the barrel assembly counterclockwise (about 20 degrees)
- 4 Slowly pull out the barrel assembly to the front.

2 How to Assemble the Barrel Assembly

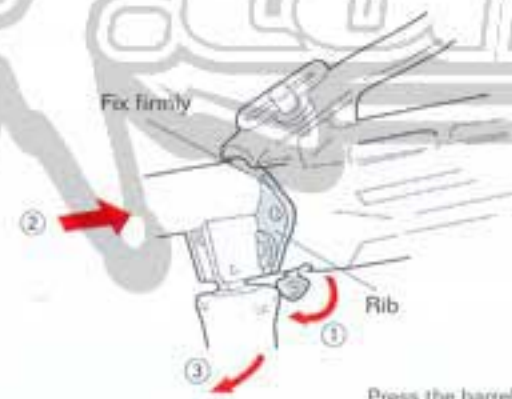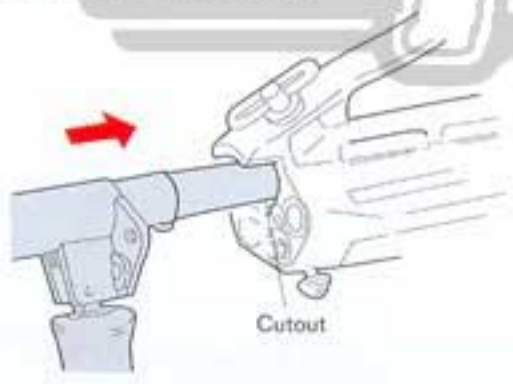


CAUTION

Press the barrel lock button and keep pressing it down.


- 1 Press in the barrel assembly, aligning the projection in the assembly with the cutout in the receiver.
- 2 Turn the barrel assembly so that the rib of the assembly is located at the front edge of the receiver.

3 How to Remove and Assemble the Receiver

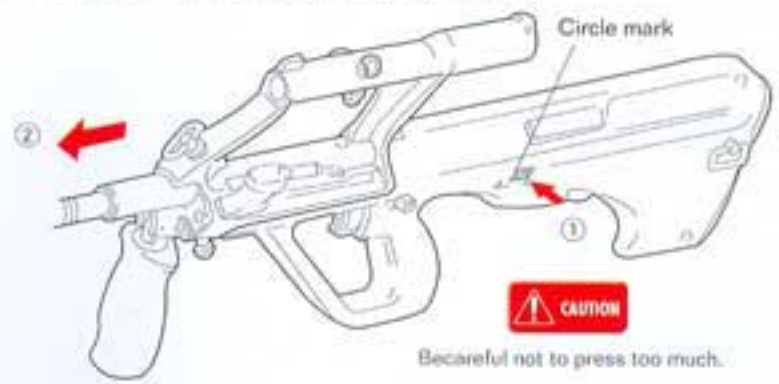

CAUTION

Be careful not to press too much.

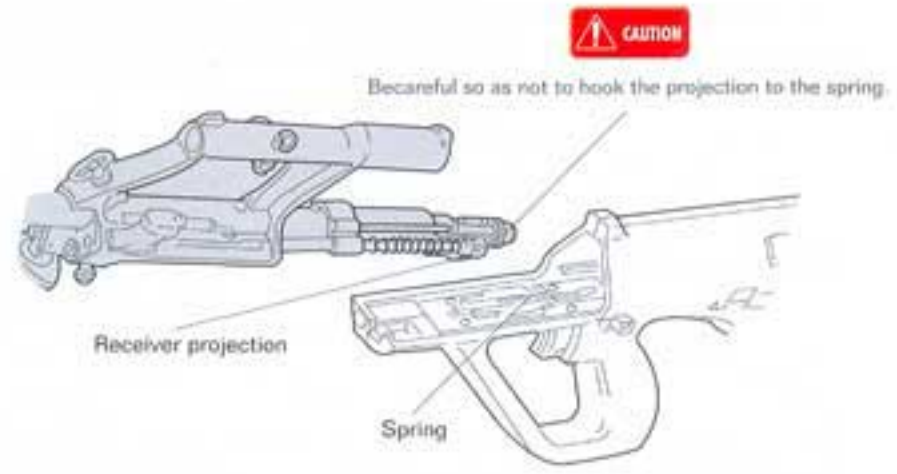

CAUTION


Be careful so as not to hook the projection to the spring.

Removal

- 1 Press the take-down latch from the circle marked position to a position a click sound is generated (about 1 cm). (Be careful not to press it too much.)
- 2 Pull out the receiver towards the front. (Be careful not to hook the projection in the receiver to the spring in the stock and above the trigger.)

Assemble

- 1 Press the take-down latch from the place without a circle mark until pressing the receiver into the stock without gap between them.

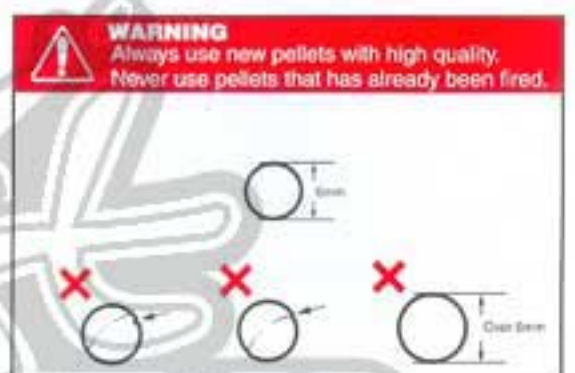6 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

7 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.LE Italiana s.r.l.
Email: visele@classicarmyitalia.com
Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
Email: sales@actionsportgames.com
Website: <http://www.actionsportgames.com/>

The United States of America

Co. Name: Spartan Imports, Inc.
Email: info@spartanimports.com
Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
Email: kssa.kssa@msa.hinet.net
Website: <http://www.soloman.com.tw/>

Russian Federation and Belorussia

Co. Name: Uragan, Ltd.
Email: blaze@uragan-sport.ru
Website: <http://www.classicarmy.ru/>

8 Exploded Diagram

