



Website: [www.classicarmy.com](http://www.classicarmy.com)  
E-mail: [info@classicarmy.com](mailto:info@classicarmy.com)

# M15A4 SOCOM



HANDLING CAUTIONS AND INSTRUCTION MANUAL



## AIRSOFT ELECTRIC GUN

### WARNING

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE.  
MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

Produced By Classic Army, Hong Kong




ARMALITE and the ARMALITE logo are registered trademarks of ARMALITE inc. U.S.A., Used under exclusive worldwide licenes for Air Soft Guns by ASG A/S, Denmark. [www.actionsportgames.com](http://www.actionsportgames.com)

## 1 Outlook / Structure

Always set the selector switch to the safe position when you are not firing or during storage

### M15A4 SOCOM

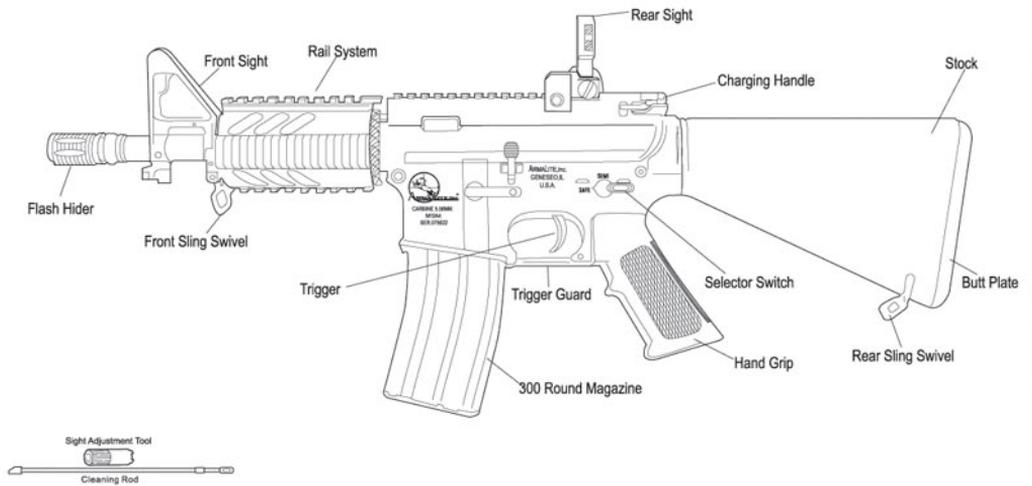


## 2 Specification

### Data of Automatic Electric Gun


Name	M15A4 SOCOM	
Weight	2.55kg	
Barrel Length	200mm	
Barrel Caliber	6.08mm	
Pellet Capacity	300	
Pellet	6mm BB	
Initial Pellet Speed	85-105 m/sec	
Battery Type	Large Type (8.4v)	

## 3 Operation
 
### 1 How to use safety lock



S : Safety Lock

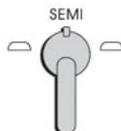

E : Single Lock



F : Full Auto


## 2 How to insert battery

**Set the battery after charging**


1. Lower the butt plate and open the cover.




2. Pull out the connectors.

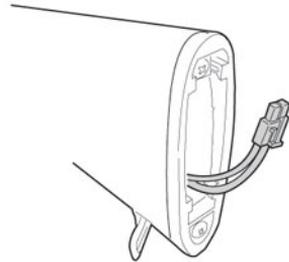

3. Insert the battery into the stock and connect the connectors.

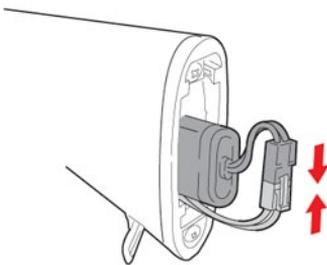

4. Close the cover.

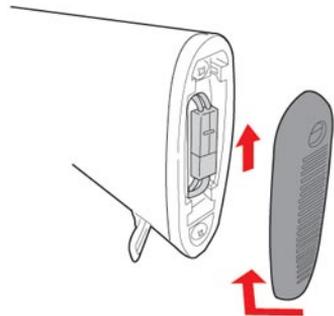

## 3 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

### Action against problem

Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 30 pellets remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.


### Ensure Smooth Pellet Feeding

- Occasionally give slight shocks to the gun or shake vertically for ensuring smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets for ensuring smooth pellet feeding.

1. Press the magazine catch to detach the magazine

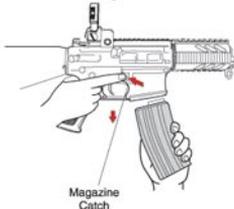

2. Open the top hatch and insert BB pellets. (About 300 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

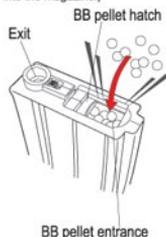

3. Close the hatch



4. Hold the BB pellets entrance facing up and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)


Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.




- Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

5. Check the BB pellets are lifted up to the exit, and then connect the magazine to the gun.

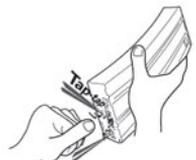

If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

## 4 How to fire

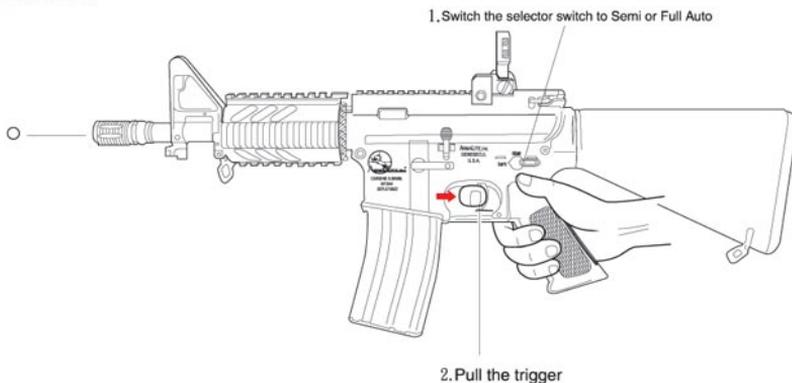

\* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

### Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

### When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)

**CAUTION**

- There are possibilities that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.

**CAUTION**


- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.

**CAUTION**


- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

## 4 Adjust the Hop-up Chamber


1 Open the ejection port cover

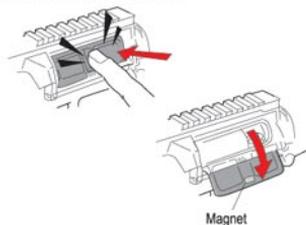

2 Keep pulling the charging handle while adjusting the dial

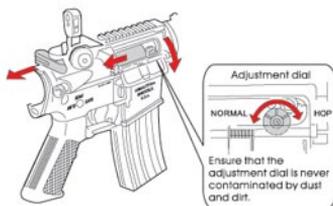


3 Turn the hop up adjustment dial gradually

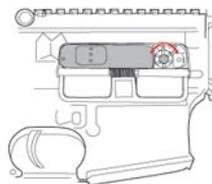


## 5 Sight Adjustment

1 Front Sight : Setting the point of impact.

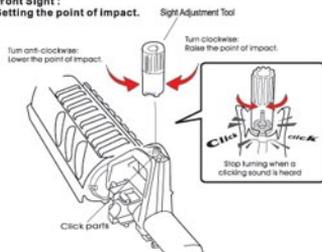

2 Rear Sight : For left or right adjustment.

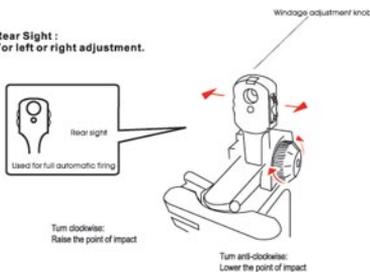


3 Rear Sight : For precision targeting.

1. Flip-up the rear sight




2. Turning the windage adjustment knob to adjust the precision firing

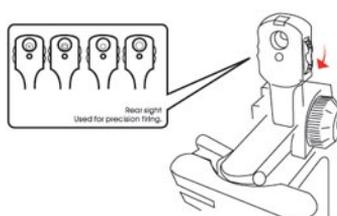

## 6 Maintenance

### 1 How to use a cleaning rod

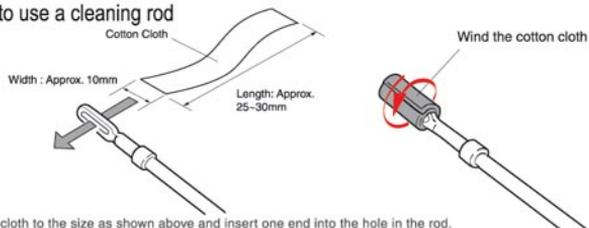

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod.  
(Adjust the length of cloth for smooth entry into the barrel.)



CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.



CAUTION: The chamber is a precision component.  
Never use any used BB pellets.

The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

 


Inserting the rod will be difficult if you hold the rod at the end.

- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine more stable.
- 2 Clean oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.



CAUTION: Always begin the maintenance by returning the hop up adjustment lever to Normal.



Never use any used BB pellets



Using new 6mm BB pellet is a must



Please don't use any BB pellet which is not completed.



Please don't use any broken BB pellet.




Please don't use any BB pellet which diameter exceed 6mm.

20A Glass Tube Fuse is used



## 7 Proper Disassembling


- 1 Remove the frame lock pin using a screw driver.

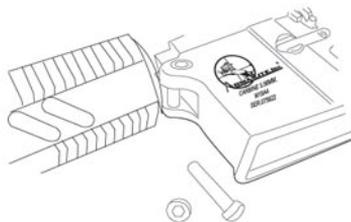


- 2 Move the upper receiver forward.




- 3 Separate the upper and lower receiver.

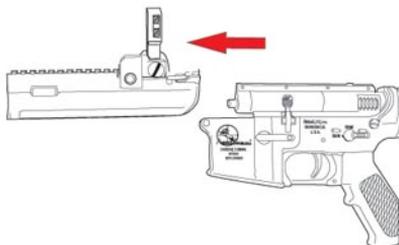

- 4 Pull out the barrel.

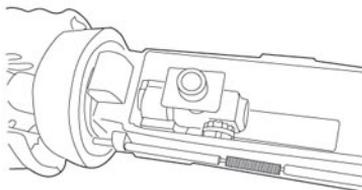

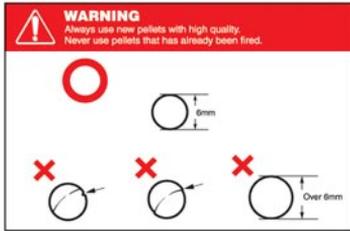**8** **WARNING**

In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

**9** For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .**Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia**

Co. Name: ActionSportGames A/S  
Add.: Bakkegaardsvvej 304, DK-3050 Humlebaek, Denmark  
Tel: (45) 89 28 18 88  
Fax: (45) 49 19 31 60  
Email: sales@actionportgames.com  
Website: <http://www.actionportgames.com/>

**Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland**

Co. Name: VI.SE.IE Italiana S.r.l.  
Add.: Via Treves n.17, 20090 Vimodrone, MI Italy  
Tel: (+39)02 25459610  
Fax: (+39)02 25118560  
Email: visele@classicarmyitalia.com  
Website: <http://www.classicarmyitalia.com/>

**The United States of America**

Co. Name: Spartan Imports, Inc.  
Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080  
Tel: (1) 650 589 5501  
Fax: (1) 650 589 5552  
Email: info@spartanimports.com  
Website: <http://www.spartanimports.com/>

**Taiwan**

Co. Name: F-Link Int'l Enterprise Co. Ltd.  
Add.: 3 Lane 62, Jiauguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.  
Tel : (886) 7-710 0198  
Fax : (886) 7-710 0398  
Email: kssa.kssa@msa.hinet.net  
Website: <http://www.soloman.com.tw/>

PDF por Sniper  
Matadores Airsoft Club  
[www.matadoresairsoft.com](http://www.matadoresairsoft.com)

