



EA8-22

HANDLING CAUTIONS AND INSTRUCTION MANUAL



AIRSOFT ELECTRIC GUN

WARNING

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE.
MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP
OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

**HOP-UP
SYSTEM**


Produced By Classic Army, Hong Kong

CA013P

1 Outlook / Structure of CA8-2


Always set the selector switch to the safe position when you are not firing or during storage

CA8-2

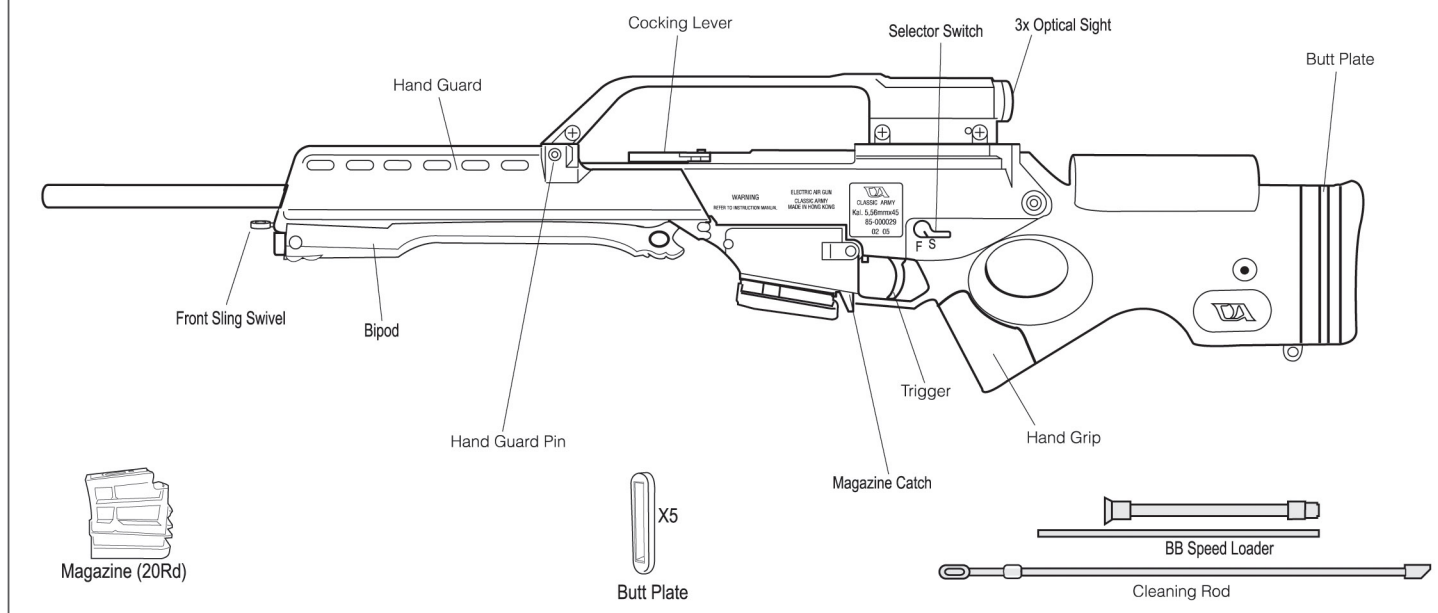


2 Specification

Data of Automatic Electric Gun

Name	CA8-2	
Weight	3.3 kg	
Barrel Length	510 mm	
Barrel Caliber	6.04 mm	
Pellet Capacity	20	
Pellet	6mm BB	
Initial Pellet Speed	85-99m/s	
Battery Type	Mini Type (8.4V)	

3 Operation


1 How to use safety lock

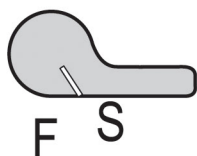

S : Safety Lock



 E : Semi Auto



F : Full Auto


2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

• Action against problem


Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.

- 1 Press the magazine catch to detach the magazine

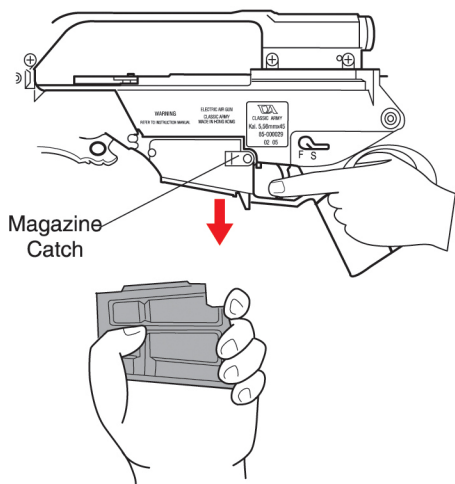

- 2 Feed the BB pellets into the charger.

- 3 Push the BB pellets into the magazine with the charging rod.

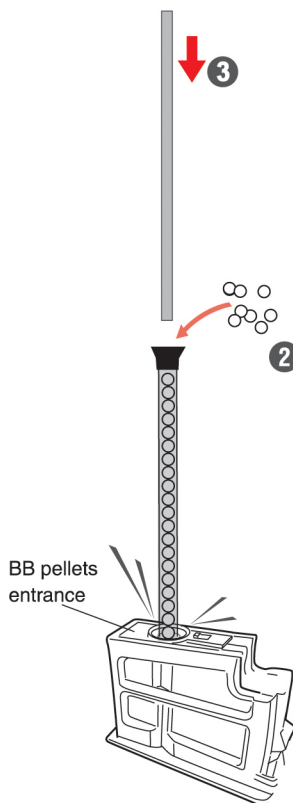


About 30 pellets remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.


3 How to insert battery

Set the battery after charging


- 1 Put the battery in the hand guard and connect the connector

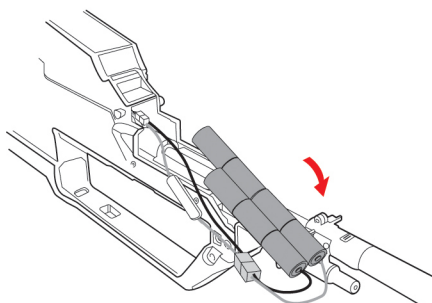

- 2 Install the connector as shown.


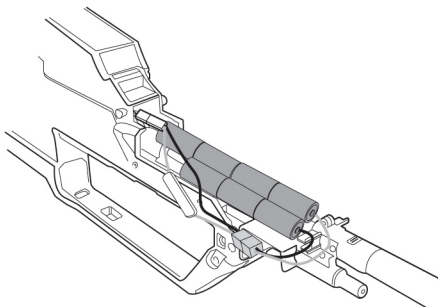


- 3 Fix the connector in the space underneath the battery.

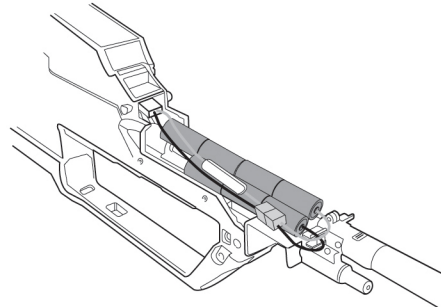

• Be careful with your fingers

4 How to adjust the hop up system

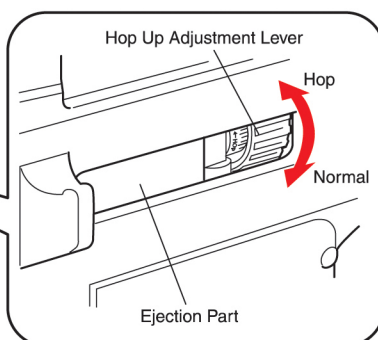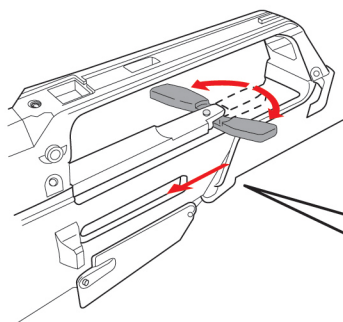


- 1 Keep pulling the cocking lever while adjusting the lever.
- 2 Turn the hop up adjustment lever gradually.
- 3 Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment lever when pellets fly horizontally.




Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.

5 How to use the bipod

① Pull down the bipod

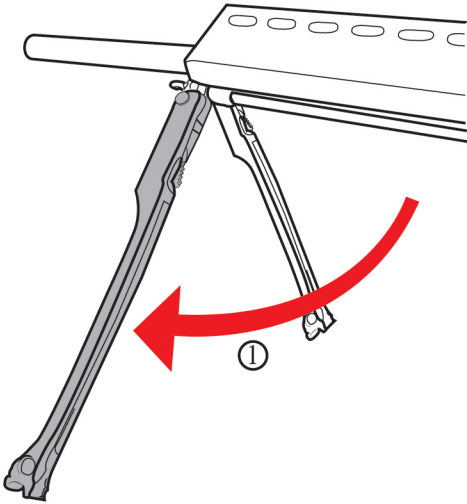


② Press the switch then pull up the bipod

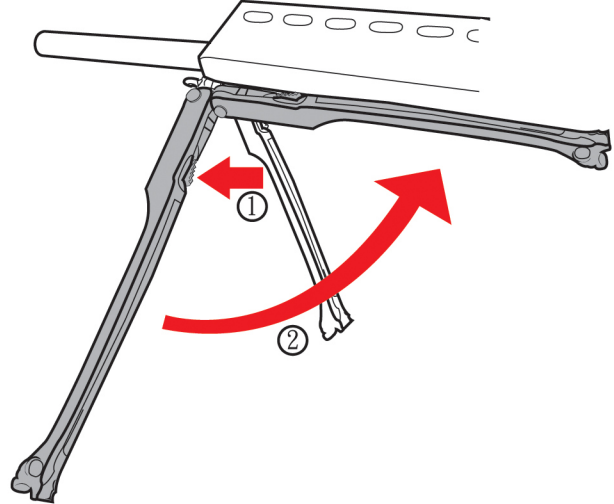

6 How to fire

① Switch the selector switch to Semi or Full Auto

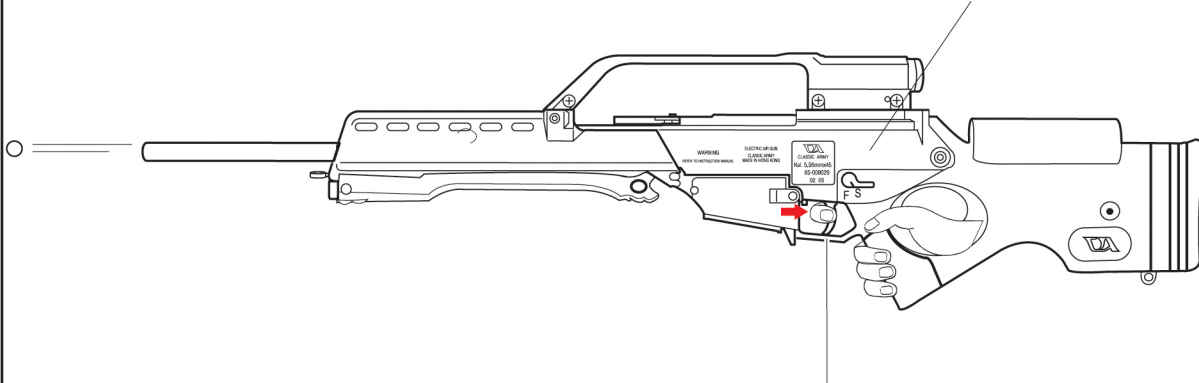

② Pull the trigger



- There are possibilities that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.



- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.

* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery


- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)






- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

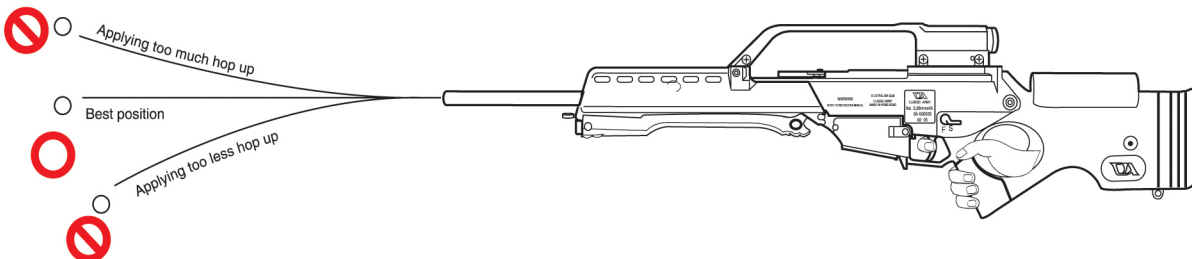

Make sure to return the hop up adjustment dial to NORMAL position when removing clogged pellets.


4 Maintenance

1 How to use a cleaning rod

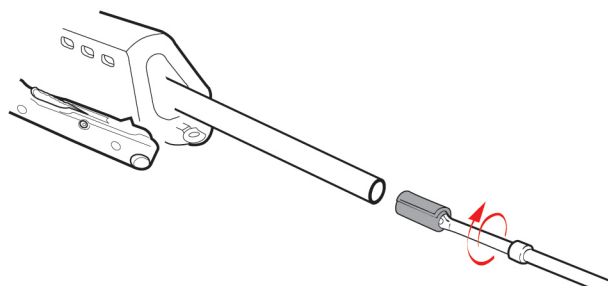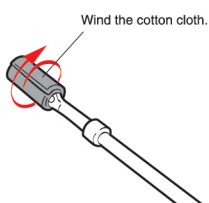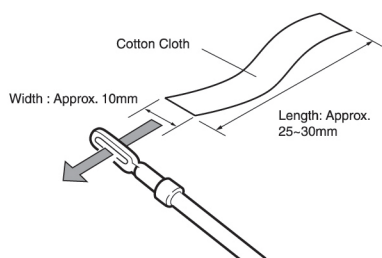

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod.
(Adjust the length of cloth for smooth entry into the barrel.)

Hold the tip of the rod and insert it with turning motion.

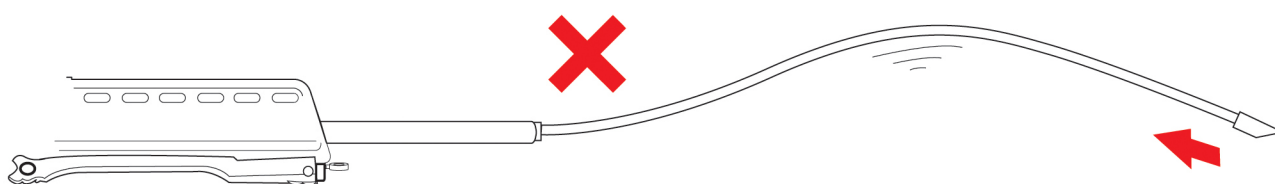

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component.
Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.



Inserting the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

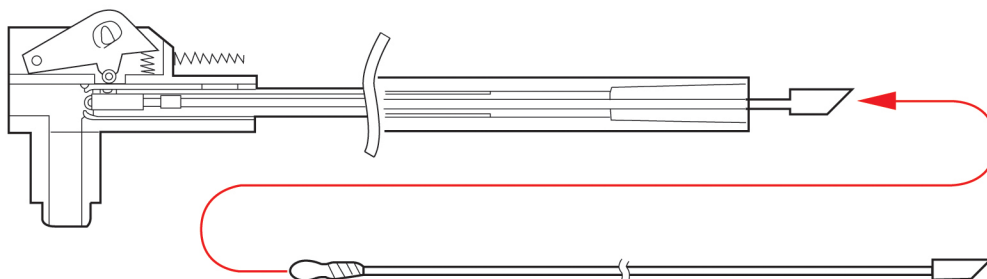

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to Normal.

2 How to replace the fuse

- 1 Open the cover and pull out the fuse box

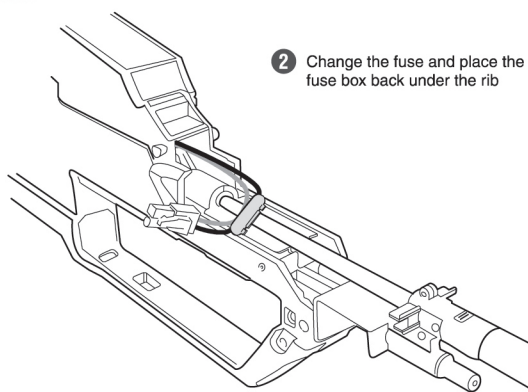

- 2 Change the fuse and place the fuse box back under the rib

20A Glass Tube Fuse is used



 
Never use any used BB pellets




Using new 6mm BB pellet is a must



Please don't use any BB pellet which is not completed.




Please don't use any broken BB pellet.

 

Please don't use any BB pellet which diameter exceeds 6 mm.

5 WARNING

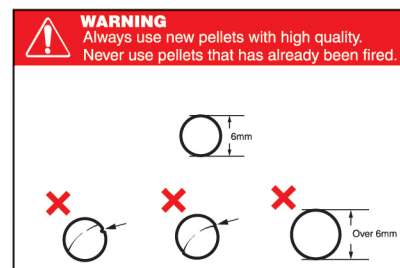

In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
Add.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
Tel: (45) 89 28 18 88
Fax: (45) 49 19 31 60
Email: sales@softgun.dk
Website: <http://www.actionsportgames.com/>

Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.LE Italiana S.r.l.
Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
Tel: (39) 02 274 09455
Fax: (39) 02 274 09455
Email: visele@classicarmyitalia.com
Website: <http://www.classicarmyitalia.com/>

The United States of America

Co. Name: Spartan Imports, Inc.
Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080
Tel: (1) 650 589 5501
Fax: (1) 650 589 5502
Email: info@spartanimports.com
Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
Add.: 3 Lane 62, Jianguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.
Tel: (886) 7-710 0198
Fax: (886) 7-710 0398
Email: kssa.kssa@msa.hinet.net
Website: <http://www.soloman.com.tw/>

Russian Federation and Belorussia

Co. Name: Uragan XX Limited.
Add.: Moscow Russia, Kashirskoe Shosse 24
Tel: (7) 495 323 5366
Fax: (7) 495 323 5366
Email: strike@classicarmy.ru
Website: <http://www.classicarmy.ru/>



Website: www.classicarmy.com

E-mail: info@classicarmy.com

PDF por Sniper,
Matadores Airsoft Club
www.matadoresairsoftclub.com