

# AIR SPORT GUN

# 運動汽槍

CYMA

## INSTRUCTION

### 使用說明書



**警告:** 內含紅外線瞄準器，請不要把紅外線光線照射到眼睛或皮膚上，以免有不良反應。

**CAUTION:** It contains infrared collimator, please do not aim at the eyes or the skin with the infrared so as to cause the kickback.

**內含:** 消聲器、電子瞄準器、紅外線瞄準器、照明電筒及防護眼鏡。

**INCLUDED:** Silencer, Electronic gunsight, Infrared collimator, Flashlight and Shooting glasses.



P.1091



P.1091A1


在操作之前必讀這些說明書

Always read through this manual before operation.

#### 警告 WARNING

	18歲以上年齡才能使用 Only for 18 years of age or older  Operation of this airgun for competition use is restricted to users of 18years of age or older.
	塑膠BB彈能達到50-60米範圍，不小心的射击可能導致眼睛受傷或其它伤害。 Since plastic BB bullets reach up to 50 meters, careless shooting may cause eye damage or other injuries.
	請仔細閱讀此手冊 Careful reading of Handling cautions and instruction manual  在操作之前要仔細閱讀此手冊和顯示子機操作內容時必須認真好警告指示 Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.


## 裝入BB彈 Load bb bullets

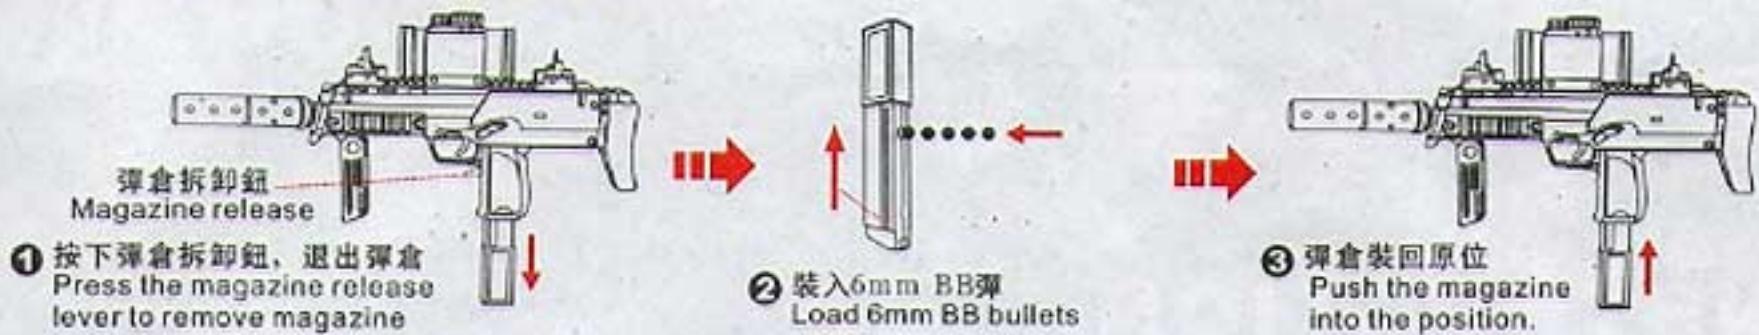

## 射擊方法 Firing



## 裝拆圖解 Illustration

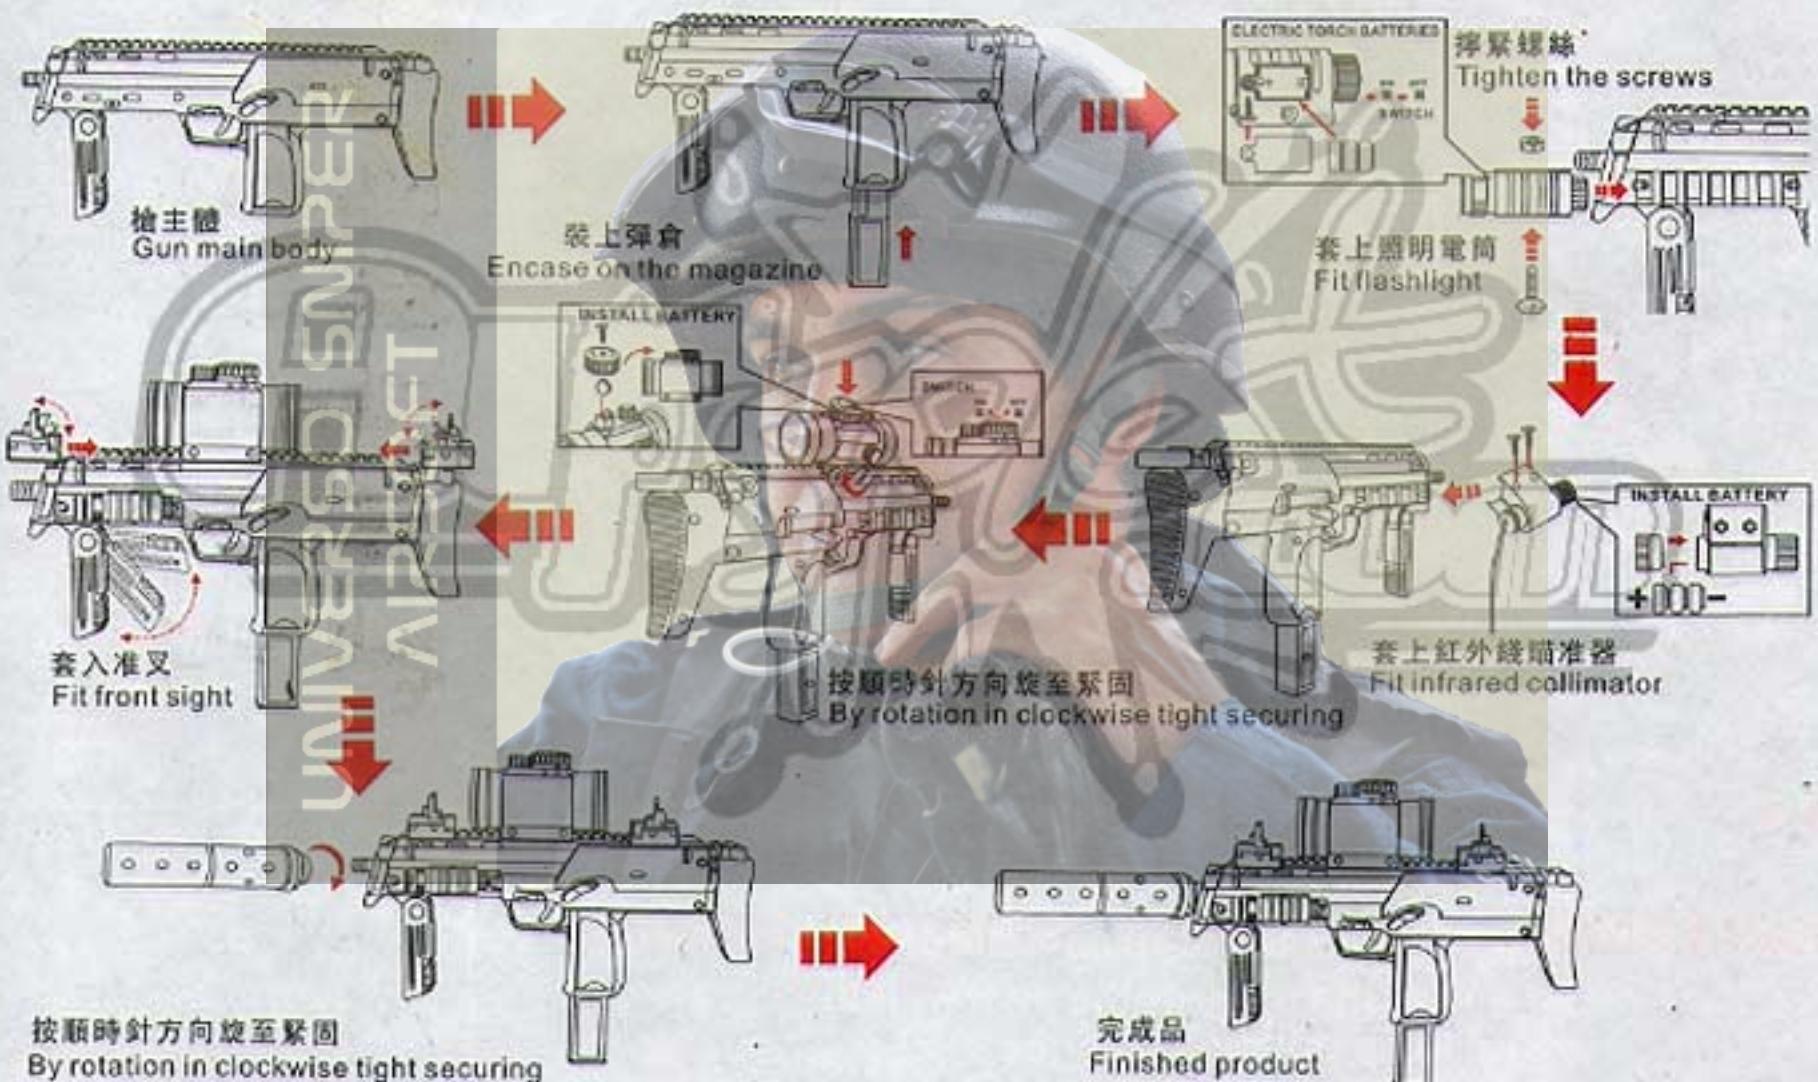

### 注意 Attention

- 切勿探視槍口。
- 除比賽時外，不要裝入子彈。
- 切勿改裝或分解本汽彈槍。
- 放置于小孩拿不到的地方。

Never look at the muzzle.  
Never load any bullet into the gun until in shooting practice.  
Never remodel the gun.  
Put the gun at safe place where children can not touch.



- 槍口切勿對准人或動物

Do not shoot at any human or animal.



- 要向能回彈子彈的固體物射擊

Do not shoot at solids which can turn back the bullet.



- 須確認發射方向沒有人或動物，手指不要接觸扳機直至射擊瞬間。

Make sure that no any human or animal stays near the target.  
Never touch the trigger until you will shoot.



- 不使用時，不要拉閥門拉杆（以免彈簧變弱）。

Never pull the valve door pole until you will use this gun.  
(Avoid the spring abating)

