

CYMA

使用說明書 USE DIRECTION

對象年齡18歲以上
Users Restricted to
18 Years of age or older

汽彈槍

UNIVERSAL SNIPER
AIRSOFT

P.799

本产品质量优良,耐用操作方便;能自动送弹,爆发力大,命中率高,可作练靶使用.

THE PRODUCT IS IN HIGH QUALITY AND DURABLE OPERATING CONVENIENT AND SEND BULLETS WITH AUTOMATIC DEVICE EXPLODING IS STRONG THE PERCENTAGE OF HITS IS HIGH IT CAN USE AS PRACTISING MARKSMANSHIP.

在操作之前必需读熟这些说明书


Always read through this manual before operation.

 警告 WARNING		
	18岁以上年龄才能使用 Only for 18 years of age or older	18以上年龄才能利用这汽枪比赛使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.
	注意受伤 Injury caution	因为BB子弹能达到50-60米范围,不小心的射击可能会导致眼睛受伤或其它伤害 Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.
	注意读熟警告手册 Careful reading of Handling cautions and instruction manual	在操作之前要细心读熟警告手册和查手册操作汽枪时必须认识好警告手册 Operate the air gun with full recognition of warnings and cautions.

本產品質量優良耐用，操作方便，能半自動送彈，爆發力大，命中率高，可作練靶槍使用。
 THE PRODUCT IS IN HIGH QUALITY AND DURABLE OPERATING CONVENIENCE AND SEND BULLETS WITH SEMI-AUTOMATIC DEVICE EXPLODING IS STRONG THE PERCENTAGE OF HITS IS HIGH IT CAN USE AS PRACTISING MARKSMANSHIP.


1 各部位的名稱

NAMES OF EACH PART

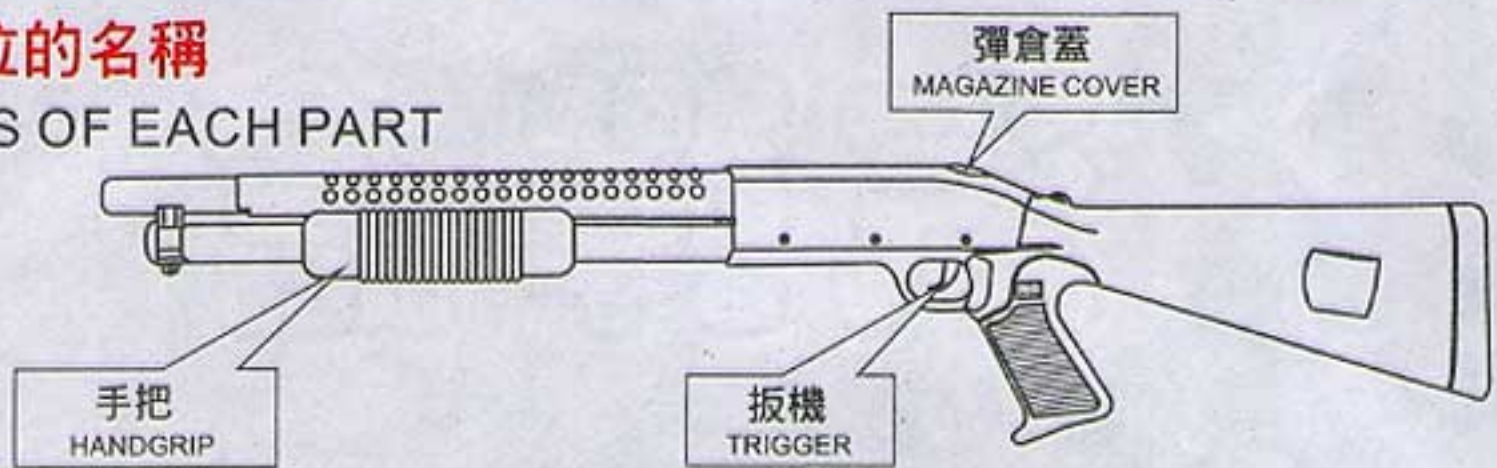

2 裝彈

LOAD BULLET

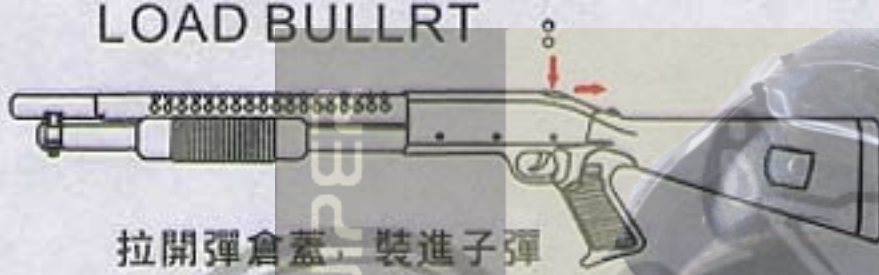

拉開彈倉蓋，裝進子彈
 PULL UP THE BULLET COVER,
 AND LOAD BULLET.

3 裝置

RIG



Ⓐ (將按鈕向後按壓)
 PRESS THE BUTTON BACK

Ⓑ (將槍托向下取出)
 TAKE OUT THE GUNSTOCK BY DOWN

4 操作 (射擊方法)

OPERATION (METHOD FOR LAUNCHING)



① 手把向後拉，然後送回。
 THE GUN BARREL IS PUSHED BACKWARD,
 THEN SEND IT BACK.

② 拉動扳機時BB彈射出
 WHEN THE TRIGGER IS PRESSED, THE
 BB BULLET WILL BE DISCHARGED.

備注：本槍設有保險結構，上膛後手把回不到位，不能射擊。

注意

- 絕對不要看槍口
- 除比賽時以外，槍口不要裝子彈。
- 槍絕對不要改造或分解。
- 要放在小孩拿不到的地方。

Never look at the muzzle with your eyes. Never put any bullet into the air gun except when you have shooting practice.




- 槍一定不得對準人

Never aim the air gun at people.



- 不要向會彈回的固體物射擊


Safety lever should not be released until you shoot.

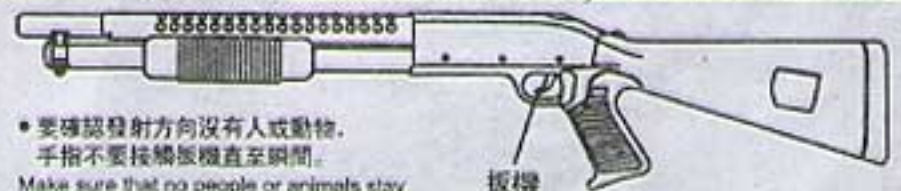

- 要確認發射方向沒有人或動物，手指不要接觸扳機直至開關。

Make sure that no people or animals stay near the target. Never touch the trigger until you will shoot.

扳機
 Trigger

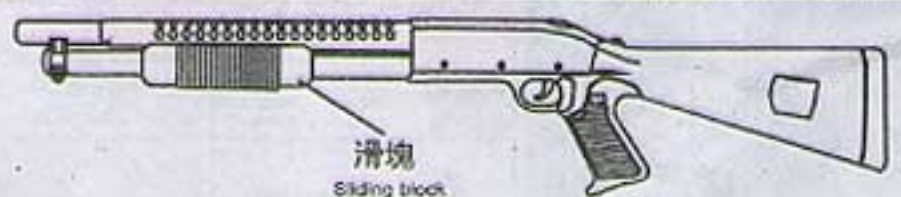

滑塊
 Sliding block

- 不使用時，不要拉滑塊。(彈簧變弱，使子彈不出)

Never shoot bullets at bouncing object. As shown. Never pull the bolt when it is not used, or the spring will lessen and the bullet won't be discharged.