



DOUBLE EAGLE

運動汽彈槍

AIR SPORT GUN

Use 6mm BB bullets

M41

INSTRUCTION 使用說明書

Before using the gun, please read this instruction thoroughly, and retain it for future reference.

We will not be responsible for any trouble caused by misuse or remodelling of the gun.

使用前請先完整閱讀本說明書，保存此說明書以供今后使用參照。
切勿錯誤使用或改裝汽彈槍，否則后果自負。

可配備電子瞄準鏡，紅點對焦，瞄得更準。

Can Be Equipped with Electronic Gunsight, red dot focusing, aim more accurate.

多彈盒結構，快速連射。

With Multi-Magazine structure for continuous shooting

- 三種款式，自由裝換。
Three styles Changeable



款式A
Style A



款式B
Style B



款式C
Style C


Age: Above 18 Years

請不要忘記，不知道的人會以為這是真槍

Thanks for your purchasing of this gun

WARNING:	
	• Do not shoot at any human or animal.
	• Read the instruction and note before using.
• CHOKING HAZARD-Small parts. not for children under 18 years.	

各部位的名稱 Component Names

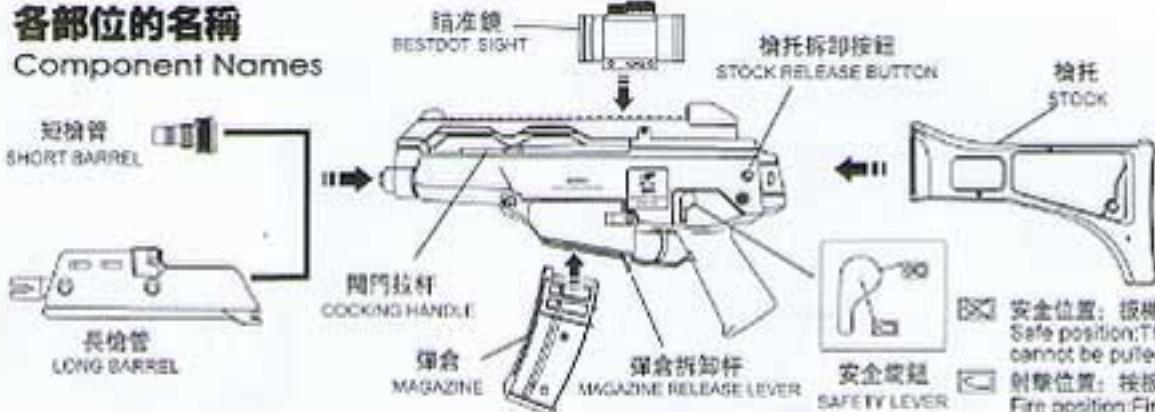

百中瞄準鏡說明 BESTDOT SIGHT INSTRUCTION

(只用于特定包裝 For specific packing)



電池安裝 BATTERY INSTALLATION

拆卸電池蓋螺絲，取出電池蓋，插入2節電池(型號：LJ131)，蓋上電池蓋並緊固螺絲。

Unscrew the battery cover, and insert 2 batteries (NO.L1131 or equivalent) in correct orientation, and replace the cover.

固定瞄準鏡 MOUNTING

旋開右邊的固定螺絲，把瞄準鏡基座卡入槍體視孔槽，調節至適當位置並旋緊螺母。

Unscrew the right mounting screws,slide the sight onto the dovetail and tighten it at proper position.

瞄準 SIGHTING IN

把開關旋鈕轉至“ON”處，確實確認中心準線紅點。


Engage the BESTDOT sight by turning the on/off switch clockwise. Sight along the barrel and aim at the target.

1 裝入BB彈 Load BB bullets

• BB彈請使用本公司專用彈或不產生卡彈故障的精密BB彈。
Please use the special BB bullets of our company or other precision BB bullets which do not cause jamming of the cartridge.




- ① 按下彈倉拆卸杆，拔出彈倉
Press the magazine release lever to remove magazine

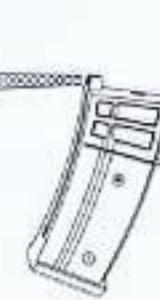

- ② 裝入6 mm BB彈
Load 6mm BB bullets



- ③ 彈倉裝回原位
Set the magazine upward and connect it firmly until a click sound is heard

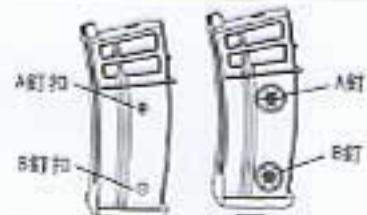

如圖所示，先扣緊A釘扣，
然後向下旋轉90°，扣緊B釘扣。
As the figure shows, first
fasten fastener A, then
spin it downward for 90°
and fasten



可選配多個彈倉，
組成一排，方便持續射擊。
There are multiple
magazines available. They
can be installed in a row to
perform continuous firing.


2 射擊方法 How to shot

1

把開門拉杆拉至最後直至發出“咔嚓”的聲音，若中途停止，無論彈倉中放進多少子彈，泵不正常工作。
Pull the cocking handle until a click sound is heard.
If you stop halfway, the air pump will not work no matter how many bullets have been put into the magazine. As shown.



向后拉直至发出“咔嚓”声。
Pull back until a click sound is heard.

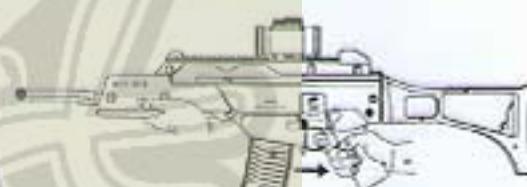

對準射擊目標，扣扳機。
注意：安全旋鈕須撥至 位置
Aim at the target and press the trigger.
Note: Set the safety lever to the position.

裝拆圖解 Illustration

款式A Style A

- A1 對準槽位，裝入短槍管，旋轉半周。
Load the short barrel on the corresponding faucet, turn half-cycle.



- A2 旋轉半周，拆開短槍管。
Disconnect the short barrel after turn half-cycle.



款式B Style B

- B1 插入長槍管直至發出“咔嚓”的聲音。
Load the long barrel until a click sound is heard.



- B2 按下槍管拆卸按鈕，拔出長槍管。
Press the barrel release catch to remove the long barrel.



款式C Style C

- C1 裝入槍托直至發出“咔嚓”的聲音。
Load the stock until a click sound is heard.



- C2 按下槍托拆卸按鈕，拔出槍托。
Press the stock release catch to remove the stock.



! 注意 Attention


• 切勿探視槍口。
• 除比賽時外，不要裝入子彈。
• 切勿改裝或分解本汽彈槍。
• 放置於小孩拿不到的地方。
Never look at the muzzle.
Never load any bullet into the gun until in shooting practice.
Never remodel the gun.
Put the gun at safe place where children can not touch.



• 槍口切勿對准人或動物。
Do not shoot at any human or animal.



• 不要向能回彈子彈的固體物射擊。
Do not shoot at solids which can turn back the bullet.

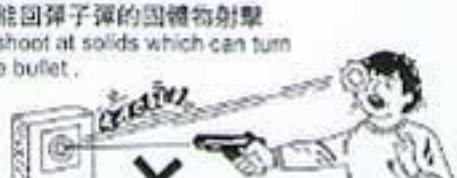

• 確認發射方向沒有人或動物，手指不要接觸扳機直至射擊瞬間。
Make sure that no any human or animal stays near the target.
Never touch the trigger until you will shoot.



• 不使用時，不要拉開門拉杆(以免彈簧變弱)。
Never pull the cocking handle until you will use this gun.
(Avoid the spring abating).

