

HIGH PERFORMANCE ASSEMBLED PLASTIC MODEL GUN.

XM18

AIR SPORT GUN



18 岁以上年龄才能使用
Only for 18 years of age or older



在操作之前必需读熟这些说明书

Always read through this manual before operation.



警告 WARNING



18岁以上年龄才能使用
Only for 18 years
of age or older

18以上年龄才能利用这支汽枪比赛使用

Operation of this air gun for competition use is restricted to users of 18 years of age or older.



注意受损伤
Injury caution

因为BB 弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。

Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.



注意熟读警告指示手册
Careful reading of
Handling cautions
and
Instruction manual

在操作这前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示

Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation
Operate the air gun with full recognition of warnings and cautions.



XM8

18岁以上年龄才能使用


Only for 18 years of age or older



装拆图解

Illustration

1 装配 ASSEMBLED

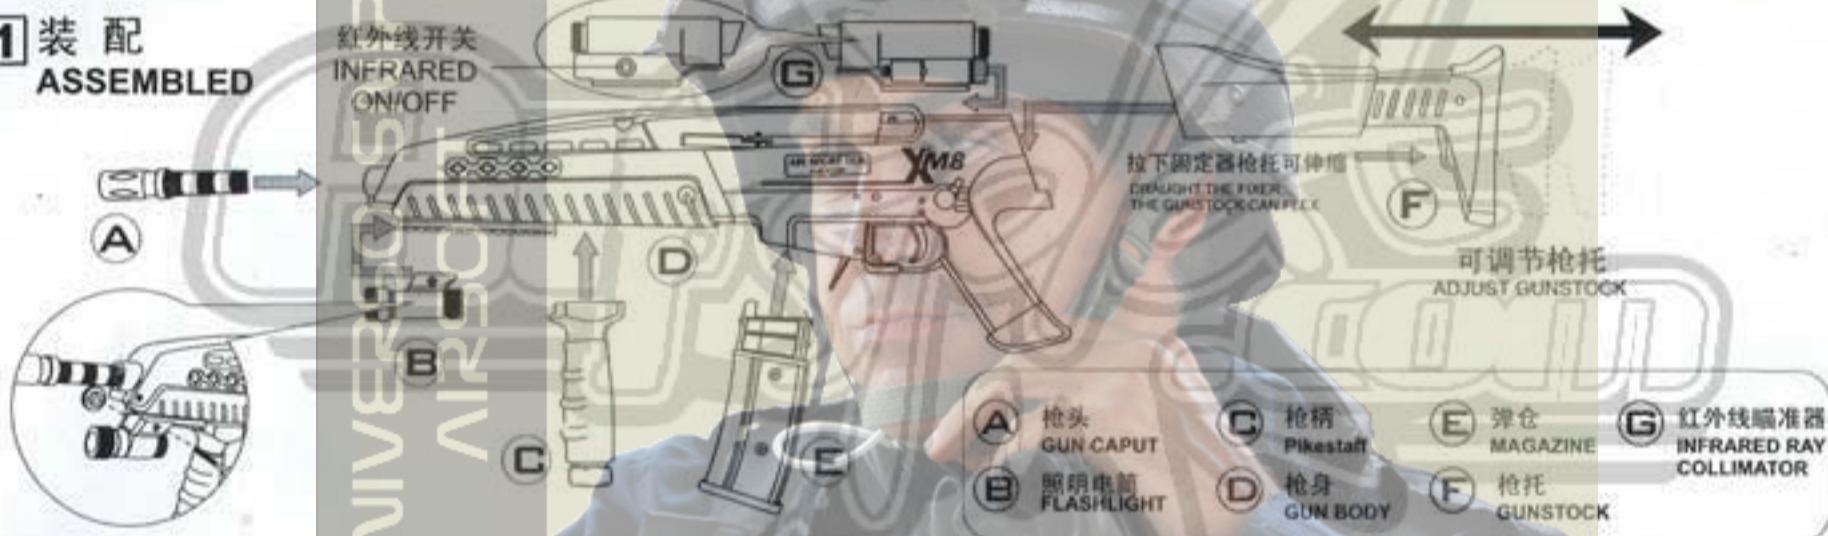

2 装弹 LOAD BULLET



3 射击方法 HOW TO SHOOT



注意 Attention

- 切勿探视枪口。
 - 除比赛时外，不要装入子弹。
 - 切勿改装或分解本汽弹枪。
 - 放置于小孩拿不到的地方。
- Never look at the muzzle.
Never load any bullet into the gun until in shooting practice.
Never remodel the gun.
Put the gun at safe place where children can not touch.



- 枪口切勿对准人或动物。
- Do not shoot at any human or animal.



- 不要向能回弹子弹的固体物射击。
- Do not shoot at solids which can turn back the bullet.



- 须确认发射方向没有人或动物，手指不要接触扳机直至射击瞬间。
- Make sure that no any human or animal stays near the target.
Never touch the trigger until you will shoot.



- 不使用时，不要拉滑块（以免弹簧变弱）。
- Never pull the sliding block until you will use this gun. (Aboid the spring abating).

