




■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

G&G ARMAMENTAIRSOFT GUNS & ACCESSORIES

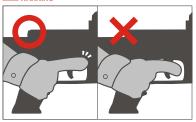

Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.



When shooting the air guns for target practice When shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear Also, pay attention to ricochets.
It is important to pay attention to third parties other than the participants.



There may be cases where some BBs remain in

There may be cases where some BBs remain in the gun after the magazine has been disconnected.

After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

 
P.02

P.03



When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.





Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.




Disassembling or modifying the gun may adversely affect the performance and make it dangerous




• WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

G&G ARMAMENT

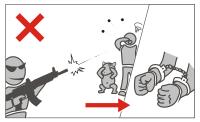

You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a " practical joke" Always observe good manners and enjoy fun sport shooting.

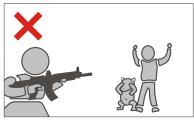

Never direct the muzzle towards a person, animal or in any other dangerous direction.



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

 
P.04





P.05





Make sure to attach the barrel and safety cap to Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.



Safety procedure

- 1 Attach the safety cap to the muzzle.
 2 Set the selector lever to the safety position.
 3 Remove the magazine.
 4 Remove the battery.



Looking into the muzzle is extremely dangerous regardless of BB's having been loaded or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.











Battery setting and battery type

G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

For Folding stock version





Disassemble the R.A.S. locking screw.

2



Remove the R.A.S.





Connect battery plug with the connector.

P.10

P.11







Recommended battery type:



Insert battery into the R.A.S.



Reinstall the R.A.S.




8.4V 1800mAh Ni-Cd rechargeable battery




Battery setting and battery type



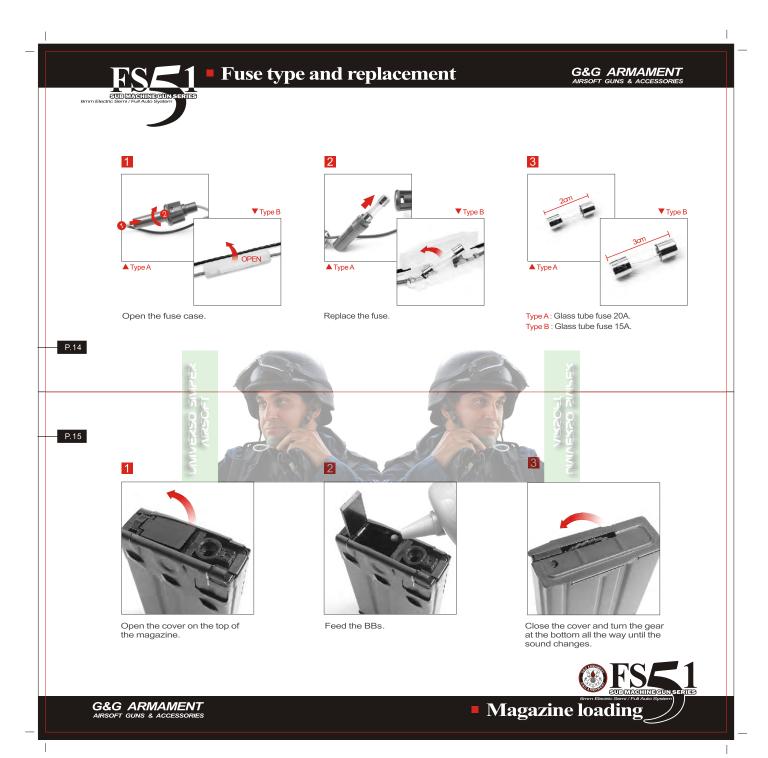



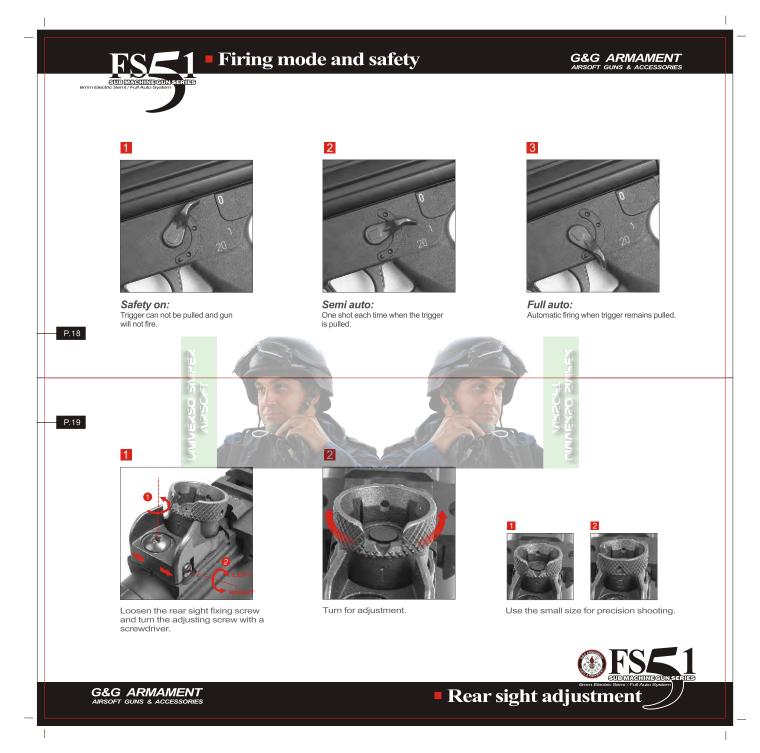





Buttstock folding

G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

For Folding stock version





Press the buttstock locking button.



Fold the buttstock to the right side.



Hook stock on the receiver.

P.22

P.23







Rail Panel x 2



Front Grip



Q.D. sling swivel

G&G ARMAMENT

Standard parts








Optional parts

G&G ARMAMENT

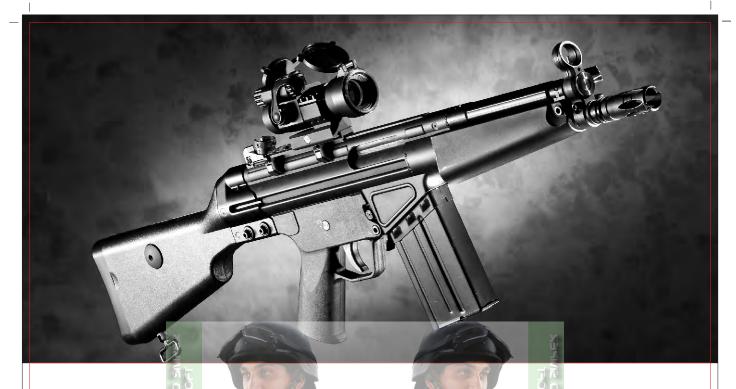

P.31

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to hurt your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively causes clogging of BBs in the hop-up chamber. Continuos pulling of the trigger with clogged BBs will damage the piston and the gears.

Never hold the gun sideways as BBs will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.



G&G ARMAMENTAIRSOFT GUNS & ACCESSORIES WWW.GUAY2.COM

MANUFACTURED BY GUAY GUAY TRADING CO., LTD. MADE IN TAIWAN

DEALER

Please consult your dealer or G&G for overhaul maintenance and technical guidance.



- DISCLAIMER

 Accessories pictured are not always included with product.

 Actual supervision required for users under 18 years of age.

 The purchaser and user should conform to all laws governing and ownership of airsoft guns.

 All products in this catalog are imitation firearms and are not intended nor represented to be comparable in design, appearance, or function to any actual firearm offered by other manufacturers.

 Product names are trademarks of Guay Gusy Trading Company (G&G), which has no affiliation to, and is not associated, or sponsored by any other manufacturer of actual or imitation firearms. Products may vary from those pictured.

P.32

