

INSTRUCTION MANUAL

GR16 C.Q.W. WASP



TOP FIVE
 FUTURE INNOVATION
 FINEST QUALITY
 FAST SERVICE
 FREE ITEMS
 FAIR PRICE



SPECIAL SHOOTING
Used for precision firing.



COMMON SHOOTING
Used for full automatic firing.



WINDAGE KNOB (left / right adjustment)
ELEVATION KNOB (up / down adjustment)

REAR SIGHT ADJUSTMENT

CAUTION
 Keep the selector on Safe mode until you are actually ready to shoot.



WARNING !!

- Adult supervision required.
- Always wear eye protection when using this product.
- Misuse or careless handling of this product may cause injury.
- May be hazardous up to 50 meters.
- This product is intended for users 18 years or older.
- Read all instructions before using this product.
- The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.

OPTIONAL PARTS



G-12-006
CD13-TRT30GD



G-03-065
Forward Grip-BK (ABS injection)

WINDAGE ADJUSTMENT KNOB



Detachable rear sight.



Turn the knobs counterclockwise to disassemble the rear sight.




Take off the rear sight to install other accessories.


MAINTENANCE



Remove the magazine.

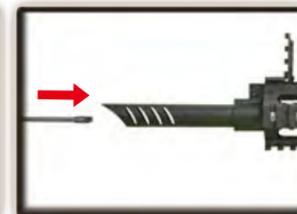

Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.

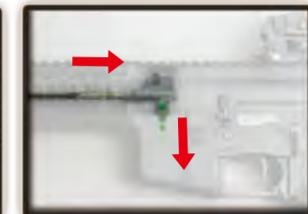

Be aware to have the rod facing down and reaching to the end, and remove clogged pellets.

FOLDING FRONT SIGHT



Folding the front sight.



Press the plate back.



Press against the folding front sight.

TROUBLE SHOOTING



Adjust screw when the gear noise becomes shrilly.
 The screw at bottom of the grip. Please use the screwdriver to adjust.




No operation
 Check the wire set contact with motor.



No operation
 Check the battery and connector.

PARTS LIST

- | | |
|---|---|
| GR16 Wasp- 01 Wasp front kit | GR16 Wasp- 16 Switch Plate |
| GR16 Wasp- 02 Rail system set | GR16 Wasp- 17 Hi-cap 450R magazine |
| GR16 Wasp- 03 Rear sight base set | GR16 Wasp- 18 Lower receiver set |
| GR16 Wasp- 04 Rear sight set | GR16 Wasp- 19 Trigger guard set |
| GR16 Wasp- 05 Hop-up set | GR16 Wasp- 20 Charging upper cover |
| GR16 Wasp- 06 Slip ring set | GR16 Wasp- 21 Rear frame lock pin set |
| GR16 Wasp- 07 Inner barrel | GR16 Wasp- 22 Grip |
| GR16 Wasp- 08 Upper receiver set | GR16 Wasp- 23 Motor set |
| GR16 Wasp- 09 Charging handle set | GR16 Wasp- 24 Grip bottom set |
| GR16 Wasp- 10 Port cover set | GR16 Wasp- 25 Patriot battery stock |
| GR16 Wasp- 11 Front frame lock pin set | GR16 Wasp- 26 Gear box set |
| GR16 Wasp- 12 Bolt catch set | GR16 Wasp- 27 Barrel base set |
| GR16 Wasp- 13 Selector lever set | GR16 Wasp- 28 Blow back pneumatic piston |
| GR16 Wasp- 14 Magazine catch set | GR16 Wasp- 29 Charging plate |
| GR16 Wasp- 15 Stock washer | GR16 Wasp- 30 Selector plate |

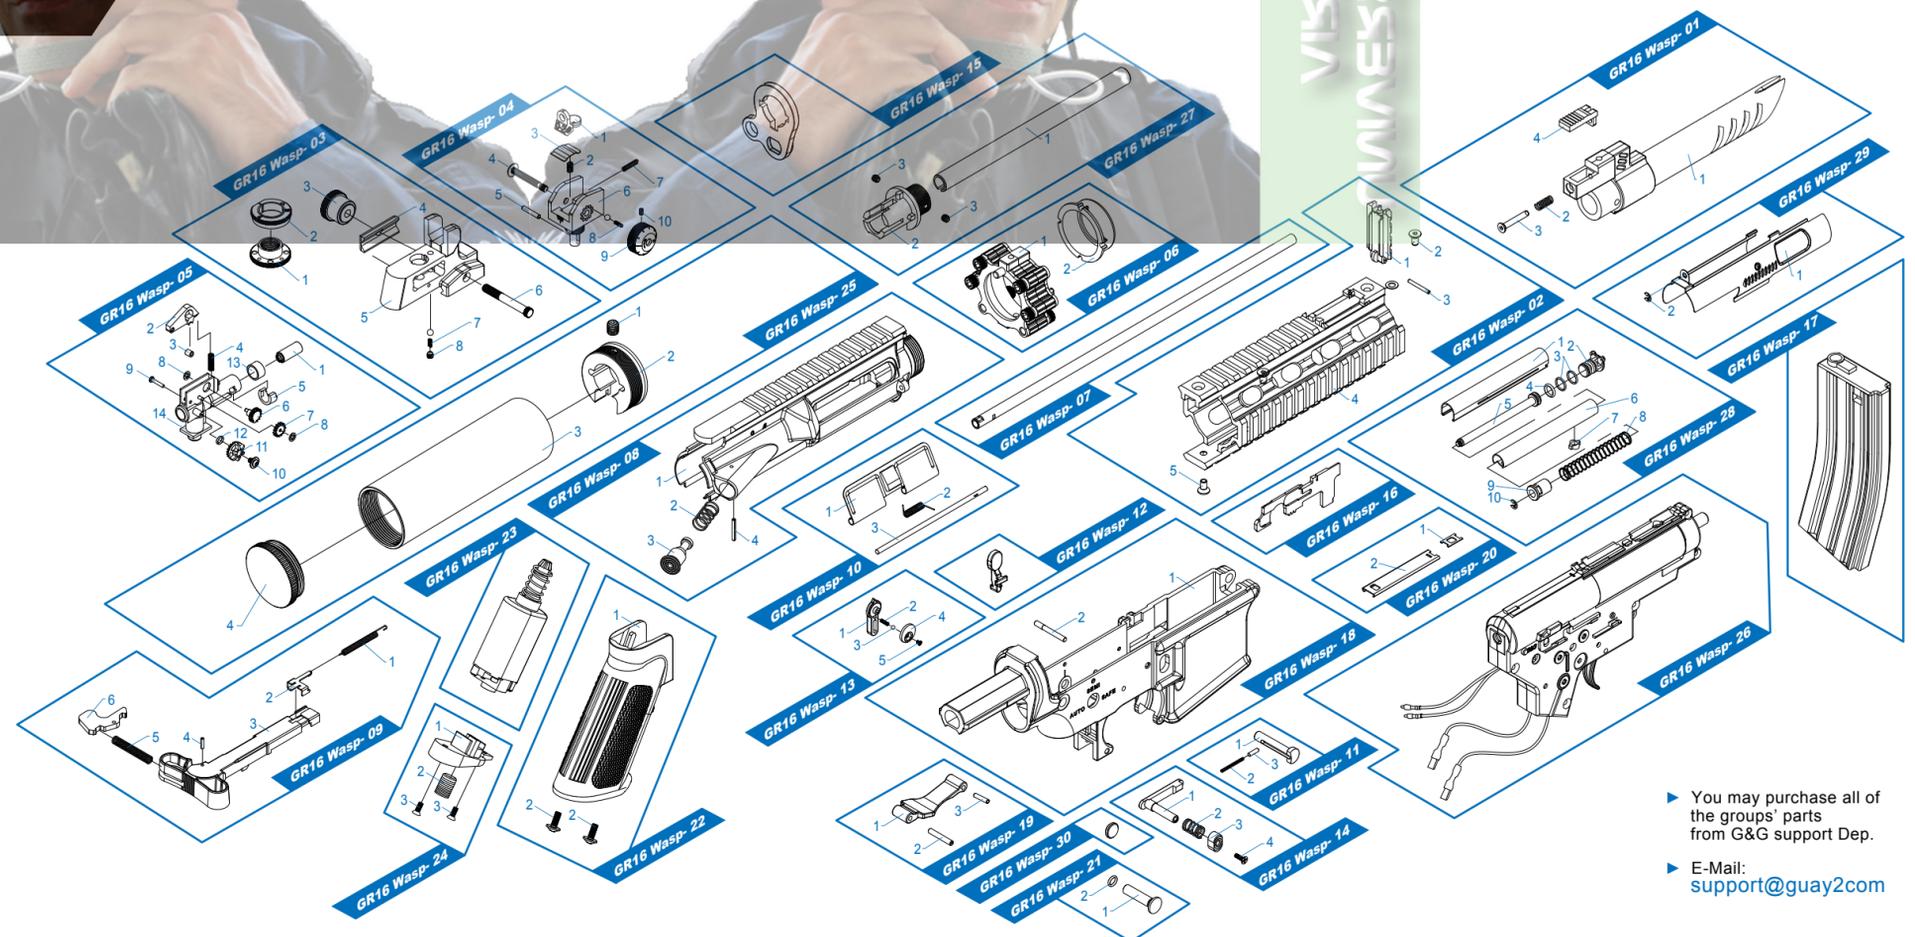

MANUFACTURED BY G&G ARMAMENT

TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com
 Technology Support Dept. | support@guay2.com
 PR Dept. | pr@guay2.com

Chang Hua Headquarter
 Tel : +886-4-798-9000 Fax : +886-4-798-9900
 No.999, Zhonghua Rd. Shengang Township,
 Changhua County 50955, Taiwan (R.O.C.)

Taipei
 Tel : +886-2-2692-2000 Fax : +886-2-2692-4000
 11F-3., No.27, Lane 169, Kangning St. Shijr City,
 Taipei County 22180, Taiwan (R.O.C.)

U.S.A.

E-mail | sales101@guay2.com

Los Angeles
 Tel : +1-626-581-0101
 Fax : +1-626-581-1011
 1122 Coiner Court,
 City of Industry,
 CA 91748 (U.S.A.)

Dealer

► You may purchase all of the groups' parts from G&G support Dep.

► E-Mail: support@guay2.com