





# G&GARMAMENT







- All products employ a high precision 6.04mm barrel. Using 5.95mm BB pellets is highly recommended. Damage to the product due to faulty BB pellets voids the warranty. Use with caution.
- A The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.

You may be liable for damaging public, personal property, or for injuring a person or an animal. Always observe good manners and enjoy fun sport shooting.



Safety procedures:


- 1. Attach the safety cap to the
- 2. Set the selector lever to the safety position.
- 3. Remove the magazine.









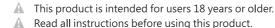

Adult supervision required.

Always wear safety goggles when using this product.

A Misuse or careless handling of this product may cause injury.

A May be hazardous up to 50 meters.



When you carry the air gun, attach the safety cap, set the selector lever to the safety position, and always put the air gun in a case or bag.



Select a safe place for operating the air gun and avoid places where people and cars are around.



Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place that is out of reach of children.

# Orange tip disclaimer:

All G&G Airsoft guns come with a permanent fixed orange tip required by law, which will grant Airsoft legal usage in the United States.

A If you alter, modify, abuse, or remove the orange tip, all warranty coverage will be void.

Never direct the muzzle towards a person, animal, or in any direction that may cause harm or damage to a third



ooking into the muzzle is xtremely dangerous, regardless of having BB's loaded or not. If you get hit in the eye by a BB pellet. worst case scenario, you may lose your eye sight.

There may be cases where some BB's remain in the gun after the magazine has been removed. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that there are no BB's remaining in the gun, then attach the safety



**Warning** 

For more product information please visit our website www.guay2.com





Make sure to put the barrel and safety cap onto the muzzle except when shooting. to prevent any accidents, discharge of BB's, and also for dust protection purposes. Never pull the trigger while the barrel and safety cap are attached.



Activating the trigger carelessly is extremely dangerous. Never put your finger on the trigger unless the safety cap is removed and you are ready to shoot a target.



Disassembling or modifying the gun may adversely affect the performance and make it dangerous. It would also void all warranty.
















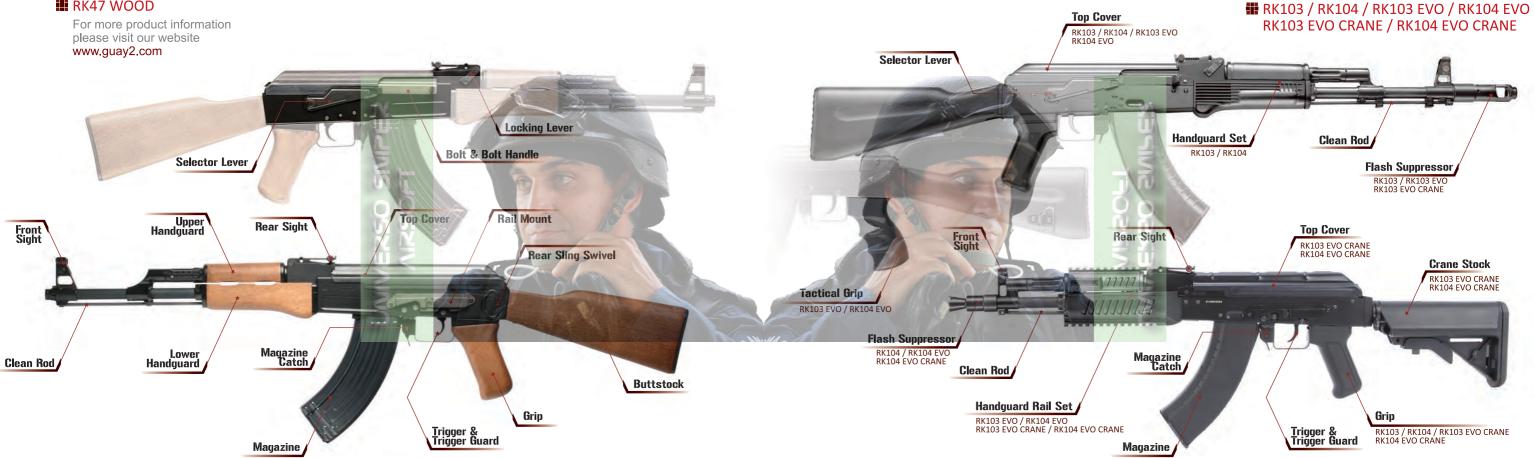






























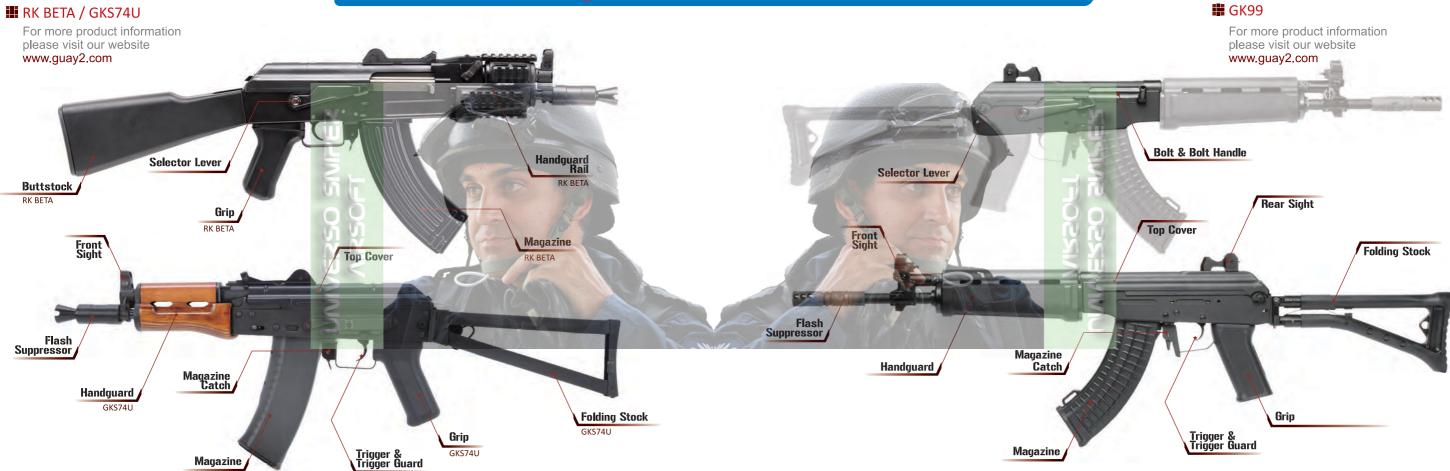







In order to simulate the bolt action of a real firearm, G&G is proud to present its new Pneumatic Blow Back system to its line of airsoft guns.

Conventional airsoft blow back utilizes tow hook springs that connect to the piston head and bolt plate to simulate bolt action, which often lead to excess wear and tear and poor reliability in the gear box. To alleviate the problem of conventional systems, G&G has independently developed the Pneumatic Blow Back system for a better solution on simulating bolt actions.

This new technology utilizes compressed air to move the bolt, which enables the action without adding extra stress to the gear box.

This class leading system represents a significant milestone in the airsoft industry.



## **TAIWAN**

Patent No. M300797



# USA

Patent No. 11/488698



### **HONG KONG**

Patent No. 06107627.0



Patent No. 實願2006-1459



#### **EUROPEAN UNION**

Patent No. 460191 814454

# CHINA

Patent No. 200620122468,9



Patent No. BA2007 0069

## U.K

Patent No. 614422.4









# SELECTOR & SAFETY SETTING

# G&GARMAMENT





# BATTERY SETTING 16



[ Power ] Blue Light (ON)

[ Error Status ] Red Light (Flashing) / [ Normal ] Red Light (OFF) [ Fully Charged ] Green Light (ON) / [ Normal ] Green Light (OFF)

When the green light flashing more frequently shows the charging speed is faster. When the battery is nearly full, the green light will be on consistently.



Make sure the longitudinal slits always present on pin connector. If the pin connector has been deformed, it may disable the firing function!





to expand the slit and spread the two halves of the pin to

# **A** CAUTION

Direct the muzzle towards a safe direction and set the selector to the safety position. The magazine should be removed before changing the battery.

### For GKM / GIMS / GK74 / GK74N



Push the button and pull forward to unlock the handquard battery.



Remove the handguard battery.

# SAFETY ON THE TRIGGER CANNOT BE PULLED



When the gun is in storage or not being fired, always set the selector to the Safe position and attach the protective cap on the muzzle.

# FULL AUTO AUTOMATIC FIRING



The gun will fire continuously while the trigger remains pulled.

# SEMI AUTO SINGLE SHOT

**A** CAUTION

may occur.



Never operate the selector switch while pulling the trigger. Otherwise, malfunctions

Pulling the trigger with the Selector being

set at safe mode may damage the air gun.

The gun will fire one shot each time when the trigger is pulled.

# For RK103 EVO CRANE / RK104 EVO CRANE



- 1. Pull and hold the stock release lever mount.
- Pull out the stock.



- 1. Turn and take off the battery cover.
- 2. Insert the battery into the stock.



- 1. Connect the battery plug into the connector until you hear a 'click'.
- 2. Reinstall the stock.











**CAUTION** Direct the muzzle towards a safe direction and set the selector to the safety position. The magazine should be removed before changing the battery.

### For RK47 / RK103 / RK104 / RK103 EVO / RK104 EVO



Unscrew the fixing screws and remove the



Connect the battery until you hear a 'click'.



Insert the battery and reinstall the plate.

# For RK Beta



Push the stock plate and remove.




Connect the battery plug with the connector until you hear a 'click'.



Reinstall the stock plate.

CAUTION Direct the muzzle towards a safe direction and set the selector to the safety position. The magazine should be removed before changing the battery.

### For GK99

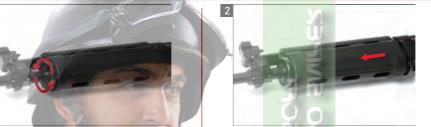

Unscrew the handguard cap.







Connect the battery until it click into place.



Put the handguard back on.

Pull the handguard forward.



Tighten up the handguard cap.





**CAUTION** Direct the muzzle towards a safe direction and set the selector to the safety position. The magazine should be removed before changing the battery.

### For GKS74U / GK74 Carbine / GKMS Carbine



Push the cover release button and remove the dust cover.



Connect the battery until it clicks into place.



### For GIMS



Push the stock lock lever to unlock the folding stock.

# For GK74 / GKS74U



Push the stock lock button to unlock.

# For GKMS / GKMS Carbine



Push the stock lock button to unlock.



Unfold the underfolding stock and make sure it is securely locked in place.



Fold down the end of stock for better shouldering.



Unfold the stock and make sure it is securely locked in place.



Fold the stock to the side and make sure it is securely locked in place.

### For GK99



Squeeze both arms of the stock to unlock.



Unfold the stock and make sure it is securely locked in place.











CAUTION Confirm that the safety lever is set to the Safety position and do not place your finger on the trigger.

# For All RK Series

# **A** CAUTION

Always use the G&G BB pellet or diameter 5.94 ~ 5.96 mm BBs for this air gun. G&G shall not be held responsible for any damage or accidents arising from the use of pellets supplied by other manufacturers.



Push the magazine catch to release the magazine.



Open the cover of the magazine and load G&G 5.95mm BB pellets into the magazine.

# Front Sight Adjustment

or All RK Series



Insert the front sight adjustment tool into the front sight block



Clockwise: Lower the front sight. Counterclockwise: Raise the front sight.

**CAUTION** Ensure not to lose the adjustment tool.

# Rear Sight Adjustment

For All RK Series ( Apart from RK Beta / GK99 )



Press the button and slide forward or backward for adjustment.

**Rear Sight Adjustment** For GK99

## For All RK Series



Turn the winding wheel on the bottom of the magazine to tighten the spring. This will allow the BBs to feed through the top of the magazine.



Insert the magazine as shown in the picture 4.



Make sure the magazine is securely inserted into the receiver until it clicks.

# Front Sight Adjustment For GK99



Use the screwdriver to adjust the front sight windage.



Flip-Up night front sight.



Full Auto shooting.



Precision shooting.

**CAUTION** Do not to catch your fingers in the dummy bolt.

\* NOTE | Adjust only when the gear noise becomes shrill.

## For All RK Series



Pull the handle in the direction shown to open the bolt.



Slide the hop-up adjustment piece forward or backward to adjust the Hop-up effect.

**CAUTION** Never hold the gun sideways as the BB pellets will curve right or left.

Too much HOP-UP. (Return the lever toward NORMAL)

Best direction.

Not enough HOP-UP.(Move the lever toward HOP)
Or too much HOP-UP.(Return the lever toward NORMAL)

# For All RK Series



Unscrew the fixing screw on the bottom of the grip and remove the grip.



Adjust with hexagon key.

### For GKS74U / GK74 Carbine / GKMS Carbine



- 1. Push the cover release button.
- 2. Remove or lift up the dust cover.



Push the rear-end of the spring guide to remove the bolt set.



Use 2mm hexagon key to unscrew the barrel bracket set screws.

# For GKM / GKMS / GIMS / GK74 / GK74N



Unscrew the screws of the Hop-up unit. The front kit can now be disassembled.



the handguard battery.

Push the button and pull forward to remove



Unscrew the screw and the front kit can now be disassembled.

# G&GARMAMENT







# 1. After Operation

Remove the magazine, direct the muzzle into a safe direction, then fire the gun in semi-auto mode for a few shots. Set the selector to the safe position.

Always disconnect the battery and attach the protective cap whenever you are not operating the air gun.

## 2. Cautions on Motor and Battery


Charge the battery if the firing cycle becomes slow.

Stop the usage of the air gun for 5 to 10 minutes after firing around 500 rounds in order to ensure the long life of the motor and battery.

# 3. Clogged Pellets

If pellets are clogged, remove and apply a few drops of G&G's silicone oil into the chamber from the magazine entrance. Apply the silicone for 0.4 to 1 sec to obtain smooth continuous firing.

# WHEN PELLET SPEED BECOMES LOW

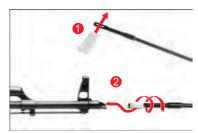

- 1. Place a few drops of silicone oil or teflon oil into the pellet entrance. After inserting BB pellets into the magazine, fire the gun around 200-300 rounds.
- 2. To complete the cleaning, use the cleaning rod (with cotton) to remove excess oil.





**CAUTION** Do not jam the cleaning rod into the barrel by force. Should the BB's remain inside the barrel after following the instruction above, point the gun to a safe direction and discharge any loosened BB's in semi-automatic mode.

# **III** Troubleshooting

SYMPTOM	POTENTIAL	CORRECTIVE
No operation at all	Selector lever is set to safety.	Set the selector lever to Semi or Full Auto.
	Battery is not charged.	Charge the battery.
	Battery connector is disconnected.	Connect the connector.
	The⊕and of battery connector is reversed.	Switch the batteries to the correct position.
	Expired motor life (50,000 to 60,000 rounds) or poor electrical connection.	Replace the dead motor (can be purchased from local dealer or directly from G&G). Check and repair the contacts.
Although motor is revolving, no pellet can be fired	Pellets are clogged inside the magazine.	Insert the charging rod into the magazine and move up and down a few times to remove clogged pellets.
	Pellets are clogged in the chamber.	Remove clogged pellets using the cleaning rod.
	Faulty gear.	Purchase the replacement gear from your dealer or G&G and repair.
Income a sible full auto	Insufficient battery power.	Charge the battery.
Impossible full-auto operation(automatic firing)	Faulty pellet feed of magazine.	Repair clogging of the magazine.
operation(automatic ining)	Poor electrical connection.	Consult your dealer or G&G for overhaul maintenance or repair.
	Damaged or worn chamber set.	Replace the replacement parts (purchase from your dealer or G&G)
Shooting distance becomes shorter	Damaged or worn piston set (O-ring, piston spring)	
	Something is jammed in the inner barrel	Use the cleaning rod and clean the inner barrel.
	Faulty/BB pellets (too small or heavy)	Use the genuine G&G Pellets.
	Shortage of silicone oil	Place a few drops of silicone oil onto the upper chamber.
	Gear problem caused by too many blank firing	
Loud operating noise	Worn or damaged gear	Consult your dealer or G&G for overhaul maintenance, part replacement (gear,etc.) or repair.
	Gear problem caused by too many blank firing	
Pellets being fallen out from barrel end	Damaged or worn chamber set.	
	No hop setting.	Turn the hop adjustment lever toward Hop.
	Faulty BB Pellets (too small or heavy)	Use the G&G Pellets.
If gun gets wet	Stop operation immediately, disconnect the battery, wipe off water from inside the main body and the battery. After the gun is completely dry, carry out trial firing. If the unit is not operational, please contact your local dealer for repair.	

### **Disclaimer**

- Accessories pictured are not always included with product.
- Adult supervision required for users under 18 years of age.
- The purchaser and user should conform to all laws governing the ownership of airsoft guns.
- All products in this manual are imitation firearms and are not intended nor represented to be comparable in design, appearance, or function to any actural firearm offered by other manufacturers.
- Product names are trademarks of G&G, which has no affiliation to, and is not associated, or sponsored by any manufacturer of actual or imitation firearms. Products may vary form those pictured.


# for RK47

RK47-001	Receiver Cover Se
RK47-002	Rear Sight Set
RK47-003	Bolt Set
RK47-004	Gas Block Set
RK47-005	Rail Mount Set
RK47-006	Receiver Set
RK47-007	Barrel Base Set
RK47-008	Gas Cylinder Set
RK47-009	Outer Barrel Set
RK47-010	Front Sight Set
RK47-011	Butt Stock Set
RK47-012	Selector Lever Se
RK47-013	Gear Box Set
RK47-014	Hop Up Set
RK47-015	Inner Barrel
RK47-016	Clean Rod
RK47-017	Grip Set
RK47-018	Motor Base Set
RK47-019	Motor Set

You may buy all groups' parts from G&G Support Dept. Email: support@guay2.com

RK47-020 Handguard Set
RK47-021 Trigger Guard Set

RK47-022 Magazine

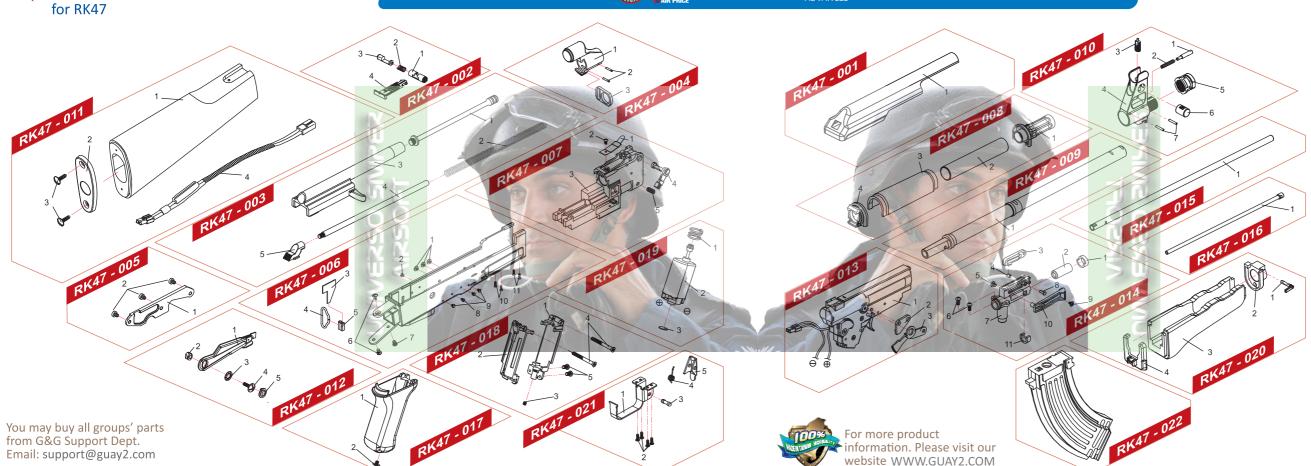



G&GARMAMENT







# for RK103 / RK104

Receiver Cover Set Rear Sight Set

Bolt Set

Receiver Set

Barrel Base Set

Gas Cylinder Set

**Butt Stock Set** 

Selector Lever Set

Gear Box Set

Hop Up Set

Grip Set

Motor Base Set

Motor Set RK103-019

Handguard Set

Trigger Guard Set

RK103-022 Magazine

# for RK103

RK103-004 Gas Block Set RK103-005 Flash Suppressor Set

RK103-009 Outer Barrel Set

RK103-010 Front Sight Set

Inner Barrel RK103-015

RK103-016 Clean Rod


# for RK104

Flash Suppressor Set **Outer Barrel Set** 

Front Sight Set

RK104-015 Inner Barrel

RK104-016 Clean Rod

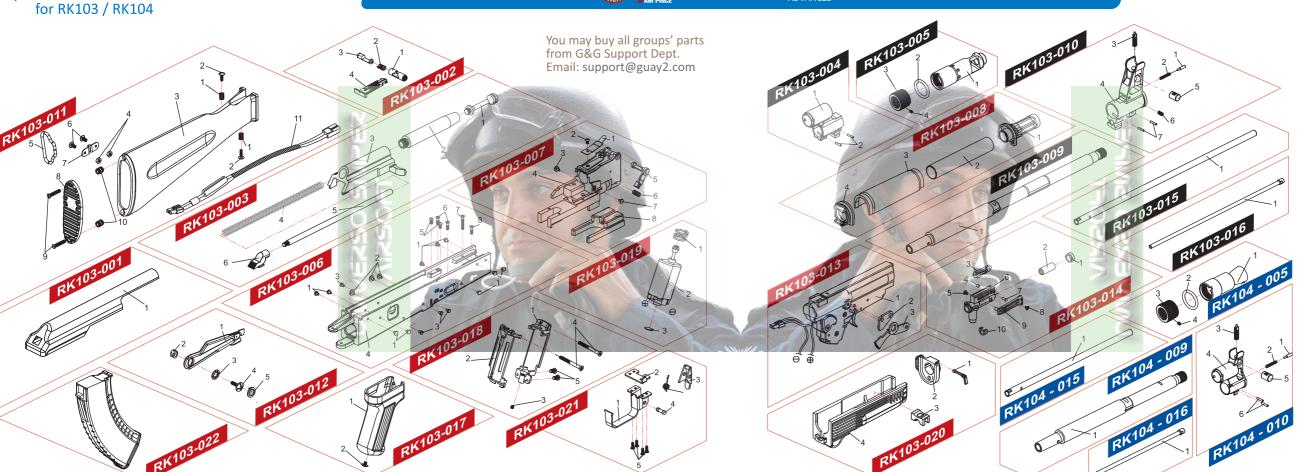





# PARTS LIST



RK103E-001 Receiver Cover Set RK103E-002 Rear Sight Set

RK103E-003 Bolt Set

RK103E-006 Receiver Set

RK103E-007 Barrel Base Set

RK103E-008 Gas Cylinder Set

RK103E-011 Butt Stock Set

RK103E-012 Selector Lever Set RK103E-013 Gear Box Set

RK103E-014 Hop Up Set

RK103E-017 Grip Set

RK103E-018 Motor Base Set

RK103E-019 Motor Set

RK103E-020 Handguard Set

RK103E-021 Trigger Guard Set

RK103E-022 Magazine

# for RK103 EVO

RK103E-004 Gas Block Set RK103E-005 Flash Suppressor Set

RK103E-009 Outer Barrel Set

RK103E-010 Front Sight Set

RK103E-015 Inner Barrel

RK103E-016 Clean Rod


## for RK104 EVO

RK104E-005 Flash Suppressor Set RK104E-009 Outer Barrel Set

RK104E-010 Front Sight Set

RK104E-015 Inner Barrel

RK104E-016 Clean Rod

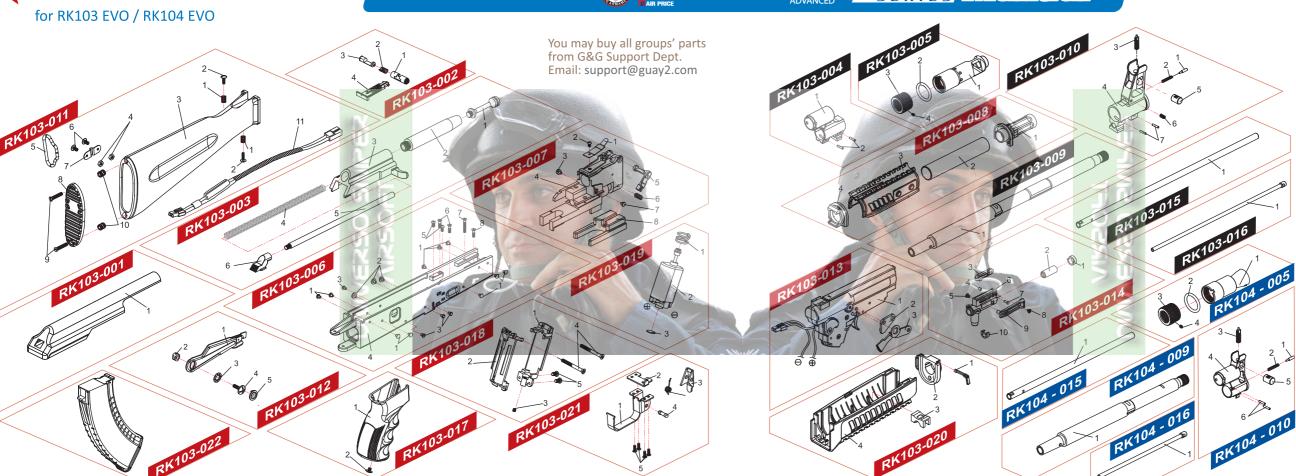

You may buy all groups' parts

Email: support@guay2.com

from G&G Support Dept.



# PARTS LIST

# for RK103 EVO CRANE / RK104 EVO CRANE

RK103EC-02 Rear Sight Set RK103EC-03 Bolt Set RK103EC-06 Receiver Set RK103EC-07 Barrel Base Set RK103EC-08 Gas Cylinder Set RK103EC-11 Butt Stock Set

RK103EC-01 Receiver Cover Set

RK103EC-13 Gear Box Set

RK103EC-18 Motor Base Set

RK103EC-21 Trigger Guard Set

RK103EC-22 Magazine

RK103EC-23 Cord Set

# for RK103 EVO CRANE

RK103EC-05 Flash Suppressor Set RK103EC-09 Outer Barrel Set RK103EC-10 Front Sight Set RK103EC-15 Inner Barre

RK103EC-16 Clean Rod

### for RK104 EVO CRANE

RK104EC-05 Flash Suppressor Set RK104EC-09 Outer Barrel Set RK104EC-10 Front Sight Set RK104EC-15 Inner Barre

RK103EC-12 Selector Lever Set

RK103EC-14 Hop Up Set

RK103EC-17 Grip Set

RK103EC-19 Motor Set

RK103EC-20 Handguard Set


RK103EC-04 Gas Block Set

RK104EC-16 Clean Rod







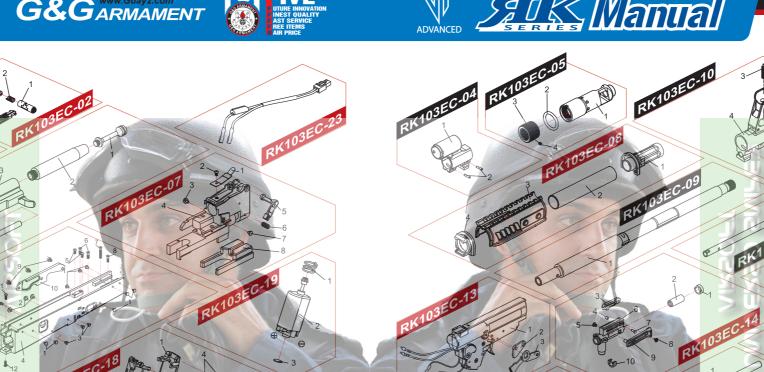







# PARTS LIST 36

# for RK BETA

Receiver Cover Set RKBETA-001

**Bolt Set** RKBETA-002

Flash Suppressor RKBETA-003

Magazine RKBETA-004

RKBETA-005 Receiver Set

Barrel Base Set RKBETA-006

Gas Cylinder Set RKBETA-007

Front Sight Set RKBETA-008 **Butt Stock Set** RKBETA-009

Selector Lever Set RKBETA-010

Gear Box Set RKBETA-011

Hop Up Set RKBETA-012

Outer Barrel RKBETA-013

Inner Barrel RKBETA-014


RKBETA-015 Grip Set

Motor Base Set RKBETA-016

Motor Set RKBETA-017

Rail Handgurad Set RKBETA-018

Trigger Guard Set RKBETA-019

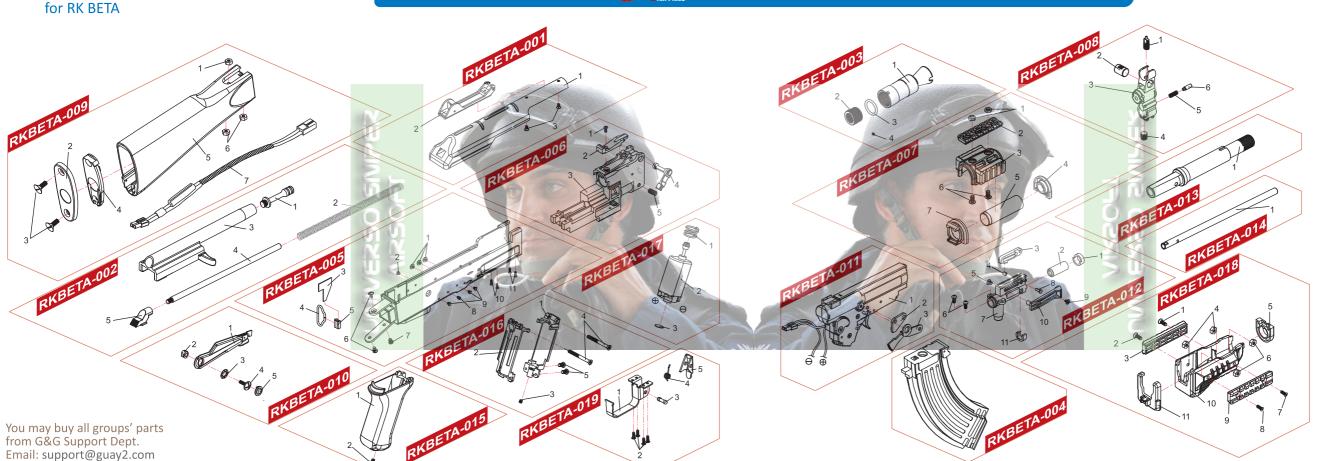







GK99BB-001 Receiver Cover Set GK99BB-002 Bolt Lever Set GK99BB-003 Bolt Guide Set GK99BB-004 Gas Tube GK99BB-005 Receiver Set GK99BB-006 Handguard Set GK99BB-007 Gas Block Set GK99BB-008 Front Sight Set

GK99BB-009 Flash Suppressor

GK99BB-010 Folding Stock Set

GK99BB-011 Grip

GK99BB-012 Selector Lever Set

GK99BB-013 Gear Box Set GK99BB-014 Hop Up Set

GK99BB-015 Outer Barrel Set


GK99BB-016 Inner Barrel

GK99BB-017 Motor Base Set

GK99BB-018 Motor Set

GK99BB-019 Trigger Guard Set

GK99BB-020 Magazine

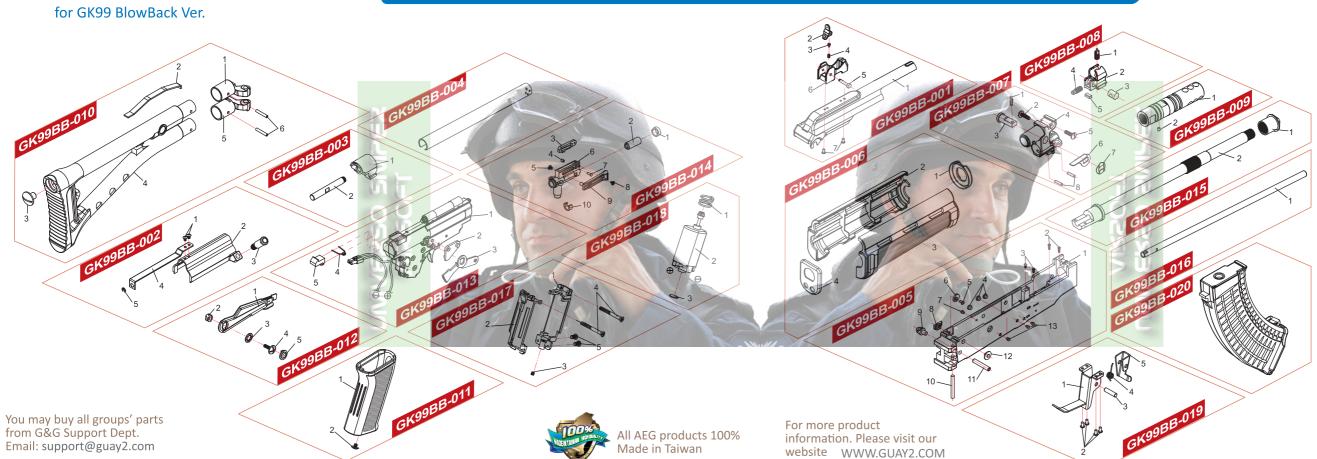



for GK74 / GK74N / GKS74U


You may buy all groups' parts from G&G Support Dept. Email: support@guay2.com

**G&G** WWW.Guay2.com

ARMAMENT





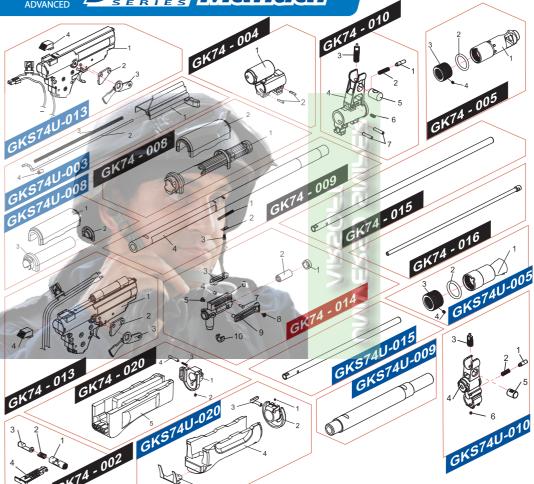

	PART	S LIST \underself
	•	74N / GKS74U
	GK74 - 012	
	GK74 - 014	Hop Up Set
	GK74 - 017	Grip Set
	GK74 - 018	Motor Base Set
	GK74 - 019	Motor Set
	GK74 - 021	Trigger Guard Set
	GK74 - 022	Magazine
	for GK74 / GK	74N
	GK74 - 001	Receiver Cover Set
	GK74 - 002	Rear Sight Set
	GK74 - 003	Bolt Set
	GK74 - 004	Gas Block Set
	GK74 - 005	Flash Suppressor Set
	GK74 - 007	Barrel Base Set
	GK74 - 008	Gas Cylinder Set
	GK74 - 009	Outer Barrel Set
	GK74 - 010	Front Sight Set
1	GK74 - 013	Gear Box Set
	GK74 - 015	Inner Barrel
	GK74 - 016	Clean Rod
	GK74 - 020	Handguard Battery Set
5	GK74 - 023	Cord Set
	GK74 - 024	Battery Charger Set

# GK74 - 024 Battery Charger Set

for GK74 / GKS74U GK74 - 006 Receiver Set GK74 - 011 Folding Stock Set

# for GKS74U

GKS74U-001 Receiver Cover Set

GKS74U-003 Bolt Set

GKS74U-005 Flash Suppressor Set

Gas Cylinder Set


GKS74U-009 Outer Barrel Set

GKS74U-015 Inner Barrel

GKS74U-020 Handguard Set

# for GK74N

GK74N-006 Receiver Set GK74N-011 Butt Stock Set

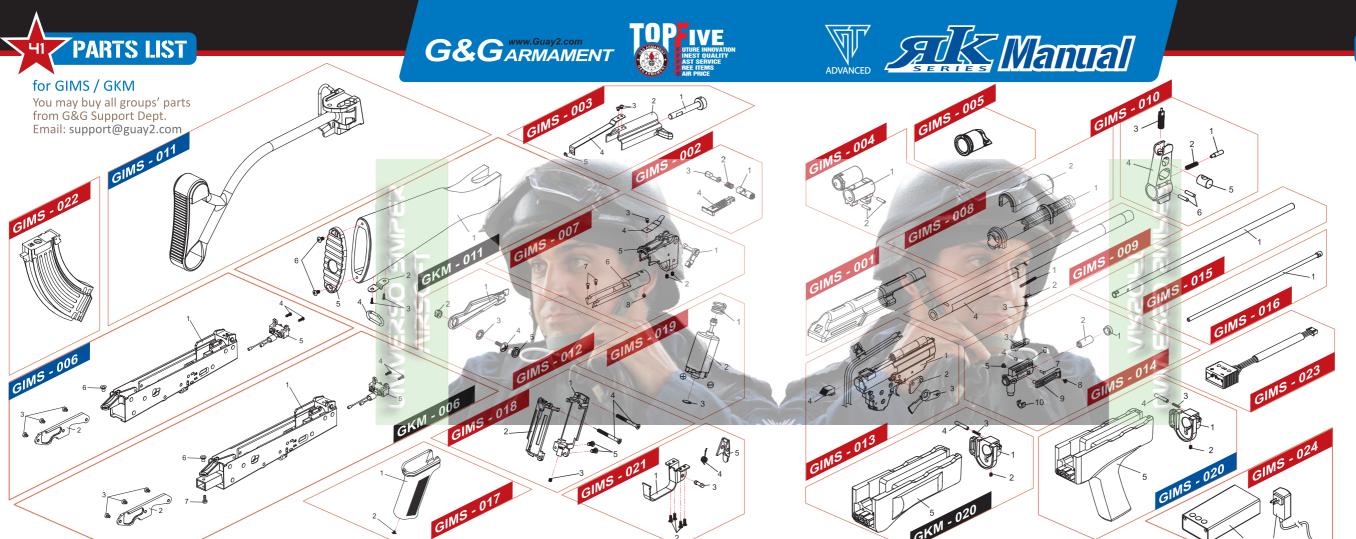

# PARTS LIST YE

# for GIMS / GKM

GIMS - 001 Receiver Cover Set GIMS - 002 Rear Sight Set GIMS - 003 Bolt Set GIMS - 004 Gas Block Set GIMS - 005 Flash Suppressor Set GIMS - 007 Barrel Base Set GIMS - 008 Gas Cylinder Set GIMS - 009 Outer Barrel Set GIMS - 010 Front Sight Set GIMS - 012 Selector Lever Set GIMS - 013 Gear Box Set GIMS - 014 Hop Up Set GIMS - 015 Inner Barrel GIMS - 016 Clean Rod GIMS - 017 Grip Set GIMS - 018 Motor Base Set GIMS - 019 Motor Set GIMS - 021 Trigger Guard Set GIMS - 022 Magazine GIMS - 023 Cord Set GIMS - 024 Battery Charger

# for GIMS

GIMS - 006 Receiver Set
GIMS - 011 Folding Stock Set
GIMS - 020 Handguard Battery Set

## for GKM

GKM - 006 Receiver Set
GKM - 011 Butt Stock Set
GKM - 020 Handguard Battery Set






# PARTS LIST YH

# for GKMS

GKMS - 001 Receiver Cover Set GKMS - 002 Rear Sight Set GKMS - 003 Bolt Set GKMS - 004 Gas Block Set GKMS - 005 Flash Suppressor Set GKMS - 006 Receiver Set GKMS - 007 Barrel Base Set GKMS - 008 Gas Cylinder Set GKMS - 009 Outer Barrel Set GKMS - 010 Front Sight Set GKMS - 011 Folding Stock Set GKMS - 012 Selector Lever Set GKMS - 013 Gear Box Set GKMS - 014 Hop Up Set GKMS - 015 Inner Barrel GKMS - 016 Clean Rod GKMS - 017 Grip Set GKMS - 018 Motor Base Set GKMS - 019 Motor Set GKMS - 020 Handguard Battery Set GKMS - 021 Trigger Guard Set GKMS - 022 Magazine GKMS - 023 Cord Set

You may buy all groups' parts from G&G Support Dept. Email: support@guay2.com

GKMS - 024 Battery Charger

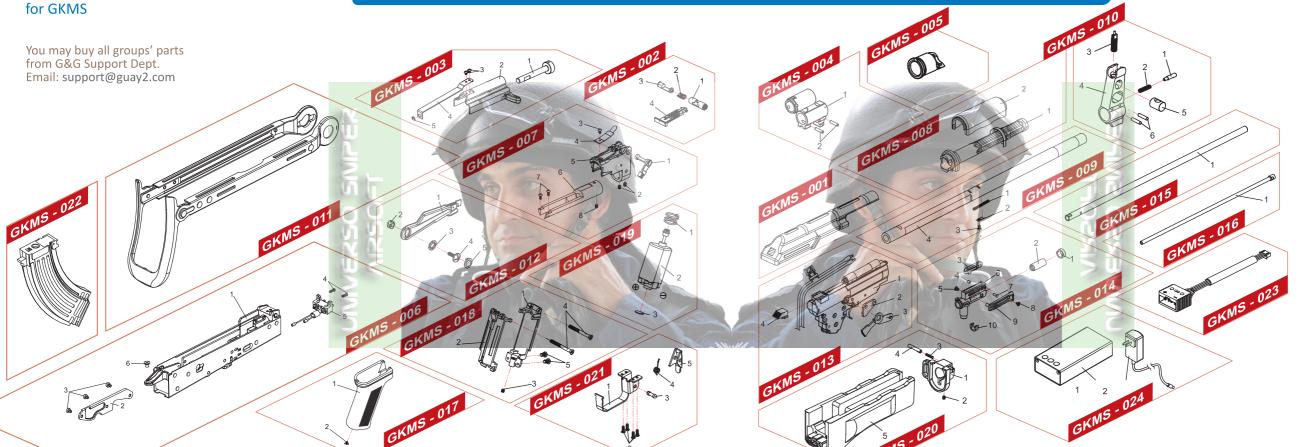





# PARTS LIST 16

# for GKMS Carbine / GK74 Carbine

GKMS C - 01 Receiver Cover Set GKMS C - 03 Bolt Set GKMS C - 05 Flash Suppressor Set Gas Cylinder Set Outer Barrel Set Front Sight Set Selector Lever Set Gear Box Set GKMS C - 14 Hop Up Set GKMS C - 15 Inner Barrel GKMS C - 17 Grip Set GKMS C - 18 Motor Base Set GKMS C - 19 Motor Set GKMS C - 20 Handguard Set

# for GKMS Carbine


GKMS C - 06 Receiver Set GKMS C - 11 Folding Stock Set GKMS C - 22 Magazine

GKMS C - 21 Trigger Guard Set

# for GK74 Carbine

GK74 C - 06 Receiver Set GK74 C - 11 Folding Stock Set GK74 C - 22 Magazine



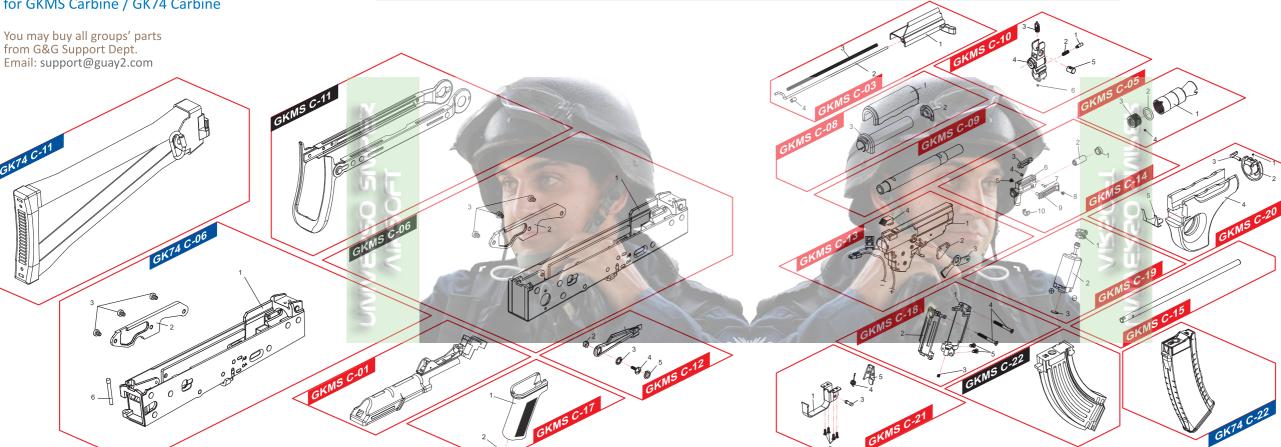



GK74IM GKG7/41VI CLASSIC EDITION

GK\$74 GKSG7/13 CLASSIC EDITION

# G&GARMAMENT







A CAUTION Direct the muzzle towards a safe direction and set the selector to the safety position. The magazine should be removed before changing the battery.

### Battery Setting ( GKS74 / GK74M )



- 1. Push the button and pull forward to unlock the handguard battery.
- 2.Remove the handguard battery.

## Battery Setting ( GKSG74 / GKG74M )



- 1. Push the cover release button to remove the bolt.
- 2.Connect the battery unit it clicks, then put back the cover.

## Folding Stock ( GKS74 / GKSG74 )



1. Push the stock lock button to unlock. 2. Turn to fold the stock.

### Folding Stock ( GK74M / GKG74M )



1. Push the stock lock button to unlock. 2. Turn to fold the stock.

# Battery Setting (GKS74 / GK74M)



Power: Blue Light (ON) Error Status : Red Light (Flashing) Normal : Red Light (OFF) Fully Charged: Green Light (ON) Normal : Green Light (OFF)

When the green light flashing more frequently shows the charging speed is faster. When the battery is nearly **LED Indication** full, the green light will be on consistenly.

**CAUTION** Make sure the longitudinal slits always present on pin connector. If the pin connector has been deformed, it may disable the firing function!





You can use the razor blade to expand the slit and spread the two halves of the pin to compensate for wear.







for GKS74 / GKSG74 / GK74M / GKG74M

001 Bolt Cover

002 Rear Sight Set

003 Bolt Set

004 Gas Block Set

005 Flash Suppressor Set

006 Receiver Set

007 Barrel Base Set

008 Gas Cylinder Set

009 Outer Barrel Set

010 Front Sight Set

011 Folding Stock Set

012 Selector Lever Set

013 Gear Box Set

014 Hop Up Set

015 Inner Barrel

016 Dummy Rod

017 Grip Set

018 Motor Mount Set

019 Motor Set

020 Handguard Battery\_GKS74/GK74M

021 Trigger Guard Set

022 Magazine

023 Charger Adapter\_GKS74/GK74M

024 Battery Charger GKS74/GK74M

025 Lower Handguard Retainer

026 Handguard GKSG74/GKG74M

027 Wire Set\_GKSG74/GKG74M