



**G&G ARMAMENT**AIRSOFT GUNS & ACCESSORIES

GR16 Plastica

Gmm Electric Semi/Full Auto System

CONTENTS

P02.P03.P04.P05 **Warning** 

P06.P07 ▶ Components

P08.P09 ▶ Battery setting and battery type

P10 Fuse type and replacement

P11 ➤ Magazine loading

P12 ▶ Magazine insert and release

P13 Firing mode and safety

P14 ▶ Hop-up adjusting

P15 ▶ Front sight and rear sight adjusting

P16 > Trigger guard and motor gear engagement adjusting

P17 ▶ Stock adjusting

P18.P19 > Front set disassemble

P20 **Barrel nut and compensator wrench** 

P21 > Spec. for GR16 carbine PLASTICA


P22 ▶ **G&G Airsoft guns** 

P23 ▶ Caution



■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

G&G ARMAMENT

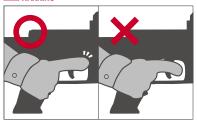

Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.



When shooting the air guns for target practice When shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear Also, pay attention to ricochets.
It is important to pay attention to third parties other than the participants.



There may be cases where some BBs remain in

There may be cases where some BBs remain in the gun after the magazine has been disconnected.


After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

P.02

### P.03



 When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.



Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.




Disassembling or modifying the gun may adversely affect the performance and make it dangerous

**GR16** FIREIDE Plastica


■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

### **G&G ARMAMENT**

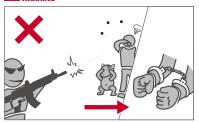

You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a " practical joke" Always observe good manners and enjoy fun sport shooting.

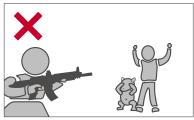


Never direct the muzzle towards a person animal or in any other dangerous direction.



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

P.04

### P.05

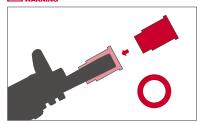


Make sure to attach the barrel and safety cap to make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.



Safety procedure

 - 1 Attach the safety cap to the muzzle.
  2 Set the selector lever to the safety position.
  3 Remove the magazine.
  4 Remove the battery.



Looking into the muzzle is extremely dangerous regardless of BB's having been loaded or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.

**GR16** Plastica

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.



# Battery setting and battery type

### G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

1



Pull the slip ring and hold.

2



Remove the lower handguard.

3



Connect battery plug with the connector.

P.08

P.09

4



Please insert battery into lower handguard properly.

5



Re-attach lower handguard.

Recommended battery type:



8.4V 600 mAh Ni-Cd rechargeable battery.

GR16 Plastica

Gmm Electric Semi / Full Auto System

Battery setting and battery type -

# Fuse type and replacement

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

1



Push and turn the fuse case.

2



Replace the fuse.

3



Glass tube fuse 20A.

P.10

P.11

1



Open the cover on the top of the magazine.

2



Feed the BBs.

3



Close the cover and turn the gear at the bottom all the way until the sound changes.

GR16 Plastica
6mm Electric Semi/Full Auto System

Magazine loading

# Magazine insert and release

## G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

1



To insert the magazine:

Insert the magazine upward and connect firmly till a "Click" sound is heard.

2



3



**To release the magazine:**Hold the magazine, push the magazine release button and pull the magazine out.

P.12

P.13

1



**Safety on:**Trigger can not be pulled and gun will not fire.

2



**Semi auto:**One shot each time when the trigger is pulled.

3



Full auto:
Automatic firing when trigger remains pulled.


GR16 Plastica
6mm Electric Semi/Full Auto System

Firing mode and safety -

## Hop-up adjusting

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

1

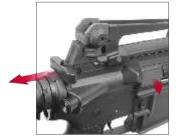


Pull the charging handle backward to open the ejection cover.

2



hold the charging handle.

3

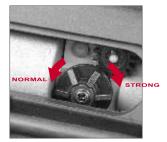

Turn the adjust dial to change the hop-up effect.

P.14

P.15



Push and turn the tool (included) to adjust the front sight.



Windage knob:
For rear sight left/right adjustment.
Elevation knob:
For rear sight up/down adjustment.

Battle sight(flip manually)



For normal shooting



For precision shooting

GR16 Plastica
6mm Electric Semi/Full Auto System

Front sight and rear sight adjusting

### Trigger guard and Motor gear engagement adjusting

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

1



2



Depress the trigger guard plunger with a proper tool and open the trigger guard.

NOTE:

Only adjust if the gear noise becomes shrilly.



The motor adjust screw is at the bottom of the grip.
Use a screwdriver to adjust.

P.16

P.17

1



Push stock release lever to adjust stock length.

2



Adjust proper stock length (6 position)

GR16 Plastica
6mm Electric Semi/Full Auto System

Stock adjusting

\_

### Front set disassemble

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

1



Pull the slip ring.

2



Remove the lower handguard.

3



Remove the upper handguard.

P.18

P.19



Black wire \_

Release the connectors.

2



Unlock the outer barrel nut and

**WARNING!!** 

Please be careful, do not hurt your fingers when removing parts.


Always remove the magazine and battery first when assembling or disassembling the gun.

GR16 Plastica
6mm Electric Semi/Full Auto System

Front set disassemble -

# Barrel nut and compensator wrench

### G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

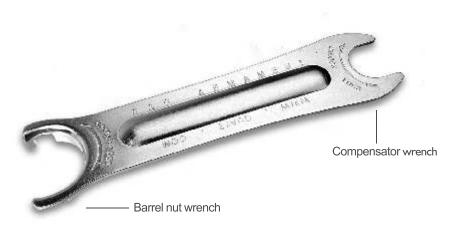

P.20

P.21

# GR16 Plastica

SPEC. for 6mm Electric Semi / Full Auto System



Overall length: 790mmInner barrel length: 366mmWeight: 2600g

• Muzzle velocity : 80 m/sec with 0.2g BB



GR16 A3 Carbine GR16 R4 GR16 Plastica Series GR16 Carbine GR16A3 GR16 A2 Carbine GR16 R4 Carbine GR16A2 GR16 R5

GR16A3 GR16 R5 GR16 Carbine GR16 R4 GR16 A2 Carbine GR16 A3 Carbine GR16 R4 Carbine GR16 se series GR16A2

GR300 LP GR25 Sniper GR300 series GR300 SP

S.M.G series UMG

RK Series RK 103 RK 104

PM5A4

**Fourteen** series Fourteen black stock version Fourteen imitation wood stock version Fourteen walnut wood stock version imitation wood stock version Rifle type 57 walnut wood stock version

Rifle type 57

P.23

### CAUTION

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to hurt your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box

Turning hop-up dial excessively causes clogging of BBs in the hop-up chamber. Continuos pulling of the trigger with clogged BBs will damage the piston and the gears.

Never hold the gun sideways as BBs will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.



**G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES WWW.GUAY2.COM

MANUFACTURED BY GUAY GUAY TRADING CO., LTD. MADE IN TAIWAN

DEALER

Please consult your dealer or G&G for overhaul maintenance and technical guidance.



- DISCLAIMER

  Accessories pictured are not always included with product.

  Actual supervision required for users under 18 years of age.

  The purchaser and user should conform to all laws governing and ownership of airsoft guns.

  All products in this catalog are imitiation firearms and are not intended nor represented to be comparable in design, appearance, or function to any actual firearm offered by other manufacturers.

  Product names are trademarks of Guay Guay Tradign Company (G&G), which has no affiliation to, and is not associated, or sponsored by any other manufacturer of actual or imitation firearms. Products may vary from those pictured.

P.24

PDF CREADO POR SNIPER, MATADORES AIRSOFT CLUB

www.matadoresairsoft.com