



G&G ARMAMENT
AIRSOFT GUNS & ACCESSORIES
http://www.guay2.com



P02. P03. P04. P05. ▶ WARNING

P06. P07. ▶ COMPONENTS

P08. ▶ BATTERY SETTING

P09. ▶ LOW PROFILE MOUNT

P10. P11. ▶ MAGAZINE LOADING

P12. ▶ FIRING MODE AND SAFETY

P13. ▶ REAR SIGHT ADJUSTMENT

P14. ▶ HOP-UP ADJUSTMENT

P15. ▶ MOTOR GEAR ENGAGEMENT

P16. P17. P18. P19. ▶ FIELD STRIPPING

P20. ▶ THREAD PROTECTOR

P21. ▶ FLASH SUPPRESSOR

 
P22. ▶ SPEC.

P23. ▶ CAUTION

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

### <u>↑</u>警告




Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

### <u>♠警告</u>



When shooting the air guns for target practice when shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear. Also, pay attention to ricochets. It is important to pay attention to third parties other than the participants.

### <u>♠警告</u>

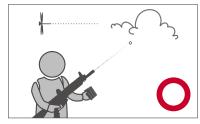

There may be cases where some BBs remain in

Incre may be cases where some BBs remain in the gun after the magazine has been disconnected.

After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

P.02

### P.03

## <u> ↑ 警告</u>



When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.



Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.




Disassembling or modifying the gun may adversely affect the performance and make it dangerous.



■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES

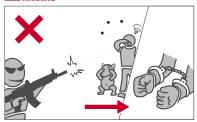

You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a " practical joke" Always observe good manners and enjoy fun sport shooting.



Never direct the muzzle towards a person, animal or in any other dangerous direction




Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

P.04

### P.05

## <u>↑警告</u>

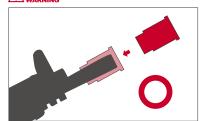

Make sure to attach the barrel and safety cap to Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.

## 



Safety procedure


- 1 Attach the safety cap to the muzzle.
  2 Set the selector lever to the safety position.
  3 Remove the magazine.
  4 Remove the battery.



Looking into the muzzle is extremely dangerous regardless of BB's having been loaded or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.



■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

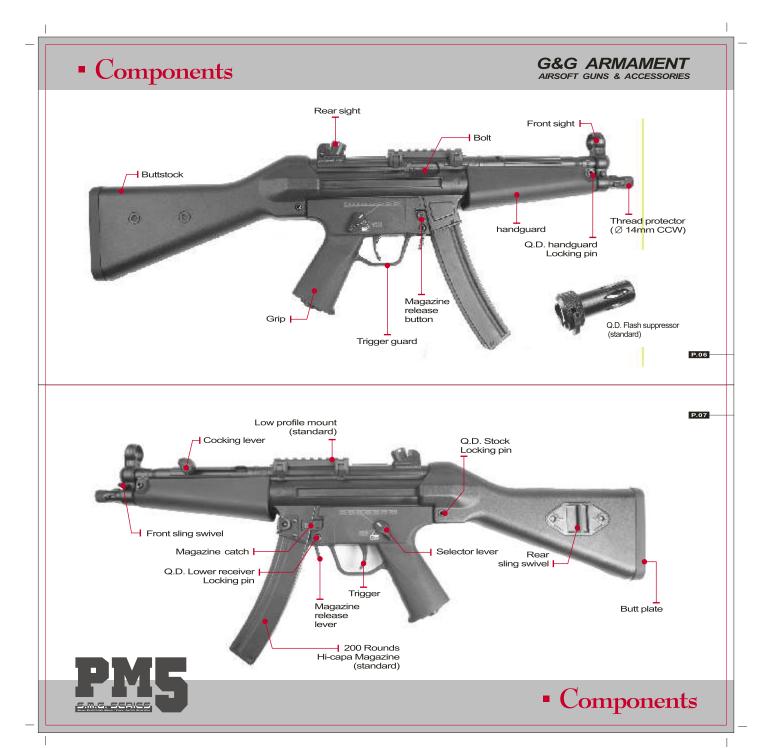

# Battery setting and battery type

## G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

1



Take off the butt plate.

2



Insert battery into the buttstock and connect the connector. Then close the butt plate.

Recommended battery type:



8.4V 1800mAh Ni-Cd rechargeable battery

P.08

P.09

1



Low profile mount. (short type)

2



Put on the low profile mount on the upper receiver and tighten up the screws.

3



Finish.



Low profile mount

\_

# Magazine loading

## G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

1



Open the cover on the top of the magazine.

2



Feed the BBs till it's full.

3



Close the cover and turn the gear at the bottom all the way until the sound changes.

P.10

P.11

1



To insert the magazine:

Insert the magazine upward and connect firmly till a "Click" sound is heard.

2



To release the magazine:

Hold the magazine, push the magazine catch and pull the magazine out.



Magazine insert and release

# • Firing mode and safety


## G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

1



**Safety on:**Trigger can not be pulled and gun will not fire.

2

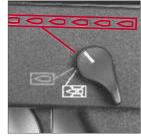

Full auto:
Automatic firing when trigger remains pulled.

3



**Semi auto:**One shot each time when the trigger is pulled.

P.12

P.13

1



Loosen the rear sight fixing screw and turn the adjusting screw with a screwdriver

2



Turn for adjustment.

A





There are 4 observe hole sizes.
Use the small size for precision shooting.



Rear sight adjustment

# HOP-UP adjusting

## **G&G ARMAMENT** AIRSOFT GUNS & ACCESSORIES





Pull the cocking lever backward to open the bolt.


2



Stock the cocking lever to hold the bolt.

3

HOP-UP LEVER

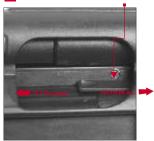

Sliding the Hop-up adjustment piece forward or backward to change the Hop-up effect.

P.14

P.15

1



The motor adjust screw is at the bottom of the grip.

2



Use a screwdriver to adjust.

NOTE:

Only adjust if the gear noise becomes shrilly.



Motor gear engagement

# • Field stripping

# **G&G ARMAMENT**AIRSOFT GUNS & ACCESSORIES

1




Pull the handguard locking pin out.

2



Remove the handguard.

3

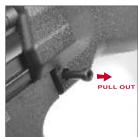

Pull the stock locking pin out.

P.16


P.17

4



Pull the stock backward.

5

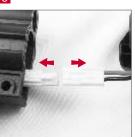

Release the connectors.

6



Pull the lower receiver locking pin out.



• Field stripping

\_

# • Field stripping

### G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

7



Pull the lower receiver out.

8



Take off the bolt.



Please be careful, do not hurt your fingers when removing parts.

Always remove the magazine and battery first when assembling or disassembling the gun.

P.18

P.19





• Field stripping

# Thread protector

# **G&G ARMAMENT**AIRSOFT GUNS & ACCESSORIES



Remove the thread protector to attach the sound suppressor.

2



Thread size -  $\varnothing$  14mm CCW

P.20

P.21



Unlock the locking lever.



Slip on the barrel fore end and turn.



Lock the locking lever.



Flash Suppressor





■ Built material: AL6061 / Magnesium / Zinc / Plastic

■ Magazine capacity: 200 rounds (standard)

■ Overall length: 710mm

■ Inner barrel length: 233mm

■ Weight: **2500g** 

■ Muzzle velocity: 80 m/sec with 0.2g BB

P.22

P.23

## **CAUTION**

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to hurt your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively causes clogging of BBs in the hop-up chamber. Continuos pulling of the trigger with clogged BBs will damage the piston and the gears.

Never hold the gun sideways as BBs will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.

**G&G ARMAMENT**AIRSOFT GUNS & ACCESSORIES





Guay Guay Trading CO., LTD. www.guay2.com

Please consult your dealer or G&G for overhaul maintenance and technical guidance.

DEALER

PDF POR SNIPER, MATADORES AIRSOFT CLUB www.matadoresairsoft.com