


M16 SUITE

HANDLING CAUTIONS & INSTRUCTION MANUAL

M4AI CARBINE



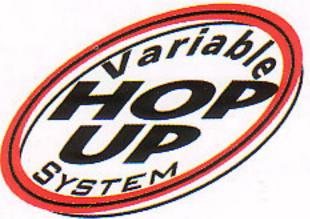

OPERATION OF THIS AIR GUN FOR COMPETITION USE IS RESTRICTED TO USERS OF 18 YEARS OF AGE OR OLDER.

SINCE PLASTIC BB BULLETS REACH 50 TO 60 M,

CARELESS SHOOTING MAY CAUSE EYE DAMAGE OR OTHER INJURIES.

ALWAYS READ THROUGH THIS HANDLING CAUTIONS AND INSTRUCTION MANUAL

CAREFULLY BEFORE OPERATION


OPERATE THE AIR GUN WITH FULL RECOGNITION OF WARNINGS AND CAUTIONS.

蘇柏製作所 Product of Autumn Star Int'l Ltd

ALUMINUM DIE CASTING

AUTOMATIC ELECTRIC GUN SERIES



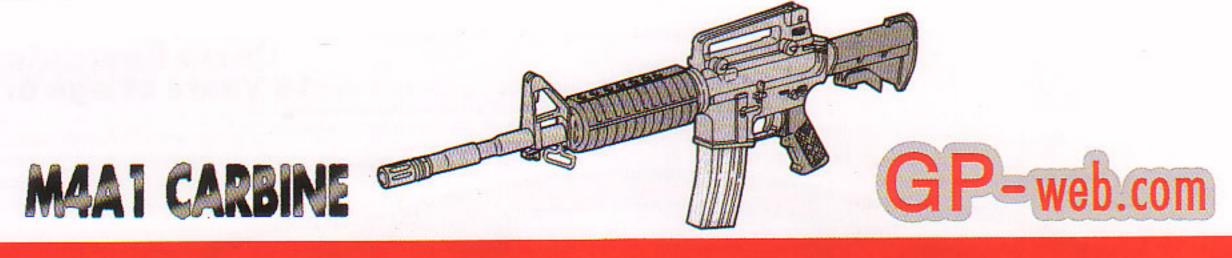


Always read through this manual before operation.

WARNING HANDLING CAUTIONS AND INSTRUCTION MANUAL

This sport gun is developed for enjoying sport shooting through correct sport shooting operation. You can experience unique feel of the air gun, which is a most suitable sport goods to improve your shooting sense, if you recognize its features and operational warnings. As the air gun has the capacity to shoot BB bullets by 50to 60 meters, careless shooting and wrong operation are dangerous, causing eye damage or other injury. Make sure to read through warnings stipulated below and observe rules and manners for pleasant sport shooting.


Operation of this air gun for competition use is restricted to users of 18 years old or more careless shooting and wrong operation are dangerous, causing eye damage or other injury.

WARNING Always wear eye protective gear.

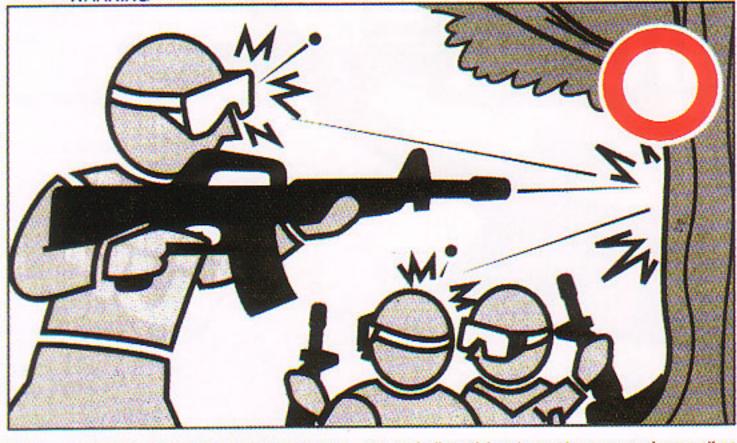

When shooting the air gun for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.)

Never shoot the air gun towards a person or animal.

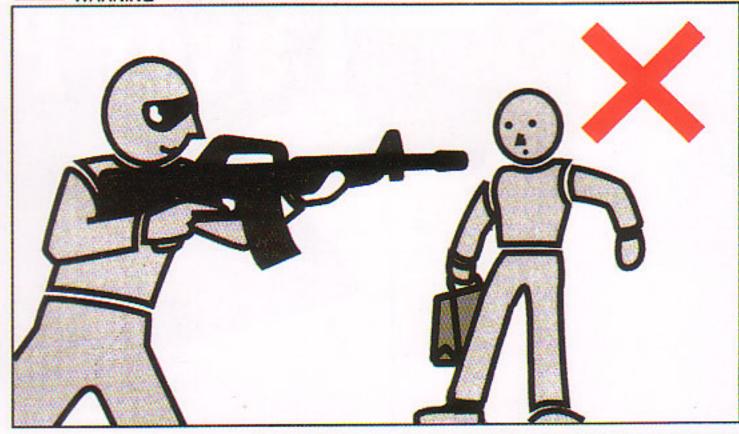


Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle, except when you are ready to shoot a target.

You may be punished if you are shooting for a practical joke.



You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

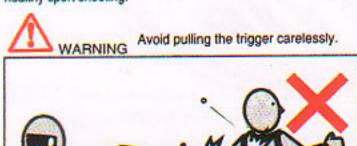

Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the protectiveplug is removed and you are ready to shoot a target.



When you carry the air gun, attach the protective plug, set the selector lever to the Safety position and put it in a case or bag.



Looking into the muzzle is extremely dangerous, regardless of with or without bullets being installed. If a BB bullet hits your eye, you may, in the worst case, loose your sight.



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.



Never direct the muzzle towards a person, animal or other dangerous directions. Always attach the protective plug, except when you are ready to shoot a target.



DSet the selector lever to the Safety position. @ Remove the magazine. (3) Remove the battery from the air gun.



WARNING by children.

WARNING Never disassemble or modify the air gun.

Store the air gun at places out of reach



This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance.So, avoid disassembling or modifying the air gun.




BB bullets may be shot out even if the


There are cases that bullets remain in the gun after the magazine is disconnected. Pulling the trigger carelessly is extremely dangerous. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no bullets remain in the gun. Then, attach the protective plug to the muzzle.



Never put your fingers onto the trigger except when you are shooting a target. Maintaining your fingers on the trigger may cause sudden discharge for some reasons, which is dangerous.



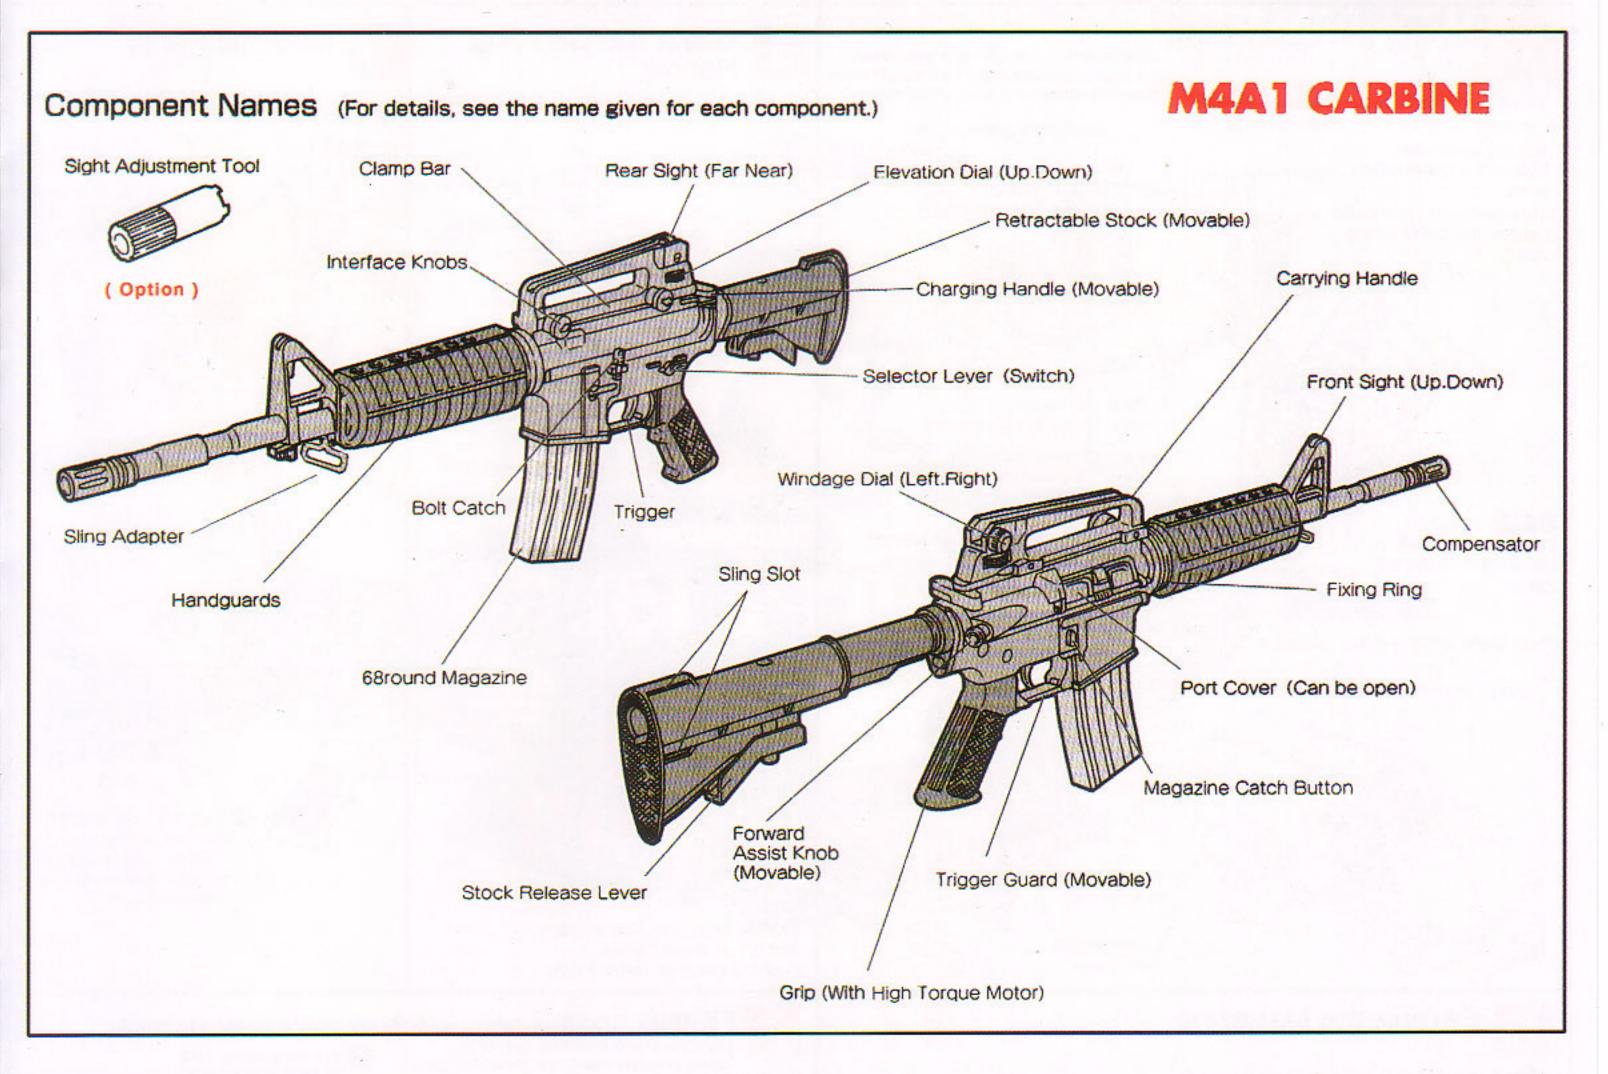


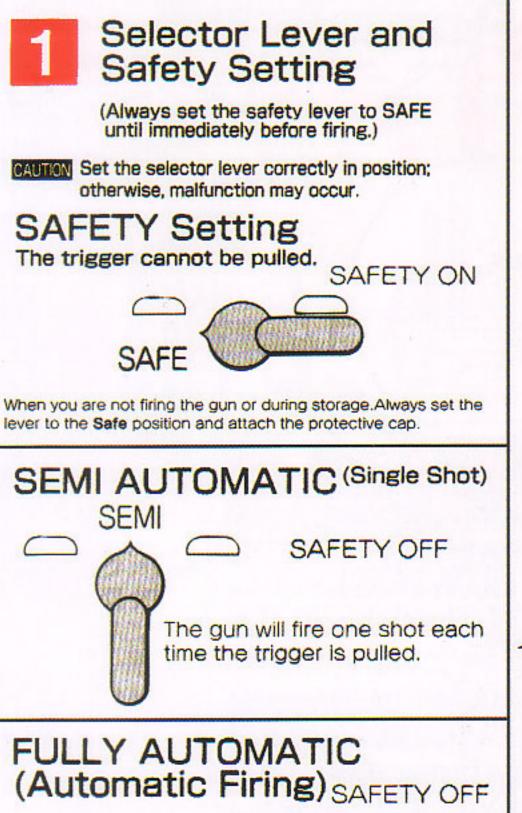



AUTO

The gun will fire automatically while the

trigger remains pulled.

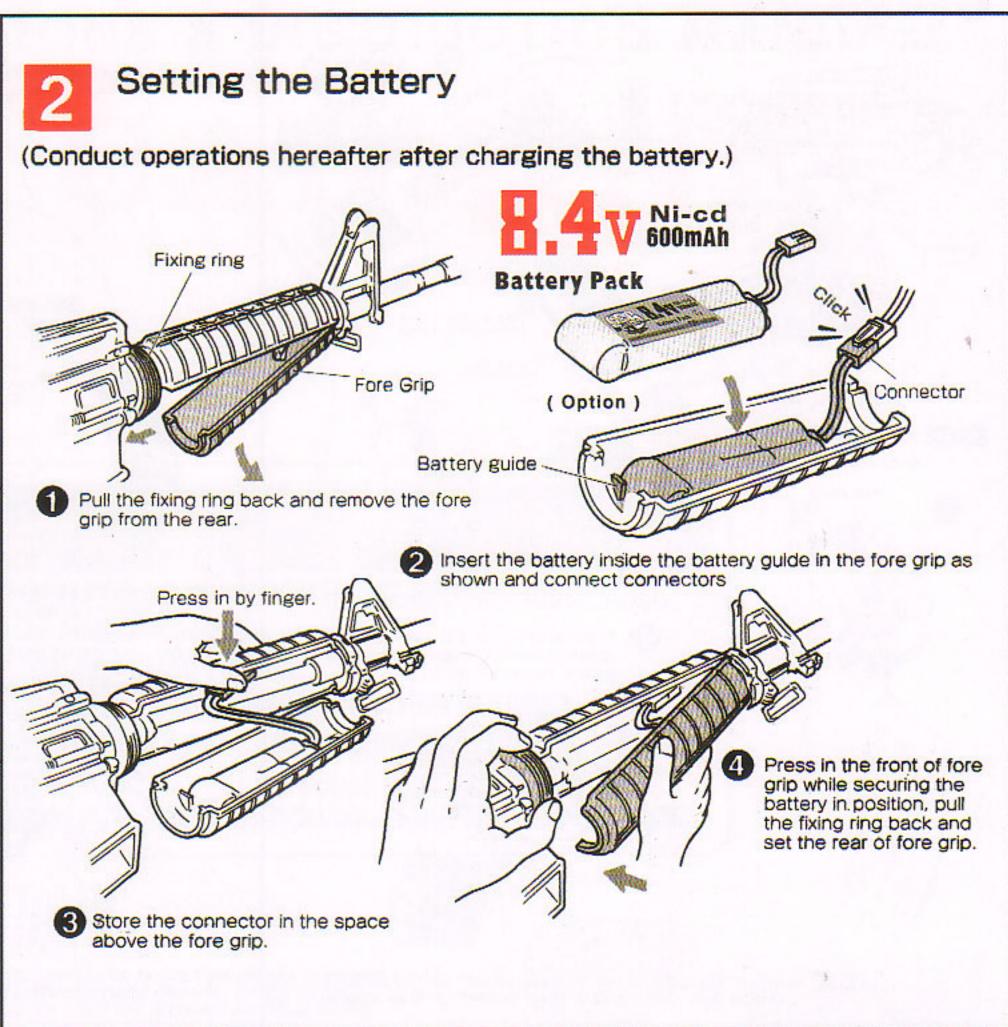

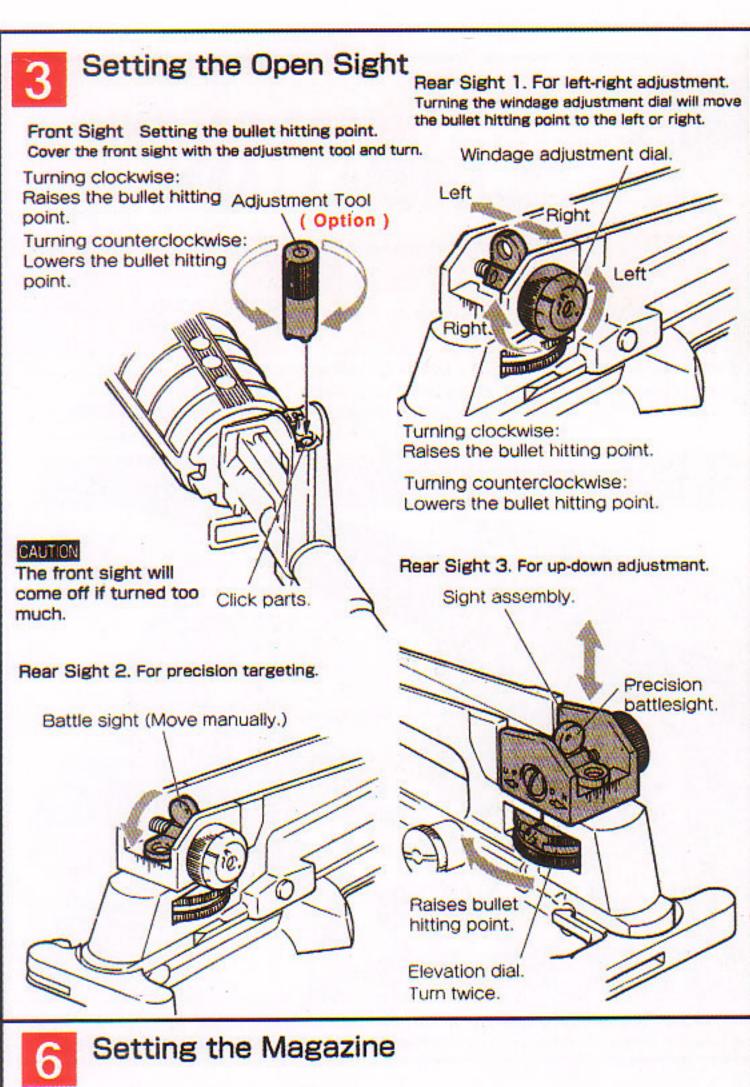

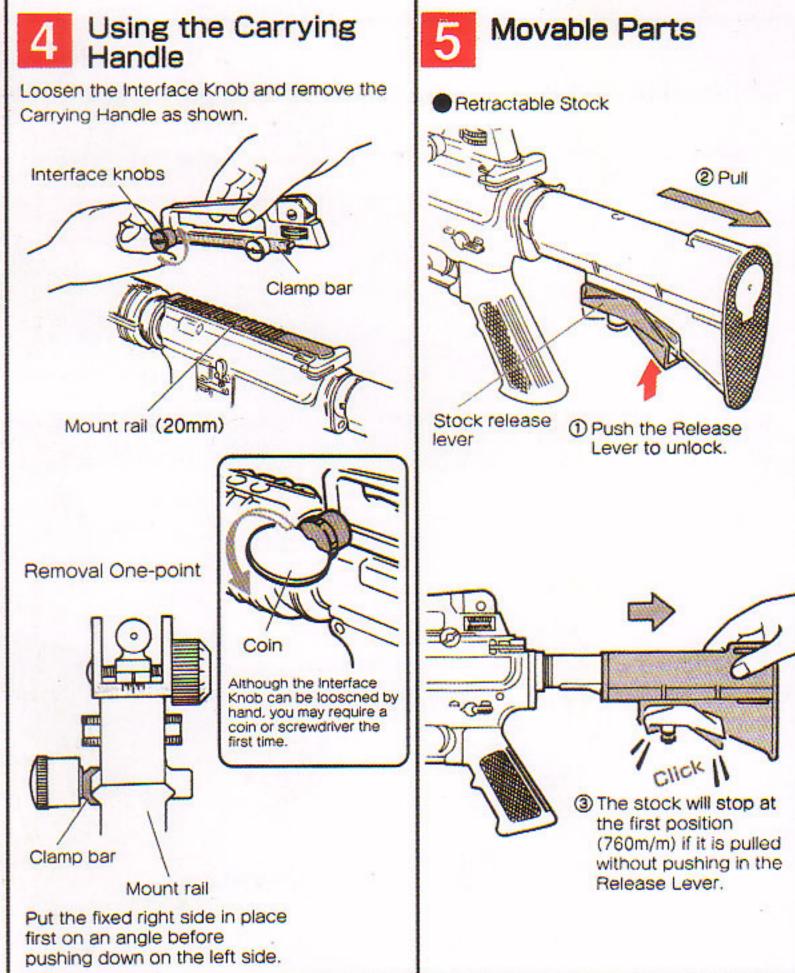

FIRING (Confirm safety sufficiently before beginning firing.)

Set the selector lever

to Semi or Full Auto.

Remove the protective cap only

when you are ready for firing the gun.

