## **Gearbox with QD Spring Guide**



Gearbox with QD

Design





1. Insert a 4mm allen key into the keyhole at the rear end of the spring guide.



2. Press the spring guide into the gearbox while rotating it.



3. Align the spring guide teeth with the four notches on the rear of the gearbox.



4. Slowly extract the QD spring guide together with the spring.





