

CAUTION!



- Be sure to wear shooting glasses or goggle when shooting.
- TOUJOURS PORTER DES LUNETTES DE TIR OU DE PROTECTION QUAND VOUS TIREZ

- Don't peep at the muzzle.
- NE JAMAIS REGARDER DANS LE CANON



- Don't touch the trigger until the moment of shooting.
- NE JAMAIS APPUYER SUR LA GACHETTE LE REARMEMENT



- Put the gun beyond the reach of kids.
- TENIR HORS DE PORTEE DES ENFANTS



- Don't aim at people even if it is unloaded.
- NE JAMAIS VISER QUELQU'UN MEME SI VOTRE PISTOLET EST VIDE




- After making sure that there is nobody nearby.

- TOUJOURS ETRE SUR QU'IL N Y A PERSONNE DANS LA TRAJECTOIRE DE VOTRE TIR




- Avoid a rough operation.
- NE JAMAIS JETER LE PISTOLET QUAND IL EST ARME

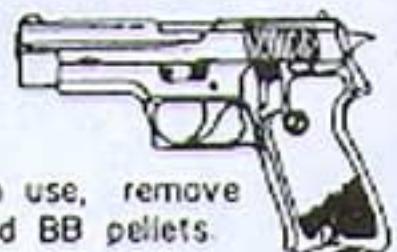

- When the gun is not in use, remove the magazine and unload BB pellets.

- QUAND VOUS NE L'UTILISEZ PLUS, BIEN FAIRE ATTENTION DE RETIRER LE CHARGEUR ET DE LE DESARMER

PRECAUTION

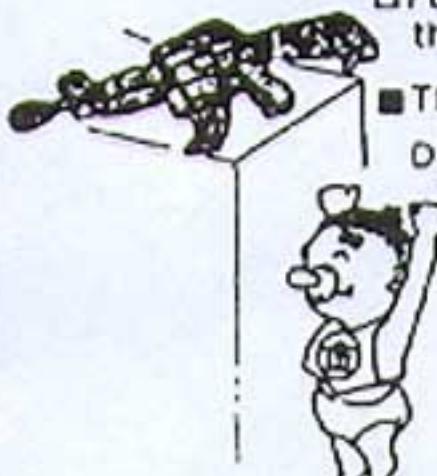

- Put the gun beyond the reach of kids.

- TENIR HORS DE PORTEE DES ENFANTS




- Don't aim at people even if it is unloaded.
- NE JAMAIS VISER QUELQU'UN MEME SI VOTRE PISTOLET EST VIDE




- After making sure that there is nobody nearby.

- TOUJOURS ETRE SUR QU'IL N Y A PERSONNE DANS LA TRAJECTOIRE DE VOTRE TIR

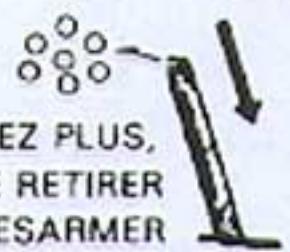


HOW TO OPERATE 操作說明書

※Lower down the follower and fill in BB pellets.

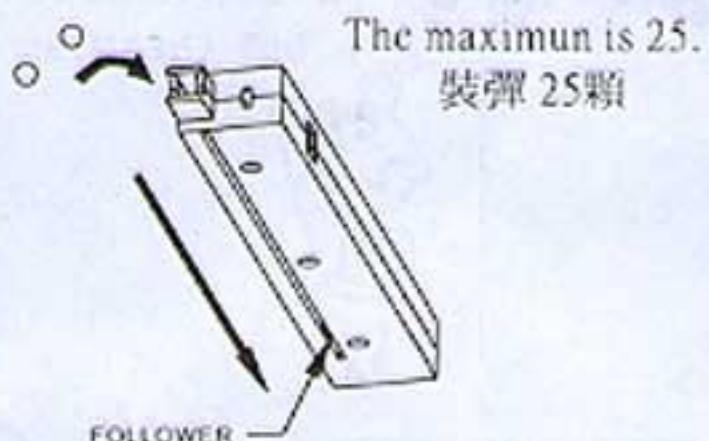

※Send the magazine back to the original place.

※彈匣置入槍身中

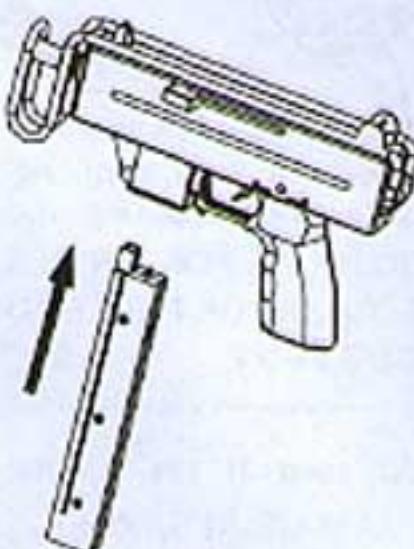

※將上彈頭下拉，固定在彈匣下方的位置，再裝入6MM BB彈

※Draw the slide to its end, the completely send it back

※拉柄要完全的完成後拉，並確認已前進原位

※Carefully look around and make sure it is completely safe for shooting, and then trigger.

※確認四周均安全後才可射擊

※Don't draw the slide to its end, then completely send it back.

※不射擊時，手指不可觸在扳機上

※Push the magazine catch and then take it off

※按下彈匣扣鉤，才可取出彈匣



How to use the safety
安全鉤的使用

※Fire position

※可擊發的位置



※Safety position

※安全的位置



Don't pull the trigger too forcefully.
(不可擊發)

TROUBLE SHOOTING：故障排除：

In case the handle is unable to move backward because of getting stuck, please take off the cartridge clip and check to see if a bullet has got stuck or not. If it has, retrieving the bullet from the chamber will remove the trouble.

如有卡住拉柄不能往後拉時，先退下彈匣檢查是否有子彈卡住，將之倒出即可。