


## 13 各部零件說明 Description

■ ICS-91 Full Metal

\*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。  
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

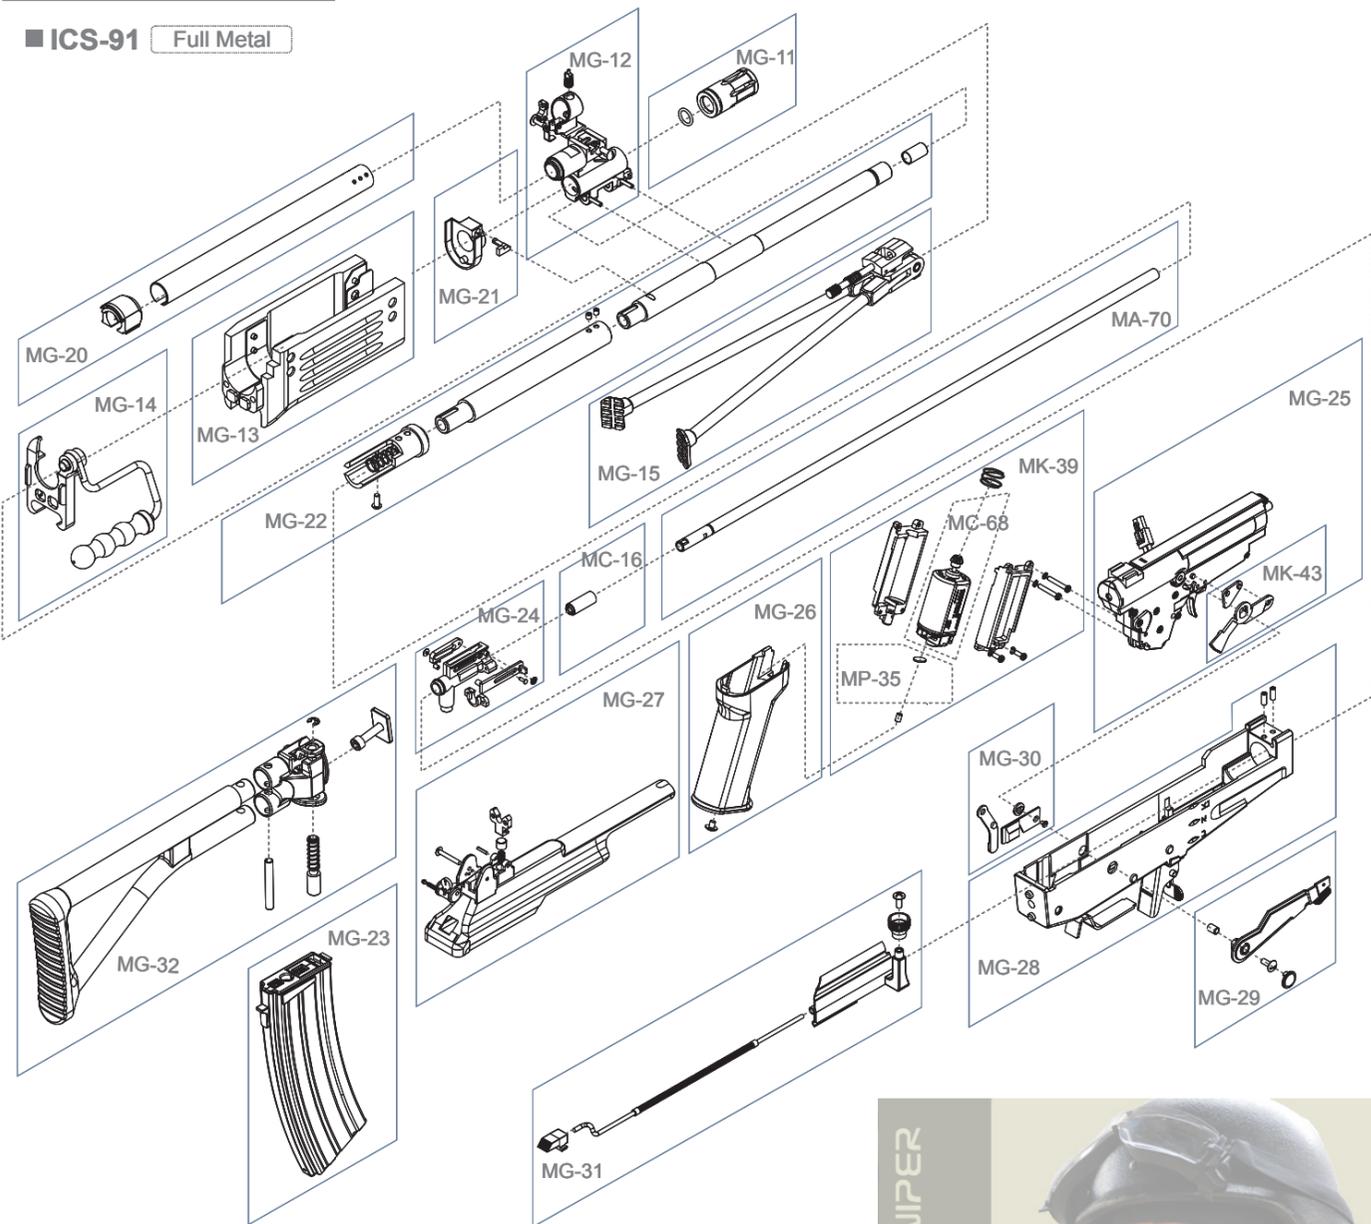

## WARNING 警告 電槍使用之注意事項 Maintenance

- 請勿使用回收及劣質的 BB 彈，以減少槍管損耗與避免卡彈的情形發生。  
Do not use recycle or low quality BB pellets to reduce the barrel damage and prevent from jams.
  - 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。  
When a BB pellet is jammed, cease fire immediately. Firing under jam may cause damage on gears. Please use the cleaning rod that came with your airsoft gun to push it into the barrel by moving down gently until the jammed BB pellet comes out. If the jam still cannot be solved, please contact your original purchase retailer or ask for professional agent for repair service.
  - 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。  
Note: No need to remove the barrel when eliminating jam.
  - 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。  
Please make sure the battery is fully charged before using. When the battery is run out or firing speed is decreasing, new battery has to be replaced immediately.
  - 請勿經常空槍射擊，以減少BOX及齒輪不必要的損耗。  
Please use cleaning rod periodically to clean the barrel to ensure the firing precision and reduce jam.
5. Do not dry fire the airsoft gun at any time to reduce damage to the gearbox.
- 使用前請務必詳閱此說明書限18歲以上使用  
Always read through this manual before operation.  
User restricted to 18 years of age or older.



## 1 各部名稱 Component names



■ ICS-91 Proline




■ ICS-92 Proline




■ ICS-96 Proline

## 2 準星調整 Rear sight and front sight adjustments

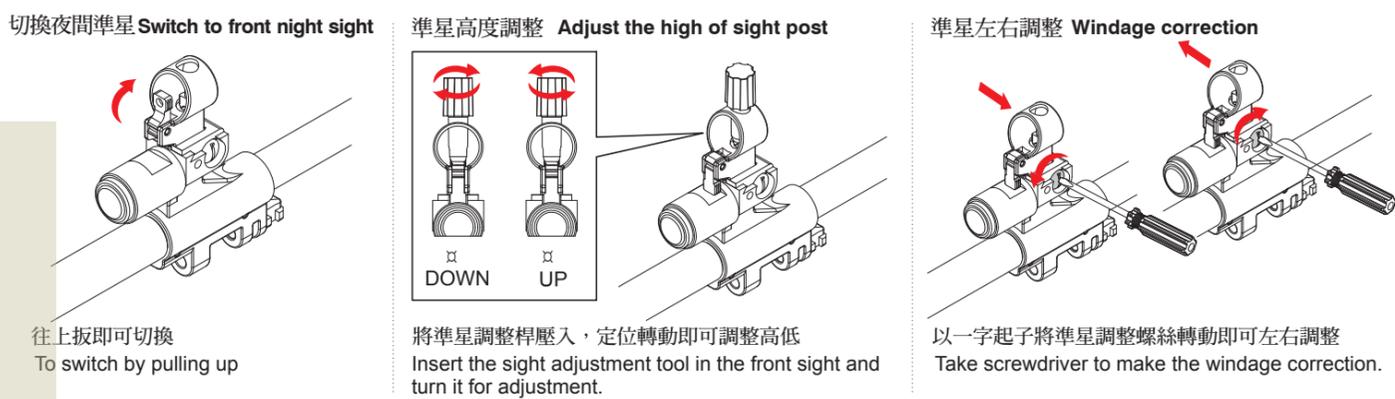


## 3 視孔調整方式 Rear sight and adjustments

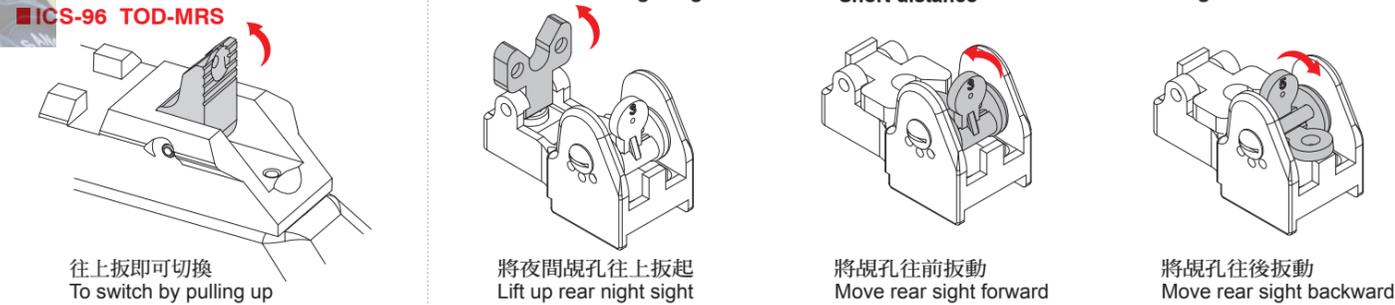


## 4 腳架說明 Bipod

### 腳架拆卸 Disassemble bipod

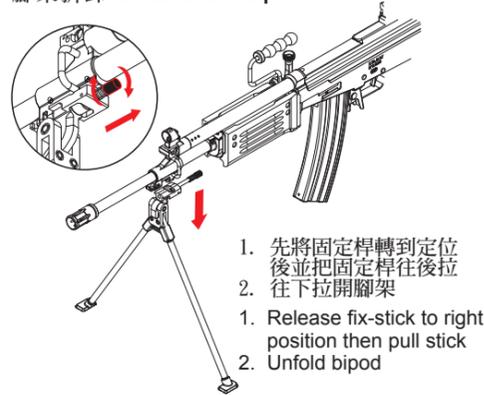


1. 先將固定桿轉到定位後並把固定桿往後拉
2. 往下拉開腳架
1. Release fix-stick to right position then pull stick
2. Unfold bipod

### 腳架收折 Fold bipod

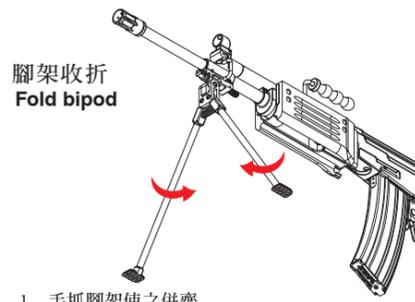

1. 手抓腳架使之併齊
1. Fold and align the bipod

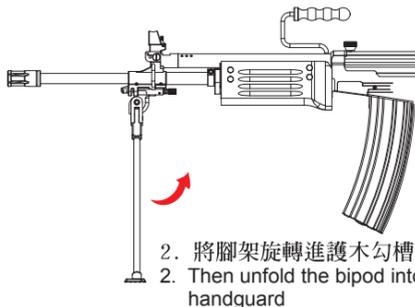


2. 將腳架旋轉進護木勾槽內
2. Then unfold the bipod into handguard




3. 放開腳架使其微開卡入護木框
3. Release the bipod and get stuck into handguard


### 腳架釋放 Unfold bipod

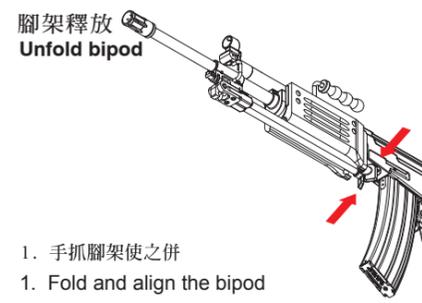

1. 手抓腳架使之併齊
1. Fold and align the bipod

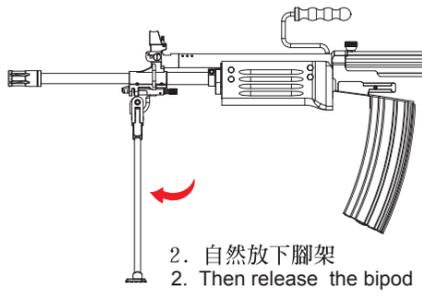


2. 自然放下腳架
2. Then release the bipod

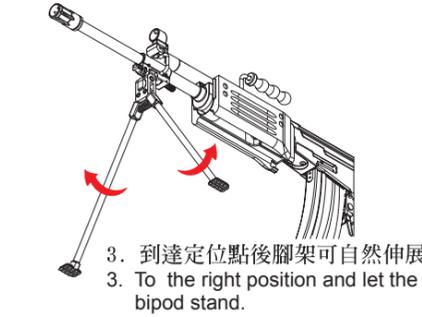


3. 到達定位點後腳架可自然伸展開
3. To the right position and let the bipod stand.


## 9 齒輪箱拆卸 Gear box

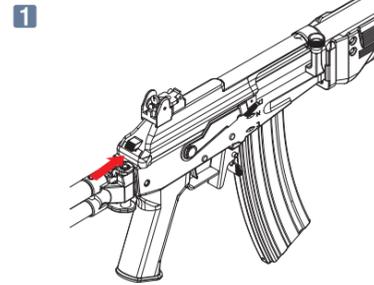


1. 按下機匣蓋開關。 Press the top receiver catch button

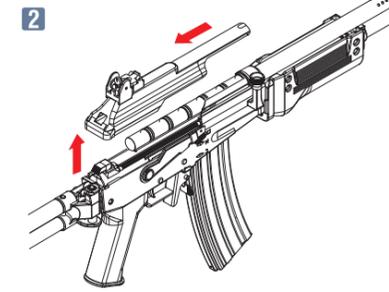


2. 卸下機匣蓋。 Remove the top receiver.

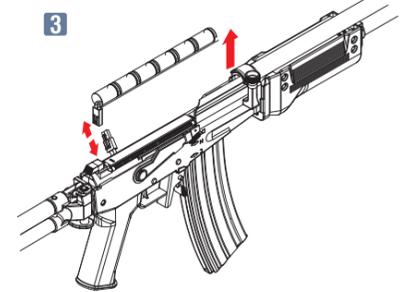


3. 卸下電池組。 Remove the battery

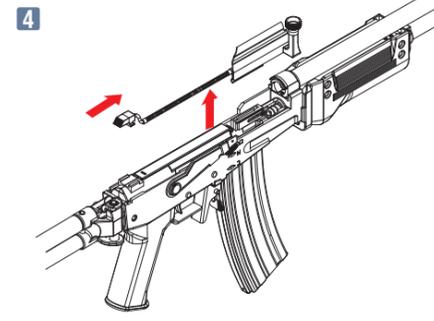

4. 卸下槍機拉柄組。 Remove the bolt handle

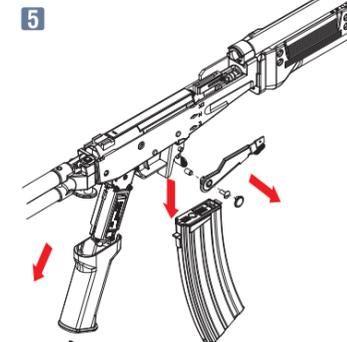


5. 卸下彈匣、握把、射擊選擇桿等零件。 Remove the magazine, grip, fire-select set.

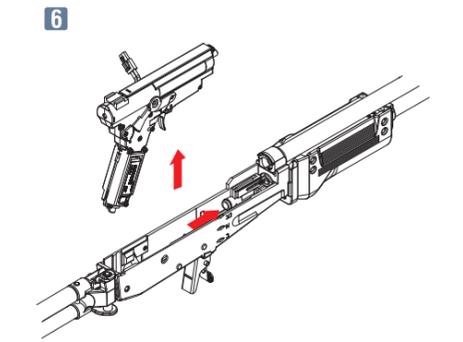

6. H-UP 往前推，即可將 Box 取出。 Pull upper hop up than gearbox can draw out.


## 5 彈匣使用方式 Magazine attachment

### 裝BB彈方式 Load BBs

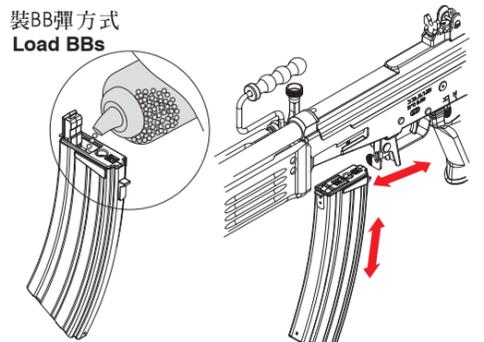


- 按下彈匣卡榫即可將彈匣裝入或拆下。 Press the magazine release lever to load or unload the magazine.

## 6 護木拆卸 Handguard disassembly

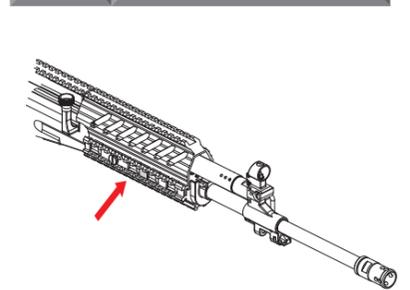


- 使用一字起子或錢幣將旋鈕逆時針旋轉90度
- 另一側則順時針旋轉90度

- Screw the locker by flat screwdriver 90 degree clockwise and counterclockwise.

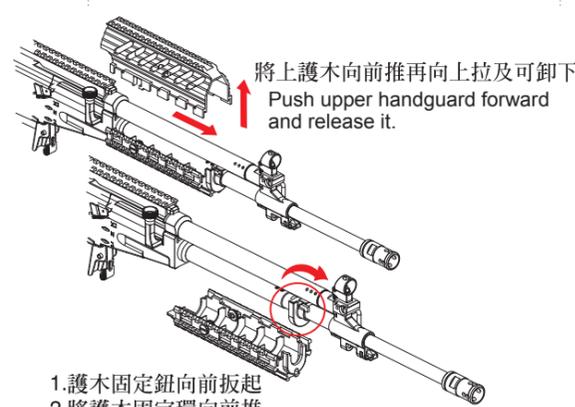

1. 護木固定鈕向前扳起
2. 將護木固定環向前推
3. 下護木往前推再向下拉即可取下
1. Pull up handguard catch 2. Push handguard ring forward. 3. Push lower handguard forward to take off.

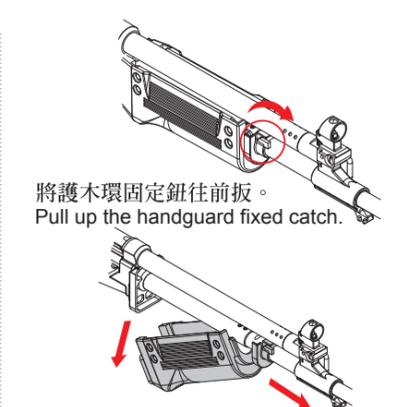


- 將護木環固定鈕往前扳。 Pull up the handguard fixed catch.


- 護木環整個往前拉，下護木即可卸下。 Push forward the handguard ring and then the lower handguard can be removed.

## 7 折疊托調整 Folding stock

按壓槍托卡榫即可折疊  
Push the butt catch and fold the butt

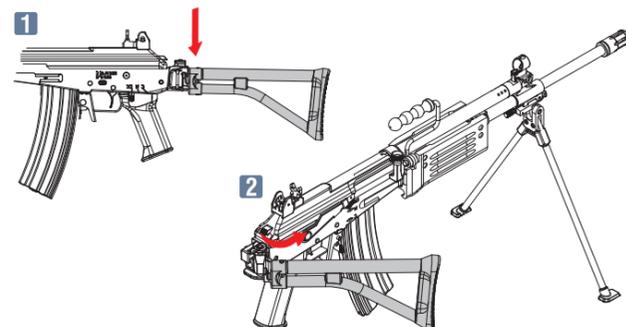

## 8 通槍條使用方法 How to use a cleaning rod

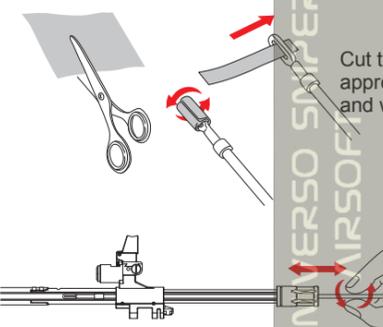


將棉布剪成長約25~30mm寬約10mm後再捲繞在通槍條上

Cut the cotton cloth length: approx 25~30mm Width: approx: 10mm and wind the cut cotton cloth


將通槍條插入並旋轉及前後拉動以清理內管  
Use the cleaning rod to move the cotton forwards and backwards along the barrel to clean and remove any dirt build-up inside.

## 10 貼腮按裝方式 Cheek rest set

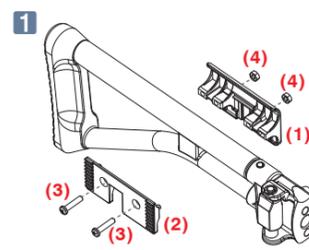

1. 將(1)夾座卡入槍托
2. 將(2)夾片組入槍托
3. 使用(3)螺絲及(4)螺帽將(1)(2)逼至穩固即可，但不可過緊


1. Mount cheek rest base(1) on the stock
2. Mount cheek rest plate(2) on the stock
3. Fix cheek rest base and plate by screws (3) and screw nuts (4) in proper tightness.

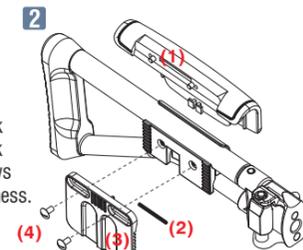


1. 將(1)貼腮板由上往下組入槍托
2. 組入(2)彈簧，放入後讓彈簧維持在左側，右側清空
3. 將(3)滑動板由右向左組入後向內壓，並向左扳動確認，滑動板是否可回彈
4. 將(4)螺絲鎖入，鎖固後滑動板向左扳動動作是否順暢，如不順暢則再放鬆螺絲到滑動板可作動順暢

1. Insert the check rest (1) into the stock from the top.
2. Put in the spring (2) and keep the spring in left.
3. Install the slide (3) from right to left and push inside. Move the slide (3) to left to test the rebound.
4. Tight the slide (3) by screws (4) and move the slide (3) to left to test. Loose the screws a little bit if the slide (3) hardly be moved to left.


## 11 單連發選擇方式 Selector lever and safety setting

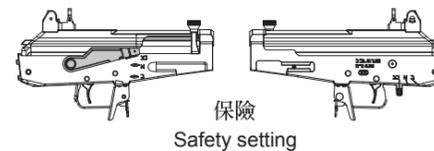

- 保險 Safety setting

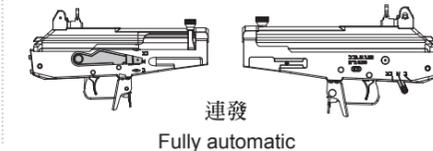


- 連發 Fully automatic

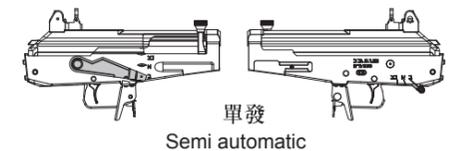


- 單發 Semi automatic

## 12 H-UP調整方式 H-UP adjustment


### 1 槍機往後拉 charging set backward

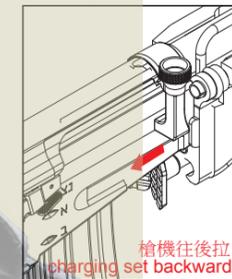

### 2 上飄 Decrease Hop

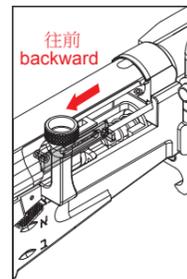


### 3 下墜 Increase Hop

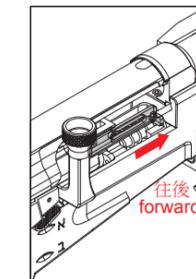

H-UP調整：  
子彈過於上飄，請調整撥盤向上旋轉。子彈過於下墜，請調整撥盤向下旋轉。BB彈呈現一直線的彈道才是正確射法。

H-UP Adjustment:  
When the BB pellet rises up, rotate the dial counter-clockwise to lower trajectory down. When the BB pellet falls down, rotate the dial clockwise to raise the trajectory up. Make sure the trajectory of BB pellet to be straight.

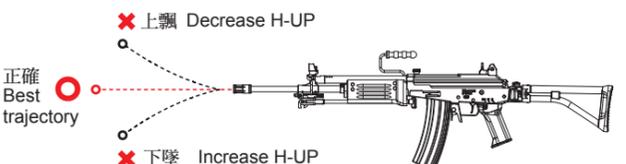

正確 Best trajectory

× 上飄 Decrease H-UP

× 下墜 Increase H-UP