


1. Setting the magazine


① Press the magazine catch lever to remove the magazine. (Hold the magazine as it may drop.)

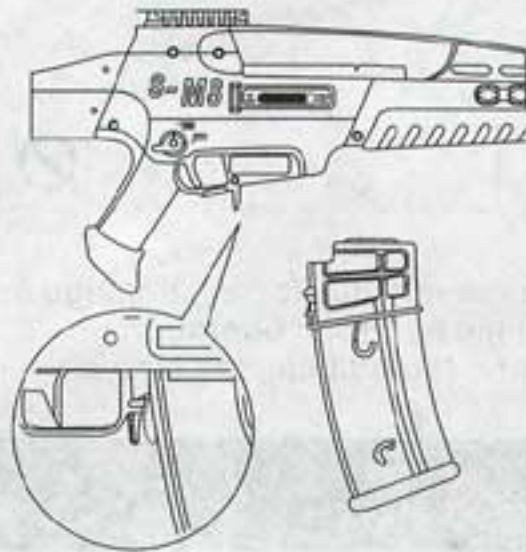

② Load 6mm BB bullets into the charger. (50 bullets can be loaded.)




③ Press in bullets by using the charging rod.

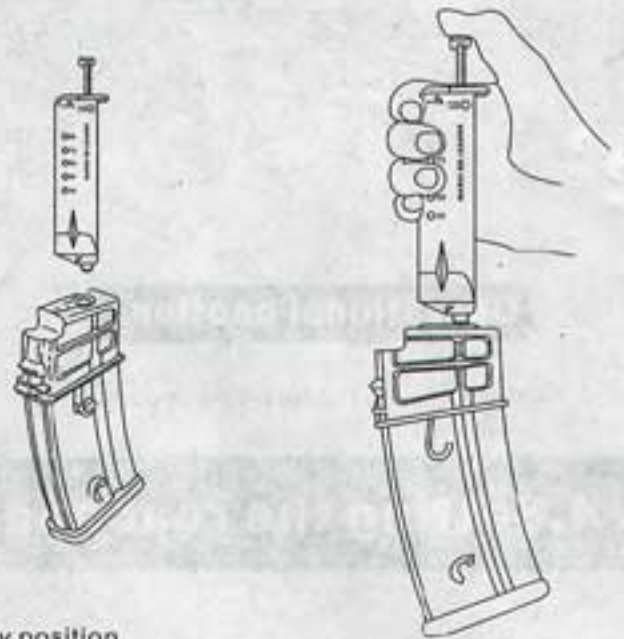

④ Make sure to set the magazine upwards and connect it firmly until a click sound is heard.




- Be sure that the safety lever is set to the safety position and don't place your finger on the trigger.
- Pushing down the magazine strongly may damage the gun or the magazine.
- Some bullets may fall out when you pull out the magazine.
- * You can joint the magazine (pull out the magazine from the gun.)

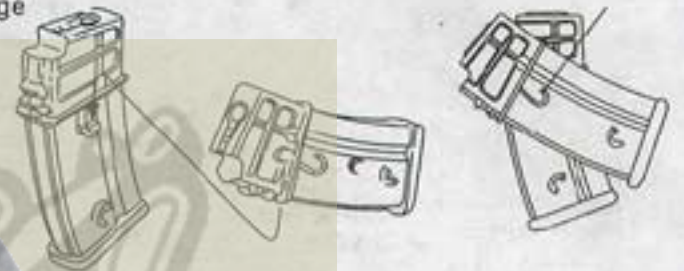


2. Firing (confirm safety sufficiently before beginning firing.)

CAUTION:

- Pressing the trigger carelessly is extremely dangerous. Never put your fingers onto the trigger unless you are ready to shoot. (Bullet field of fire range 35M)

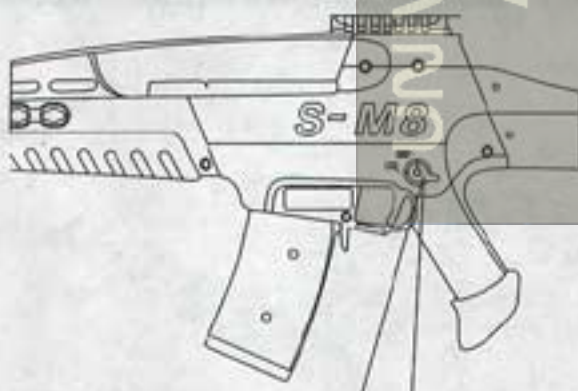


← 35M →

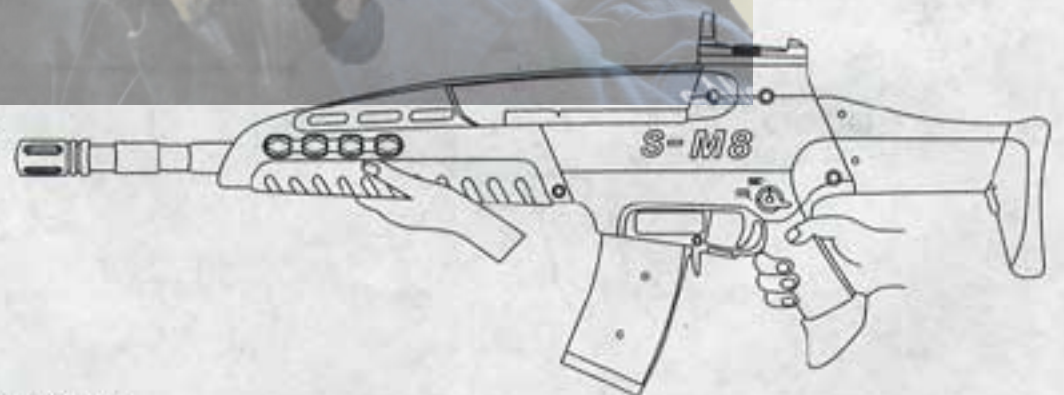

Press the trigger.

CAUTION:

- A blank firing may occur at triggering after setting the magazine. This is the normal operation of the gun.

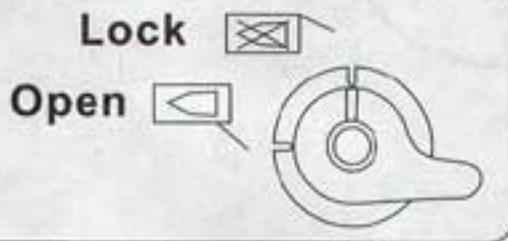


3. Hop up system

By producing back-spin on the BB bullets, this system allows for straighter and longer shooting distance than normal air guns.

CAUTION:

- Never use used and dirty bullets. (Otherwise the chamber becomes dirty and damage Hop Up system.)

- The best position is where the bullets fly horizontally, and the longest shooting distance is obtained.

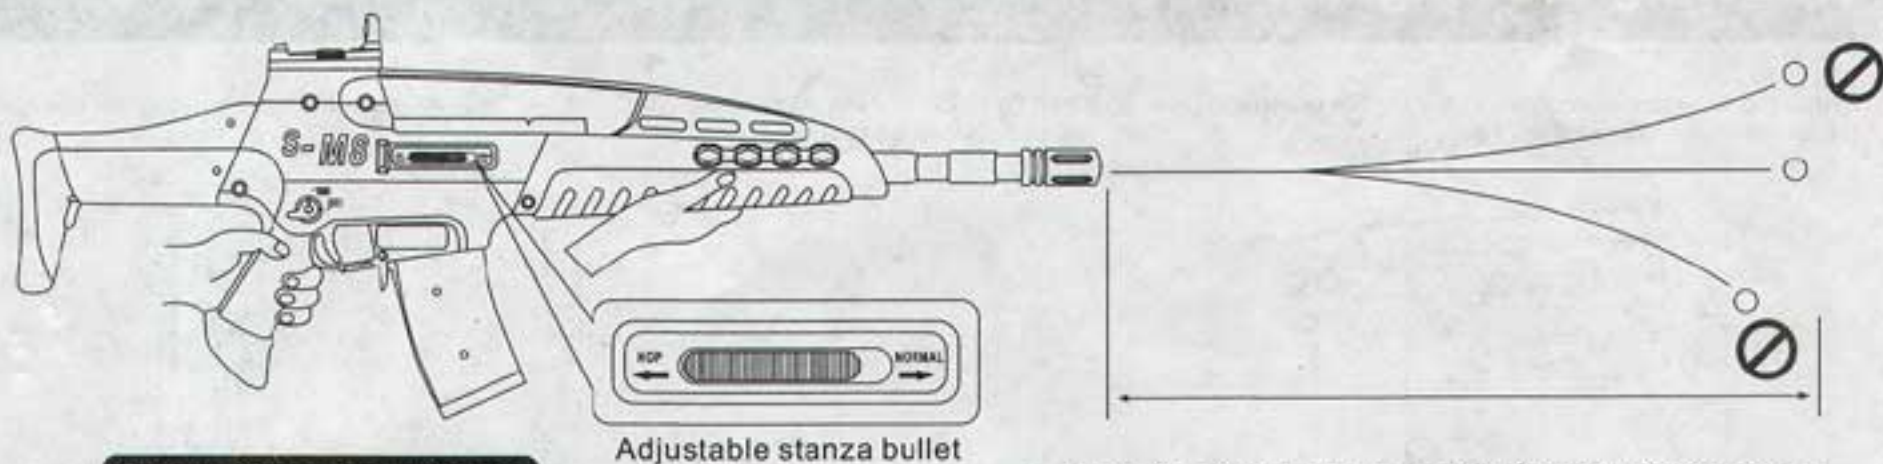

Operational cautions

(Strictly read the following cautions)


- We will not be responsible for any damage or accidents caused by wrong operation, disassembly and remodification of the air gun.

4. Setting the rear and the fore sight



5. RETRACTABLE GUNSTOCK

- 3 handguard

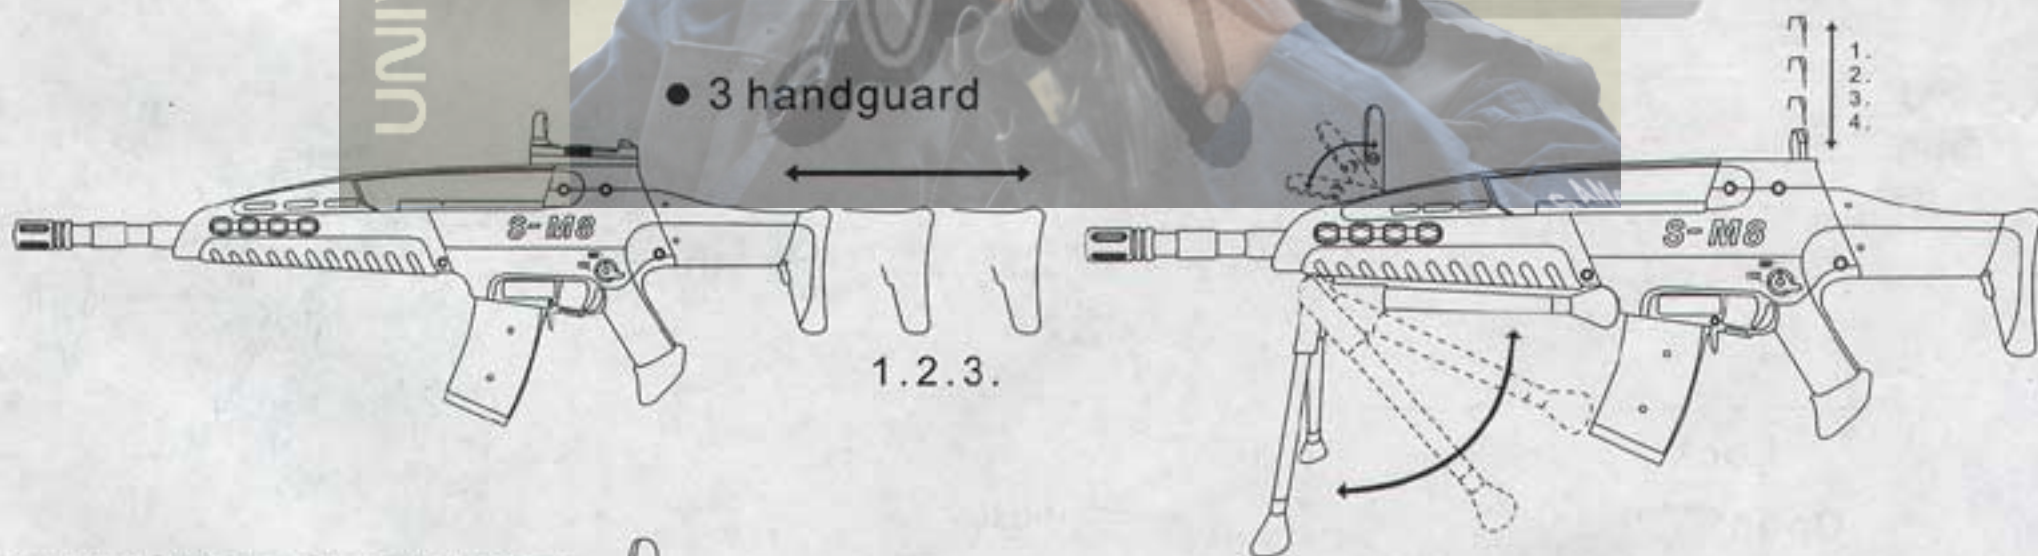

• FINISHED PRODUCT

