


# WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.



DO NOT POINT AT PEOPLE OR ANIMAL.

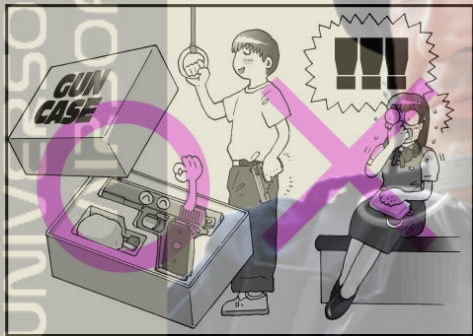


PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING

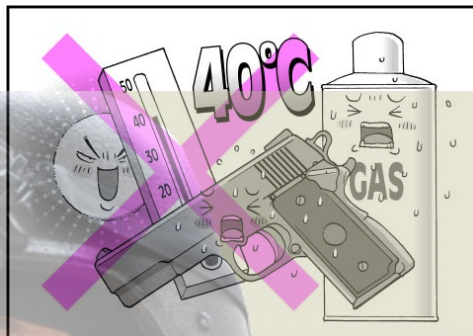


GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm<sup>2</sup>

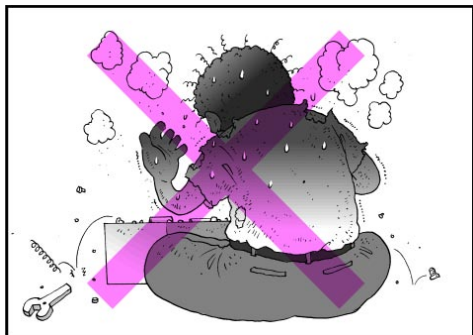

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.

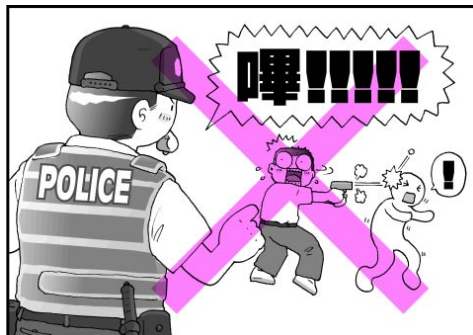


BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

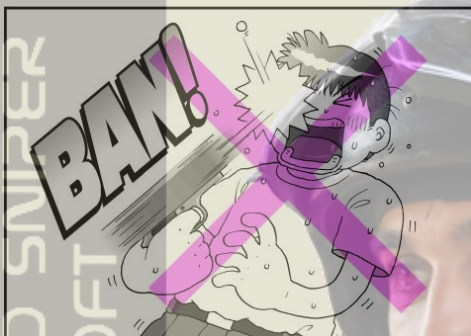

DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE

## OPERATION

1.REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2.FILLING GAS



FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICA DIRECTION.

### 3.LOAD BB BULLETS



LOAD BULLETS

### 4.INSERT MAGAZINE



### 5.LOAD



PULL THE SLIDE COMPLETELY TO THE REAR.

### 6.FIRE



PULL THE TRIGGER.

### 7.SAFETY



SAFETY OFF(READY FOR FIRE)



SAFETY ON



# DISASSEMBLY

## 1.REMOVE THE SLIDE STOP



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE.MOVE THE SLIDE REAR UNTIL THE TAKEDOWN NOTCH IS JUST ABOVE THE SLIDE STOP TAB AND REMOVE SLIDE STOP


## 2.REMOVE THE SLIDE



## 3.REMOVE THE RECOIL SPRING AND SPRING CAP



## 4.REMOVE THE BARREL

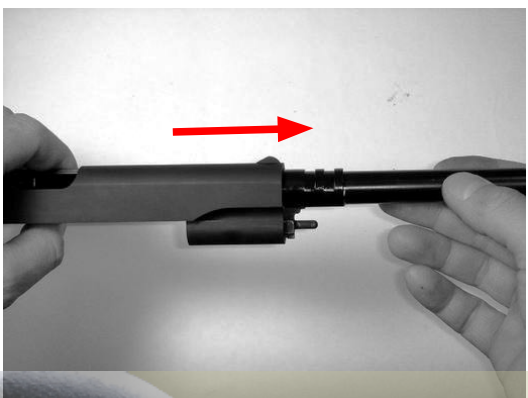


# ASSEMBLY

REVERSE THE DISASSEMBLY ORDER  
ADJUST TREJECTORY



TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.

PLEASE ADJUST ACCORDING TO TREJECTORT

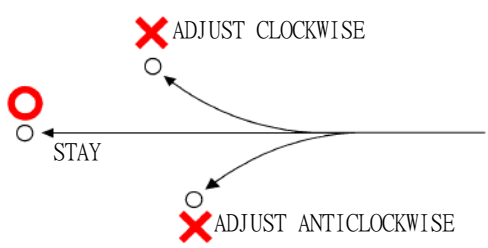

KP-05 EXPLODED DRAWING




UNIVERSO SNIPER  
AIRSOFT



No.	Name of Part	Price	No.	Name of Part	Price
1	Slide	1600	47	Safety (Left)	150
2	Front Sight	120	48	Slide Stop Plunger	50
3	Front Sight Screw	10	49	Slide Stop Plunger Spring	15
4	Cylinder Screw	10	50	Safety Plunger	50
5	Rear Sight	150	51	Grip Safety	240
6	Firing Pin Stop Screw	20	52	Chassis Cover Screw	10
7	Piston	400	53	Grip	800
8	Ring Head	40	54	Grip Screw A	20
9	Ring	20	55	Grip Screw B	20
10	Ring Head Screw	10	56	Magazine Catch Lock	30
11	Piston Part	30	57	Magazine Catch Spring	10
12	Piston Part Screw	10	58	Magazine Catch	120
13	Cylinder Return Spring	20	59	Trigger Bar	150
14	Rear Sight Screw	20	60	Trigger	240
15	Cylinder	150	61	Trigger Pin	10
16	Cylinder Valve Spring	20	62	Trigger adjust Screw	20
17	Cylinder Valve	20	63	Sear Spring	100
18	Cylinder Valve Stopper	20	64	Housing Pin	50
19	Outter Barrel	600	65	Hammer Spring Plunger	30
20	Inner Barrel	180	66	Hammer Spring	70
21	Rubber Chamber	80	67	Hammer Spring Housing	120
22	Chamber Cover (Right)	140	68	Plunger Stopper	40
23	Chamber Cover (Left)	140	69	BB Lip Pin	60
24	O-Ring	10	70	Magazine Gasket	80
25	Adjust Dial	20	71	BB Lip Pin	10
26	Adjust Lever	50	72	Valve	150
27	Chamber Cover Screw	10	73	Magazine Case	400
28	Recoil Plug	200	74	O-Ring	20
29	Recoil Spring	60	75	Magazine spring Retainer	20
30	Recoil Spring Guide A	100	76	Magazine Base	180
31	Recoil Spring Guide B	150	77	Filling Valve	70
32	Chassis	600	78	O-Ring	10
33	Chassis Screw	10	79	Washer	10
34	Safety (Right)	150	80	Magazine Base Screw	20
35	Slide Stop	200	81	Follower	30
36	Disconnecter	80	82	Follower Spring	50
37	Sear	60	83	Magazine Bottom	120
38	Hammer	150	84	Chassis Cover	200
39	Hammer Pin	10	85	Recoil Spring Guide Buffer	30
40	Hammer Strut	50			
41	Chassis Cover Part	80			
42	Knocker Spring	30			
43	Chassis Cover Part Screw	10			
44	Knocker	40			
45	Knocker Lock	50			
46	Knocker Lock Spring	20			



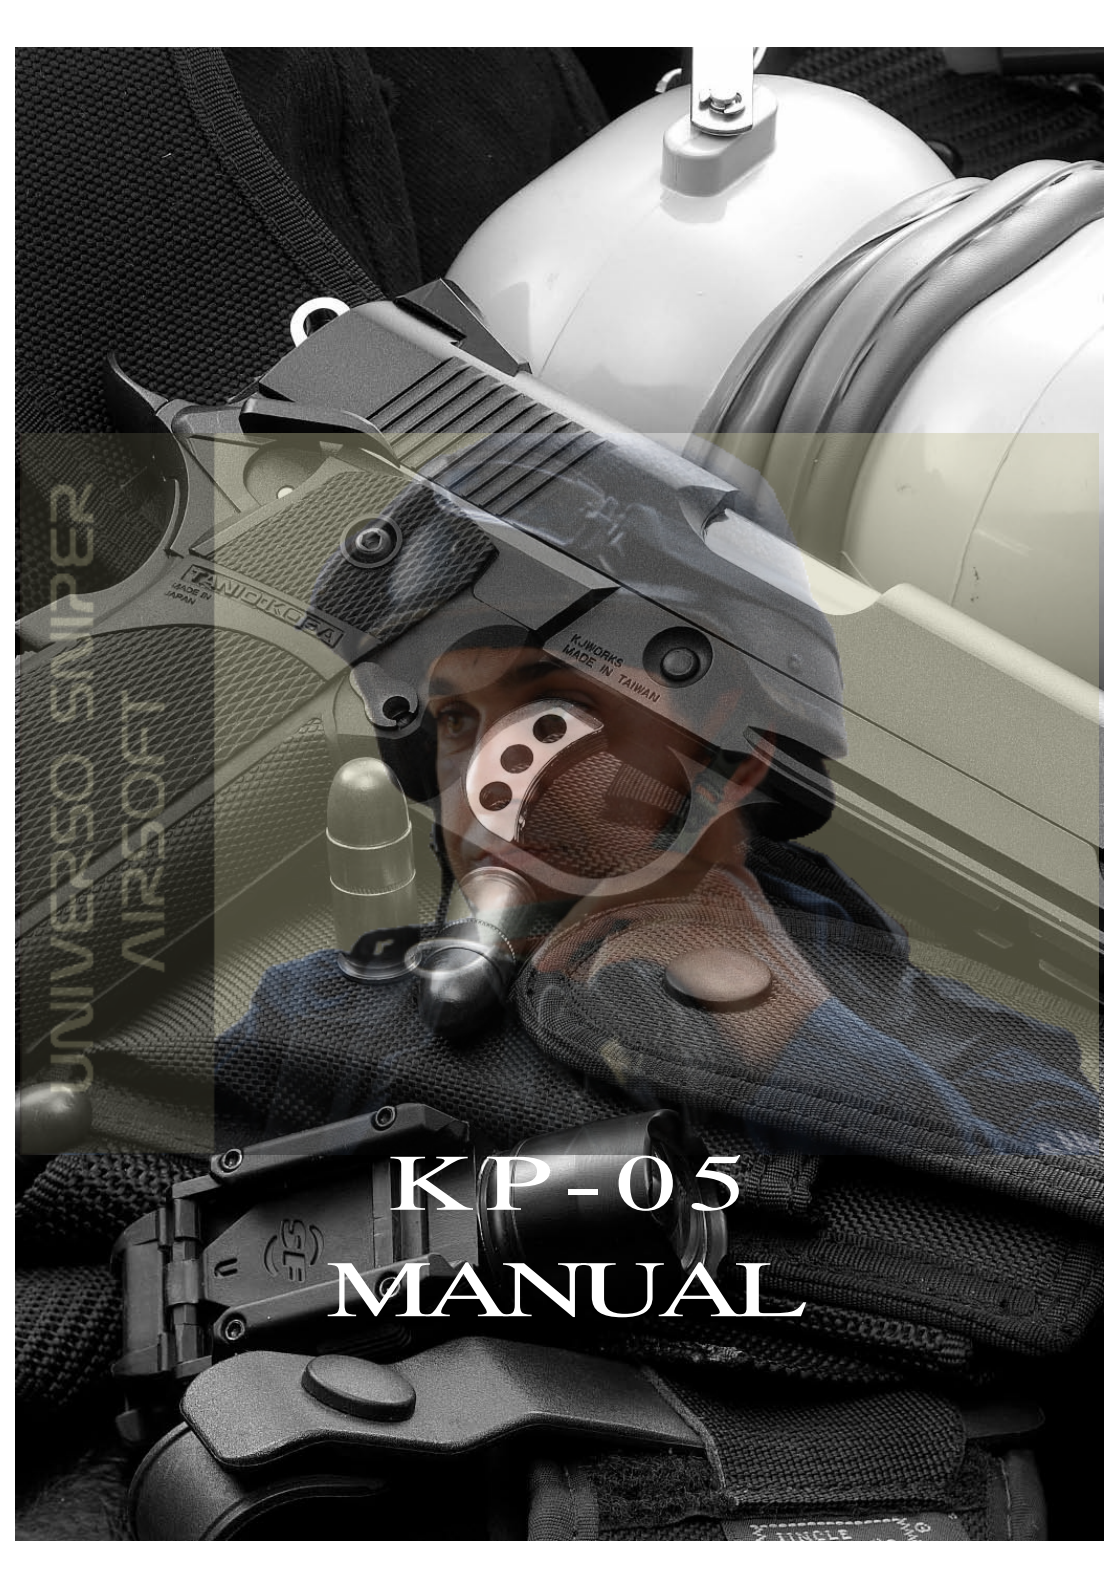

# KP-05 MANUAL

UNIVERSO SNIPER  
AIRSOFT



# KJWORKS

Kjworks No.12 Lian-Ming 1st Street,Bade City,Taoyuan county,Taiwan  
Tel:03-3749793 Fax:03-3618130 e-mail:kjworks@ms47.hinet.net Website:www.kjworks.com.tw