



1.將A順著紅箭頭方向打開。

To open the A part with following the red arrows direction.



2.彈鼓監依紅箭頭方向打開。 Separate the drum magazine's cover with following the red arrow's direction.



3.彈鼓內部電池盘採用3顯3號電池供電。 The internal battery holder of this drum magazine is powered by three AA2 batteries.



 將電池盒置入黃框處。
 Place the battery holder in the yellow circle mark.



 將彈鼓蓋依紅箭頭方向組合・再將A順著 箭頭方向鎖緊。

Assemble the drum magazine's cover and lock the A part with following the red arrows direction.