
## OWNER'S MANUAL

**WARNING!** READ ALL INSTRUCTIONS AND SAFETY RULES COMPLETELY BEFORE USING THIS AIR SPORTS GUN. REMEMBER, "SAFETY BEGINS WITH YOU".



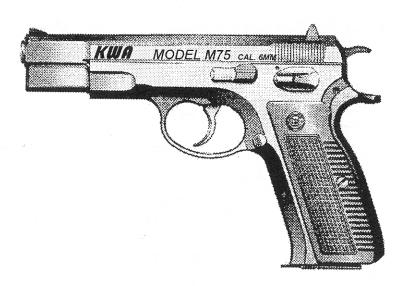

M75

<u>Air Sports Gun</u>

<u>SERVAL</u>ATO MATTO AVECESTO L

## SEMIAUTOMATIC AIR FISTOL

## TABLE OF CONTENTS

- MESSAGE FROM KWA
- PRECAUTION
- · SAFETY RULES
- · WARRANTY
- · OPERATIONS I
  - [1] CHARGING GAS
- OPERATIONS II
  - [2] LOADING BB'S
  - [3] LOADING MAGAZINE
  - [4] COCKING
  - [5] SAFETY
- · OPERATIONS III
  - [6] SHOOTING
  - [7] OPEN SLIDE
  - [8] AFTER SHOOTING
- . HOP-UP MECHANISM
- · DISASSEMBLY
- · PARTS LIST













## MESSAGE FROM KWA

KWA WOULD LIKE TO THANK YOU FOR YOUR PURCHASE OF THE AIR SPORTS GUNS. WE TAKE PRIDE IN PRODUCING QUALITY AIR SPORTS GUNS INCORPORATING ALL OF THE BEST FEATURES. ALL AIR SPORTS GUNS ARE TO BE OPERATED UNDER SAFETY GUIDELINES AS REAL FIREARMS AND IT IS YOUR RESPONSIBILITY TO USE THEM IN A SAFE MANNER AT ALL TIMES. KWA, AND IT'S AGENTS ARE NOT RESPONSIBLE FOR CARELESS, ABUSIVE, IMPROPER, NEGLIGENT AND CRIMINAL USE OF ITS PRODUCTS.

## **PRECAUTION**

AIR SPORTS GUNS ARE DESIGNED FOR PERSONS OF AGE 18 OR OLDER FOR SPORTING PURPOSE ONLY AND TO BE OPERATED UNDER THE U.S. FIREARMS SAFETY CODES. THE EFFECTIVE SHOOTING RANGE IS APPROXIMATELY 160 FEET AND CAN BE AFFECTED BY SURROUNDING CONDITIONS, SUCH AS TEMPERATURE, WIND, ETC. IT IS STRONGLY RECOMMENDED TO USE THE RIR SPORTS GUN IN A SAFE DESIGNATED SHOOTING RANGE OR AREA AND TO TREAT ALL AIR SPORTS GUNS AS REAL FIREARMS. AIR SPORTS GUNS CAN BE DANGEROUS AND CAN CAUSE SERIOUS INJURY, IT IS THE USER'S RESPONSIBILITY TO HANDLE AIR SPORTS GUNS IN A SAFE MANNER. BE SURE TO TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AND NEVER POINT AT ANYONE OR OBJECTS THAT YOU DO NOT INTEND TO SHOOT. ONLY AIM YOUR AIR SPORTS GUN IN A SAFE DIRECTION. U.S. FEDERAL LAW REQUIRES A MINIMUM 6MM ORANGE MARKING ON ANY FIREARM REPLICAS AND BY REMOVING THE ORANGE TIP, YOU ARE VIOLATING THE LAW AND IT CAN ENDANGER YOURSELF AND OTHERS.

THE AIR SPORTS GUNS ARE NOT TOYS, ALTHOUGH THEY FIRE 6MM PLASTIC BB'S AT RELATIVELY LOW VELOCITY, THERE ARE STILL HIGH RISKS FOR PERSONAL INJURY IF PROPER PROTECTIVE GEAR IS NOT WORN. REMEMBER, THE AIR SPORTS GUNS RESEMBLE REAL FIREARMS IN APERARANCE, SIZE AND SOME FUNCTIONAL RESPECTS, THEREFORE, IT IS RECOMMENDED THAT YOU SHOULD NEVER CARRY OR DISPLAY THE AIR SPORTS GUN IN PUBLIC AREAS, ANY CRIMES COMMITTED WITH AN AIR SPORTS GUN WILL BE PROSECUTED AS IF A REAL FIREARM WERE USED. BE SURE NOT TO POINT THE AIR SPORTS GUNS AT ANY LAW ENFORCEMENT OFFICERS OR ANY OTHER ARMED PERSONS, DOING SO, MAY PUT YOURSELF IN A VERY DANGEROUS SITUATION. REMEMBER, AIR SPORTS GUNS ARE NOT TOYS.

WARNING! DO NOT ALTER YOUR AIR SPORTS GUN. BY DOING SO, MAY MAKE IT UNSAFE, AND VOID THE WARRANTY, AND AFFECT THE RELIABILITY OF THE

## SAFETY RULES



# ALL USERS MUST WEAR SHOOTING OR SAFETY GLASSES AT ALL TIMES.

- ♦ READ THE OWNER'S MANUAL BEFORE HANDLING AND LOADING THE GUN
- ◆ TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AT ALL TIMES
- ♦ NEVER POINT AT ANYONE OR OBJECTS YOU DO NOT INTEND TO SHOOT.
- ◆ ALWAYS POINT MUZZLE IN A SAFE DIRECTION
- MAKE SURE YOUR SHOOTING DIRECTION IS FREE OF OBSTACLES BEFORE YOU SHOOT
- ◆ DO NOT LOAD ANY AIR SPORTS GUN UNTIL YOU ARE READY TO FIRE
- ◆ ALWAYS KEEP THE SAFETY ON AND NEVER PLACE YOUR FINGER ON THE TRIGGER UNTIL YOU ARE READY TO FIRE
- ALWAYS EXAMINE AND UNLOAD THE GUN WHEN NOT IN USE. STORE IT IN A SAFE MANNER AND KEEP AWAY FROM CHILDREN
- ◆ DO NOT PEEP AT THE MUZZLE
- NEVER SHOOT AT ANY ROCKS, WATER OR ANY HARD SURFACES AS THEY MAY CAUSE THE BB'S TO RICOCHET
- ♦ ALWAYS USE THE PROPER 6MM CALIBER BB'S AND NEVER REUSE BB'S
- ♦ NEVER JUMP, CLIMB OR CROSS OBSTACLES WITH A LOADED AIR SPORTS GUN. ALWAYS UNLOAD THE GUN FIRST
- ◆ NEVER LEAVE A LOADED WEAPON UNATTENDED. AIR SPORTS GUNS ARE CERTAINLY NO EXCEPTION TO THIS RULE
- ◆ ACCIDENTS USUALLY RESULT FROM NEGLIGENCE OF BASIC SAFETY RULES

CHOKING HAZARD! AIRSOFT BB'S CAN BE A CHOKING HAZARD.
ALWAYS RETRIEVE BB'S AFTER SHOOTING AND KEEP AWAY FROM CHILDREN.

## WARRANTY

WE OFFER A 30 DAY WARRANTY FOR MECHANICAL OR ELECTRICAL FACTORY DEFECTS. WARRANTY BECOMES VOID IF DAMAGE IS CAUSED BY USER'S ABUSE, MISUSE, ALTERATION OR MODIFICATION OF THE GUNS OR MAGAZINE IN ANY FORM, INCLUDING BUT NOT LIMITED TO REMOVAL OF ORANGE MARKING AND USE OF IMPROPER SIZE AND/OR LOW GRADE BB'S. WATER, DUST AND CONTAMINANT DAMAGES ALSO VOID THE WARRANTY. WARRANTY DOES NOT COVER BB'S, TARGETS, GAS CANISTERS OR ACCESSORIES OF ANY KIND. PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT TO OBTAIN RMA NO. AND SHIPPING INSTRUCTIONS BEFORE RETURNING ANY PRODUCTS. ALL ITEMS RETURNED FOR REPAIR MUST BE ACCOMPANIED BY A SALES RECEIPT. WARRANTY DOES NOT COVER HANDLING AND SHIPPING CHARGES OF RETURNED ITEMS COMING FROM AND GOING TO CUSTOMERS.

#### [1] CHARGING GAS

(1) RELEASE MAGAZINE BY PRESSING MAGAZINE CATCH.


CAUTION! AVOID MAGAZINE TO DROP FREELY ON HARD SURFACE; IT MAY DAMAGE THE MAGAZINE.


- (2) PUSH THE GAS CANISTER NOZZLE INTO THE CHARGING VALVE. MAKE SURE THE CANISTER IS IN A VERTICAL POSITION WHEN CHARGING.
- (3) CHARGE MAGAZINE UNTIL GAS OVERFLOWS FROM CHARGING VALVE.



- \* CHECK CANISTER FOR ANY CRACKS OR LEAKS BEFORE USING
- \* DO NOT EXPOSE CANISTER TO TEMPERATURE OVER 40 °C
- \* DO NOT LEAVE CANISTER DIRECTLY OVER FIRE
- \* DO NOT BOIL CANISTER
- \* KEEP CANISTER AWAY FROM DIRECT SUNLIGHT
- \* DO NOT LEAVE CANISTERS IN VEHICLES



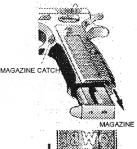

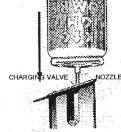




NOTES: IT IS NORMAL THAT YOU MAY EXPERIENCE MINOR LEAKING FROM CHARGING VALVE DURING CHARGING, DUE TO HIGH PRESSURE BUILT UP INSIDE MAGAZINE. IT IS RECOMMENDED TO KEEP GAS RELEASE VALVE SLIGHTLY OILED. IDEAL TEMPERATURE FOR SHOOTING IS ROOM TEMPERATURE.

CAUTIONS: YOU MAY EXPERIENCE A DELAY ACTION IF SURROUNDING TEMPERATURE DROPS BELOW 68 °F. REMEMBER, DO NOT EXPOSE MAGAZINE DIRECTLY UNDER THE SUN OR INCINERATE THE MAGAZINE, IT MAY CAUSE BURSTING. IT IS STRONGLY RECOMMENDED TO EMPTY GAS FROM MAGAZINE AFTER SHOOTING. BE SURE TO AVOID DIRECT GAS CONTACT WITH EYES OR SKIN WHEN GAS IS BEING RELEASED, IT MAY CAUSE FROSTBITE.

### 
 
### [2] LOADING BB'S



- -1- PLACE LOADER PIPE ONTO LOADER FUNNEL
- -2- PLACE FUNNEL ON TOP OF MAGAZINE LIP
- -3- POUR BB'S ONTO LOADER PIPE ~ APPROXIMATE 26 ROUNDS
- -4- USE LOADER ROD TO PUSH BB'S DOWN INTO MAGAZINE
- MAKE SURE TO HAVE A 3MM CLEARANCE BETWEEN BB'S AND TOP LIP OF MAGAZINE

NOTE: ALWAYS USE KWA ULTRA PREMIUM BB  $0.2\sim0.25$ G. USING ONLY KWA'S ULTRA PREMIUM BB'S CAN GIVE THE AIR SPORTS GUN ITS BEST PERFORMANCE. USING IMPROPER AND LOW GRADE BB'S MAY DAMAGE THE GUN.

 $\it CAUTION$ : ALWAYS KEEP "SAFETY" ON WHEN LOADING BB'S AND KEEP FINGERS AWAY FROM TRIGGER UNTIL YOU ARE READY TO SHOOT.

#### [3] LOADING MAGAZINE



- -1- PLACE MAGAZINE BACK INTO MAGAZINE WELL
- -2- PUSH UP MAGAZINE UNTIL IT CLICKS INTO LOCKED POSITION.
- -3- PULL MAGAZINE DOWN TO ASSURE THAT IT HAS BEEN LOCKED IN PLACE.

NOTE: OVERLOADING BB'S IN THE MAGAZINE MAY CAUSE JAMMING AND DAMAGE THE GUN WHEN LOADING. MAKE SURE TO CHECK FOR 3MM CLEAR-ANCE BETWEEN FOLLOWER AND MAGAZINE LIP..


#### [4] COCKING


PULL THE SLIDE TO THE REARMOST POSITION AND RELEASE. THIS WILL AUTOMATICALLY LOAD THE FIRST BB'S INTO THE CHAMBER. HAMMER WILL BE IN COCKED POSITION. THE PISTOL IS NOW IN A SINGLE ACTION MODE. MAKE SURE NOT TO SKIP THIS COCKING PROCEDURE. SKIPPING THIS WILL CAUSE A MISFIRE ON THE FIRST PULL OF THE TRIGGER.



CAUTION! MAKE SURE TO HAVE SAFETY ENGAGED "ON" AT ALL TIMES WHEN NOT IN A SHOOTING POSITION.

TO ENGAGE SAFETY "ON", THE HAMMER MUST BE IN COCKED POSITION AND PUSH SAFETY UPWARD TO COVER THE RED DOT.

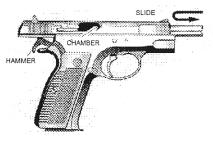

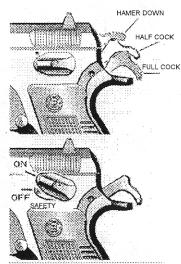




SAFETY CAUTION! ALWAYS KEEP FINGER OFF THE TRIGGER UNTIL READY TO FIRE. MAKE SURE THE MUZZLE IS POINTING IN A SAFE DIRECTION.

NOTE: FOR ABSOLUTE ASSURANCE AGAINST ACCIDENTAL DISCHARGE DUE TO INADVERTENT TRIGGER PULL, KEEP THE MANUAL SAFETY ENGAGED "ON" DURING LOADING OR UNLOADING.

## OPPRESENTED NO.

#### [6] SHOOTING

RELEASE SAFETY AND PULL ON TRIGGER. THE BLOW BACK ACTION WILL LOAD THE FOLLOWING BB'S AUTOMATICALLY INTO THE CHAMBER AS THE SLIDE CYCLES BACK AND FORTH,

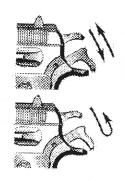




CAUTION: MAKE SURE YOUR SHOOTING DIRECTION IS CLEAR OF OBSTACLES BEFORE YOU SHOOT.

GRASP PISTOL IN YOUR HAND FIRMLY. A TWO HAND HOLD WITH ONE HAND WRAPPED AROUND THE OTHER WILL HELP IN CONTROLLING THE PISTOL.

WARNING: NEVER SHOOT GUN IN A HORIZONTAL OR UPSIDE DOWN POSITION.

WARNING: IT IS RECOMMENDED TO WEAR EYE PROTECTION AT ALL TIMES, BB'S MAY BOUNCE OFF HARD SURFACES (RICOCHET). ALWAYS POINT GUN IN A SAFE DIRECTION.

#### [7] OPEN SLIDE

 


AFTER THE LAST BB HAS BEEN FIRED AND EJECTED, THE SLIDE IS AUTOMATICALLY HELD OPEN BY THE SLIDE STOP. TO SHOOT AGAIN, REMOVE EMPTY MAGAZINE AND INSERT A LOADED MAGAZINE. PRESS THE SLIDE STOP, THE FIRST BB WILL BE LOADED INTO CHAMBER AND THE SLIDE WILL CLOSE. YOU ARE NOW READY TO SHOOT AGAIN.

NOTE: IT IS IMPORTANT TO TREAT YOUR GUN AS THOUGH IT IS LOADED, EVEN IF THE SLIDE REMAINS OPEN.

## [8] AFTER SHOOTING

REMOVE MAGAZINE FIRST AND VISUALLY INSPECT THE OPEN CHAMBER TO CHECK WHETHER THE MAGAZINE WELL AND CHAMBER ARE CLEAR OF BB'S. WHEN BOTH MAGAZINE WELL AND CHAMBER ARE CLEAR, **ENGAGE SAFETY SWITCH.** 

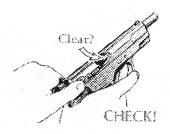

### 



## HOP UP SYSTEM

"HOP UP" SYSTEM IS ONE OF THE STANDARD FEATURES THAT \*\*WAF\*\* GAS BLOW BACK AIR SPORTS GUNS HAVE. THE DESIGN OF HOP UP SYSTEM IS TO PLACE A BALL BEARING BETWEEN CHAMBER WALLS. BY ADDING OR REDUCING PRESSURE ON THE BALL BEARING, IT CONTROLS BACKSPIN OF THE BB AND GIVES IT GREATER STABILITY WHEN IT TRAVELS IN THE AIR, AND ALSO MAKES IT FLY FURTHER WITH GREATER ACCURACY. THE HOP UP SYSTEM DOES NOT ADD POWER TO THE GUN, IT IMPROVES STABILITY AND ACCURACY. (IT IS RECOMMENDED BY \*\*WAFTHAT 0.2 ~ 0.25g BB'S, RATHER THAN 0.11g, ARE USED WITH THE HOP UP SYSTEM)




#### HOP UP SYSTEM ADJUSTMENT


TEST FIRE GUN FOR 10 ~ 20 ROUNDS AND OBSERVE THE BB TRAVELING PATTERN. BEFORE MAKING ANY ADJUSTMENTS, MAKE SURE YOU HAVE SUFFICIENT GAS PRESSURE INSIDE MAGAZINE. CHAMBER SHOULD BE SLIGHTLY OILED. YOU WILL REQUIRE AT LEAST 65 FEET CLEARANCE WHEN MAKING THE ADJUSTMENT.

OPEN SLIDE,
PLACE ADJUSTING TOOL INTO
SLOTTED CHAMBER
RING, TURN ADJUSTING RING 1/4 INCH AT A
TIME.

TURN RING
COUNTER
CLOCKWISE IF
BB'S GO DOWNWARD.
TURN RING CLOCKWISE
IF BB'S GOES UPWARD.

4 ADJUST -> TEST FIRE -> ADJUST
REPEAT THE PROCEDURES UNTIL
YOU FIND THE PROPER TRAJECTORY

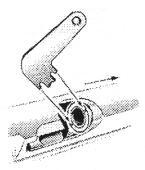

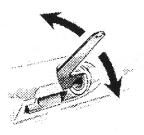

KWA

M75

Air Sports Gun

0.00

SEMIAUTOWATIC AIR PISTOL


HOP UP EFFECTIVENESS	BB TRAJECTORY PATTERN		ADJUSTMENTS	
NOT	1	BB DROPS FREELY	(C)	TURN KNOB TO LEFT
SLIGHTLY	7	BB TRAVELS AT SHORT TRAJEC- TORY PATH	(C)	TURN KNOB SLIGHTLY TO LEFT
PROPERLY	``	BB TRAVELS DISTANCE AT FLAT TRAJECTORY PATH	(3)	NO ADJUST- MENT MADE
OVERLY		BB TRAVELS FLAT IN SHORT DIS- TANCE, THEN GOES UP IN CURVE AND DROPS FREELY	(Q)1	FURN KNOB SLIGHTLY TO RIGHT
EXTREMELY	~	BB TRAVELS AT UNSTABLE SPEED AND IRREGULAR PATH	(C)	TURN KNOB TO RIGHT



## HOP UP ONE POINT CLINIC

 PHENOMENON	POSSIBLE CAUSE	SOLUTIONS
HOP UP OVER-	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
ADJUSTED	BB TOO LIGHT	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
HOP UP SCATTER	HOP EFFICIANCY TOO WEAK	TURN ADJUSTMENT RING TO LEFT
	BB	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
CAN NOT START HOP UP	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
HOP UP	OIL IN RUBBER CHAMBER	FRICTION
		USE COTTON SWAB TO WIPE OUT OIL
	BB DO NOT TURN TO RUBBER CHAMBER	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	UNDERSIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	HOP NOT TAKING EFFECT	ADJUST RING TO LEFT
CAN NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
ADJUST HOP UP	FRICTION	
	FRICTION OR DAMAGE RELATED	EXCHANGE FOR NEW PART
	PARTS (ACCESSORIES)	DISTRIBUTION TAICE
	LOOSENESS OF INNER BARREL	INSERT TIGHTLY INTO RUBBER CHAMBER
	HOP OVER EFFECTIVE	ADJUST RING TO RIGHT
BBS DO NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PARTS
EXIT BARREL	FRICTION	
	STAINS INSIDE THE GUN BODY	CLEANING INNER BARREL WITH COTTON
		SWAB
BULLETS OVER	WRONG SIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
LOADED	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
	STAIN IN RUBBER CHAMBER	CLEAN WITH COTTON SWAB
HOP UP EFFECT	LOW GAS PRESSURE/	RETURN MAGAZINE AND GAS TO ROOM
WEAKENED BY	MAGAZINE GETS TOO COLD	TEMPERATURE
ITSELF	USING TOO MUCH OIL DURING MAINTENANCE	SHOOT TO BLOW OFF OIL INSIDE RUBBER
	MAINTENANCE	CHAMBER AND PISTON, THEN CLEAN INNER
		BARREL

#### 




ALIGN TWO ENGRAVED LINES ON FRAME AND SLIDE

REMOVE SLIDE STOP BY PUSHING THE SLIDE STOP PIN FROM REVERSE SIDE OF THE FRAME



 IT IS NOT RECOMMENDED TO DISASSEMBLE THE GUN UNLESS YOU HAVE A BB JAMMED IN-SIDE OF BARREL OR FOR MAINTENANCE PUR-POSES ONLY.


- REMOVE MAGAZINE
- CHECK AND CLEAR CHAMBER FROM ANY BB'S
- PULL SLIDE TO THE REAR APPROXIMATELY 1/4" AND ALIGN THE TWO ENGRAVED LINES ON THE LEFT SIDE OF GUN AND HOLD
- REMOVE THE SLIDE STOP COMPLETELY BY PUSHING THE SLIDE STOP PIN ON THE RE-VERSE SIDE OF THE FRAME
- PULL THE SLIDE/BARREL ASSEMBLY FORWARD OFF THE FRAME
- REMOVE RECOIL SPRING AND RECOIL SPRING GUIDE
- REMOVE BARREL BY PUSHING THE BARREL FORWARD UNTIL IT CLEARS THE PISTON AND PULL IT OUT OF SLIDE

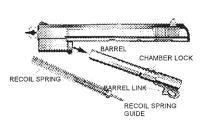

#### REASSEMBLY:

- PLACE BARREL INTO SLIDE AND LOCK INTO LOCKING GROOVES
- PLACE RECOIL SPRING GUIDE AND RECOIL SPRING ASSEMBLY BACK. MAKE SURE THE RECOIL SPRING GUIDE IS RESTING AGAINST THE CUT-OUT OF BARREL LINK.
- PUSH THE BARREL / SLIDE ASSEMBLY ONTO THE FRAME RAILS
- PULL SLIDE TO THE REAR AND ALIGN EN-GRAVED LINES
- INSTALL SLIDE STOP UNTIL IT CLICKS AND LOCKS INTO POSITION
- CYCLE THE SLIDE TO ASSURE PROPER REAS-SEMBLY BEFORE SHOOTING

## 

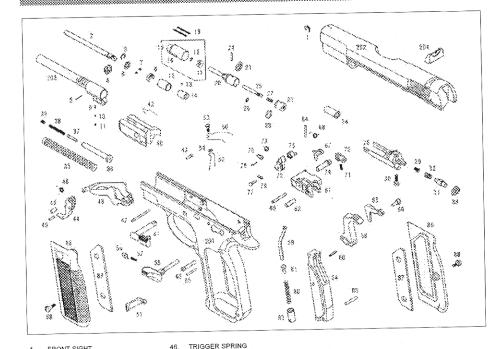

- FRONT SIGHT INNER BARREL 2. INNER BARREL E RING 3. INNER BARREL STOPPER INNER BARREL STOPPER 5. RING 6. INNER BARREL CLIP INNER BARREL CLIP SPRING INNER BARREL CLIP BUSHIG 7. 8. BARREL LOCK BARREL LOCK SPRING 9 10 BARREL LOCK SCREW 11
  - 12. ADJUSTMENT SCREW 13. ADJUSTABLE BALL 14. CHAMBER CYLINDER SET 15 CYLINDER 16. 17. CYLINDER COVER
  - 18. O-RING SET CYLINDER SPRING 19. PISTON 20. PISTON RING
- 21. 22. 23. PISTON END PISTON END O-RING 24 PISTON END PIN
- INNER PISTON INNER PISTON O-RING 26. INNER PISTON SPRING 27.
- 28. 29. BREACH BREACH SCREW 30. BREACH FIXED SCREW
- FIRING PIN FIRING PIN SPRING 31. FIRING PIN SLEEVE 33. SLIDE BUSHING 34.
- RECOIL SPRING 35. 36.
- RECOIL SPRING GUIDE RECOIL SPRING PLUNGER RECOIL SPRING PLUNGER SPRING
- RECOIL PLUNGER SCREW 39 40. TRIGGER HOUSING
- 41. SLIDE STOP SLIDE STOP SPRING SLIDE STOP PIN SPRING 43.
- TRIGGER 44. TRIGGER SLEEVE

TRIGGER BAR SPRING 50 MAGAZINE CATCH 51 MAGAZINE CATCH SPRING 52 53. TRIGGER BAR SCREW TRIGGER BAR SCREW WASHER 54. 55 SAFETY SAFETY PLUNGER 56 SAFETY PLUNGER SPRING 57 HAMMER 58 HAMMER STRUT 59. HAMMER STRUT PIN 60. SEAR HOUSING 61. HAMMER SLEEVE 62 HAMMER PIN 63

TRIGGER PIN

TRIGGER BAR

TRIGGER BAR PIN

47.

48.

49

64.


65

66. IMPACT BAR PIN 67. SEAR SEAR SPRING 68 SEAR PIN 69 DISCONNECTOR 70. DISCONNECTOR SPRING 71.

PIN STOPPER

IMPACT BAR

- 72. IMPACT FRAME IMPACT FRAME SPRING 73. 74. 75. IMPACT FRAME SLEEVE IMPACT FRAME JOINT
- 76 IMPACT HAMMER 77. IMPACT HAMMER PIN IMPACT HAMMER SPRING IMPACT HAMMER PIN STOP 78. 79.
- MAIN SPRING 80. MAIN SPRING RETAINER 81 MAIN SPRING CATCH 82 MAIN SPRING CATCH PIN 83.
- MAIN SPRING HOUSING 84. MAIN SPRING HOUSING PIN 85 GRIP (LEFT/RIGHT) 88
- GRIP PLATE 87 88. GRIP SCREWS FRAME 202. SLIDE
- 203. BARREI REAR SIGHT 204

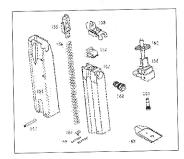

- MAGAZINE HOUSING MAGAZINE HOUSING PIN 152. MAGAZINE LIP 153 NOZZLE SEAR 154 MAGAZINE FOLLOWER 155 MAGAZINE SPRING 156. INNER MAGAZINE 157. MAGAZINE BASE 158. MAGAZINE BASE PINS 159.
- MAGAZINE RELEASE VALVE 160 161. MAGAZINE NEEDLE VALVE MAGAZINE BASE SEARL 162.
- 163. MAGAZINE PLATE MAGAZINE PLATE DETENT