
## OUNER'S MANUAL

**WARNING!** READ ALL INSTRUCTIONS AND SAFETY RULES COMPLETELY BEFORE USING THIS AIR SPORTS GUN. REMEMBER, "SAFETY BEGINS WITH YOU".

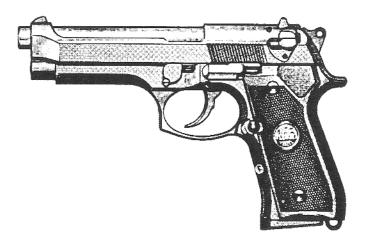

# M9/M9BR





SEMIAUTOMATIC MILITARY AIR PISTOL

FOR AGE 18 AND OLDER

## KWA M9/M9BR Air Sports Gun

SEMIAUTOMATIC MILITARY AIR PISTOL

## TABLE OF CONTENTS

- MESSAGE FROM KWA
- PRECAUTION
- SAFETY RULES
- WARRANTY
- OPERATIONS I
  - [1] CHARGING GAS
- OPERATIONS II
  - [2] LOADING BB'S
  - [3] LOADING MAGAZINE
  - [4] COCKING
- OPERATIONS III
  - [5] AMBIDEXTROUS SAFETY-DECOCKING LEVER
  - [6] SHOOTING
- OPERATIONS IV
  - [7] OPEN SLIDE
  - [8] AFTER SHOOTING
- HOP-UP MECHANISM
- DISASSEMBLY
- PARTS LIST









## MESSAGE FROM KWA

KWA WOULD LIKE TO THANK YOU FOR YOUR PURCHASE OF THE AIR SPORTS GUNS. WE TAKE PRIDE IN PRODUCING QUALITY AIR SPORTS GUNS INCORPORATING ALL OF THE BEST FEATURES. ALL AIR SPORTS GUNS ARE TO BE OPERATED UNDER SAFETY GUIDELINES AS REAL FIREARMS AND IT IS YOUR RESPONSIBILITY TO USE THEM IN A SAFE MANNER AT ALL TIMES. KWA, AND IT'S AGENTS ARE NOT RESPONSIBLE FOR CARELESS, ABUSIVE, IMPROPER, NEGLIGENT AND CRIMINAL USE OF ITS PRODUCTS.

## PRECAUTION

AIR SPORTS GUNS ARE DESIGNED FOR PERSONS OF AGE 18 OR OLDER FOR SPORTING PURPOSE ONLY AND TO BE OPERATED UNDER THE U.S. FIREARMS SAFETY CODES. THE EFFECTIVE SHOOTING RANGE IS APPROXIMATELY 160 FEET AND CAN BE AFFECTED BY SURROUNDING CONDITIONS, SUCH AS TEMPERATURE, WIND, ETC. IT IS STRONGLY RECOMMENDED TO USE THE AIR SPORTS GUN IN A SAFE DESIGNATED SHOOTING RANGE OR AREA AND TO TREAT ALL AIR SPORTS GUNS AS REAL FIREARMS. AIR SPORTS GUNS CAN BE DANGEROUS AND CAUSE SERIOUS INJURY, IT IS THE USER'S RESPONSIBILITY TO HANDLE AIR SPORTS GUNS IN A SAFE MANNER. BE SURE TO TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AND NEVER POINT AT ANYONE OR OBJECTS THAT YOU DO NOT INTEND TO SHOOT. ONLY AIM YOUR AIR SPORTS GUN IN A SAFE DIRECTION. U.S. FEDERAL LAW REQUIRES A MINIMUM 6MM ORANGE MARKING ON ANY FIREARM REPLICAS AND BY REMOVING THE ORANGE TIP, YOU ARE VIOLATING THE LAW AND IT CAN ENDANGER YOURSELF AND OTHERS:

THE AIR SPORTS GUNS ARE NOT TOYS, ALTHOUGH THEY FIRE 6MM PLASTIC BB'S AT RELATIVELY LOW VELOCITY, THERE ARE STILL HIGH RISKS FOR PERSONAL INJURY IF PROPER PROTECTIVE GEAR IS NOT WORN. REMEMBER, THE AIR SPORTS GUNS RESEMBLE REAL FIREARMS IN APPEARANCE, SIZE AND SOME FUNCTIONAL RESPECTS, THEREFORE, IT IS RECOMMENDED THAT YOU SHOULD NEVER CARRY OR DISPLAY THE AIR SPORTS GUN IN PUBLIC AREAS. ANY CRIMES COMMITTED WITH AN AIR SPORTS GUN WILL BE PROSECUTED AS IF A REAL FIREARM WERE USED. BE SURE NOT TO POINT THE AIR SPORTS GUNS AT ANY LAW ENFORCEMENT OFFICERS OR ANY OTHER ARMED PERSONS, DOING SO, MAY PUT YOURSELF IN A VERY DANGEROUS SITUATION. REMEMBER, AIR SPORTS GUNS ARE NOT TOYS.

**WARNING!** DO NOT ALTER YOUR AIR SPORTS GUN. BY DOING SO, MAY MAKE IT UNSAFE, AND VOID THE WARRANTY, AND AFFECT THE RELIABILITY OF THE

## SAFETY RULES



# ALL USERS MUST WEAR SHOOTING OR SAFETY GLASSES AT ALL TIMES.

- READ THE OWNER'S MANUAL BEFORE HANDLING AND LOADING THE GUN
- ◆ TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AT ALL TIMES
- ♦ NEVER POINT AT ANYONE OR OBJECTS YOU DO NOT INTEND TO SHOOT
- ◆ ALWAYS POINT MUZZLE IN A SAFE DIRECTION
- MAKE SURE YOUR SHOOTING DIRECTION IS FREE OF OBSTACLES BEFORE YOU SHOOT
- ◆ DO NOT LOAD ANY AIR SPORTS GUN UNTIL YOU ARE READY TO FIRE
- ALWAYS KEEP THE SAFETY ON AND NEVER PLACE YOUR FINGER ON THE TRIGGER UNTIL YOU ARE READY TO FIRE
- ALWAYS EXAMINE AND UNLOAD THE GUN WHEN NOT IN USE. STORE IT IN A SAFE MANNER AND KEEP AWAY FROM CHILDREN
- ◆ DO NOT PEEP AT THE MUZZLE
- NEVER SHOOT AT ANY ROCKS, WATER OR ANY HARD SURFACES AS THEY MAY CAUSE THE BB'S TO RICOCHET
- ◆ ALWAYS USE THE PROPER 6MM CALIBER BB'S AND NEVER REUSE BB'S
- NEVER JUMP, CLIMB OR CROSS OBSTACLES WITH A LOADED AIR SPORTS GUN. ALWAYS UNLOAD THE GUN FIRST
- ♦ NEVER LEAVE A LOADED WEAPON UNATTENDED. AIR SPORTS GUNS ARE CERTAINLY NO EXCEPTION TO THIS RULE
- ♦ ACCIDENTS USUALLY RESULT FROM NEGLIGENCE OF BASIC SAFETY RULES.

CHOKING HAZARD! AIRSOFT BB'S CAN BE A CHOKING HAZARD.
ALWAYS RETRIEVE BB'S AFTER SHOOTING AND KEEP AWAY FROM CHILDREN.

## WARRANTY

WE OFFER A 30 DAY WARRANTY FOR MECHANICAL OR ELECTRICAL FACTORY DEFECTS. WARRANTY BECOMES VOID IF DAMAGE IS CAUSED BY USER'S ABUSE, MISUSE, ALTERATION OR MODIFICATION OF THE GUNS OR MAGAZINE IN ANY FORM, INCLUDING BUT NOT LIMITED TO REMOVAL OF ORANGE MARKING AND USE OF IMPROPER SIZE AND/OR LOW GRADE BB'S. WATER, DUST AND CONTAMINANT DAMAGES ALSO VOID THE WARRANTY. WARRANTY DOES NOT COVER BB'S, TARGETS, GAS CANISTERS OR ACCESSORIES OF ANY KIND. PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT TO OBTAIN RMA NO. AND SHIPPING INSTRUCTIONS BEFORE RETURNING ANY PRODUCTS. ALL ITEMS RETURNED FOR REPAIR MUST BE ACCOMPANIED BY A SALES RECEIPT. WARRANTY DOES NOT COVER HANDLING AND SHIPPING CHARGES OF RETURNED ITEMS COMING FROM AND GOING TO CUSTOMERS.

#### [1] CHARGING GAS

RELEASE MAGAZINE BY PRESSING MAGAZINE CATCH

CAUTION! AVOID MAGAZINE TO DROP FREELY ON HARD SURFACE; IT MAY DAMAGE THE MAGAZINE.

- PUSH THE GAS CANISTER NOZZLE INTO THE CHARING VALVE. MAKE SURE THE CANISTER IS IN A VERCAL POSITION WHEN CHARGING.
- (3)CHARGE MAGAZINE UNTIL GAS OVERFLOWS FROM CHARGING VALVE.




MAGAZINE

### ARNINGI

- \* CHECK CANISTER FOR ANY CRACKS OR LEAKS BEFORE USING
- \* DO NOT EXPOSE CANISTER TO TEMPERATURE OVER 40 °C
- \* DO NOT LEAVE CANISTER DIRECTLY OVER FIRE
- \* DO NOT BOIL CANISTER
- \* KEEP CANISTER AWAY FROM DIRECT SUNLIGHT
- \* DO NOT LEAVE CANISTERS IN VEHICLES



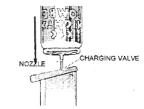



NOTES: IT IS NORMAL THAT YOU MAY EXPERIENCE MINOR LEAKING FROM CHARGING VALVE DURING CHARGING, DUE TO HIGH PRESSURE BUILT UP INSIDE MAGAZINE. IT IS RECOMMENDED TO KEEP GAS RELEASE VALVE SLIGHTLY OILED. IDEAL TEMPERATURE FOR SHOOTING IS ROOM TEMPERATURE.

CAUTIONS: YOU MAY EXPERIENCE A DELAY ACTION IF SURROUNDING TEMPERATURE DROPS BELOW 68 °F. REMEMBER, DO NOT EXPOSE MAGAZINE DIRECTLY UNDER THE SUN OR INCINER-ATE THE MAGAZINE, IT MAY CAUSE BURSTING. IT IS STRONGLY RECOMMENDED TO EMPTY GAS FROM MAGAZINE AFTER SHOOTING. BE SURE TO AVOID DIRECT GAS CONTACT WITH EYES OR SKIN WHEN GAS IS BEING RELEASED. IT MAY CAUSE FROSTBITE.

#### LOADING BB'S [2]

CHECK FOR 3MM CLEARANCE AFTER LOADING BB'S



- PLACE LOADER PIPE ONTO LOADER FUNNEL
- PLACE LOADER FUNNEL ON TOP OF MAGAZINE LIP
- -3-POUR BB'S ONTO LOADER PIPE. (DO NOT EXCEED 26 BB'S PER-LOADING)
- USE LOADER ROD TO PUSH BB'S DOWN INTO MAGAZINE
- MAKE SURE TO HAVE A 3MM CLEARANCE BETWEEN BB'S AND TOP LIP OF MAGAZINE

NOTE: ALWAYS USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G, USING ONLY KWA'S ULTRA PREMIUM BB'S CAN GIVE THE AIR SPORTS GUN ITS BEST PERFORMANCE. USING IMPROPER AND LOW GRADE BB'S MAY DAMAGE THE GUN.

CAUTION: ALWAYS KEEP "SAFETY" ON WHEN LOADING BB'S AND KEEP FINGERS AWAY FROM TRIGGER UNTIL YOU ARE READY TO SHOOT.

### [3] LOADING MAGAZINE



- -1- PLACE MAGAZINE BACK INTO MAGAZINE WELL
- -2- PUSH UP MAGAZINE UNTIL IT CLICKS INTO LOCKED POSITION.
- -3- PULL MAGAZINE DOWN TO ASSURE THAT IT HAS BEEN LOCKED IN PLACE.

NOTE: OVERLOADING BB'S IN THE MAGAZINE MAY CAUSE JAMMING AND DAMAGE THE GUN WHEN LOADING. MAKE SURE TO CHECK FOR 3MM CLEAR-ANCE BETWEEN FOLLOWER AND MAGAZINE LIP..



SAFETY CAUTION: ALWAYS KEEP FINGER OFF THE TRIGGER UNTIL READY TO FIRE. MAKE SURE THE MUZZLE IS POINTING IN A SAFE DIRECTION.

NOTE: FOR ABSOLUTE ASSURANCE AGAINST ACCIDENTAL DISCHARGE DUE TO INADVERTENT TRIGGER PULL, KEEP THE MANUAL SAFETY ENGAGED "ON" DURING LOADING OR UNLOADING.

## [4] COCKING




PULL SLIDE TO THE REARMOST POSITION AND RELEASE THE SLIDE. THIS WILL AUTOMATICALLY LOAD THE FIRST BB'S INTO THE CHAMBER. HAMMER WILL BE IN COCKED POSITION. MAKE SURE NOT TO SKIP THIS PROCEDURE. SKIPPING THIS WILL CAUSE A MISFIRE ON THE FIRST PULL OF THE TRIGGER.

## OPERATION - III

# [5] AMBIDEXTROUS SAFETY - DECOCKING LEVER

THIS ALLOWS A SAFE HAMMER LOWERING WITH A CHAMBERED BB. WHEN SAFETY IS 'OFF', RED DOT WILL BE EXPOSED. PUSH THE SAFETY LEVER DOWN TO COVER RED DOT. SAFETY IS NOW ENGAGED. COCKED HAMMER WILL AUTO-MATICALLY DISENGAGE WHEN SAFETY BY USHED DOWN. HAMMER IS DISABLED WHEN SAFETY IS ON. TO DISENGAGE SAFETY, PUSH LEVER UPWARD. GUN IS NOW READY TO SHOOT

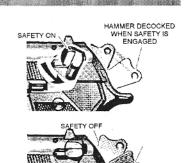


CAUTION! MAKE SURE TO HAVE SAFETY ON AT ALL TIMES WHEN NOT IN A SHOOTING POSITION.

### [6] SHOOTING



RELEASE SAFETY AND PULL ON TRIGGER. THE BLOW, BACK ACTION WILL LOAD THE FOLLOWING BB'S AUTO-MATICALLY AS THE SLIDE CYCLES BACK AND FORTH.

CAUTION: ALWAYS WEAR EYE PROTECTION WHEN SHOOTING. BB'S MAY BOUNCE OFF OF HARD SUR-FACES. MAKE SURE YOUR SHOOTING DIRECTION IS CLEAR OF OBSTACLES BEFORE YOU SHOOT.

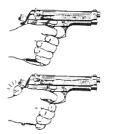

GRASP PISTOL IN YOUR HAND FIRMLY. A TWO HAND HOLD WITH ONE HAND WRAPPED AROUND THE OTHER WILL HELP IN CONTROLLING THE PISTOL.

WARNING: NEVER SHOOT GUN IN A HORIZONTAL OR UPSIDE DOWN POSITION.

#### SINGLE / DOUBLE ACTION MODE:

AFTER CHAMBERING THE FIRST BB BY PULLING THE SLIDE TO THE REAR AND RELEASING IT, THE PISTOL IS READY TO SHOOT AND IS IN SINGLE ACTION MODE. THROUGH APPROPRIATE HAMMER DECOCKING, YOU CAN FIRE THE CHAMBERED BB FROM THE HAMMER'S ATREST POSITION, THE PISTOL IS IN A DOUBLE ACTION MODE. THIS ALSO INSURES THE SAFETY ADVANTAGE OF TRIGGER PULL REPEAT IN CASE OF MISFIRE.





WARNING: IT IS RECOMMENDED TO WEAR EYE PROTECTION AT ALL TIMES, BB'S MAY BOUNCE OFF HARD SURFACES (RICOCHET). ALWAYS POINT GUN IN A SAFE DIRECTION.

## OPERATION - IV

## [7] OPEN SLIDE

AFTER THE LAST SHOT HAS BEEN FIRED AND EJECTED, THE SLIDE WILL REMAIN OPENED. REMOVE MAGAZINE AND RELOAD MAGAZINE WITH BB'S. LOAD MAGAZINEJINTO PISTOL AND RELEASE THE SLIDE STOP. SLIDE WILL LOAD THE FIRST BB INTO CHAMBER.

NOTE: IT IS IMPORTANT TO TREAT YOUR GUN AS THOUGH IT IS LOADED, EVEN IF THE SLIDE REMAINS OPEN.



### [8] AFTER SHOOTING

REMOVE MAGAZINE FIRST AND VISUALLY INSPECT THE OPEN CHAMBER TO CHECK WHETHER THE MAGAZINE WELL AND CHAMBER ARE CLEAR OF BB'S. WHEN BOTH MAGAZINE AND CHAMBER ARE CLEAR, ENGAGE SAFETY SWITCH.



## HOP-UP MERCHANISM



## HOP UP SYSTEM

"HOP UP" SYSTEM IS ONE OF THE STANDARD FEATURES THAT \*\*WAF\* GAS BLOW BACK AIR SPORTS GUNS HAVE. THE DESIGN OF HOP UP SYSTEM IS TO PLACE A BALL BEARING BETWEEN CHAMBER WALLS. BY ADDING OR REDUCING PRESSURE ON THE BALL BEARING, IT CONTROLS BACKSPIN OF THE BB AND GIVES IT GREATER STABILITY WHEN IT TRAVELS IN THE AIR, AND ALSO MAKES IT FLY FURTHER WITH GREATER ACCURACY. THE HOP UP SYSTEM DOES NOT ADD POWER TO THE GUN, IT IMPROVES STABILITY AND ACCURACY. (IT IS RECOMMENDED BY \*\*WAF\* THAT 0.2 ~ 0.25g BB'S, RATHER THAN 0.11g, ARE USED WITH THE HOP UP SYSTEM)



## HOP UP SYSTEM ADJUSTMENT

BEFORE MAKING ANY ADJUSTMENTS, MAKE SURE YOU HAVE SUFFICIENT GAS PRESSURE INSIDE MAGAZINE. CHAMBER SHOULD BE SLIGHTLY OILED. YOU WILL REQUIRE AT LEAST 65 FEET CLEARANCE WHEN MAKING THE ADJUSTMENT.

TEST FIRE GUN
FOR 10 ~ 20
ROUNDS AND OBSERVE THE BB TRAVELING
PATTERN.


OPEN SLIDE, PLACE ADJUST-ING TOOL INTO SLOTTED CHAMBER RING. TURN ADJUST-ING RING 1/4 INCH AT A TIME.


> TURN RING COUNTER CLOCKWISE IF BB'S GO DOWNWARD. TURN RING CLOCKWISE IF BB'S GO UPWARD.

ADJUST —> TEST FIRE —> ADJUST

REPEAT THE PROCEDURES UNTIL

YOU FIND THE PROPER TRAJECTORY

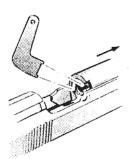

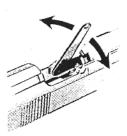

M9/M9BR

Air Sports Gun

FOR AGE 18 AND OLDER

SEMIAUTOMAIC MILITARY AIR PISTOL


HOP UP EFFECTIVENESS	BB TRAJECTORY PATTERN		ADJUSTMENTS	
NOT		BB DROPS FREELY	(())	TURN KNOB TO LEFT
SLIGHTLY	7	BB TRAVELS AT SHORT TRAJEC- TORY PATH	(C)	TURN KNOB SLIGHTLY TO LEFT
PROPERLY		BB TRAVELS DISTANCE AT FLAT TRAJECTORY PATH	0	NO ADJUST- MENT MADE
OVERLY	$\sim$	BB TRAVELS FLAT IN SHORT DIS- TANCE, THEN GOES UP IN CURVE AND DROPS FREELY	(Q)1	FURN KNOB SLIGHTLY TO RIGHT
EXTREMELY	*	BB TRAVELS AT UNSTABLE SPEED AND IRREGULAR PATH	(C)	TURN KNOB TO RIGHT




## HOP UP ONE POINT CLINIC

PHENOMENON	POSSIBLE CAUSE	SOLUTIONS
HOP UP OVER-	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
ADJUSTED	BB TOO LIGHT	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
HOP UP SCATTER	HOP EFFICIANCY TOO WEAK	TURN ADJUSTMENT RING TO LEFT
	BB	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
CAN NOT START	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
HOP UP		FRICTION
	OIL IN RUBBER CHAMBER	USE COTTON SWAB TO WIPE OUT OIL
	BB DO NOT TURN TO RUBBER CHAMBER	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	UNDERSIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	HOP NOT TAKING EFFECT	ADJUST RING TO LEFT
CAN NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
ADJUST HOP UP	FRICTION	
	FRICTION OR DAMAGE RELATED	EXCHANGE FOR NEW PART
	PARTS (ACCESSORIES)	
	LOOSENESS OF INNER BARREL	INSERT TIGHTLY INTO RUBBER CHAMBER
	HOP OVER EFFECTIVE	ADJUST RING TO RIGHT
BBS DO NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PARTS
EXIT BARREL	FRICTION	
	STAINS INSIDE THE GUN BODY	CLEANING INNER BARREL WITH COTTON
		SWAB
BULLETS OVER	WRONG SIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
LOADED	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
	STAIN IN RUBBER CHAMBER	CLEAN WITH COTTON SWAB
HOP UP EFFECT	LOW GAS PRESSURE/	RETURN MAGAZINE AND GAS TO ROOM
WEAKENED BY	MAGAZINE GETS TOO COLD	TEMPERATURE
ITSELF	USING TOO MUCH OIL DURING	SHOOT TO BLOW OFF OIL INSIDE RUBBER
	MAINTENANCE	CHAMBER AND PISTON, THEN CLEAN INNER
		BARREL
	L	1


## DISASSEMBLY

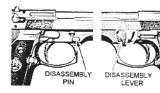

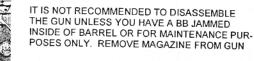



- -2- CHECK AND CLEAR CHAMBER FROM ANY BB'S
- PULL THE SLIDE TO THE REAR BY 1/4 INCH AND HOLD DISASSEMBLY PIN
- -4- PUSH DISASSEMBLY LEVER DOWN-WARD
- -5- PULL SLIDE FORWARD AWAY FROM FRAME
- -6- REMOVE GUIDE ROD AND SPRING
- -7- REMOVE BARREL LOCKING BLOCK
- -8- SLIDE BARREL OUT FROM BOTTOM OF SLIDE

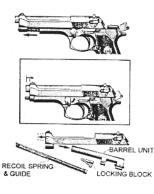


LOCKING BLOCK MUST BE INSTALLED AT AN ANGLE IN ORDER FOR THE RECOIL SPRING AND GUIDE ROD ASSEMBLY TO REST ON LOCKING BLOCK "CUT-OUT"

LOCKING BLOCK

### REASSEMBLY:

- PLACE BARREL INTO SLIDE FROM BOTTOM
- PLACE LOCKING BLOCK INTO POSITION
- INSTALL RECOIL SPRING AND GUIDE ROD INTO POSITION
- PUSH THE SLIDE ONTO THE FRAME RAILS AND HOLD BACK
- SWING DISASSEMBLY LEVER UPWARD
- RELEASE SLIDE

NOTE: AFTER ASSEMBLY IS COMPLETED, CYCLE THE SLIDE BACK AND FORTH TO INSURE PROPER ASSEMBLY.

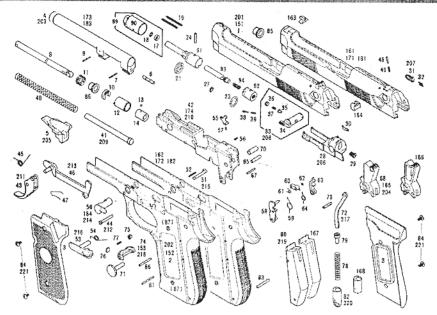

#### M9 / M9 HEAVY WEIGHT / M9 BRIGADEIR / M9 ELITE COMMON PARTS

#### SLIDE

- FRAME
- GRIPS (PAIR) 3
- OUTER BARREL LOCKING BLOCK 5
- 6. LOCKING BLOCK PLUNGER
- PLUNGER PIN
- INNER BARREL 9
- INNER BARREL PIN 10
- BARREL GRIP BARREL GRIP SPRING 11
- ADJUSTMENT RING 12
- 13 ADJUSTABLE BALL
- CHAMBER CYLINDER SPRING x 2 19
- 21. PISTON RING
- 23 PISTON O-RING
- 24 PISTON END PIN
- 27 INNER PISTON O-RING
- 28 BREACH
- 29 BREACH SCREW 30 SAFETY CAM
- SAFETY LEVER RIGHT 31
- 32 SAFETY LEVER SCREW
- 33 SAFETY LEVER LEFT ASSEMBLY
- SAFETY LEVER
- 35 FIRING PIN STRIKER
- 36 FIRING PIN SPRING
- FIRING PIN SPRING SET 37
- 38 SAFETY TENSION
- SAFETY TENSION SPRING 39
- 40 RECOIL SPRING
- RECOIL SPRING GUIDE INNER BODY FRAME
- 42 43 TRIGGER
- TRIGGER PIN 44
- 45 TRIGGER PIN SPRING
- TRIGGER BAR 46
- 47 TRIGGER BAR SPRING
- 48 TRIGGER BAR TENSION
- 49 TRIGGER BAR TENSION SPRING
- 50 DISASSEMBLY LEVER
- 51. DISASSEMBLY PIN
- DISASSEMBLY SPRING

- 53
- SLIDE STOP SLIDE STOP SPRING 54.
- SAFETY RING 55. 56 SAFETY RING SCREW
- 57 SAFETY RING SPRING
- 58 IMPACT FRAME IMPACT FRAME SPRING
- 59 60 HAMMER
- HAMMER SPRING 61.
- 62. HAMMER E-RING
- 63 SEAR
- 64. SEAR SPRING 65 SEAR LEAF
- 66 SEAR PIN
- 67. SPRING HANGER PIN
- HAMMER PIN SLEEVE 70.
- 71. HAMMER PIN
- 72 HAMMER LEG
- 73. HAMMER LEG PIN
- 74 MAGAZINE CATCH MAGAZINE CATCH BUSHING RIGHT
- 75 76.
  - MAGAZINE CATCH BUSHING LEFT
- 77. MAGAZINE CATCH SPRING
- 78. MAIN SPRING
- 79 MAIN SPRING RETAINER 80 MAIN SPRING HOUSING
- MAIN SPRING HOUSING PIN 81.
- LANYARD LOOP 82.
- 83. LANDYARD LOOP PIN
- 84 GRIP SCREW x 4
- 85. SLIDE BUSHING
- 86
- GRIP SPRING BUSHING
- GRIP NUT x 4 87
- REAR POSITION BAR 88
- 89. EXTERNAL CYLINDER SET
- 90 EXTERNAL CYLINDER
- 91. EXTERNAL PISTON
- 92. EXTERNAL PISTON END 93 INNER PISTON
- INNER PISTON SPRING 94

## BB LOADER SET 97. LOADER RO


- LOADER ROD
- 98. LOADER PIPE LOADER FUNNEL
- HOP UP ADJUSTMENT WRENCH

### M9 PARTS

- M9 ABS SLIDE M9 ABS FRAME
- M9 OUTER BARREL M9 RING HAMMER

#### M9 HEAVY WEIGHT PARTS

- 151. M9 HEAVY WEIGHT SLIDE
- 152 M9 HEAVY WEIGHT FRAME
- 153 MAGAZINE CATH
- M9 BRIGADEIR PARTS
  163. TACTICAL FRONT SIGHT
- TACTICAL REAR SIGHT 164
- SKELETON HAMMER 166
- 167. FRONT BOLT HOUSING
- 168
- HOUSING END
- M9 ELITE PARTS
- ELITE SLIDE ABS 171. 172. ELITE FRAME ABS
- ELITE OUTER BARREL SILVER
- 174. INNER FRAME ALUMINUM

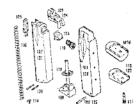

- MAGAZINE
- MAGAZINE CASE CASE PIN 101.
- 102 MAGAZINE LIP 103.
- NOZZLE LEVER 104.
- MAGAZINE FOLLOWER 105.
- 106. MAGAZINE FOLLOWER SPRING
- 107 MAGAZINE INNER CASE
- 108 MAGAZINE INNER BASE
- INNER BASE PIN 109
- 110 RELEASE VALVE 111.
- CHARGING VALVE MAGAZINE SEAL 112
- 113 MAGAZINE BASE
- MAGAZINE STOP BAR 114
- M9 ELITE MAGAZINE BASE M98