
# OWNER'S MANUAL

**WARNING!** READ ALL INSTRUCTIONS AND SAFETY RULES COMPLETELY BEFORE USING THIS AIR SPORTS GUN. REMEMBER, "SAFETY BEGINS WITH YOU.".



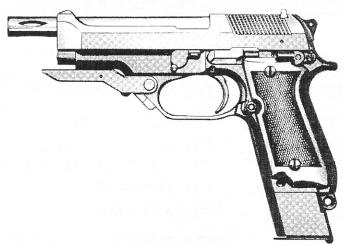

M93R II

Distributed by:



FOR AGE 18 AND OLDER

## SEMIAUTOMATIC MILITARY AIR PISTOL

## Consumer Warning

Be advised that this product may be mistaken for a firearm by law enforcement officers or others; Brandishing or displaying the product in public may cause confusion and may be a crime; Altering the coloration or markings required by state or federal law or regulations so as to make the product look more like a firearm is dangerous and may be a crime.

# KWA M93R II Air Sports Gum

OR AGE 18 AND OLDER

SEMIAUTOMATIC MILITARY AIR PISTOL

## TABLE OF CONTENTS

- MESSAGE FROM KWA
- PRECAUTION
- SAFETY RULES
- WARRANTY
- OPERATIONS I
  - [1] CHARGING GAS
- OPERATIONS II
  - [2] LOADING BB'S
  - [3] LOADING MAGAZINE
  - [4] COCKING
- OPERATIONS III
  - [5] SAFETY
  - [6] SHOOTING
- OPERATIONS IV
  - [7] OPEN SLIDE
  - [8] AFTER SHOOTING
- HOP-UP MECHANISM
- DISASSEMBLY
- PARTS LIST







# MESSAGE FROM KWA

KWA WOULD LIKE TO THANK YOU FOR YOUR PURCHASE OF THE AIR SPORTS GUNS. WE TAKE PRIDE IN PRODUCING QUALITY AIR SPORTS GUNS INCORPORATING ALL OF THE BEST FEATURES. ALL AIR SPORTS GUNS ARE TO BE OPERATED UNDER SAFETY GUIDELINES AS REAL FIREARMS AND IT IS YOUR RESPONSIBILITY TO USE THEM IN A SAFE MANNER AT ALL TIMES. KWA, AND IT'S AGENTS ARE NOT RESPONSIBLE FOR CARELESS, ABUSIVE, IMPROPER, NEGLIGENT AND CRIMINAL USE OF ITS PRODUCTS.

# **PRECAUTION**

AIR SPORTS GUNS ARE DESIGNED FOR PERSONS OF AGE 18 OR OLDER FOR SPORTING PURPOSE ONLY AND TO BE OPERATED UNDER THE U.S. FIREARMS SAFETY CODES. THE EFFECTIVE SHOOTING RANGE IS APPROXIMATELY 160 FEET AND CAN BE AFFECTED BY SURROUNDING CONDITIONS, SUCH AS TEMPERATURE, WIND, ETC. IT IS STRONGLY RECOMMENDED TO USE THE RIR SPORTS GUN IN A SAFE DESIGNATED SHOOTING RANGE OR AREA AND TO TREAT ALL AIR SPORTS GUNS AS REAL FIREARMS. AIR SPORTS GUNS CAN BE DANGEROUS AND CAN CAUSE SERIOUS INJURY, IT IS THE USER'S RESPONSIBILITY TO HANDLE AIR SPORTS GUNS IN A SAFE MANNER. BE SURE TO TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AND NEVER POINT AT ANYONE OR OBJECTS THAT YOU DO NOT INTEND TO SHOOT. ONLY AIM YOUR AIR SPORTS GUN IN A SAFE DIRECTION. U.S. FEDERAL LAW REQUIRES A MINIMUM 6MM ORANGE MARKING ON ANY FIREARM REPLICAS AND BY REMOVING THE ORANGE TIP, YOU ARE VIOLATING THE LAW AND IT CAN ENDANGER YOURSELF AND OTHERS.

THE AIR SPORTS GUNS ARE NOT TOYS, ALTHOUGH THEY FIRE 6MM PLASTIC BB'S AT RELATIVELY LOW VELOCITY, THERE ARE STILL HIGH RISKS FOR PERSONAL INJURY IF PROPER PROTECTIVE GEAR IS NOT WORN. REMEMBER, THE AIR SPORTS GUNS RESEMBLE REAL FIREARMS IN APERARANCE, SIZE AND SOME FUNCTIONAL RESPECTS, THEREFORE, IT IS RECOMMENDED THAT YOU SHOULD NEVER CARRY OR DISPLAY THE AIR SPORTS GUN IN PUBLIC AREAS, ANY CRIMES COMMITTED WITH AN AIR SPORTS GUN WILL BE PROSECUTED AS IF A REAL FIREARM WERE USED. BE SURE NOT TO POINT THE AIR SPORTS GUNS AT ANY LAW ENFORCEMENT OFFICERS OR ANY OTHER ARMED PERSONS, DOING SO, MAY PUT YOURSELF IN A VERY DANGEROUS SITUATION. REMEMBER, AIR SPORTS GUNS ARE NOT TOYS.

WARNING! DO NOT ALTER YOUR AIR SPORTS GUN. BY DOING SO, MAY MAKE IT UNSAFE, AND VOID THE WARRANTY, AND AFFECT THE RELIABILITY OF THE

## SAFETY RULES



# ALL USERS MUST WEAR SHOOTING OR SAFETY GLASSES AT ALL TIMES.

- ♦ READ THE OWNER'S MANUAL BEFORE HANDLING AND LOADING THE GUN
- ◆ TREAT ALL AIR SPORTS GUNS AS IF THEY WERE LOADED AT ALL TIMES
- ♦ NEVER POINT AT ANYONE OR OBJECTS YOU DO NOT INTEND TO SHOOT.
- ◆ ALWAYS POINT MUZZLE IN A SAFE DIRECTION
- MAKE SURE YOUR SHOOTING DIRECTION IS FREE OF OBSTACLES BEFORE YOU SHOOT
- ◆ DO NOT LOAD ANY AIR SPORTS GUN UNTIL YOU ARE READY TO FIRE
- ◆ ALWAYS KEEP THE SAFETY ON AND NEVER PLACE YOUR FINGER ON THE TRIGGER UNTIL YOU ARE READY TO FIRE
- ALWAYS EXAMINE AND UNLOAD THE GUN WHEN NOT IN USE. STORE IT IN A SAFE MANNER AND KEEP AWAY FROM CHILDREN
- ◆ DO NOT PEEP AT THE MUZZLE
- NEVER SHOOT AT ANY ROCKS, WATER OR ANY HARD SURFACES AS THEY MAY CAUSE THE BB'S TO RICOCHET
- ♦ ALWAYS USE THE PROPER 6MM CALIBER BB'S AND NEVER REUSE BB'S
- ♦ NEVER JUMP, CLIMB OR CROSS OBSTACLES WITH A LOADED AIR SPORTS GUN. ALWAYS UNLOAD THE GUN FIRST
- ◆ NEVER LEAVE A LOADED WEAPON UNATTENDED. AIR SPORTS GUNS ARE CERTAINLY NO EXCEPTION TO THIS RULE
- ◆ ACCIDENTS USUALLY RESULT FROM NEGLIGENCE OF BASIC SAFETY RULES

CHOKING HAZARD! AIRSOFT BB'S CAN BE A CHOKING HAZARD.
ALWAYS RETRIEVE BB'S AFTER SHOOTING AND KEEP AWAY FROM CHILDREN.

# WARRANTY

WE OFFER A 30 DAY WARRANTY FOR MECHANICAL OR ELECTRICAL FACTORY DEFECTS. WARRANTY BECOMES VOID IF DAMAGE IS CAUSED BY USER'S ABUSE, MISUSE, ALTERATION OR MODIFICATION OF THE GUNS OR MAGAZINE IN ANY FORM, INCLUDING BUT NOT LIMITED TO REMOVAL OF ORANGE MARKING AND USE OF IMPROPER SIZE AND/OR LOW GRADE BB'S. WATER, DUST AND CONTAMINANT DAMAGES ALSO VOID THE WARRANTY. WARRANTY DOES NOT COVER BB'S, TARGETS, GAS CANISTERS OR ACCESSORIES OF ANY KIND. PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT TO OBTAIN RMA NO. AND SHIPPING INSTRUCTIONS BEFORE RETURNING ANY PRODUCTS. ALL ITEMS RETURNED FOR REPAIR MUST BE ACCOMPANIED BY A SALES RECEIPT. WARRANTY DOES NOT COVER HANDLING AND SHIPPING CHARGES OF RETURNED ITEMS COMING FROM AND GOING TO CUSTOMERS.

## [1] CHARGING GAS

(1) RELEASE MAGAZINE BY PRESSING MAGAZINE CATCH.

CAUTION! AVOID MAGAZINE TO DROP FREELY ON HARD SURFACE; IT MAY DAMAGE THE MAGAZINE.

- (2) PUSH THE GAS CANISTER NOZZLE INTO THE CHARING VALVE. MAKE SURE THE CANISTER IS IN A VERCAL POSITION WHEN CHARGING.
- (3) CHARGE MAGAZINE UNTIL GAS OVERFLOWS FROM CHARGING VALVE




MAGAZINE

#### WARNING!

- \* CHECK CANISTER FOR ANY CRACKS OR LEAKS BEFORE USING
- \* DO NOT EXPOSE CANISTER TO TEMPERATURE OVER 40 °C
- \* DO NOT LEAVE CANISTER DIRECTLY OVER FIRE
- \* DO NOT BOIL CANISTER
- \* KEEP CANISTER AWAY FROM DIRECT SUNLIGHT
- \* DO NOT LEAVE CANISTERS IN VEHICLES



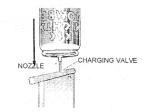



NOTES: IT IS NORMAL THAT YOU MAY EXPERIENCE MINOR LEAKING FROM CHARGING VALVE DURING CHARGING, DUE TO HIGH PRESSURE BUILT UP INSIDE MAGAZINE. IT IS RECOMMENDED TO KEEP GAS RELEASE VALVE SLIGHTLY OILED. IDEAL TEMPERATURE FOR SHOOTING IS ROOM TEMPERATURE.

CAUTIONS: YOU MAY EXPERIENCE A DELAY ACTION IF SURROUNDING TEMPERATURE DROPS BELOW 68 °F. REMEMBER, DO NOT EXPOSE MAGAZINE DIRECTLY UNDER THE SUN OR INCINERATE THE MAGAZINE, IT MAY CAUSE BURSTING. IT IS STRONGLY RECOMMENDED TO EMPTY GAS FROM MAGAZINE AFTER SHOOTING. BE SURE TO AVOID DIRECT GAS CONTACT WITH EYES OR SKIN WHEN GAS IS BEING RELEASED, IT MAY CAUSE FROSTBITE.

# OPERATION - II

### [2] LOADING BB'S

CHECK FOR 3MM CLEARANCE AFTER LOADING BB'S



- / 1- PLACE LOADER PIPE ONTO LOADER FUNNEL
- -2- PLACE LOADER FUNNEL ON TOP OF MAGAZINE LIP
- -3- POUR BB'S ONTO LOADER PIPE. (DO NOT EXCEED 26 BB'S PER-LOADING)
- 4- USE LOADER ROD TO PUSH BB'S DOWN INTO MAGAZINE
- -5- MAKE SURE TO HAVE A 3MM CLEARANCE BETWEEN BB'S AND TOP LIP OF MAGAZINE

NOTE: ALWAYS USE KSC ULTRA PREMIUM BB  $0.2\sim0.25$ G. USING ONLY KSC'S ULTRA PREMIUM BB'S CAN GIVE THE AIR SPORTS GUN ITS BEST PERFORMANCE. USING IMPROPER AND LOW GRADE BB'S MAY DAMAGE THE GUN.


CAUTION: ALWAYS KEEP "SAFETY" ON WHEN LOADING BB'S AND KEEP FINGERS AWAY FROM TRIGGER UNTIL YOU ARE READY TO SHOOT

#### LOADING MAGAZINE [3]



- PLACE MAGAZINE BACK INTO MAGAZINE WELL
- -2-PUSH UP MAGAZINE UNTIL IT CLICKS INTO LOCKED POSITION.
- PULL MAGAZINE DOWN TO ASSURE THAT IT HAS -3-BEEN LOCKED IN PLACE.

NOTE: OVERLOADING BB'S IN THE MAGAZINE MAY CAUSE JAMMING AND DAMAGE THE GUN WHEN LOADING. MAKE SURE TO CHECK FOR 3MM CLEAR-ANCE BETWEEN FOLLOWER AND MAGAZINE LIP..

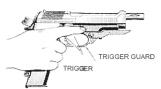

SAFETY CAUTION: ALWAYS KEEP FINGER OFF THE TRIGGER UNTIL READY TO FIRE. MAKE SURE THE MUZZLE IS POINTING IN A SAFE DIRECTION.

NOTE: FOR ABSOLUTE ASSURANCE AGAINST ACCIDENTAL DISCHARGE DUE TO INADVERTENT TRIGGER PULL, KEEP THE MANUAL SAFETY ENGAGED "ON" DURING LOADING OR UNLOADING.

#### COCKING [4]




PULL SLIDE TO THE REARMOST POSITION AND RELEASE THE SLIDE. THIS WILL AUTOMATICALLY LOAD THE FIRST BB'S INTO THE CHAMBER. HAMMER WILL BE IN COCKED POSITION. MAKE SURE NOT TO SKIP THIS PROCEDURE. SKIPPING THIS WILL CAUSE A MISFIRE ON THE FIRST PULL OF THE TRIGGER.

## **OPERATION**

#### SAFETY [5]

PUSH HAMMER DOWN UNTIL IT COCKS. ENGAGE SAFETY BY PUSHING SAFETY BUTTON DOWN-WARD. TO FIRE, RELEASE SAFETY BY PUSHING SAFETY BUTTON UPWARD.

\*IF HAMMER IS NOT FULLY COCKED, YOU WILL NOT BE ABLE TO ENGAGE SAFETY.

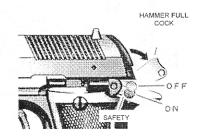

CAUTION! MAKE SURE TO HAVE SAFETY ON AT ALL TIMES WHEN NOT IN A SHOOTING POSITION.

### [6] SHOOTING



RELEASE SAFETY AND PULL ON TRIGGER. THE BLOW BACK ACTION WILL LOAD THE FOLLOWING BB'S AUTOMATICALLY AS THE SLIDE CYCLES BACK AND FORTH.

CAUTION: ALWAYS WEAR EYE PROTECTION WHEN SHOOT-ING. BB'S MAY BOUNCE OFF OF HARD SURFACES. MAKE SURE YOUR SHOOTING DIRECTION IS CLEAR OF OBSTACLES BEFORE YOU SHOOT.



GRASP PISTOL IN YOUR HAND FIRMLY. A TWO HAND HOLD WITH ONE HAND WRAPPED AROUND THE OTHER WILL HELP IN CONTROLLING THE PISTOL.


WARNING: NEVER SHOOT GUN IN A HORIZON-TAL OR UPSIDE DOWN POSITION.


### SINGLE ACTION MODE:

PUSH HAMMER DOWN UNTIL IT COCKS. THEN PULL TRIGGER TO FIRE.


### M93RII FIRING METH-ODS:

SINGLE SHOT MODE

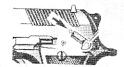

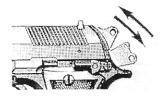

3 ROUND BURST MODE

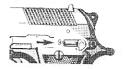

**FULL AUTO MODE** 



WARNING: IT IS RECOMMENDED TO WEAR EYE PROTECTION AT ALL TIMES, BB'S MAY BOUNCE OFF HARD SURFACES (RICOCHET). ALWAYS POINT GUN IN A SAFE DIRECTION.

## OPERATION - IV

## [7] OPEN SLIDE

AFTER THE LAST SHOT HAS BEEN FIRED AND EJECTED, THE SLIDE WILL REMAIN OPENED. REMOVE MAGAZINE AND RELOAD MAGAZINE WITH BB'S. LOAD MAGAZINE INTO PISTOL AND RELEASE THE SLIDE STOP. SLIDE WILL LOAD THE FIRST BB INTO CHAMBER.

NOTE: IT IS IMPORTANT TO TREAT YOUR GUN AS THOUGH IT IS LOADED, EVEN IF THE SLIDE REMAINS OPEN.

#### SLIDE STOP



### [8] AFTER SHOOTING

REMOVE MAGAZINE FIRST AND VISUALLY INSPECT THE OPEN CHAMBER TO CHECK WHETHER THE MAGAZINE WELL AND CHAMBER ARE CLEAR OF BB'S. WHEN BOTH MAGAZINE AND CHAMBER ARE CLEAR, *ENGAGE SAFETY SWITCH*.



## **HOP-UP MECHANISM**



## HOP UP SYSTEM

"HOP UP" SYSTEM IS ONE OF THE STANDARD FEATURES THAT \*\*W\*\*\* GAS BLOW BACK AIR SPORTS GUNS HAVE. THE DESIGN OF HOP UP SYSTEM IS TO PLACE A BALL BEARING BETWEEN CHAMBER WALLS. BY ADDING OR REDUCING PRESSURE ON THE BALL BEARING, IT CONTROLS BACKSPIN OF THE BB AND GIVES IT GREATER STABILITY WHEN IT TRAVELS IN THE AIR, AND ALSO MAKES IT FLY FURTHER WITH GREATER ACCURACY. THE HOP UP SYSTEM DOES NOT ADD POWER TO THE GUN, IT IMPROVES STABILITY AND ACCURACY. (IT IS RECOMMENDED BY \*\*IW\*\*\*\* THAT 0.2 ~ 0.25g BB'S, RATHER THAN 0.11g, ARE USED WITH THE HOP UP SYSTEM)




## HOP UP SYSTEM ADJUSTMENT


BEFORE MAKING ANY ADJUSTMENTS, MAKE SURE YOU HAVE SUFFICIENT GAS PRESSURE INSIDE MAGAZINE. CHAMBER SHOULD BE SLIGHTLY OILED. YOU WILL REQUIRE AT LEAST 65 FEET CLEARANCE WHEN MAKING THE ADJUSTMENT.

1 TEST FIRE GUN FOR 10 ~ 20 ROUNDS AND OBSERVE THE BB TRAVELING PATTERN.

> REMOVE MAGA-ZINE FIRST, THEN OPEN SLIDE, PLACE ADJUSTING TOOL INTO SLOTTED CHAMBER RING. TURN ADJUSTING RING 1/4 INCH AT A TIME.

> > TURN RING
> > COUNTER CLOCKWISE IF BB'S GO
> > DOWNWARD. TURN RING
> > CLOCKWISE IF BB'S GO
> > UPWARD.

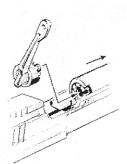

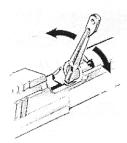

M93R II

Air Sports Gun

FOR AGE 18 AND OLDER

SEMIAUTOMAIC MILITARY AIR PISTOL


HOP UP EFFECTIVENESS	BB TRAJECTORY PATTERN		ADJUSTMENTS	
NOT	1	BB DROPS FREELY	(C)	TURN KNOB TO LEFT
SLIGHTLY	7	BB TRAVELS AT SHORT TRAJEC- TORY PATH	(C)	TURN KNOB SLIGHTLY TO LEFT
PROPERLY	``	BB TRAVELS DISTANCE AT FLAT TRAJECTORY PATH	(3)	NO ADJUST- MENT MADE
OVERLY		BB TRAVELS FLAT IN SHORT DIS- TANCE, THEN GOES UP IN CURVE AND DROPS FREELY	(Q)1	FURN KNOB SLIGHTLY TO RIGHT
EXTREMELY	~	BB TRAVELS AT UNSTABLE SPEED AND IRREGULAR PATH	(C)	TURN KNOB TO RIGHT




# HOP UP ONE POINT CLINIC


PHENOMENON	POSSIBLE CAUSE	SOLUTIONS
HOP UP OVER-	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
ADJUSTED	BB TOO LIGHT	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
HOP UP SCATTER	HOP EFFICIANCY TOO WEAK	TURN ADJUSTMENT RING TO LEFT
	BB	USE KWA ULTRA PREMIUM BB 0.2~0.25G BB
CAN NOT START HOP UP	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
HOP UP	OIL IN RUBBER CHAMBER	FRICTION
		USE COTTON SWAB TO WIPE OUT OIL
	BB DO NOT TURN TO RUBBER CHAMBER	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	UNDERSIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
	HOP NOT TAKING EFFECT	ADJUST RING TO LEFT
CAN NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PART
ADJUST HOP UP	FRICTION	
	FRICTION OR DAMAGE RELATED	EXCHANGE FOR NEW PART
	PARTS (ACCESSORIES)	DISTRIBUTION TAICE
	LOOSENESS OF INNER BARREL	INSERT TIGHTLY INTO RUBBER CHAMBER
	HOP OVER EFFECTIVE	ADJUST RING TO RIGHT
BBS DO NOT	RUBBER CHAMBER REDUCED BY	EXCHANGE FOR NEW PARTS
EXIT BARREL	FRICTION	
	STAINS INSIDE THE GUN BODY	CLEANING INNER BARREL WITH COTTON
		SWAB
BULLETS OVER	WRONG SIZE BB	USE KWA ULTRA PREMIUM BB 0.2 ~ 0.25G
LOADED	HOP OVERLY EFFECTIVE	ADJUST RING TO RIGHT
	STAIN IN RUBBER CHAMBER	CLEAN WITH COTTON SWAB
HOP UP EFFECT	LOW GAS PRESSURE/	RETURN MAGAZINE AND GAS TO ROOM
WEAKENED BY	MAGAZINE GETS TOO COLD	TEMPERATURE
ITSELF	USING TOO MUCH OIL DURING MAINTENANCE	SHOOT TO BLOW OFF OIL INSIDE RUBBER
	MAINTENANCE	CHAMBER AND PISTON, THEN CLEAN INNER
		BARREL


# DISASSEMBLY

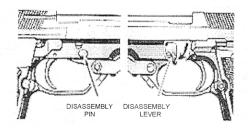

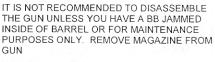

- -1- REMOVE MAGAZINE
- -2- CHECK AND CLEAR CHAMBER FROM ANY BB'S
- -3- PULL THE SLIDE TO THE REAR BY 1/4 INCH AND HOLD DISASSEMBLY PIN
- -4- PUSH DISASSEMBLY LEVER DOWNWARD
- -5- PULL SLIDE FORWARD AWAY FROM FRAME
- -6- REMOVE GUIDE ROD AND SPRING
- -7- REMOVE BARREL LOCKING BLOCK
- -8- SLIDE BARREL OUT FROM BOTTOM OF SLIDE

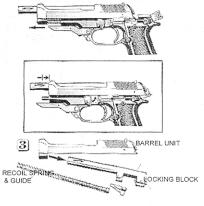

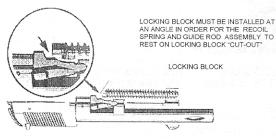


#### REASSEMBLY:

- PLACE BARREL INTO SLIDE FROM BOTTOM
- PLACE LOCKING BLOCK INTO POSITION
- INSTALL RECOIL SPRING AND GUIDE ROD INTO POSITION
- PUSH THE SLIDE ONTO THE FRAME RAILS AND HOLD BACK
- SWING DISASSEMBLY LEVER UPWARD
- RELEASE SLIDE

NOTE: AFTER ASSEMBLY IS COMPLETED, CYCLE THE SLIDE BACK AND FORTH TO INSURE PROPER ASSEMBLY.

# PARTS LIST

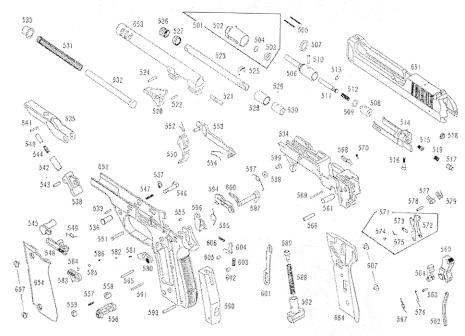

M93R II PARTS

501 EXTERNAL CYCLINDER SET EXTERNAL CYCLINDER 502 503. O-RING RETAINER 504 O-RING CYLINDER SPRING 506 EXTERNAL PISTON

507. PISTON SEAL EXTERNAL PISTON END 508 509

EXTERNAL PISTON O-RING 510. PISTON END PIN 511 INNER PISTON

512 INNER PISTON SPRING INNER PISTON O-RING 513. 514. CHAMBER BASE

515. PISTON END SCREW CHAMBER BASE SCREW 516 517. FIRING PIN

518. FIRING PIN GUIDE 519 FIRING PIN SPRING

BARREL LOCK-UP BLOCK 521. BARREL LOCK-UP BLOCK PLUNGER

522 BLOCK PLUNGER PIN 523 INNER BARREL INNER BARREL PIN

524. HOP-UP RETAINER 525.

526 INNER BARREL SPRING 527. INNER BARREL SPRING

GUIDE HOP-UP ADJUSTMENT 528 CYLINDER

529 HOP-UP ADJUSTMENT BALL 530. CHAMBER SEAL 531

RECOIL SPRING 532. RECOIL SPRING GUIDE 533. RECOIL SPRING END CAP 534. INNER FRAME BASE

535 FORWARD HANDLE 536 HANDLE PIN 537. HANDLE PIN E-CLIP

HANDLE BASE 538. 539 TRIGGER GUARD PIN

540. HANDLE SPRING COVER (SMALL)

541. SPRING COVER PIN

HANDLE SPRING COVER 542 (LARGE)

543 HANDLE MOUNT PIN 544 HANDLE SPRING

545 DISASSEMBLY LEVER 546 DISASSEMBLY PIN

547 DISASSEMBLY SPRING 548 SLIDE STOP

549 SLIDE STOP SPRING 550 TRIGGER

551 TRIGGER PIN 552 TRIGGER SPRING

553 TRIGGER BAR TRIGGER BAR SPRING

555. DISCONNECTOR PIN 556

MAGAZINE CATCH 557 MAGAZINE CATCH SPRING

CATCH SPRING GUIDE (RIGHT) 558. 559. CATCH SPRING GUIDE (LEFT) 560

HAMMER 561. HAMMER PIN SLEEVE

562 HAMMER STRUT HAMMER STRUT PIN

563 564 SEAR SEAR PIN

565. 566 SEAR BASE PIN 567 SEAR SPRING 568

INNER BASE BLOCK 569 SEAR BASE ASSEMBLY PIN INNER BLOCK SPRING 571

SEAR BASE ASSEMBLY SEAR HOUSING SEAR EXTENSION 573.

574 SEAR BUSHING 575 SEAR EXTENSION SPRING 576 SEAR BASE SPRING 577 IMPACT BLOCK

578 IMPACT BLOCK PIN 579 IMPACT BLOCK SPRING 580 SAFETY LEVER

SAFETY LEVER SPRING SAFETY LEVER BALL BEARING 581 582. SELECTOR MODE LEVER 583

SELECTOR LEVER SET SCREW 584 585. SELECTOR LEVER BALL BEARING

586. SELECTOR LEVER

SPRING SELECTOR LEVER BAR HAMMBER STRUT 588.

SPRING 589 STRUT GUIDE 590. MAIN SPRING HOUSING 591 HOUSING PIN TOP

LANYARD LOOP BASE 593 HOUSING PIN (BOTTOM) 594. DISCONNECTOR

595 DISCONNECTOR SPRING DISCONNECTOR LOCK-596 ING BLOCK 597

SELECTOR BAR SPRING SELECTOR BAR SPRING

599 SELECTOR BAR SCREW

BUSHING

(S) 74

BB LOADER SET

691. LOADER ROD 692 LOADER PIPE 693 LOADER FUNNEL

SELECTOR BAR 600

ADAPTER 601 SELECTOR MODE TRANSFER BAR TRANSFER BAR

BUSHING TRANSFER BAR 603

SPRING TRANSFER BAR 604

LOCKING HOOK 605 LOCKING HOOK

BUSHING LOCKING HOOK 606

SPRING 607 GRIP SCREWS X 4

651 SLIDE 654. GRIPS LEFT & RIGHT

MAGAZINE

MAGAZINE HOUSING MAGAZINE CASE PIN MAGAZINE LIP 703

MAGAZINE NOZZLE SEAL 705

MAGAZINE FOLLOWER 706. MAGAZINE FOLLOWER SPRING 707 INNER MAGAZINE

708 MAGAZINE BASE 709. MAGAZINE BASE PINS

X 2 710. MAGAZINE RELEASE VALVE

CHARGING VALVE MAGAZINE BASE SEAL 712

713 MAGAZINE BASE PLATE

MAGAZINE BASE RETAINING

MAGAZINE GRIP EXTENSION