
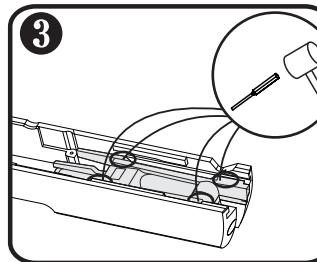
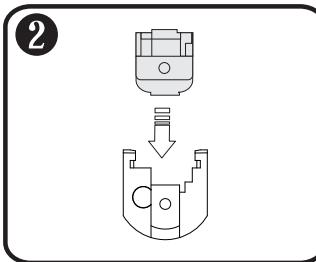


STEP 1 滑套安裝

INSTALL THE SLIDE



Use the punch and hummer to make sure the piston to the right position.

※ 裝入時需以工具輔助，確定已至定位。

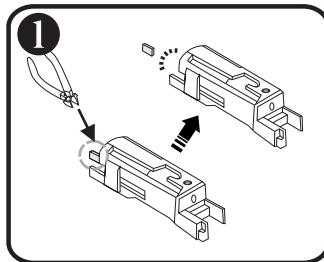

STEP 2 複進簧安裝

INSTALL THE RECOIL SPRING

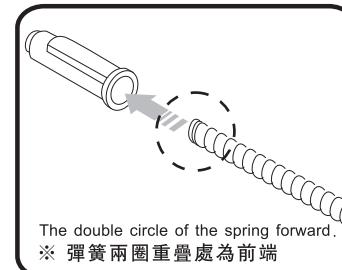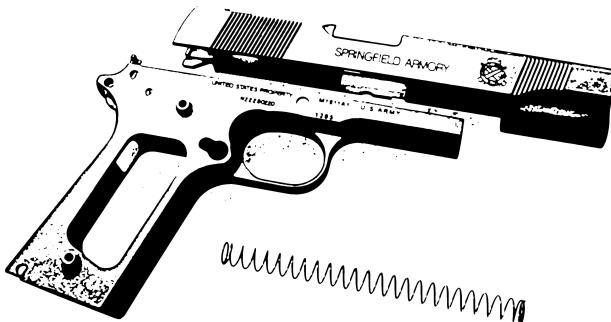

The double circle of the spring forward.
※ 彈簧兩圈重疊處為前端

M.E.U.


鋁合金金屬槍身滑套組

ALUMINUM SLIDE & FRAME SET 安裝技巧


INSTALLING TIPS

STEP 3 下槍身安裝

INSTALL THE FRAME

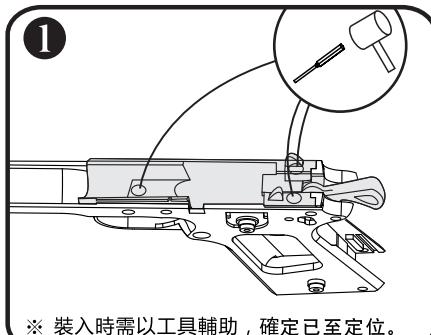

※ 裝入時需以工具輔助，確定已至定位。

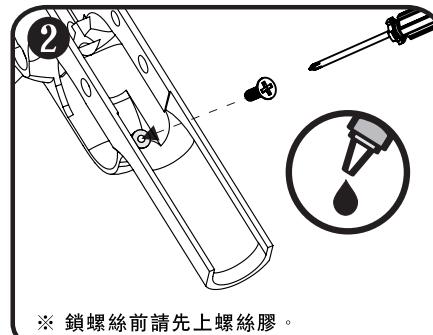

※ 鎖螺絲前請先上螺絲膠。

Use the punch and hummer to make sure the piston to the right position.

User the cscrew glue on the screw and then tighten it.