

# BATTERY POWERED AIR GUN

*Series*

SD2/5

SD3/6

A2/4

A3/5

## INSTRUCTIONS

USER RESTRICTED TO 18 YEAR OF AGE OR OLDER

ADJUSTABLE  
HOP-UP  
SYSTEM



## ! WARNING 警告



1. 槍口不可指向人或動物  
1. NEVER POINT THE MUZZLE TOWARDS A PERSON OR ANIMAL  
You may be liable if you injure a person or animal.  
This Air gun is intended for use in designated area only.



3. 請勿將槍置於未滿使用年齡之孩童容易取得之處  
3. STORE THE AIR GUN IN PLACES OUT OF REACH OF MINORS.

## 〔使用說明書〕

使用前請詳讀說明書，務必嚴格遵守注意事項及使用方法。



2. 絕對不要由槍口探視，而傷及眼睛  
2. NEVER LOOK INTO THE BARREL REGARDLESS OF WHETHER YOU THINK IT IS LOADED OR NOT.  
If a BB Pellet hits your eye, you may be severely injured.



4. 請勿任意將槍分解、加工、改造  
4. DO NOT DISASSEMBLE OR MODIFY THE AIR GUN  
This Air Gun is manufactured under consideration of appropriate performance and operability.  
Disassembling or modifying the Air gun may be dangerous and may adversely affect its performance. The manufacturer's warranty will be void.

## (INSTRUCTION MANUAL)

Read this manual before operation. Operate the Air Gun with full recognition of warnings and cautions.



5. 射擊時請戴上護目鏡以確保安全  
5. ALWAYS WEAR PROTECTIVE EYE GEAR.  
When using the Air gun, you and all participants must wear goggles. Always be aware of potential ricochets.



6. 帶槍外出時，請用槍套包裝好  
6. ALWAYS PUT THE AIR GUN IN A CASE OR BAG WHEN YOU CARRY IT, ESPECIALLY IN PUBLIC AREAS.



7. 槍在不使用時，請拆下電池並關保險  
7. PUSHES THE FIRING SELECTOR TO THE LOWEST POSITION (Safety On) AND PUT OFF THE BATTERY WHEN NOT USE.

*Perpare to action*



這個產品是針對18歲以上的消費者所開發的休閒運動的電動槍，請務必遵守遊戲規則。帶槍外出時以槍套包裝好，雖然自己知道這只是玩具槍，但不知道的人會以為這是真槍。絕對不可拿槍指向人。

Since this Air gun maybe mistakenly identified as the real firearm, you should never point the Air gun towards a person in public, to avoid the serious consequences from armed law enforcement officers.  
You must be 18 years or older to purchase and use this Air gun.  
Carefully read and understand these instructions before use.

 


**BATTERY POWERED AIR GUNS**






## SD2/5

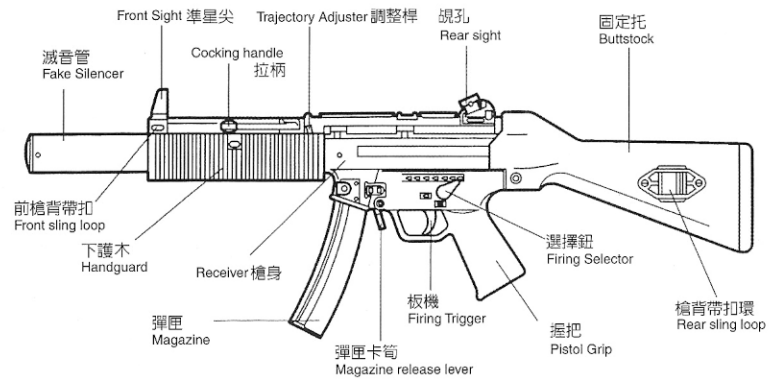


## A2/4

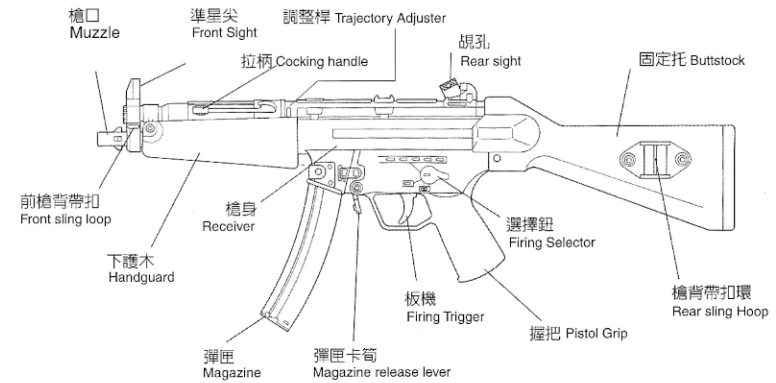 

## SD3/6


 
## A3/5

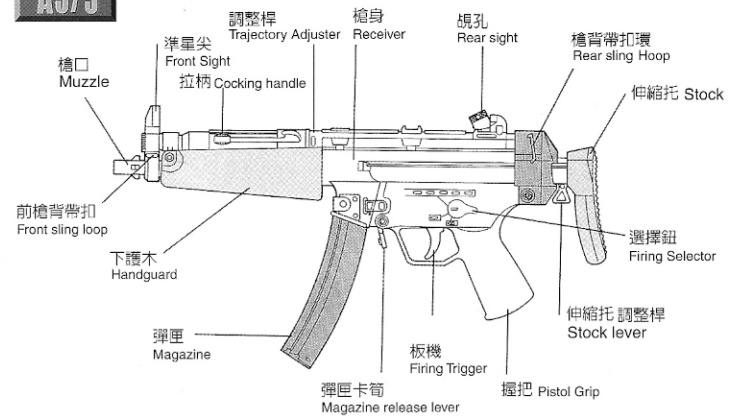


(A3/5,SD3/6用) 小電池



(A2/4,SD2/5用) 大電池



 Small/Regular Capacity  
 battery (for A3/5,SD3/6)  
 8.4V-600-1100MAh  
 9.6V-600-1100MAh 電池



  Large/High Capacity  
 battery (for A2/4,SD2/5)  
 8.4V-1300-2400MAh  
 9.6V-1300-2400MAh 電池

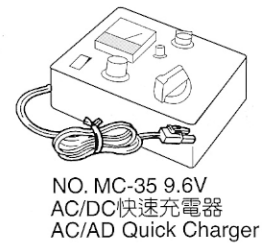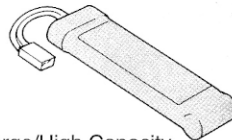


# BATTERY POWERED AIR GUNS

Battery and charger sold separately (電池、充電器另購)




## ■ 裝入電池方法 Install Battery and Replace Fuse

 **A2/4 SD2/5**

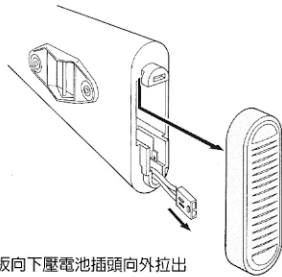


將托底板向下壓電池插頭向外拉出  
Push down and take off the butt-plate,  
then take the wire, battery connector  
and fuse container out of the buttstock.

### 更換保險絲 FUSE REPLACEMENT

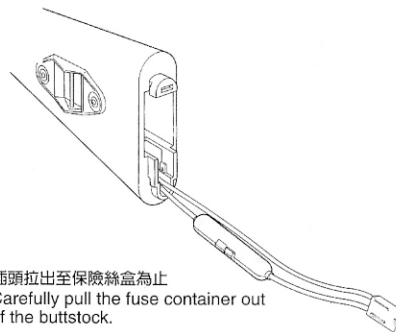 


 - 1 插頭拉出至保險絲盒為止  
Carefully pull the fuse container out of the buttstock.

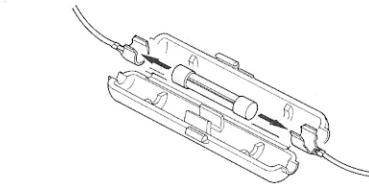


- 2 打開保險絲盒將保險絲裝上  
Open the fuse container and replace the fuse.

### 更換電池 BATTERY INSTALLATION

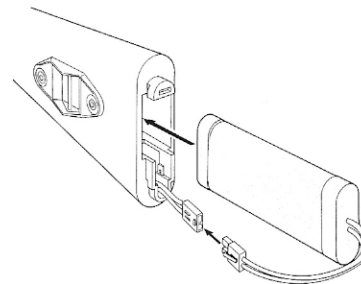 

 - 1 將電池插頭接合後再放入電池  
Connect the battery to the battery \ connector carefully.

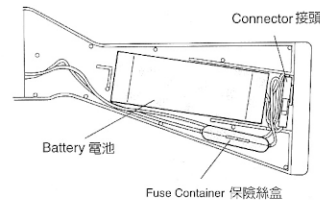


- 2 電池與保險絲組合完成後位置  
Carefully put the battery and wire back into the buttstock.




**BATTERY POWERED AIR GUNS**

 **SD3/6**


### 更換保險絲與電池 BATTERY AND FUSE REPLACEMENT

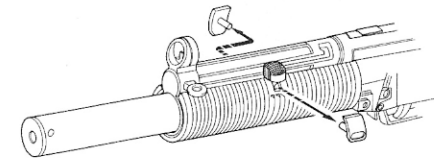

 - 1 將固定銷拆下  
Pull out the locking pin of the handguard.

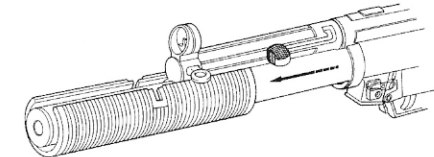

 
- 2 將下護木往前拉出  
Slide the handguard forward.

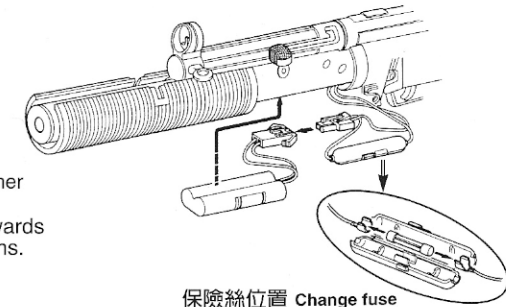

- 3 將電池與保險絲接合後，再裝入護木裡  
(Left) Connect the battery to the battery connector.  
(Right) Open the fuse container and replace the fuse.  
Slide the handguard backwards and re-insert the locking pins.

保險絲位置 Change fuse

 
- 4 組裝後完成位置  
THE POSITION OF THE BATTERY AND FUSE

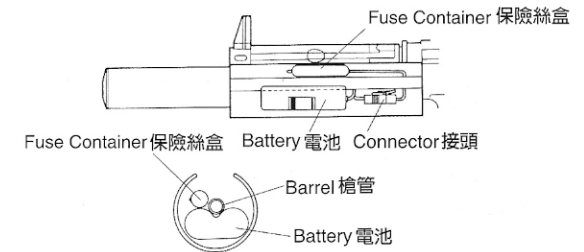






A3/5

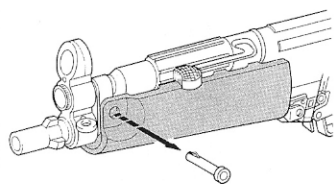 


 將護木插銷拉出  
Pull out the pin of the handguard.

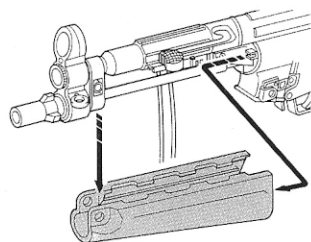


護木前端先下拉再整個往前拉出  
Gently pull the front end of handguard down. Slide the handguard forward and take it out.

#### 更換保險絲 FUSE REPLACEMENT

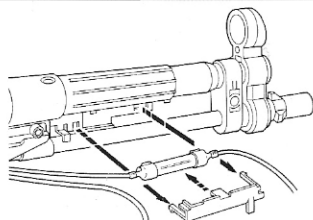 

 - 1 保險絲固定座折裝方式  
Carefully take the fuse out from the fuse socket located at the bottom of the cocking tube.




- 2 更換保險絲  
Replace the fuse.




BATTERY POWERED AIR GUNS


#### 更換電池 BATTERY INSTALLATION

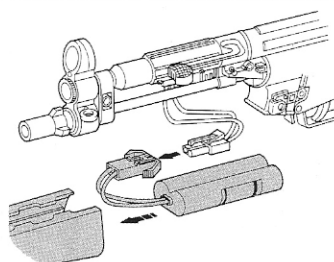 

 
- 1 將電池接頭接合後，放入下護木裡。  
Connect the battery to the battery connector.

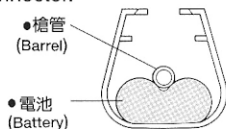

 - 2 組裝後完成位置  
THE POSITION OF THE BATTERY AND FUSE

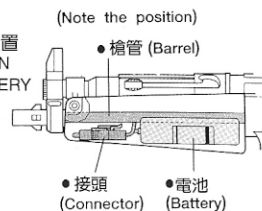


#### 可動作部份 Movable Parts

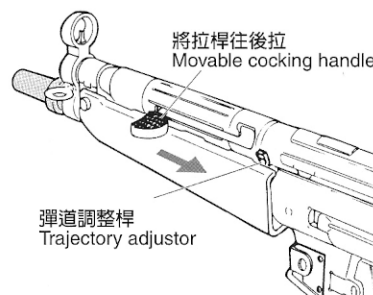 

將拉桿往後拉  
Movable cocking handle

 
彈道調整桿  
Trajectory adjuster

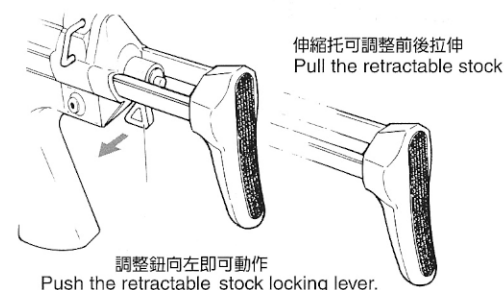

伸縮托可調整前後拉伸  
Pull the retractable stock

調整鈕向左即可動作  
Push the retractable stock locking lever.


#### 準心調整 Setting the Sight

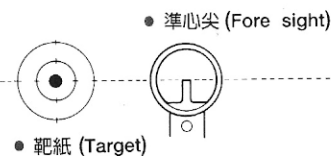 


● 準心尖 (Fore sight)

● 靶紙 (Target)

 ● 覷孔 (Rear sight)

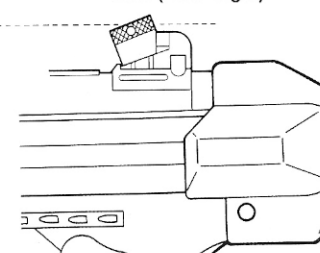

 
1. 先把螺絲鬆開 Loosen the screw.

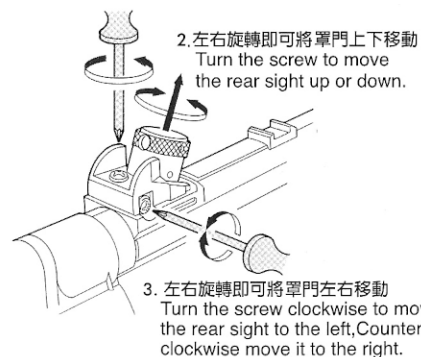

2. 左右旋轉即可將準門上下移動  
Turn the screw to move the rear sight up or down.

3. 左右旋轉即可將準門左右移動  
Turn the screw clockwise to move the rear sight to the left, Counter-clockwise move it to the right.


#### 馬達間隙調整 Fine Adjustment of Gear Engagement

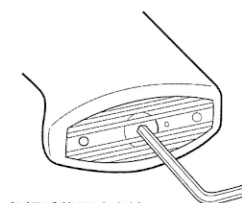 



以六角板手將馬達齒輪間隙調整到最佳位置  
Use Allen wrench to adjust the motor and gear to the best engagement.





## 單連發選擇方式 Selector and Safety Lever

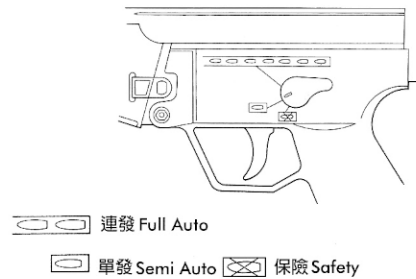 

## 彈夾上下方式 Load and Unload the Magazine

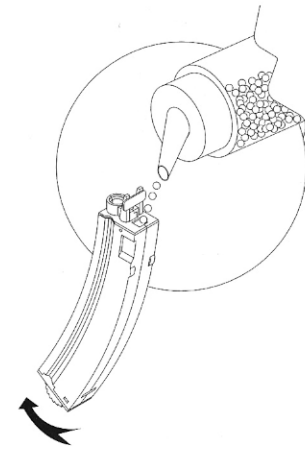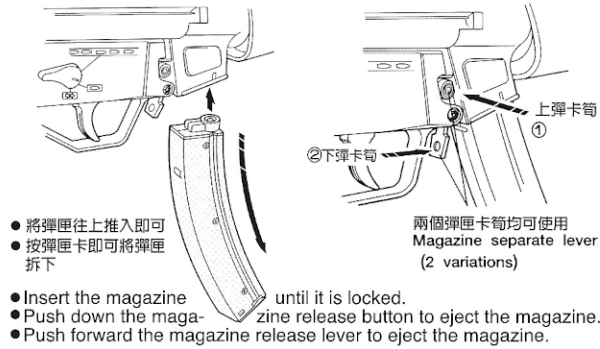  

## Hop-up 調整 Trajectory Adjustment(Hop Up)

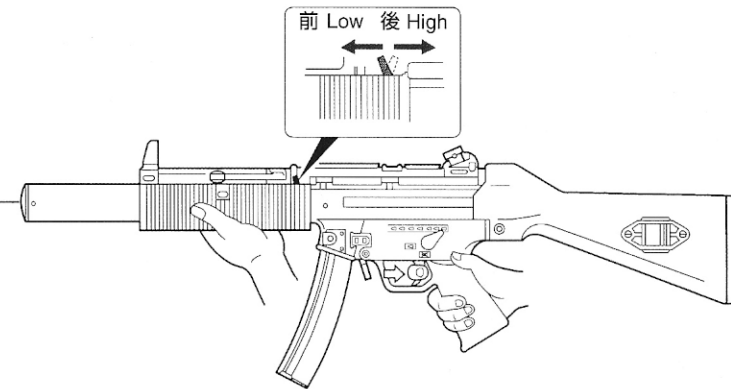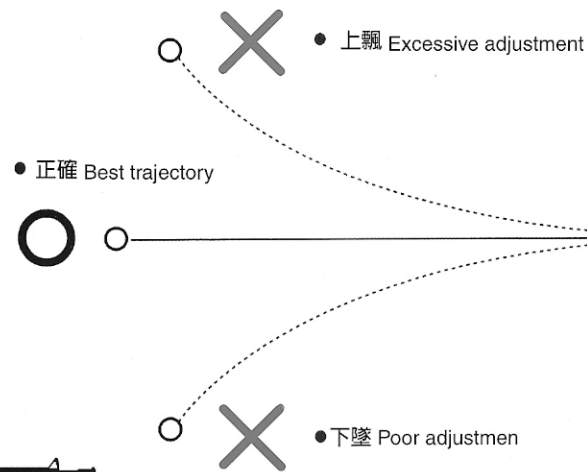  

### 調整法

子彈如果向上飄，調整桿請往後拉，向下墜請往前推。  
子彈向前呈一直線才是正確的方法。  
有了HOP-UP後，讓您的射擊準確度大大的提升。

### Adjustment

 
Push the Trajectory Adjustor to low position. Switch the Firing Selector on full Auto position and fire. Slowly adjust the Trajectory Adjustor for the best shooting trajectory



BATTERY POWERED AIR GUNS





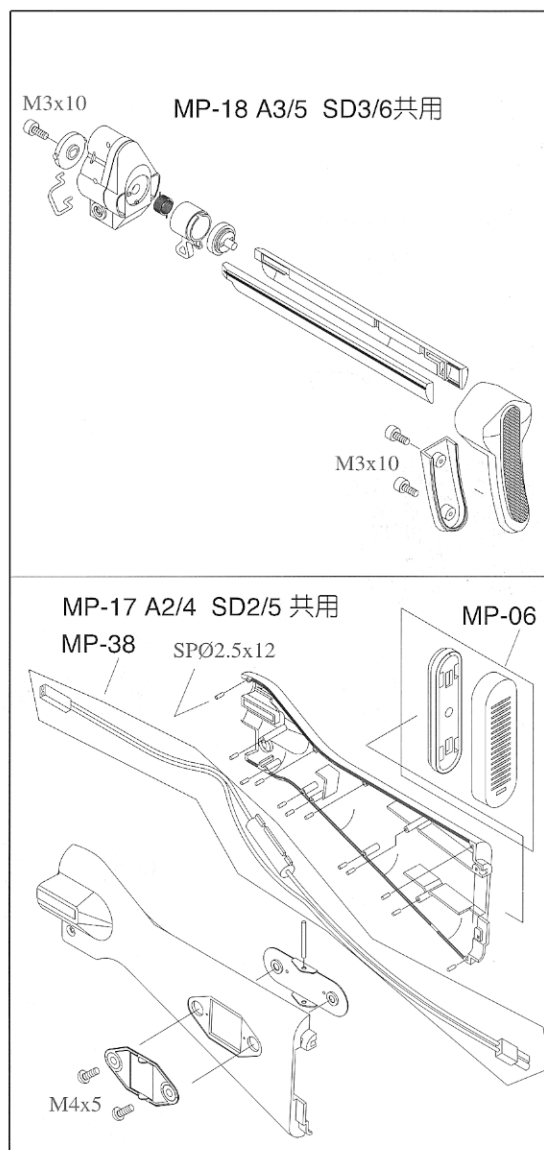

NO	品 名	DESCRIPTION	NO	品 名	DESCRIPTION
MP-01	槍機箱結合銷	Locking Pin	MP-32	槍管固定環套	Inner Barrel Bracket
MP-02	現今型射擊選擇鈕	Fire Selector Lever (Current)	MP-33	槍機複進簧導桿	Cocking Handle Spring Guard
MP-03	彈匣卡筍組	Magazine Release Button Set	MP-34	卡筍套筒	Magazine Release Lever Sleeve
MP-06	固定托底板	Butt Plate	MP-35	馬達墊片	Motor Spacer
MP-07	滅音管組	SD Fake Silencer	MP-36	戰術槍背帶扣片	Sling Bracket
MP-08	SD拉柄組	SD Cocking Handle/Tube Set	MP-37	A3/5 SD3/6電線組	Handguard Battery Wire
MP-09	SD下護木組	SD Handguard	MP-38	A2/4 SD2/5電線組	Buttstock Battery Wire
MP-10	SD護木固定架	SD Hanguard Bracket	MP-39	A槍管	A Barrel
MP-11	SD護木插銷橡皮墊圈	SD Locking Pin O-Ring	MP-40	SD槍管	SD Barrel
MP-12	SD護木固定銷	SD Handguard Locking Pin	MP-41	鋁合金槍身	Metel Receiver
MP-15	三角護木A4,A5	A Handguard	MP-42	現今型板機握把	Lower Housing(Current)
MP-16	金屬防火帽(3lug)	3 Lug Muzzle	MP-43	馬達散熱底板	Heat Sink Motor Plate
MP-17	固定槍托	Fixed Buttstock	MP-44	槍機拉柄複進簧	Cocking Handle Spring
MP-18	伸縮托	Retractable Stock	MP-45	早期型射擊選擇鈕	Fire Selector Lever(Early)
MP-19	HK護木插銷	Locking Pin	MP-46	早期型板機握把	Lower Housing (Early)
MP-20	SD準星座(金屬)	SD Front Sight Assernbly	MP-47	射擊選擇片(A)	Selector Plate
MP-21	伸縮托檔片	Stock Stop Set	MC-04	射擊選擇片	Selector Plate
MP-22	HOP-UP組	Trajectory Adjustment Group	MC-16	含彈橡皮	Hop Bucking
MP-27	拉柄組	Front End/Cocking Tube Sets	MC-17	HOP緩衝膠圈	Hop Spacer
MP-30	200發高容量彈匣	200 Rounds Hi-Cap Magazine	MC-61	馬達	Motor
MP-31	覘孔組	Rear Sight Sets	MC-62	GEAR-BOX完成品	Complete gear box sets