


Barrel Assembly


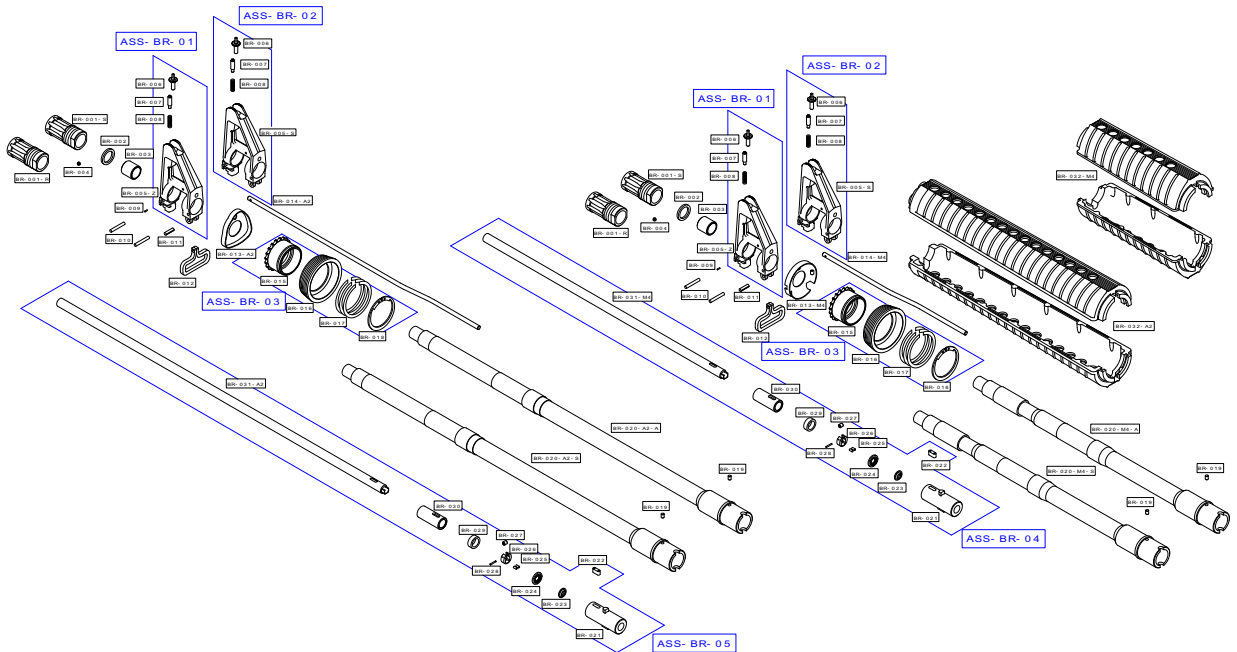


ASS-BR-01 Front sight post assembly (Zine die-casting)
 ASS-BR-02 Front sight post assembly (Steel lost wax)
 ASS-BR-03 Barrel nut assembly
 ASS-BR-04 Inner barrel short (M4) assembly
 ASS-BR-05 Inner barrel long (A2/A3) assembly

BR-001-S Flash hider
 BR-001-R Flash hider / Export version
 BR-002 Flash hider ring
 BR-003 Flash hider collar
 BR-004 Set screw for flash hider (Hexagon socket set screw)
 BR-005-Z Front sight post (Zine die-casting)
 BR-005-S Front sight post (Steel lost wax)
 BR-006 Front sight
 BR-007 Front sight stopper pin
 BR-008 Front sight stopper pin spring
 BR-009 Gas pipe retaining pin
 BR-010 Front sight post knock pin (set of 2)
 BR-011 Front sight post swivel ring pin
 BR-012 Front sight post swivel ring
 BR-013-M4 Hand guard cap (M4 model)
 BR-013-A2 Hand guard cap (A2/A3 model)
 BR-014-M4 Gas pipe short (M4 model)
 BR-014-A2 Gas pipe long (A2/A3 model)
 BR-015 Barrel nut
 BR-016 Hand guard slip ring

BR-017 Barrel nut weld spring (4 layers)
 BR-018 E-ring for slip ring spring
 BR-019 Outer barrel knock pin
 BR-020-M4-A Outer barrel (M4 Model), Aluminum
 BR-020-M4-S Outer barrel (M4 Model), Steel
 BR-020-A2-A Outer barrel (A2/A3 Model), Aluminum
 BR-020-A2-S Outer barrel (A2/A3 Model), Steel
 BR-021 Hop-chamber base
 BR-022 Barrel key
 BR-023 Chamber packing
 BR-024 Chamber packing base
 BR-025 Adjuster cushion (set of 2)
 BR-026 Hop adjuster
 BR-027 Roller packing
 BR-028 Fit-pin for roller packing
 BR-029 Air seal packing
 BR-030 Chamber sleeve
 BR-031-M4 Inner barrel short (M4 model)
 BR-031-A2 Inner barrel long (A2/A3 model)
 BR-032-M4 Hand guard (M4 model) set of 2
 BR-032-A2 Hand guard (A2/A3 model) set of 2

Upper Receiver (removable carrying handle)

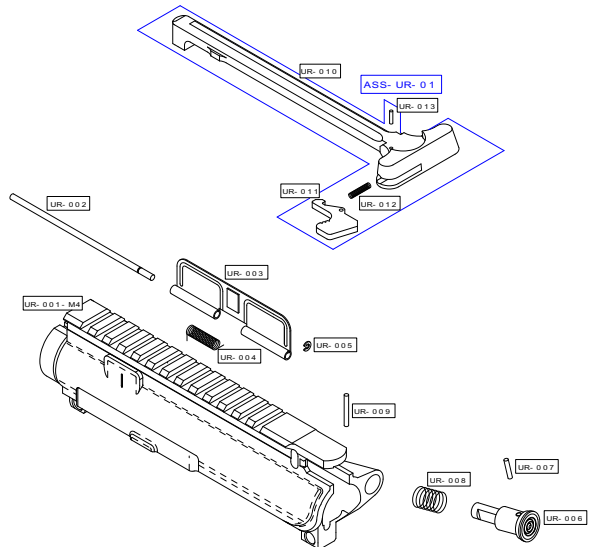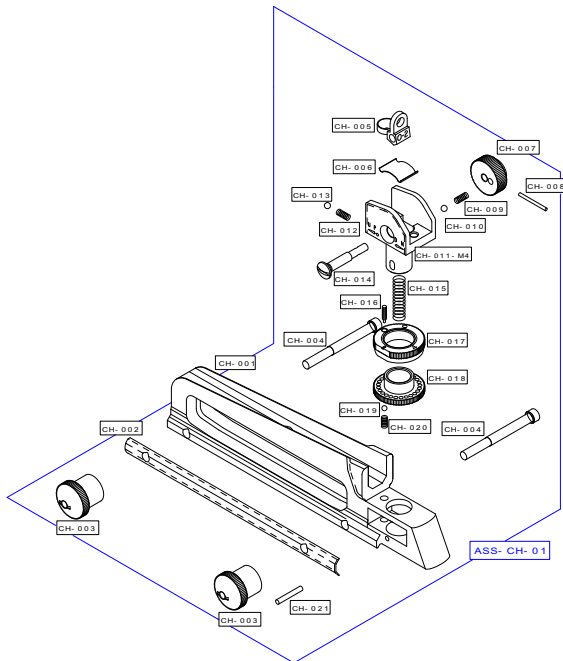


ASS-UR-01 Charging handle assembly
ASS-CH-01 Carrying handle assembly

UR-001-M4 Upper receiver (M4 model)
UR-002 Dust cover shaft
UR-003 Dust cover
UR-004 Dust cover spring
UR-005 E-ring for dust cover shaft
UR-006 Forward assist knob
UR-007 Forward assist knob dummy pin
UR-008 Forward assist knob spring
UR-009 Set-pin for forward assist knob

UR-010 Charging handle
UR-011 Charging handle stop latch
UR-012 Charging handle stop latch spring
UR-013 Set-pin for charging handle stop latch

CH-001 Carrying handle
CH-002 Carrying handle mount plate
CH-003 Carrying handle mount lock nut (set of 2)
CH-004 Carrying handle mount screw (set of 2)
CH-005 Rear sight
CH-006 Rear sight spring (leaf spring)
CH-007 Windage knob
CH-008 Set-pin for windage knob
CH-009 Windage knob click spring
CH-010 Windage knob click ball
CH-011-M4 Rear sight base (A2 model)
CH-012 Rear sight base spring
CH-013 Rear sight base click ball
CH-014 Windage screw
CH-015 Elevation spring
CH-016 Elevation point screw
CH-017 Elevation nut (lower)
CH-018 Elevation nut (upper)
CH-019 Elevation click ball
CH-020 Elevation click ball spring
CH-021 Set-pin for rear sight base


Upper Receiver (Integrated carrying handle)

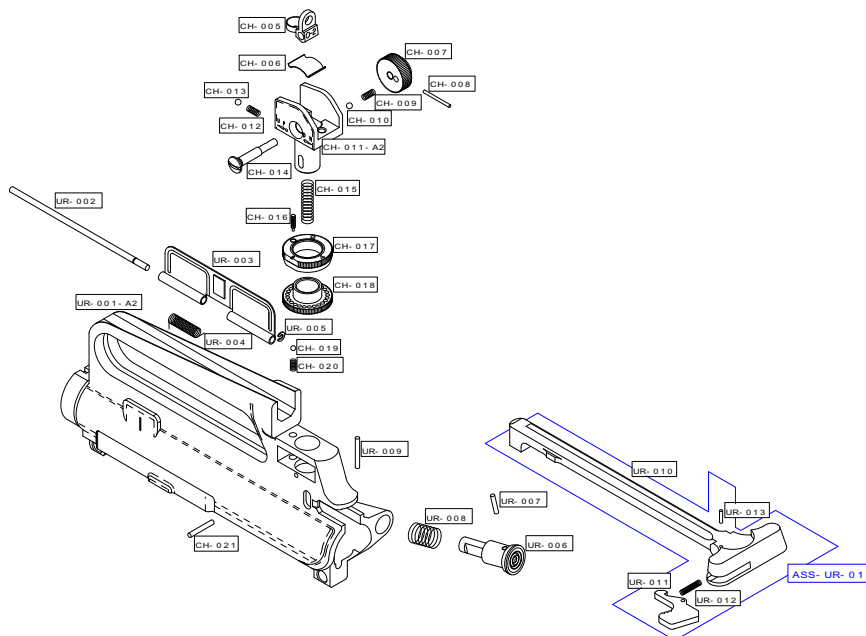

ASS-UR-01 Charging handle assembly

UR-001-A2	Upper receiver (A2 model)	CH-005	Rear sight
UR-002	Dust cover shaft	CH-006	Rear sight spring (leaf spring)
UR-003	Dust cover	CH-007	Windage knob
UR-004	Dust cover spring	CH-008	Set-pin for windage knob
UR-005	E-ring for dust cover shaft	CH-009	Windage knob click spring
UR-006	Forward assist knob	CH-010	Windage knob click ball
UR-007	Forward assist knob dummy pin	CH-011-A2	Rear sight base (A2 model)
UR-008	Forward assist knob spring	CH-012	Rear sight base spring
UR-009	Set-pin for forward assist knob	CH-013	Rear sight base click ball
UR-010	Charging handle	CH-014	Windage screw
UR-011	Charging handle stop latch	CH-015	Elevation spring
UR-012	Charging handle stop latch spring	CH-016	Elevation point screw
UR-013	Set-pin for charging handle stop latch	CH-017	Elevation nut (lower)
		CH-018	Elevation nut (upper)
		CH-019	Elevation click ball
		CH-020	Elevation click ball spring
		CH-021	Set-pin for rear sight base


Cylinder Unit

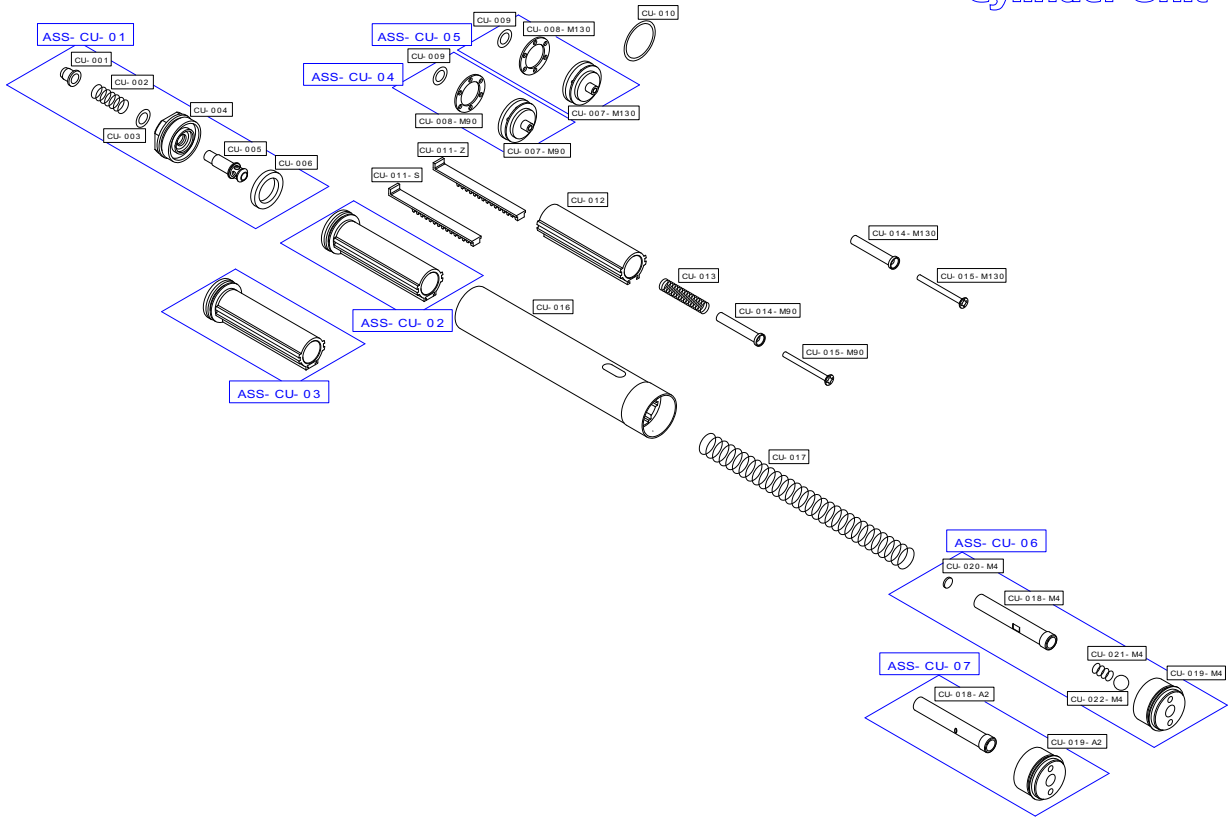

ASS-CU-01	Cylinder head assembly
ASS-CU-02	Piston assembly (with zinc die-casting rack gear)
ASS-CU-03	Piston assembly (with steel milling rack gear)
ASS-CU-04	Piston head assembly (M90-M110 springs only)
ASS-CU-05	Piston head assembly (M130 springs only)
ASS-CU-06	Spring guide assembly (M4 model)
ASS-CU-07	Spring guide assembly (A2/A3 model)

CU-001	Nozzle A (chamber side)	CU-009	Small O-ring for piston head
CU-002	Nozzle spring	CU-010	Main O-ring for piston head
CU-003	Small O-ring for cylinder head	CU-011-Z	Piston rack gear (zinc die casting)
CU-004	Cylinder head	CU-011-S	Piston rack gear (Steel milling)
CU-005	Nozzle B (cylinder side)	CU-012	Piston
CU-006	Cylinder head bumper	CU-013	Piston head guide spring
CU-007-M90	Piston head (M90/M110 springs only)	CU-014-M90	Piston head guide (M90/M110 springs only)
CU-007-M130	Piston head (M130 spring only)	CU-014-M130	Piston head guide (M130 spring only)
CU-008-M90	Piston head bumper (M90/M110 springs only)	CU-015-M90	Piston head guide screw (M90/M110 springs only)
CU-008-M130	Piston head bumper (M130 springs only)	CU-015-M130	Piston head guide screw (M130 springs only)
		CU-016	Cylinder case
		CU-017	Main spring
		CU-018-M4	Spring guide shaft (M4 model)
		CU-018-A2	Spring guide shaft (A2/A3 model)
		CU-019-M4	Spring guide base (M4 model)
		CU-019-A2	Spring guide base (A2/A3 model)
		CU-020-M4	Spring guide click ball washer
		CU-021-M4	Spring guide click ball spring
		CU-022-M4	Spring guide click ball

Lower Receiver

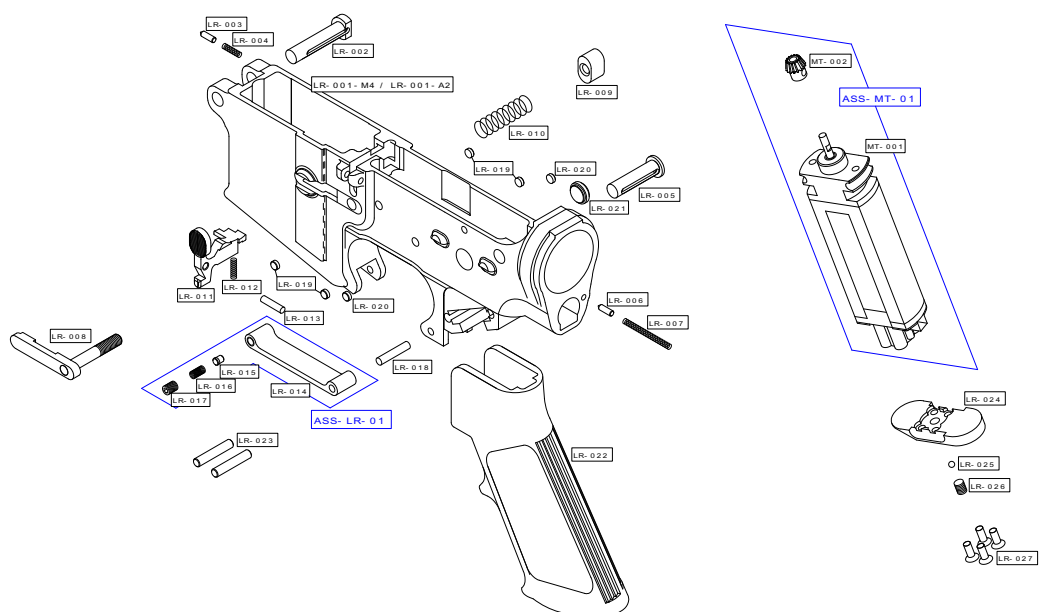

ASS-MT-01
ASS-LR-01


Motor assembly
Trigger guard assembly

LR-001-M4	Lower receiver M4 model	LR-014	Trigger guard
LR-001-A2	Lower receiver A2 model	LR-015	Trigger guard stopper pin
LR-001-A3	Lower receiver A3 model	LR-016	Trigger guard stopper pin spring
LR-002	Pivot pin	LR-017	Set screw for trigger guard
LR-003	Pivot pin stopper pin	LR-018	Set-pin for trigger guard
LR-004	Pivot pin stopper pin spring	LR-019	Trigger / Hammer dummy pin (set of 4)
LR-005	Take down pin	LR-020	Full-Auto sear dummy pin (set of 2)
LR-006	Take down pin stopper pin	LR-021	Selector cap
LR-007	Take down pin stopper pin spring	LR-022	Grip
LR-008	Magazine catch	LR-023	Motor fiking pin(set of 2)
LR-009	Magazine catch button	LR-024	Grip end
LR-010	Magazine catch spring	LR-025	Motor adjust ball
LR-011	Bolt stop	LR-026	Motor adjust screw
LR-012	Bolt stop spring	LR-027	Grip end screw (set of 4)
LR-013	Set-pin for bolt stop		
		MT-001	SYSTEMA 480 type motor
		MT-002	Motor pinion gear for M16

SYSTEMA


PROFESSIONAL TRAINING WEAPON SYSTEM

Gear Box

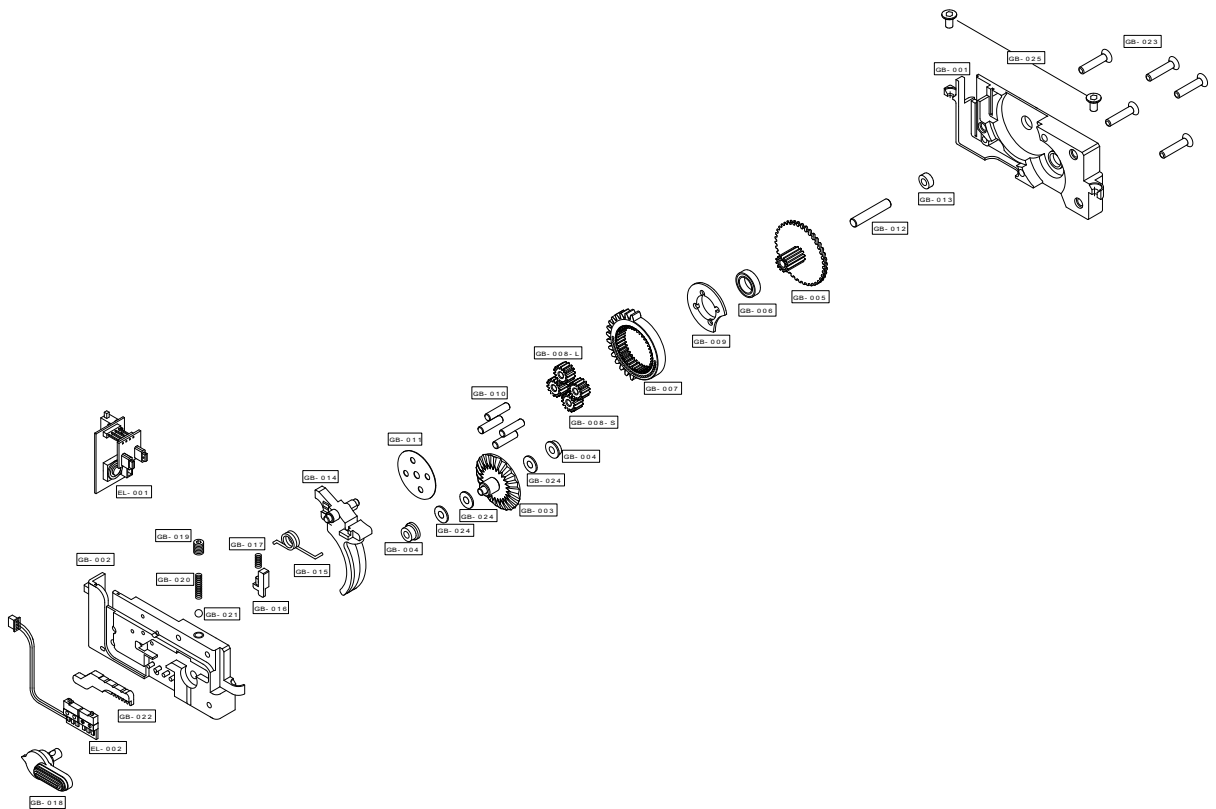

GB-001	Gear case right side	GB-014	Trigger
GB-002	Gear case left side	GB-015	Trigger spring
GB-003	Bevel / Helical gear	GB-016	Trigger lock
GB-004	Bearing for bevel gear (set of 2)	GB-017	Trigger lock spring
GB-005	Helical / Sun gear	GB-018	Selector lever
GB-006	Sun gear bearing	GB-019	Selector click ball screw
GB-007	Internal sector gear	GB-020	Selector click ball spring
GB-008-S	Planetary gear (Sintering) set of 3	GB-021	Selector click ball
GB-008-L	Planetary gear (Steel lathe)	GB-022	Selector rack gear
GB-009	Bearing plate	GB-023	Fixing screw for gear case (set of 5)
GB-010	Planetary gear shaft (set of 4)	GB-024	Shims for bevel gear (t=0.3x2, t*0.13x1) set of 3
GB-011	Shim for internal sector gear	GB-025	Set screw for gear box
GB-012	Sun gear shaft		
GB-013	Sun gear shaft bearing (Sintering)	EL-001	SYSTEMA / Electrical Control Unit
		EL-002	Selector switch board

Collapsible Stock

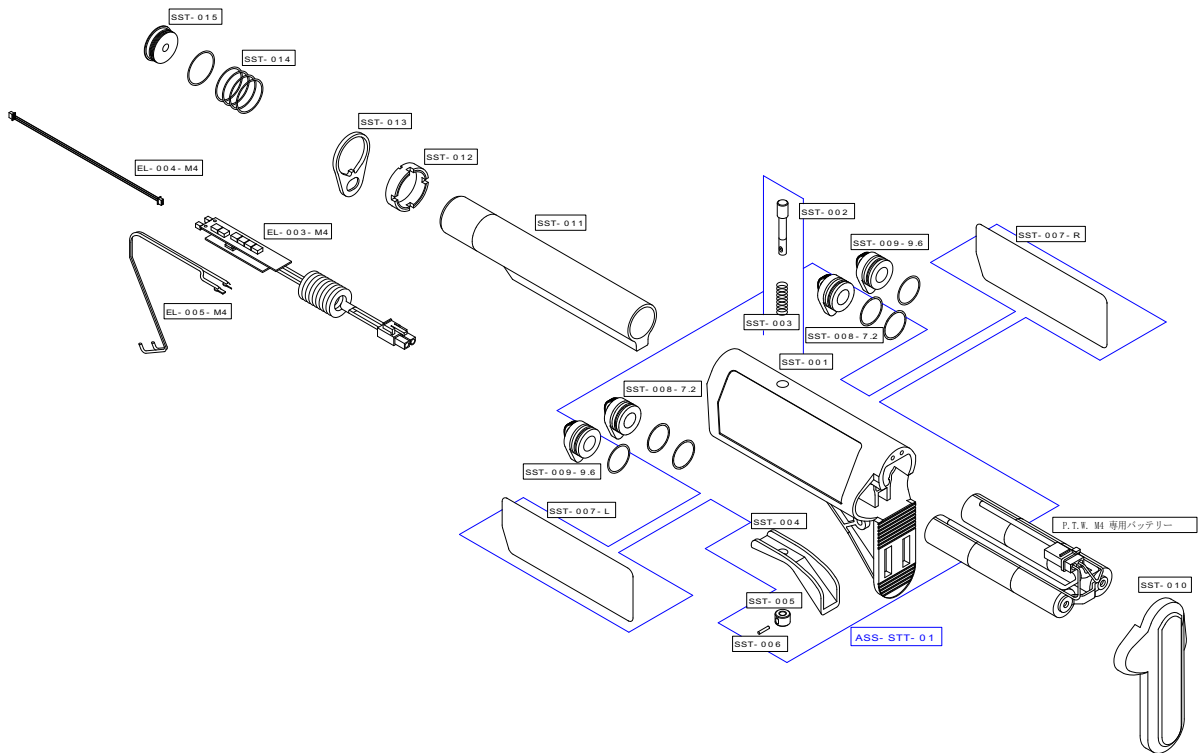


ASS-SST-01 M4 Slide stock assembly

SST-001	Slide stock for M4	EL-003-M4	SYSTEMA Switch Device 3 (M4 model)
SST-002	Slide lock pin	EL-004-M4	Control cable (M4 model)
SST-003	Slide lock pin spring	EL-005-M4	Motor cable (M4 model)
SST-004	Slide lock		
SST-005	Slide lock nut		
SST-006	Fixing pin for slide lock nut		
SST-007-R	Sponge sheet Right side		
SST-007-L	Sponge sheet Left side		
SST-008	Battery rid (7.2v battery only) set of 2		
SST-009	Battery rid (9.6v / 12v batteries only) set of 2		
SST-010	Slide stock butt plate		
SST-011	Stock tube		
SST-012	Stock tube nut		
SST-013	Stock set plate		
SST-014	Stock tube washer		
SST-015	Stock tube cap		

SYSTEMA

PROFESSIONAL TRAINING WEAPON SYSTEM


Stock

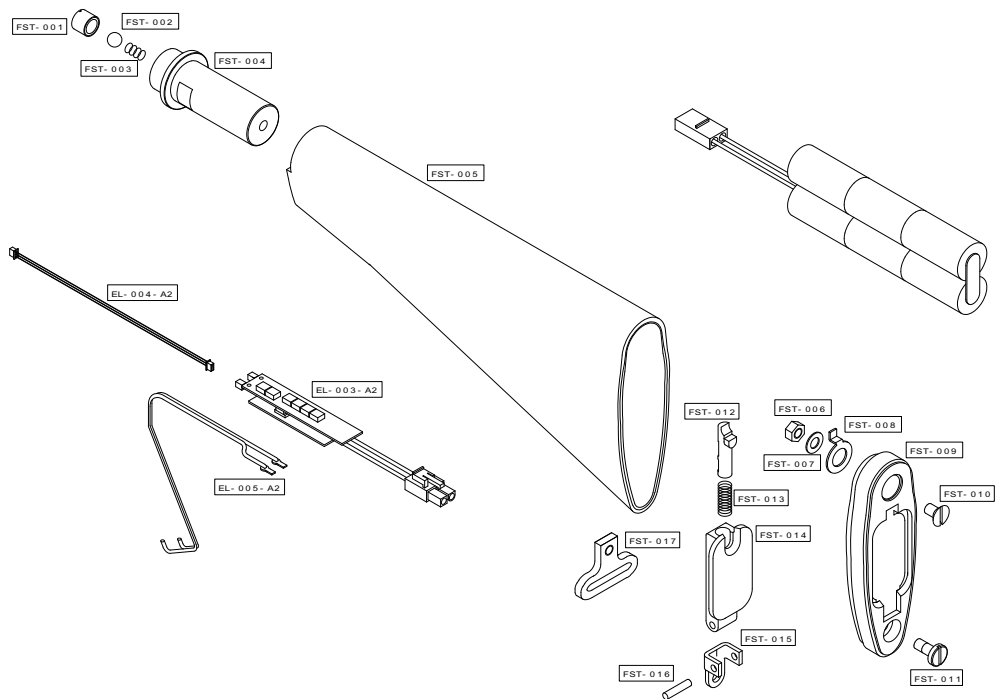

FST-001	Stock bearing stopper
FST-002	Stock bearing
FST-003	Stock bearing spring
FST-004	Stock pipe
FST-005	Fixed stock (A2/A3 model)
FST-006	M6 nut
FST-007	M6 washer
FST-008	Fixed plate for butt plate
FST-009	Fixed stock butt plate
FST-010	Stock screw
FST-011	Stock swivel screw
FST-012	Trap door stopper
FST-013	Trap door stopper spring
FST-014	Trap door
FST-015	Trap door hinge
FST-016	Set-pin for trap door stopper
FST-017	Fixed stock swine

EL-003-A2	SYSTEMA Switch Device 3 (A2/A3 model)
EL-004-A2	Control cable (A2/A3 model)
EL-005-A2	Motor cable (A2/A3 model)

Magazine

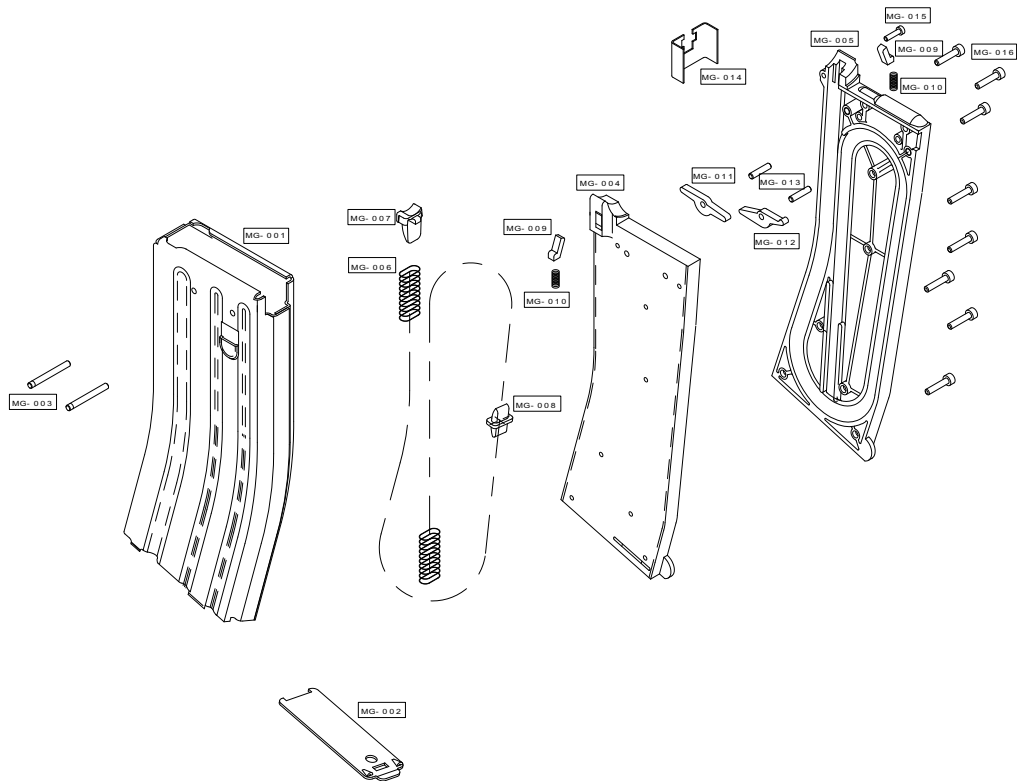

SST-001	Magazine outer case
SST-002	Magazine bottom plate
SST-003	Magazine outer case pin (set of 2)
SST-004	Magazine inner case Left side
SST-005	Magazine inner case Right side
SST-006	Magazine follower spring (set of 2)
SST-007-R	Magazine follower
SST-007-L	Magazine follower spring joint
SST-008	Magazine lip stopper (set of 2)
SST-009	Magazine lip stopper spring (set of 2)
SST-010	Bolt stop cam A
SST-011	Bolt stop cam B
SST-012	Shaft for bolt stop cam (set of 2)
SST-013	Magazine lip protector
SST-014	Inner case screw (small x1)
SST-015	Inner case screw (large x8)