
AIRSOFT

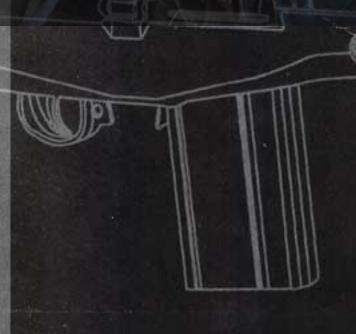



INSTRUCTION MANUAL

BAINITES

WARNING /!\

Always read through this manual before operation!

Read through this manual before shooting, paying special attention to safe operation!

Failing to do so may cause injury, accidents, or damage to the gun!





COMPONENTS

- 1. Flash Suppressor
- 2. Suppressor Lock
- 3. Front Sight
- 4. Outer Barrel
- Gas Cylinder Plug
- 6. Front Swivel
- 7. Hand Guard

Safety

- 9. Magazine
- 10. Bolt Stop
- 11. Rear Sight
- 12. Safety Lever
- 13. Trigger
- 14. Rear Swivel




not firing the gun or during storage always set the selector to the Safe position and attach the protective cap to the pro

When the safety lever is set to the "On" position, the trigger will not move. Please do not pull the trigger, otherwise you may damage the gun.

When the safety lever is set to the Off" position, it is ready for shooting.

The gun will fire when the trigger s pulled.

LOADING BE'S INTO AND SETTING THE MAGAZINE

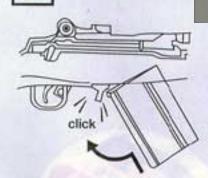

Always set the magazine upwards. First hook the hook in the front of the magazine and then press in the rear of the magazine until a

sound of "click" is heard.



· Removing the Magazine Press the magazine release lever to remove the magazine.

CAUTION

Be sure that the safety lever is set to the Safety position and don't place your finger on the trigger except when you are ready for shooting.


Load BB'S into Speedloader

Open the Speedloader Cap. Insert 6mm BB'S into the Speedloader.

Installation

Press the Rod Release button to release the Spring Rod.

Insert Speedloader into the magazine and pump Spring Rod until magazine is full.

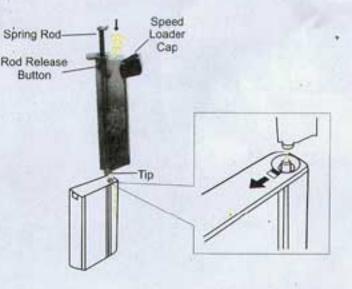

3

OPERATION

. The bolt retracts at the same time the operating rod is pulled.

To fire the gun, pull back Operating Rod all the way back, until a "click" is heard, then release.

Make sure the Safety release is in "Off" position. The gun is now ready for firing.

Pull Trigger.

Replace Safety release to "On" position when gun is not in use.



WARNING CAUTION

Be careful not to put your finger in the bolt as it will close quickly when the operating rod is released.

Rear Sight

Turning the windage adjustment dial will

move the bullet hitting point to the left

Operating rod

Bolt



SETTING THE OPEN SIGHT

Elevation adjustment

Turning counterclockwise lowers the bullet hitting point.

Turning clockwise raises the bullet hitting point.

Turning the elevations adjustment dial will move the bullet hitting point to the upper or lower.

Windage adjustment

Turning clockwise moves the bullet hitting point to the left.

Turning counterclockwise moves the bullet hitting point to the right.


5

HOW TO AIM/HOLD

front sight

. How to Aim.

Look through from the front sight to the hole of the rear sight, and aim at the center of the target

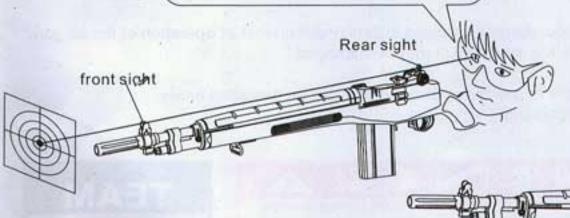

· How to hold.

Press the butt plate against slightly inside of the shoulder joint and put your cheek on the stock. Aim at the center of the target as shown in the above figure.

· Be careful not to put your fingers in the moving parts.



MAINTENANCE

Chamber packing

- Maintenance when bull speed becomes low
- Apply Oil as shown below, using the cleaning road and oiled cotton cloth. Insert cleaning rod into barrel.
- 2. After completing cleaning, use the cleaning rod (with cotton) as shown below to Remove excess oil.



 When bullets are clogged, immediately stop operation, Remove clogged bullets and then restart operation of the air gun. (If operation is continued with bullets being clogged, the mechanism may be damaged.)

Make sure to clean the barrel chamber whenever bullets are removed.

 Be careful during maintenance, as the inside chamber is precisely designed and can be damaged easily. Use of a hard brush may damage the hop chamber packing.



