





Always read through this manual before operation!

Read through this manual before shooting, paying special attention to safe operation!

Failing to do so may cause injury, accidents, or damage to the gun!



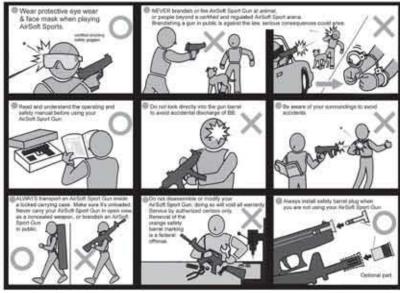

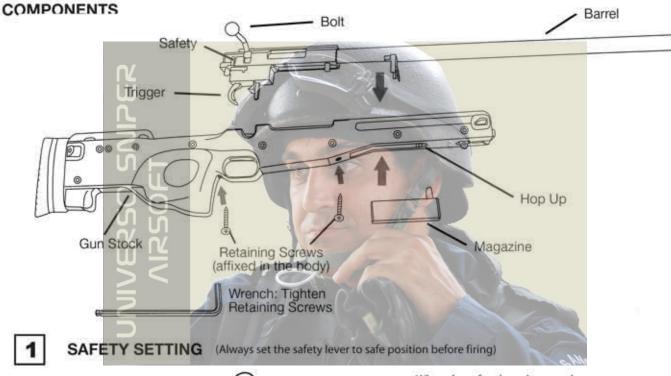


When you are not firing the gun or during storage, always set the selector to the Safe position.

When the safety lever is set to the "On" position, the trigger will not move. Please do not pull the trigger, otherwise you may damage the gun.


When the safety lever is set to the "Off" position, it is ready for shooting.

The gun will fire when the trigger is pulled.

2 LOADING BB'S INTO AND SETTING THE MAGAZINE

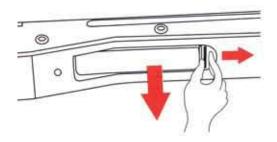

Remove the magazine by pressing the magazine release and pulling the magazine out.

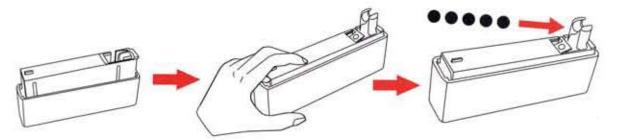

Press the Magazine and load the BB's, maximum of 30 BB's. Do not overload the Magazine. Reinsert the Magazine into the gun, until a "Click" is heard.

3 OPERATION

Adjust Hop Up by using

M2.5 wrench. The best position is where the BB flies hortizontally, and the longest distance is

obtained.

 Rotate the Bolt up, then pull the Bolt all the way back until a "Click" is heard.

Then, push the Bolt all the way forward and rotate down.

Make sure the Safety release is in "Off" position. The gun is now ready for firing.




Hop Up

0

MAINTENANCE

- Maintenance when bullet speed becomes low
- Apply Oil as shown below, using the cleaning road and oiled cotton cloth. Insert cleaning rod into barrel.
- 2. After completing cleaning, use the cleaning rod (with cotton) as shown below to Remove excess oil.

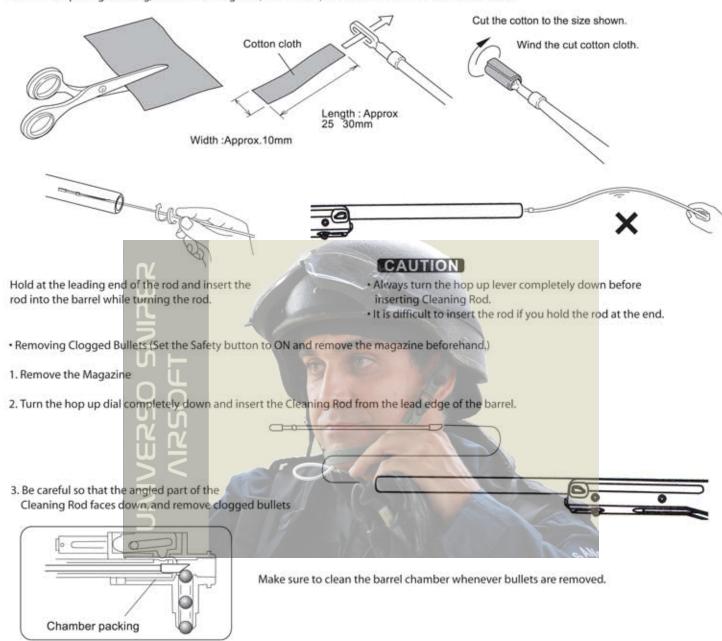

- · When bullets are clogged, immediately stop operation, Remove clogged bullets and then restart operation of the air gun. (If operation is continued with bullets being clogged, the mechanism may be damaged.)
- · Be careful during maintenance, as the inside chamber is precisely designed and can be damaged easily. Use of a hard brush may damage the hop chamber packing.



