UG-161 Gas Type







Safety cap 槍口護塞 Slide 滑套 Safety lever 保險

Hammer 擊鎚

Magazine release lever 彈匣卡筍

Trigger 板機

N

—Magazine 彈匣

2. SAFETY DEVICE 自動保險裝置

Hammer press down 接下螺鎖 When safety lever is on unlock position; the trigger is active to fire. 保險桿在下 方時, 則可扣板機

Do not pull the trigger when safety lever is on lock position; otherwise improper use will cause breakage. 保險桿在上 方時,不可勉強扣板機否則會 產生固隨


Safety lever push up in active position. 將保險往上推


3. GAS FILLING 瓦斯灌氣法



Invert the magazine and keep the bottom upward. Aim the gas can at the gas filling port and press down the can, the magazine can be refueled in 5-6 seconds. 將彈匣反轉底部朝上,將氣罐對準注入口用力壓下,約5-6秒鐘即可充滿



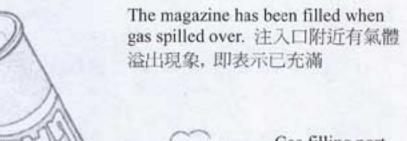

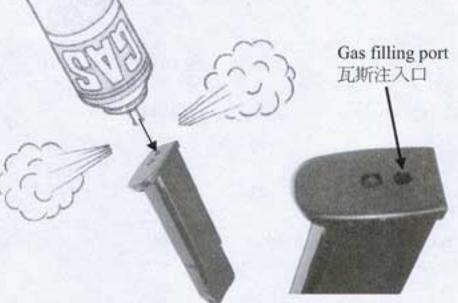

4. LOADING BULLETS AND MAGAZINE 裝卸彈匣與子彈裝填



Pull down the control lever as indicated and do not relax the hold. Load up bullets from the top of magazine.(如 圖所示,拉下操 総桿)

Please catch the magazine with hands when it falls. (請用手接住落下的彈匣)

Load the magazine with 15 bullets.(裝 入子彈,最多 15顆)

Click Push magazine back into the gun body after loading, lock when heard "Click". (將彈匣推入直到 聽到卡住的聲音)

5. SHOOTING METHOND 射擊方法

A. Single Action 單發射擊

B. Slide Action 滑套射擊




Place the safety lever at the "firing" position. Push down the hammer and pull the trigger 開 保險後, 壓下擊鍾, 扣 板機

Place the safety lever at the "firing" position. Pull the slide back and pull the trigger 開保險 後,滑套往後拉,扣板

C. Double Action 重覆射



Place the safety lever at the "firing" position and pull the trigger 開保險 後, 扣板機

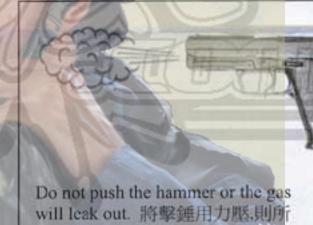

Do not squash 不可壓 住

* Do not use the following pellets 請勿使用下列子彈



Bullet diameter size is over 6mm. 直徑超過6mm的



Bullet center is not coinciding. 子彈不圓的




Bullet with burry 表面有溢料(毛邊)的



Reuse of dirty bullet 太髒的



Q & A

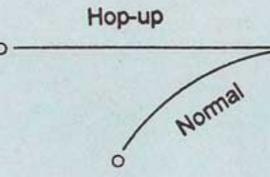



Q: What is the Hop Up System?

A: The Hop Up System is a new design that gives backspins to the flying BB bullet, propelling it forward with greater stability horizontally for 50% longer distance than the conventional BB guns and resulting in much higher shooting accuracy.

Q: How do I tell the effect of the Hop Up System?

A: A bullet shot form a BB gun with the Hop Up System should hit the target straight on horizontally. The bullet will not stray upward, downward or sideways right before losing its speed.

 
Q: Why are UHC0.12g / 0.2g BB bullets recommended for use with the Hop Up System by the UHC?

A: The design and construction of Hop Up System relies on BB bullets of exact and accurate dimensions in order to produce optimal results. UHC Hop Up System is specifically spec-ed to use UHC 0.12g / 0.2g BB bullets. BB bullets of any other brand will not achieve the same level of effects.

** Following BB bullets are not allowed to use :



6 00 mn



XO



Bullet dia. Size larger over 6mm.

Bullet center is not coincide.

Bullet with burs.

Reuse of dirty bullet.

TO ALL SPORT GUN'S USERS

This product is developed for the users more than 14 years old and enjoying sports shooting. Be well aware of gun character and instruction, you can have a joyful and safe experience of sports shooting. Please pay extra attention to the environment surrounds the playing field. The producer will not hold any responsibility for any accident or malfunction caused by the improper handling, illegal conversion, alteration and disassembling of this product. Please read this operation manual carefully before using.

敬告使用者

本產品係爲了享受射擊運動之樂趣所開發的商品,限14歲以上的消費者始能使用。熟悉本槍的特性及詳讀使用說明書後才使用,就可體驗愉快而安全的射擊運動。對於使用方法不正確或因爲改造所發生的故障及事故,本製造廠商概不負責。請務必仔細閱讀本說明書,充分瞭解後再使用。

WARNINGS



Always put on safety glasses to protect your eyes.



Never point the gun at anyone or any animal, though the magazine is pellet empty.



Never shoot as joking, always look before shoot, the careless use may cause injure and be punished.




Never pull the trigger even you think it is empty of magazine. It is dangerous, there maybe pellets remain in the magazine.



Never put your finger on the trigger unless you are prepared to fire.



Never look into the barrel of the gun.

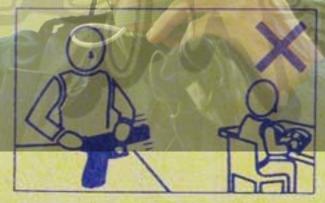


Always keeps the gun to safe direction.



Do not carryout in public place, put into the bag for carrying.



Never dissemble the gun by yourself, which will cause the trouble and dangerous.

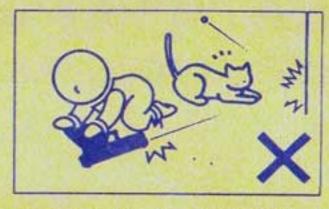

Keep out of the reach of children.



Always put on the safety cap.