



**UTG M87LA CQB EVERBLAST LAW ENFORCEMENT SHOTGUN**  
**UTG M87SOS CQB EVERBLAST ELITE SPECIAL OPS SHOTGUN**  
**UTG M87SA CQB EVERBLAST SAWED OFF COMBAT SHOTGUN**

# OWNER'S MANUAL

- ✦ Rugged and Robust Construction
- ✦ Tactical Tri-Rail System
- ✦ Dramatic Sure-Cocking Foregrip
- ✦ Adjustable Hop-up System
- ✦ Hefty Weight
- ✦ Spectacular Power and Accuracy
- ✦ Combat Magazine
- ✦ Matte Black Non-glare Finish

**M87LA**



**M87SOS**

**M87SA**

**WARNING: NOT A TOY. FOR AGES 18 YEARS AND UP. MISUSE OR UNSAFE USE MAY CAUSE SEVERE INJURIES. EYE PROTECTION REQUIRED. THE PURCHASER AND THE USER SHOULD READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THE GUN AND SHOULD OBEY ALL LAWS CONCERNING THE USE AND OWNERSHIP OF AIRSOFT GUN. DO NOT ALTER ANY COLOR OR MARKING REQUIRED BY STATE/FEDERAL LAWS ON THE AIRSOFT GUN. NEVER BRANDISH THE AIRSOFT GUN IN PUBLIC.**

- Always treat the airsoft gun with the same respect and safety precaution as you would with a firearm.
- Airsoft gun must be kept out of the reach of minors.
- Always wear protective goggles for airsoft sport.
- Use .24 caliber (6mm) plastic BBs only. Strongly recommend using NeonFire Premium Precision Ground 6mm BB Pellets. Low quality BB pellets may clog and damage the rifle. Do not re-use BBs.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Attempts to modify the airsoft gun in any way inconsistent with this manual may make it unsafe to use and cause serious injuries.
- Do not store away the airsoft gun loaded. Make sure all BB's are unloaded from the airsoft gun. Always store it in a secure location.

## **WARNING - CAUTION**



Never look into the barrel with bare eyes.



Never point the gun to another person within shooting range.



Do not shoot at any target with hard surface within close range. Ricochet pellets may injure yourself.



Never put your finger on the trigger except when you are shooting. Leaving your finger on the trigger is dangerous and may cause unintended shooting.



# 1 Component Chart

- ① Loading Handle Foregrip
- ② Barrel
- ③ Tactical Tri-Rail System
- ④ Safety/Fire Selector
- ⑤ Trigger
- ⑥ Retractable Stock (for M87SOS model only)
- ⑦ Buttpad (for M87SOS model only)
- ⑧ Double Quick Load Magazines
- ⑨ Speed Loader (Style may vary.)
  - a. Spring Operated Speed Loader
  - b. Tube Style Speed Loader (2 parts)
- ⑩ Gun Sling (optional)

 
## M87SA



## M87SOS



## M87LA

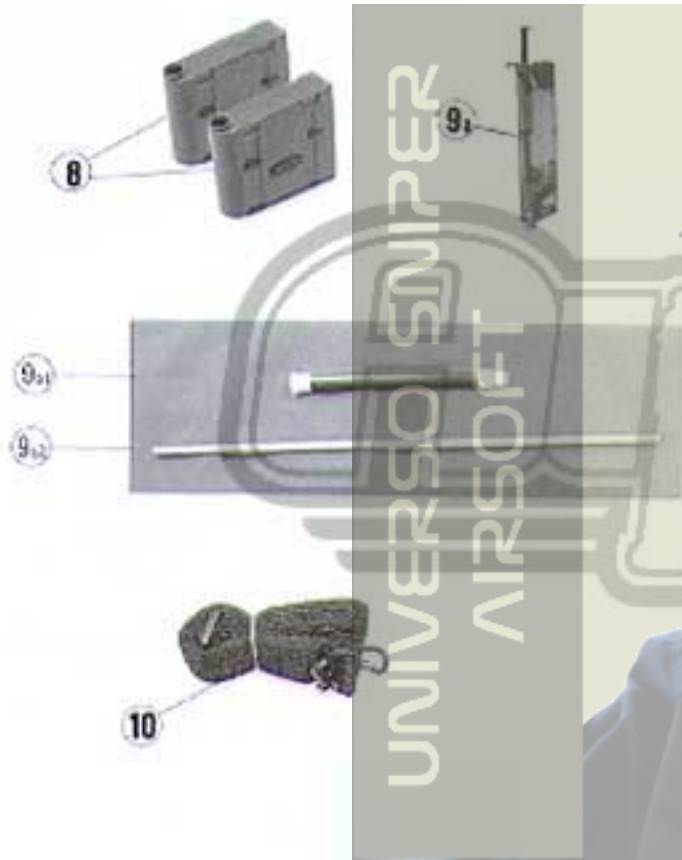

**Warning!** Before you follow the assembly instruction, make sure to remove the magazine and set the Fire/Safety Selector to the "SAFE" position.

### To set the Fire/Safety Selector position:

- Place the shotgun flat on a table in front of you with the barrel pointing to the left.
- The Safety/Fire Selector is on the "SAFE" position, if the Selector is "Down" as in Fig 1.1.
- The Safety/Fire Selector is on "FIRE" position, if the Selector is "Up" as in Fig 1.2.
- To change the Safety/Fire position, press the button from the "Up" side to the opposite side.





## 2 Load Pellets



**Warning! Always use NeonFire Premium Precision Ground 6mm BB Pellets for accuracy and safety. Never re-use pellets.**

To remove magazine, press the Magazine Release Button to disengage the magazine.

### 1. Load Pellets with Spring Operated Speed Loader (Style a)

- Locate and push the Rod Release Button to release the Spring Rod. (Fig 2.1)
- Open the Speed Loader Cap.
- Insert 6mm pellets into the Deluxe Spring Operated Speed Loader.
- Align the Tip of Speed Loader with the Pellet Drop of the magazine. (Fig 2.1)
- Push the Spring Rod to load pellets into the magazine. Repeat this process until the magazine is full.
- Insert the loaded magazine back into the rifle. (Fig 2.3)

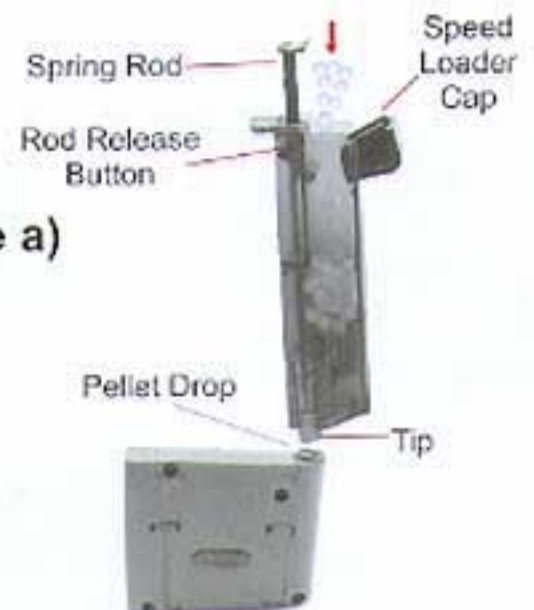 


Fig 2.1

### 2. Load Pellets with Tube Style Speed Loader (Style b)

- Insert 6mm pellets into the Pellet Speed Loader. The magazine can hold up to 20 pellets.
- Align Speed Loader to the Pellet Drop of the magazine. (Fig 2.2)
- Push the pellets down using the Pellet Loading Rod. DO NOT over push, otherwise it will damage the magazine.
- Remove the Pellet Speed Loader from magazine.
- Insert the loaded magazine into the rifle. (Fig 2.3)

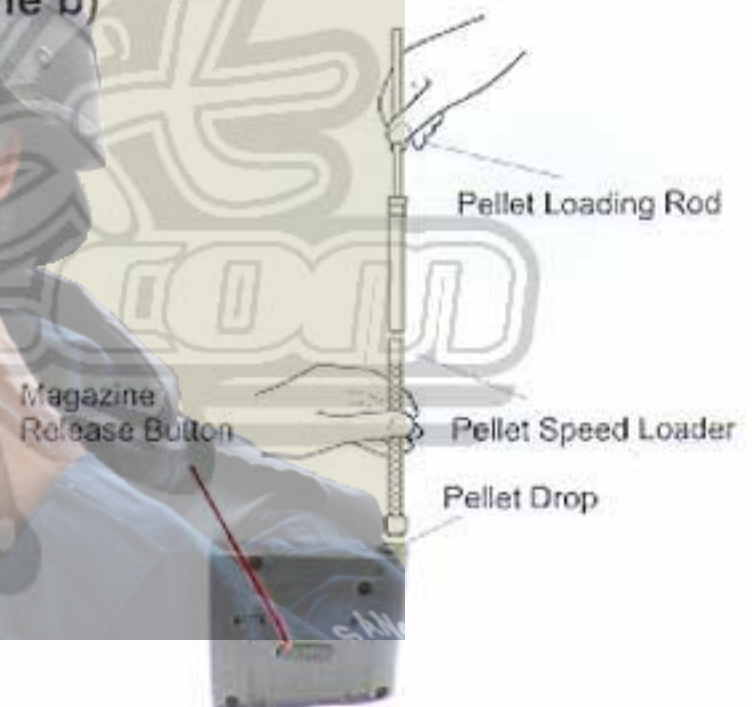 


Fig 2.2



Fig 2.3

## 3 Firing (Confirm complete safety of environment before firing.)



- Activating the trigger carelessly is extremely dangerous. Never release the Safety Lever or put your finger on the trigger unless the protective plug is removed and you are ready to shoot at a target.

### 1. Single-Shot Shooting

- Set Fire/Safety Selector to the "FIRE" position.
- Briskly pull the Loading Handle Foregrip backward toward yourself until it clicks, and push it forward to complete the cocking in one continuous movement.  
**Note:** you must do this to fire every shot.
- Aim at your target and pull the trigger to fire.





## 2. Quick-Pump Shooting

- Set Fire/Safety Selector to the "FIRE" position. Aim at your target.
- Squeeze and hold the trigger and, concurrently, pull the Loading Handle Foregrip backward and push forward to shoot.
- By quickly moving the Loading Handle Foregrip back and forth while holding the trigger, you can pump shots out continuously.

## 3. Adjust Variable Hop-Up System for Best Shooting

- Locate the Hop-Up Switch.
- Slide the Hop-Up Adjustment Knob to a desired position.
- Shoot a few pellets, exam the trajectory and make further adjustment if necessary.

Hop-Up Adjustment Knob



## 4 Maintenance

- Keep the shotgun in clean condition.
- Regularly clean the barrel with soft cleaning rod.
- Never use dirty, damaged or distorted pellets.

