UTG47LA TACTICAL WARHAWK 7SA WARHAWK CQB COMMANDER

OWNER'S MANUAL



- Rugged and robust construction, hefty weight
- Precision metal barrel
- Metal bolt carrier, metal trigger, metal receiver cover
- Excellent quality metal selector/safety switch
- Metal front/rear sight with full functionality
- Durable metal sling housing
- Adjustable Hop-up systems
 - re ver and excellent accuracy
- capacity magazines with ve -up design
- mounting system

duxe multi-funcito al 3-point

OPTIONAL - UTG 4X32 COMBAT TACTICAL SCOPE WITH RINGS



DOUBLE HI-CAP VAGAZINES

Excellent quality and balle field proven

UTG TACTICAL SLING

- Mil-dot range extimating
- Finger adjustable precision windage/elevation
- AccuShot 1" tactical rings
- Great accuracy

OPTIONAL UTG TRI-RAIL BARREL MOUNT AND POWER FOREGRIP

- Tri-rail barrel mount for most versatile applications
- Power foregrip to enchance control and handling
 - Slotted for pressure switch
 - Tail cap compartment for battery storage

EARS AND UP. MISUSE OR UNSAFE USE MAY CAUSE SEVERE INJURIES. AND THE USER SHOULD READ AND UNDERSTAND ALL AND SHOULD OBEY ALL LAWS CONCERNING THE USE AND OWNERSHIP BISPLAY THIS PRODUCT IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY THINK IT IS A FIREARM, DO NOT CHANGE THE COLORATION AND RELIKE A FIREARM. THIS IS DANGEROUS AND MAY BE A CRIME.

SPEED LOADER

- Always treat the airsoft gun with the same respect and safety precaution as you would with a firearm.
- Airsoft gun must be kept out of the reach of minors.
- Always wear protective goggles for airsoft sport.
- Use .24 caliber (6mm) plastic BBs only. Strongly recommend using NeonFire Premium Precision Ground 6mm BB Pellets. Low quality BB pellets may clog and damage the rifle. Do not re-use BBs.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Attempts to modify the airsoft gun in any way inconsistent with this manual may make it unsafe to use and cause serious injuries.
- Do not store away the airsoft gun loaded. Make sure all BB's are unloaded from the airsoft gun. Always store it in a secure location.

1

1

WARNING - CAUTION



Never look into the barrel with bare eyes.



Never point the gun to another person within shooting range.



Do not shoot at any target with hard surface within close range. Ricochet pellets may injure yourself.



Do not brandish in public, do not alter the coloration and warnings - such an action is dangerous and may be a crime.



Never put your finger on the trigger except when you are shooting. Leaving your finger on the trigger is dangerous and may cause unintended shooting.



Pulling the trigger with the safety lever being set to SAFE may damage the gun.



Do not disassemble the gun beyond what is required for operation. Otherwise, the gun may be damaged.



When the gun is clogged, stop operating immediately. Otherwise, the mechanism may get damaged. Make sure to remove clogged pellets before resuming operation.

1 Component Chart

- 1 Stock
- 2 Tactical Tri-Rail Mounting System
- 3 Safety/Fire Selector
- Trigger
- ⑤ Magazine Release Lever
- ⑥ Tactical Rings (Optional)
- Tactical Scope (Optional)
- 8 Cocking Handle
- 9 Hi-Cap Wind-up Magazine
- 10 Spare Hi-Cap Wind-up Magazine
- 11 Elevation Adjustable Real Sight
- 12 Hop-up Adjustment Switch
- (13) Tactical Tri-Rail Barrel Mount (Optional)
- 14 Tactical Foregrip (Optional)
- (15) Front Sight
- (16) Gun Sling





Warning! Before you follow the assembly instruction, make sure to remove the magazine and set the Fire/Safety Selector to the "SAFE" position.



2 Load Pellets

Slide open the Magazine Cap.

Insert 6mm pellets into the Magazine. It can hold up to 340 pellets(Fig 2.1).

Close the Magazine Cap.

Rotate the Wind Up Wheel to draw BBs up into the Ready Tube. Stop when the wheel gets tight.

· Insert the loaded magazine into the gun(Fig 2.2).

 To remove magazine, hold the Magazine Release Lever while tilting the Magazine forward to disengage the Magazine.





Warning! Always use NeonFire Premium Precision Ground 6mm BB Pellets for accuracy and safety. Never re-use pellets.

3 Firing (Ensure complete safety of environment before firing.)



Activating the trigger carelessly is extremely dangerous. Never set the Safety/Fire Selector off the "SAFE" position or put your finger on the trigger unless the protective plug is removed and you are ready to shoot at a target.

1. Shooting Operation

Set Fire/Safety Lever to "Fire" position. (Fig 3.1)

· Pull the cocking handle backward until it clicks. Then release it back to the original position to complete cocking in one continuous movement.

Hold the gun firmly and rest the stock at a comfortable position.

Aim the rifle at your target and pull the trigger to fire.

2. Adjust Variable Hop-Up System for Best Shooting

. Locate the Hop-Up Switch under the fake cocking handle at the right side of the rifle.

 Slide the Hop-Up Adjustment Switch to a desired position.

 Shoot a few pellets, exam the trajectory and make further adjustment if necessary.

3. Wind Up More Pellets for Continuous Shooting

While the magazine is designed to hold large capacity BBs, it requires BBs to be fed by batches into Ready Tube. When a batch of BBs is used up, rotate the Wind Up Wheel to draw BBs into the Ready Tube for more shots.







Note: The hi-cap magazine gives the user continous shooting fun. Its "Wind-up" design requires feeding more BB's into the Ready Tube before all BB's are used up. It is NORMAL to need to wind up while there are still some BBs left in the Ready Tube. When the gun is set at full auto, it is NORMAL to need to keep winding for enough feed tension for the full-auto mode to work continuously.

Maintenance

- Keep the rifle in clean condition.
- Regularly clean the barrel with soft cleaning rod.
- Never used dirty, damaged or distorted pellets.

