

MASTER SNIPER ©



UTG M324S OWNER'S MANUAL

- One Piece Precision Metal Barrel
- Adjustable Hop-up System
- High Power Pin-Point Accuracy Performance
- **Effective Long Range Shooting**
- Complete Picatinny Mounting Rail Systems
- Fully Adjustable Butt Stock
- Deluxe Tactical Picatinny Mount Bipod
- **Deluxe Sniper Rifle Sling** with Non-slip Grip
- * Ultimate Bolt Action Airsoft Spring Rifle



Spare Magazine

WARNING: NOT A TOY, FOR AGES 18 YEARS AND UP MISUSE OR UNSAFE USE MAY CAUSE SEVERE INJURIES. EYE PROTECTION REQUIRED. THE PURCHASER AND THE USER SHOULD READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THE GUN AND SHOULD OBEY ALL LAWS CONCERNING THE USE AND OWNERSHIP OF AIRSOFT GUN. DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM, DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THIS IS DANGEROUS AND MAY BE A CRIME.

- Always treat the airsoft gun with the same respect and safety precaution as you would with a firearm.
- Airsoft gun must be kept out of the reach of minors
- Always wear protective goggles for airsoft sport.
- Use .24 caliber (6mm) plastic BBs only. Strongly recommend using NeonFire Premium Precision Ground 6mm BB Pellets. Low quality BB pellets may clog and damage the rifle. Do not re-use BBs.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Attempts to modify the airsoft gun in any way inconsistent with this manual may make it unsafe to use and cause serious injuries.
- Do not store away the airsoft gun loaded. Make sure all BB's are unloaded from the airsoft gun. Always store it in a secure location.



WARNING - CAUTION



Never look into the barrel with bare eyes.



Never point the gun to another person within shooting range.



Do not shoot at any target with hard surface within close range. Ricochet pellets may injure yourself.



Do not brandish in public, do not alter the coloration and warnings - such an action is dangerous and may be a crime.

1 Component Chart

- Fire/Safety Selector
- 2 Triger
- 3 Cocking Handle
- Upper Picatinny Rail
- (5) Hop-up Adjustment Switch
- 6 Barrel
- (7) Butt Stock
- 8 Magazine Release Button
- 9 Lower Picatinny Rail
- 10 Triple Fully Adjustable Butt Pads
- 11 Double Magazines
- 12 Deluxe Sniper Rifle Sling with Non-slip Grip
- 13 Deluxe Spring Operated Speedloader
- (14) Deluxe Tactical Bipod
- (15) Allen Wrench and Screw Sets (one spare set of screw included)





Warning! Before you follow the assembly instruction, make sure to remove the magazine and set the Fire/Safety Selector to the "SAFE" position.

Kit A (Receiver & Barrel):




2 Assembly

 Install Kit A (Receiver & Barrel) into Kit B (Stock) as in Fig 2.1.

 Lock Kit A into Kit B with screws provided as shown in Fig 2.2. Use the large Allen wrench for Screw A and B. Use the small Allen wrench for Screw C



Three types of Warning! screws are included in this package. Misuse will cause damage to the

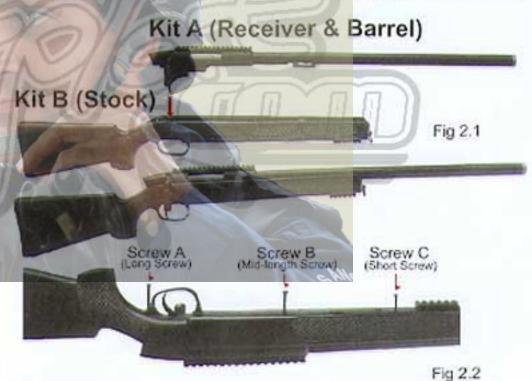

Warning! Always use NeonFire Premium Precision Ground 6mm BB Pellets for accuracy and safety. Never re-use pellets.

Install Stackable Butt Pad

The length of the rifle can be extended by installing all 3 or any number of stackable butt pads. Each butt pad can extend 3/8 inch in length. (Fig 3.1)

- Disengage the Butt Pad Cover by loosening the 2 locking screws.
- Install Stackable Butt Pads together. Put the Butt Pad Cover over the outer-most Stackable Butt Pad.
- Install and fasten the two Locking Screws.

 


4 Load Pellets

Load Pellets into Deluxe Spring Operated Speedloader

- Locate and push the Rod Release Button to release the Spring Rod. (Fig 4.2)
- Open the Speed Loader Cap.
- Insert 6mm pellets into the Speed Loader.





2. Feed Pellets From Speedloader into Magazine

- Hold and disengage the magazine by pressing the Magazine Release Button. (Fig 4.1)
- Align The Tip of Speed Loader with the Pellet Drop of the magazine. (Fig 4.2)
- Push the Spring Rod to load Pellets into the magazine. Repeat this process until the magazine is full.
- Insert the loaded magazine back into the rifle.



Spring Rod

Rod Release

Button

Fig 4.2

Speed Loader

Cap

To remove magazine: Press the Magazine Release Button to disengage the magazine. (Fig 4.1)

Install Bipod

Please refer to page 4 for bipod installation instruction.

Install Optional Accessories

The airsoft rifle comes with two great quality Picatinny Rails for installing your accessories such as Scope, Bi-pod. Flashlight, Laser Sight or others. Please follow the instruction for mounting your accessories on the airsoft rifle.

Firing (Ensure complete safety of environment before firing.)



Activating the trigger carelessly is extremely dangerous. Never set the Safety/Fire Selector off the "SAFE" position or put your finger on the trigger unless the protective plug is removed and you are ready to shoot at a target.

1. Shooting Operation

- Set Fire/Safety Lever to "Fire" position. (Fig 6.1)
- Flip the cocking handle upward and pull it backward until it clicks. Then push it back to the original position to complete cocking in one continuous movement.
- Hold the gun firmly and rest the stock at a comfortable position.
- Aim the rifle at your target and pull the trigger to fire.

2. Adjust Variable Hop-Up System for Best Shooting

- Locate the Hop-Up Switch at the left side of the Foregrip. (Fig 6.2)
- Slide the Hop-Up Adjustment Switch to a desired position.
- Shoot a few pellets, exam the trajectory and make further adjustment if necessary.

Maintenance

- Keep the rifle in clean condition.
- Regularly clean the barrel with soft cleaning rod.
- Never use dirty, damaged or distorted pellets.

Fire/Safety Selector

Fig 6.1 Hop-Up Adjustment Switch



Fig 6.2

Deluxe Tactical Bipod

INSTRUCTION

1. Mount on Picatinny Rail



Clever Picatinny mounting deck allows easy installation.

2. Panning and Foldable



- Press down the Posi-Lock Button to fold or unfold bipod legs
- Unique Posi-Lock feature prevents tipping.
- Bipod pans for easy aiming adjustment.

3. Fully Extendable





Unscrew the nut and adjust the length. Once done, tighten the nut to lock the legs.

