警告與注意事項

WARNING&CAUTION

- Only use the 12lb gas in the gas charger.
 Do not fill the gas compression over 22lb or with CO2.
 Check gas charger for any loose parts, cracks or leaks before using.
 Do not expose canister & gas charger over 40C/ 104F.
 Do not blave canister & gas charger directly over fire.
 Do not blo lacnister & gas charger directly over fire.
 Neep canister & gas charger away from direct sunlight.
 Do not leave canister & gas charger in webicle.
 Do not disassemble the gas charger in webicle.
 De sure to avoid direct gas contact with eyes or skin when gas is Being released, it will cause frostbite.
 Do not keep any gas in the gas charger.
- 瓦斯分裝罐只能填充12磅的瓦斯,切勿填充22磅以上的瓦斯或是C02。
- 或是6026使用瓦斯分裝罐之前,先確認本體是否有鬆脫或漏氣的現象。切勿將瓦斯罐或是瓦斯分裝罐置放於超過40度以上的場所。
- 請將瓦斯罐以及分裝罐遠離火源或高熱環境。 ■ 切勿將瓦斯罐或是瓦斯分裝罐丟入沸水、火堆中或加熱。
- 切勿長時間曝曬於陽光照射之下。
- 切勿將瓦斯罐或是瓦斯分裝罐留在車內。
- 切勿分解瓦斯分裝罐。
- 奶勿別評已初月來嗎。 請勿將噴出的高壓瓦斯直接對著皮膚或眼睛,這樣會造成凍傷。 當您不使用或是要長期儲存瓦斯分裝罐時,請將分裝罐內剩餘的瓦斯 完全洩出。

產品規格

SPECIFICATIONS

M26

Weight: 232.5 g Length: 103 mm Diameter: 60 mm

M67

Weight: 242.0 g Length: 90 mm Diameter: 65 mm



M26 / M67 **Gas Charger**



注 意 FOR AIRSOFT USE ONLY, CAUTION ALWAYS READ THROUGH THIS MANUAL BEFORE OPERATION

各部名稱

Component name

分裝罐灌氣嘴 Gas Charger Nozzle 分裝罐本體 Main Body 加氣孔 Charging Valve

組合 Combine





Turn left, tighten Nozzle Cover. 逆時針旋鬆。

灌入瓦斯

Filling the GAS

- Push the gas canister nozzle into the charging valve. Make sure the canister is in vertical position when charging.
- Fill charging valve until gas overflows from charging valve.
- 將瓦斯罐的灌氣嘴插入分裝罐 加氣孔,當瓦斯灌入分裝罐時 請保持兩者為緊密且垂直的狀態。
- 填充瓦斯直到瓦斯溢出分裝罐 加氣孔。

使用瓦斯分裝罐

- Use the Gas Charger
- 1. Turn the top of gas charger.
- Push the gas charger nozzle into the magazine charging valve. Make sure the charger is in vertical position when charging.
- Fill charging valve until gas overflows from charging valve
- 1. 旋開瓦斯分裝罐的頂部
- 將分裝罐的灌氣嘴插入彈匣加 氣乳,並保持兩者為緊密且垂 直的狀態。
- 3. 填充瓦斯直到瓦斯溢出分裝罐加氣孔。



NEVER charge with gas near fire or a naked flame. 使用時講遠離火源。

