MAKS-741

Users Restricted to 18 Years of age or older 使用年龄对象18岁以上

INSTRUCTION MANUAL 使用說明書 Shorty Assault Rifle
Use 6mm BB Bellet

- Airsoft Electric Gun
 - Semi/Full Automatic
- The chain style semi-automatic Cartridge magazine
- 电动汽弹枪
- 单发/连发功能
- 链带式半自动弹匣



K 92

在操作之前必顯從劉汶些说個书

Always read through this manual before operation.

漱巾

18岁以上年龄才能使用 Only for 18 years of age or older

18以上年龄才能利用这支汽枪比赛使用

Operation of this air gun for competition use is restricted to users of 18 years of age or older.



注意受损伤 Injury caution

因为BB 弹能达到50-60米范围,不小心的射击将可能导致眼睛受损伤或其它伤害.

Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.




注意熟读警告指示手册 Careful reading of Handling cautions and Instruction manual

在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示 Always read through this HANDLING CAUTION AND INSTRUCTION MAMUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.

Always read through this manual before operation. Remain this manual for future reference.

Wear protective eye wear & face mask when using air soft airguns. 当使用汽弹枪时,请戴上 防弹眼镜和面具。

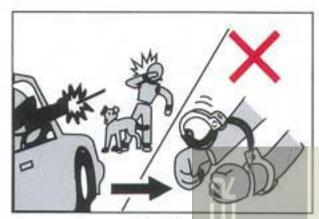


You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke, Always observe manners and enjoy healthy sport shooting.

如果你损害公共的或私人的财产,或 者伤害人或动物,即使你是在进行射击 实践游戏,你也会受到惩罚。请始终 遵守规矩,享受有益健康的运动制击

Loader 裝弹器

Unloader 清弹器

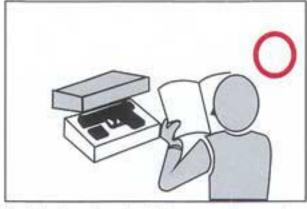

Read and understand the operating and safety manual before using your air soft airguns.

在使用汽弹枪前,请先阅读和理解操作安全手册。



Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle, except when you are ready to shoot a target.

不可把人或动物当作目标瞄准或射击 始终系上枪口的防护塞,除非你准备 去射击一个明确的目标。




Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看枪管,避免BB弹意外发射。



This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So, avoid dissembling or modifyingthe air gun.

该气枪是根据适当的性能和操作性而制造的。 拆除或改装气枪可能产生危险或者逆反操作。 因此要避免拆除或改装该气枪。

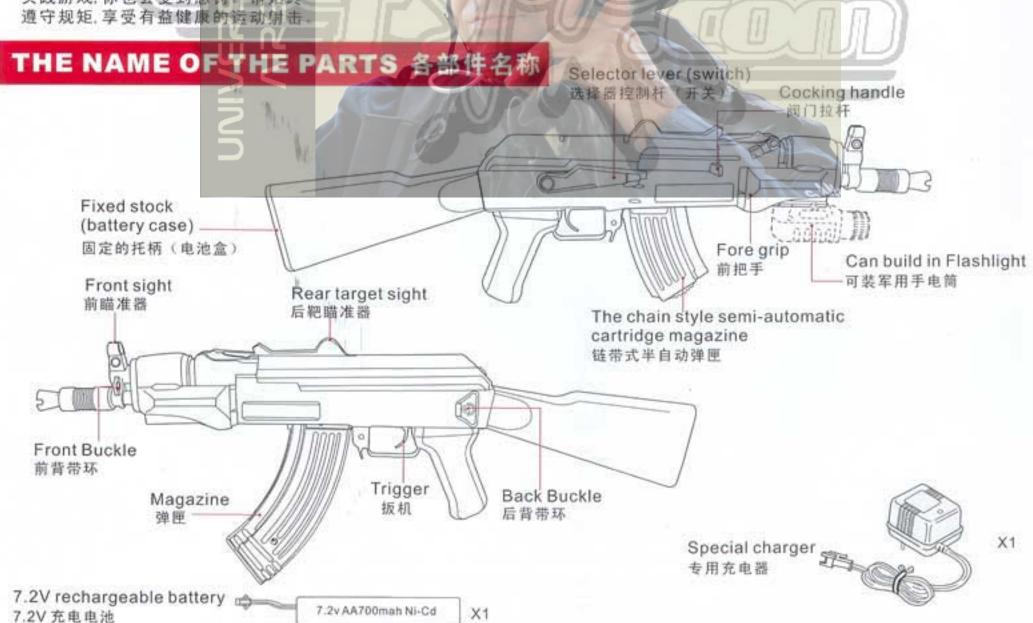

X1

 
X1

Bulletproof goggles

防弹眼镜

X1


CHARGE THE POWERFUL BATTERY 对动力电池 充电




Connect: press the battery plug to insert into the output socket of the charger till hear "crack".

连接: 按住电池插头插入到充电器的输出插口中直到 发出"咔达"一声。

- Discharge the battery completely before charging it for the first time and the charging time is 12 hours.
- Battery charging time is about 7-8 hours, do not extra to avoid the over-charge.
- The temperature can't over 45° during charging or will damage to the battery.
- Rechargeable batteries air not to be removed from the toy before being recharged (if remove)
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- 在第一次充电前,先将电池余电放净,充电时间为12小时。
- 电池充电需要7-8个小时左右,不要超过这个时间,以免过度充电。
- 在充电过程中请注意电池温度不得超过45度,否则将损坏电池。
- 在再充电之前,要确信电池没有与充电器分开。
- 须按正确的极性指示安装。
- 不能使用的电池必须立即丢弃。
- 要确信供电时没有被短路。

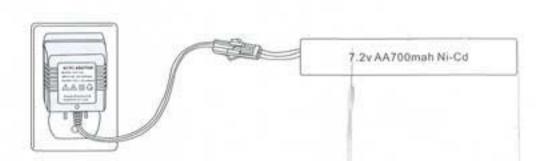

BATTERY INSTALLATION 安装电池

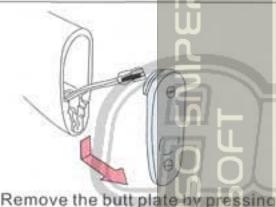


it downwards and pull out the connecter.

按下盖板以将其取下并拔出连接口器

Insert the battery in the stock and connect connecters.

将电池某入托柄里井接上连接器。

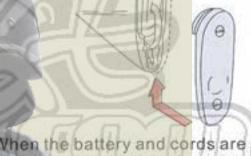

When the battery and cords are set in positions, reinstall the buttplate as shown.

当电池和电线正确安装后,如图所示重新装上盖板。

SETTING THE MAGAZINE 装弹匣



O Press the magazine release to remove the magazine. (Support the magazine as ti may drop.)

按下弹匣脱扣器以拆下弹匣。 (按下弹匣以免它掉下来)


@ Insert 6mm BB bullets supplied by into the charger. (42 bullets can be inserted.)

将 6mm BB子弹装入装弹机。 (可装入42发子弹)





- It can be shot out 110pcs-130pcs BB balls after you drive the chain for each time or you can make shots and drive the chain at the same time if you like it.
- ●上满一次链可打BB弹110-130粒,也可边射击边上链。

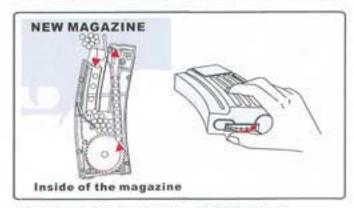

THE NEWEST EQUIPMENT

- The chain style semi-automatic cartridge magazine
- It can be loaded 150pcs BB balls for each time and the chain drives semi-automatically.

最新裝置

- 链带式半自动弹匣。
- 每次装88弹150粒。半自动上链。



Caution: the magazine is capable of containing 50 rounds.

确保弹匣朝上井将其牢固地连 接起来直到听到咯嚓一声。

until a click sound is heard.


Make sure to set the magazine

upwards and connect it firmly

注意: 弹匣可装50发子弹

SILINGINSTALLATION 安装背带



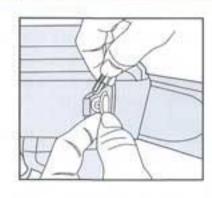


Buckle one end of the sling button on the sling ring of the rear, and buckle the other end on the sling ring of the gunstock.

将背带扣的一端,扣在后背带环上, 另一端扣在枪头前背带环上,

SELECTORLEVER AND SAFETY SETTING 选择控制杆和安全装置

CAUTION:

Set the selector lever correctly in position; otherwise malfunction may occur. 注意:将选择控制杆设置在正确的位置,否则将会发生故障。

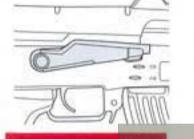

WARNING 警告

To prevent malfunction of the switch do not change the selector lever from semi to full auto while pulling the trigger.

为防止开关发生故障, 在被振机 时, 不要将选择控制杆从车自动 改到全自动, Safety setting (the trigger cannot be pulled.)

安全装置 (不能拉下扳机)

When you are not firing the gun or during storage always set during storage always set the selector to the safe position.

当你不射击或在装子弹 时,请将选择器设置在 安全位置。 Semi automatic 半自动

The gun will fire one shot each time the trigger is pulled.


每按一次扳机, 气枪 将发射一发子弹,

Bangl

Fully automatic (automatic firing) 全自动(自动射击)

The gun will fire automatically while the trigger remains pulled.

按紧扳机, 气枪将自动 射击。

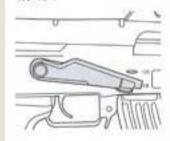

Do do do do

Da da da da . . .

IF THE BULLET IS BLOCKED 如果子弹被卡住




Return the hop up dial to the Normal position and insert the cleaning rod from the lead edge of the barrel.

将上旋调节控制盘转回到正常位置,并将清 弹器从枪管的子弹边缘插入。

Caution: since clogging bullets may jump out at a high speed .Always safety goggles and confirm safety.

注意:塞满的子弹可能会突然快速地蹦出来 因此一定要戴护目镜以确保安全。



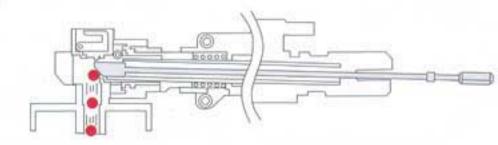

Be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.

注意:清弹器的尖角部分必须朝下,再取出塞满的子弹。