

# WARNING

★ Not to be sold to children under the age of 14.  
★ Read the following instructions before using.

①



Never point the gun at anyone, though the magazine is empty.

④



Never look into the barrel of the gun.

②



Never put your finger on the trigger unless you are prepared to fire.

⑤



Keep out of the reach of children.

③



Never shoot the hard article to avoid danger of reaction.

⑥




Empty the magazine when not in use.



# INSTRUCTION

①

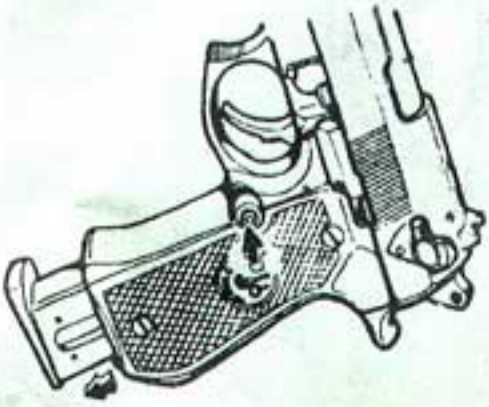

Press the catch to un-load the magazine as shown.

④




Push back the magazine.

②

[ Invert of Gun ]

Gas refiller down

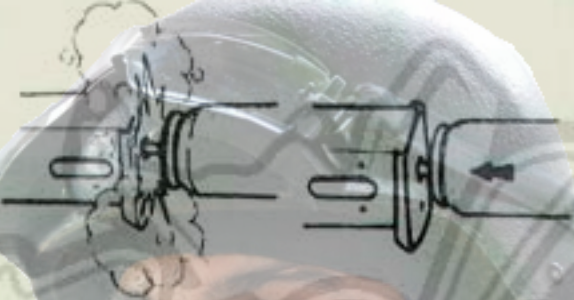

Press the gas refiller shortly. Make sure that the refiller fits in correct direction as the arrow shown.


⑤

[ Safety device. ]



Push down the safety latch, it can not fire.


③

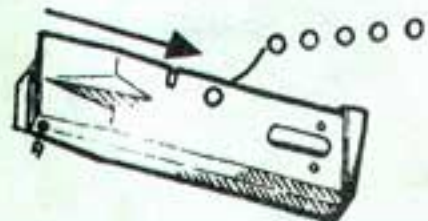

Two ways of Loading bullets.

⑥



[ Triple actions of fire ]

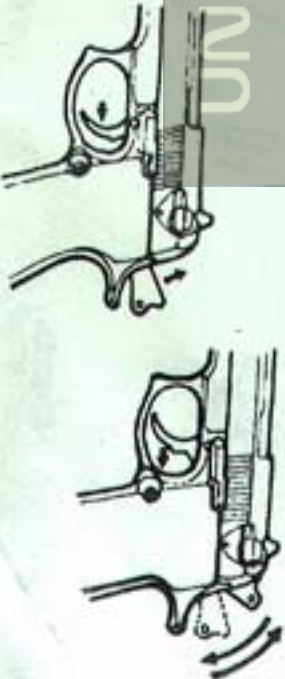

★ Push down the hammer and press the trigger.  
★ Press the trigger to fire



# PARTS

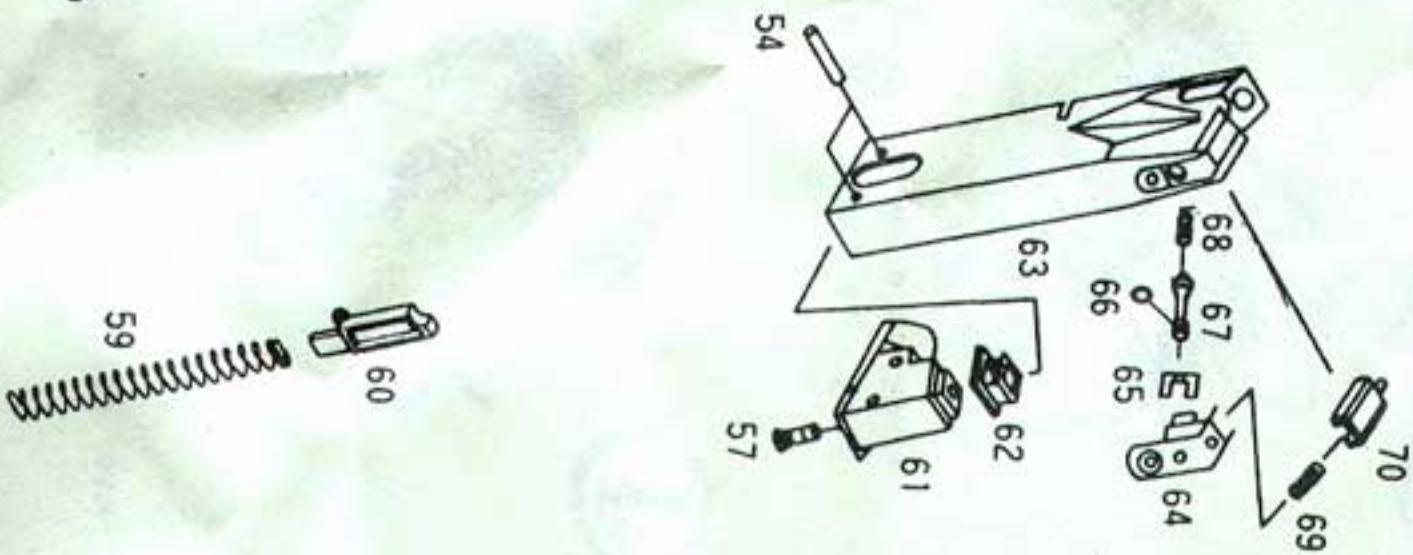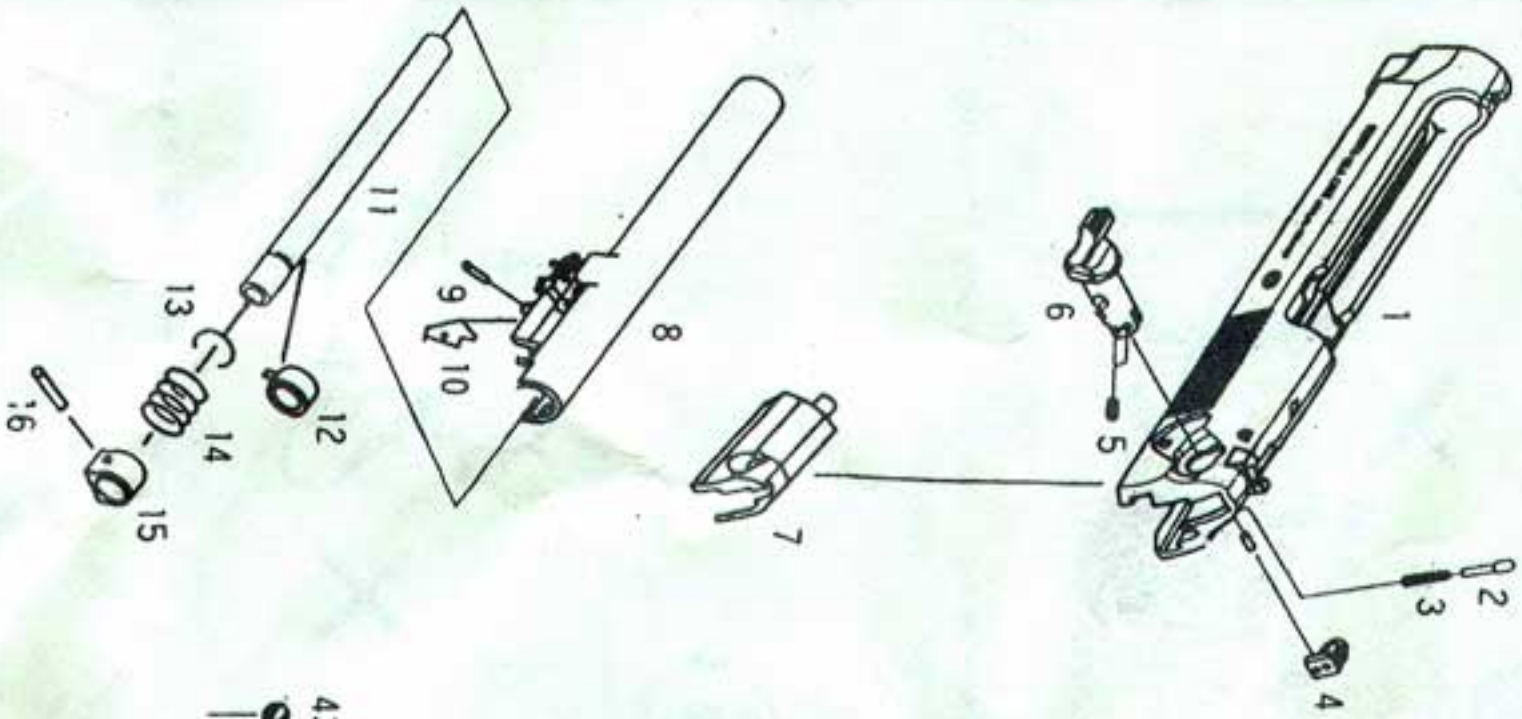



# ASSEMBLY


1

Press the magazine catch




2

Press the convex on the opposite side to loose the lock as the above right shown.

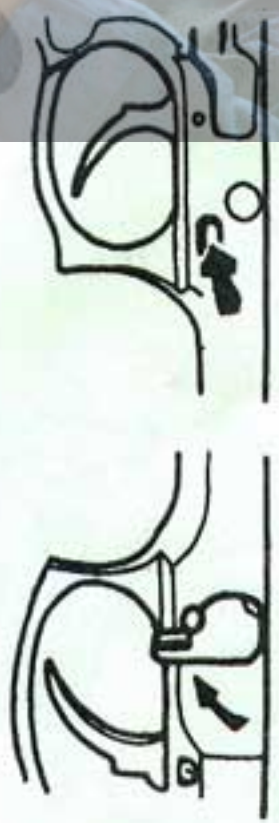


3

Pull forward for assembly.

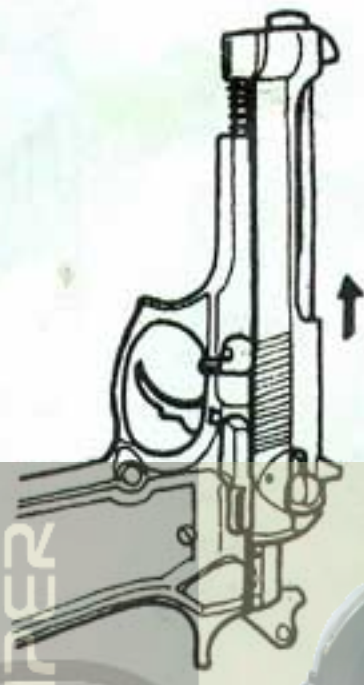

4

For safe reason, empty the gas when not in use.

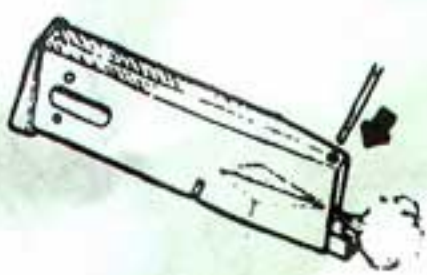

SOFT  
RESERVE