


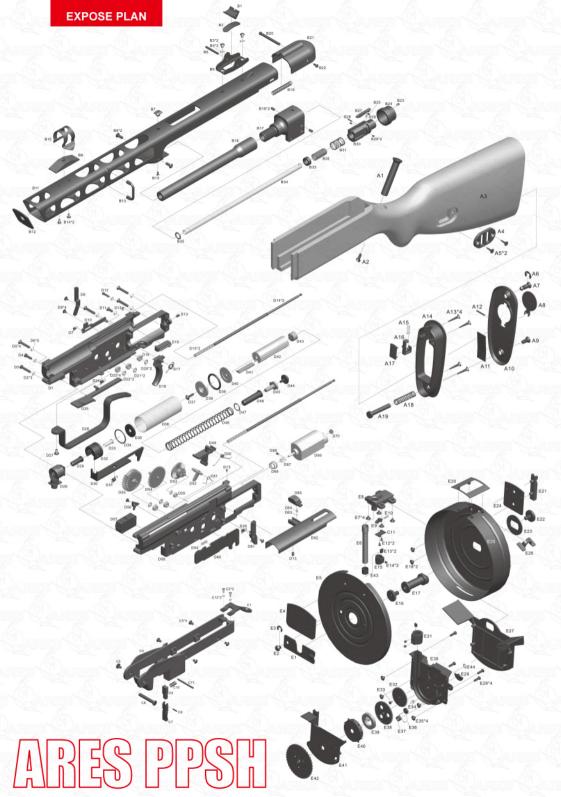




### WARNING • CAUTION


- · Do not aim or shoot a person or animal as the target.
- · Avoid pulling the trigger carelessly.
- Always put the gun in a case or bag when you carrying it.
- · Always set the switch lever to the safety position.
- · Do not look into the gun muzzle.
- Always wear eye protective gear.
- · Store the airsoft gun at the places out of reach by children.
- · Do not disassemble or modify the airsoft gun.
- · Misuse or careless use may cause serious injury.
- · Never point or shoot at people or animals.
- · Disassembling or modifying the gun may generate danger.
- · Wear eye protection during all times.
- · We are not responsible for any malfunction, accidents, injuries or repair cost resulting from misuse, or by disassembly and modification of the gun.





# USE THE SPECIFIED BATTERY FOR YOUR GUN. 8.4V 1500MAH MINI (2/3A) NUNCHUCK

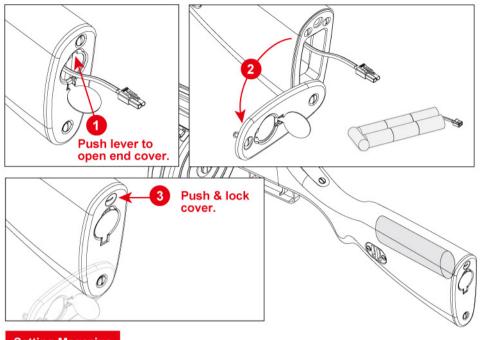


# **Setting Magazine**

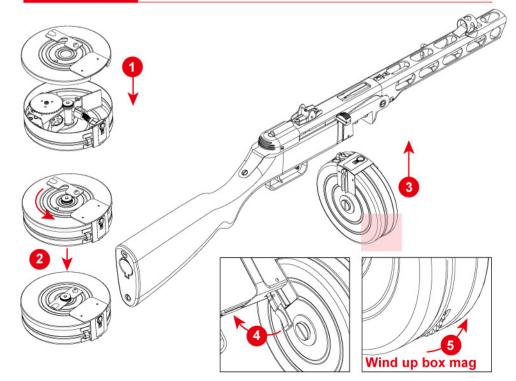


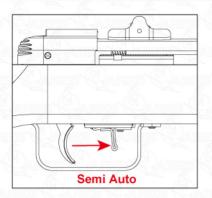

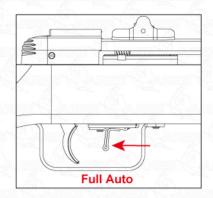


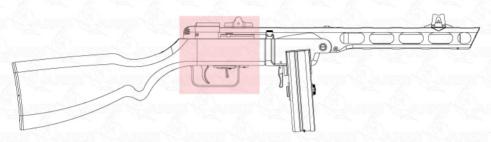


## **Hop Up Adjustment**

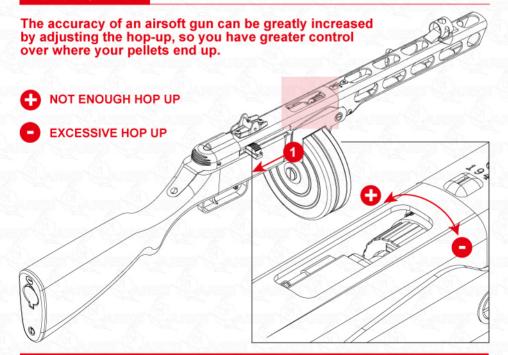


For more detail information please visit our website: www.aresairsoft.com

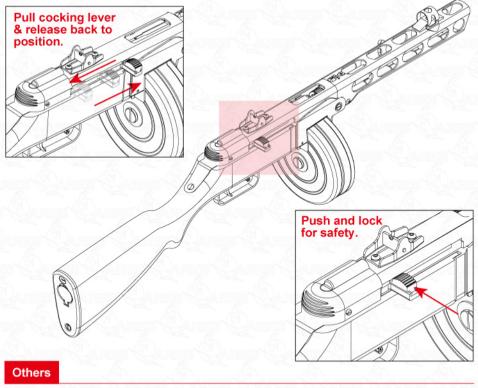

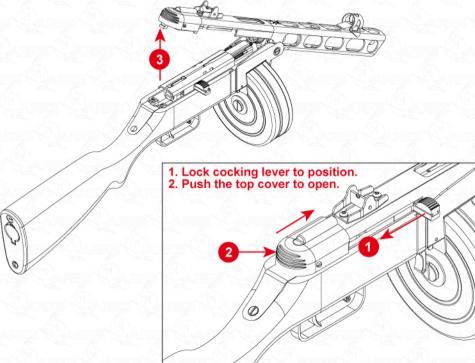

#### DATA OF ARES PPSH ELECTRIC GUN

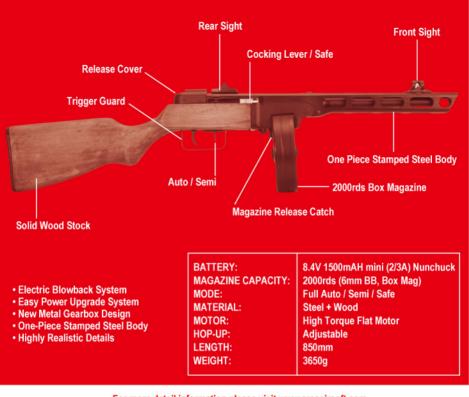

For more detail information please visit www.aresairsoft.com







