## G&G ARMAMENT http://www.guay2.com












CONTENTS




• WA	RNING				P2.P3. P4. P5
· COI	MPONE	NTS			P6.P7
• BAT	TERYS	SETTING			P8
• BAT	TERYT	YPES			P9
• MA	GAZINE	LOADING			P10
• MA	GAZINE	INSERT			P11
• FIR	ING MO	DE			P12
·SIG	HTADJ	USTMENT			P13
· DET	ACHAE	BLE SIGHT			P14
٠но	P-UPAN	ID MOTOR			P15
·FIE	LD STR	IPPING			P16.P17
·TRI	GGER	SUARD			P18
• BU	TSTOC	KFOLDIN	G		P19
· Q.D	.(QUICI	K DETACH	) SLING SWIVE	≣L	P20
·SPE	C. OF	3R300			P21
·CAL	JTION				P23

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.



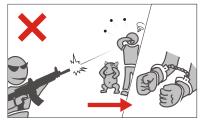

You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a " practical joke" Always observe good manners and enjoy fun sport shooting.

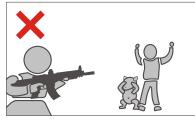

Never direct the muzzle towards a person and animal or any other dangerous direction



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

2

## <u> ↑警告</u>



Make sure to attach the barrel and safety cap to Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.

## 



Safety procedure

- 1 Attach the safety cap to the muzzle.
  2 Set the selector lever to the safety position.
  3 Remove the magazine.
  4 Remove the battery.



Looking into the muzzle is extremely dangerous regardless of BB's having been installed or not.


If you get hit in the eye by a BB bullet,
you may in worst case, loose your eye sight.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.



## <u>↑警告</u>

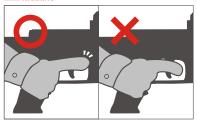

Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

## <u>♠警告</u>



When shooting the air guns for target practice when shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear. Also, pay attention to ricochets. It is important to pay attention to third parties other than the participants.

## <u>♠警告</u>



There may be cases where some BBs remain in the gun after the magazine has been disconnected.

After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

## <u> ↑警告</u> WARNING



When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.



Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.



Disassembling or modifying the gun may adversely affect the performance and make it dangerous.

■ WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL Always read through this manual before operation.



# Battery setting and battery type



1



Remove the Q.D. Sling swivel and sling swivel base.(if attached)

2



Pull open the handguard slightly with a proper tool.

3



Move handguard forward and take off.

8

9

1



Connecting the connectors.

5



Put the handguard back on.

Recommended battery type:



V-type 9.6V 1100mAh Ni-Cd rechargeable battery U-type 12V 1100mAh Ni-Cd rechargeable battery

Battery setting and battery type

\_

# Magazine loading





Open the cover on the top of the magazine.



Fill BBs till it's full.



Close the cover and turn the gear at the bottom of magazine all the way till the clicking sound changes.

10

11





**To insert the magazine:** Insert a loaded magazine upward and make sure it's properly seated.



To release the magazine: Hold the magazine then press the magazine catch and pull the magazine out.

Magazine insert and release

## • Firing mode and safety



1



**Full auto:**Automatically firing when trigger remains pulled.

2



**Semi auto:**One shot each time when trigger is pulled.

3



**Safety on:** Trigger can not be pulled and will not fire.

12

13



Push and turn the tool(included) to adjust the front sight.



Windage knob: for rear sight left/right adjustment. Elevation knob: for rear sight up/down adjustment.

Battle sight(flip manually)



For normal shooting



For pricision shooting

Front sight and rear sight adjusting

# Detachable front sight and rear sight









Unscrew and take the fixing screws off with a hexagon key(included) and remove the fornt sight and rear sight.

14


15

1



Open the dust cover.

2

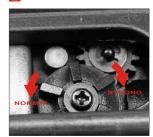

Turn the adjust dial to variate the hop-up effect.



When the gear noise become shrilly, turn the adjustment screw on the bottom of the grip.


Hop-up and mortor gear engagement adjusting

ī

# • Field stripping



1

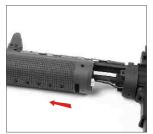

Take off the handguard.

2



Remove the connector housing with a proper tool. Mine the electrode when take off the connector housing.

3



Pull the receiver pivot pin up.

16

17

1



Move the upper receiver forward till it stuck then pull the charging handle backward and lift up.

5



Keep moving upper receiver forward till separate with lower receiver.

6



Pull the hop-up unit and inner barrel out.

• Field stripping

# Trigger guard









Depressing the trigger guard plunger with a proper tool and open the trigger guard.

18

19









Fold the buttstock to the left side of the gun.

3



Press the buttstock base with the thumb and pull the buttstock up.

Buttstock folding


\_

# Q.D.(Quick Detach) sling swivel







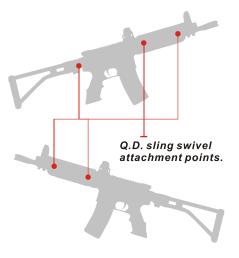

Sets of Q.D. Sling swivel and sling swivel base are included in this package, and there are **5** positions on the gun for Q.D. Sling swivel attachment.

20

21

■ Built material: Al6061 / Magnesium / Plastic

■ Magazine capacity: 450 rounds

Overall length: GR300L - 918mm (when stock is extended)

GR300S - 805mm (when stock is extended)

■ Inner barrel length: GR300L - 420mm

GR300S-307mm

■ Weight: GR300L - 3050g

GR300S - 2950g

■ Muzzle velocity: 330 fps.with 0.2g BB

• SPEC. of GR300



## CAUTION

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to catch your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Turning hop-up dial excessively causes clogging of BB. Keeping pulling the trigger with BB clogged damages the piton and gears.

Never hold the gun sideways as BB will curve right or left.

Disassembly is designed for appropriate maintenance, not for modification.

**-CAUTION** 



Guay Guay Trading CO., LTD.

www.guay2.com

Please	consult	your	dealer	or	G&G	for	overhaul	maintenance
and tec	hnical g	uidan	ce.					

DEALER			