

### SD2/5



### A2/4



### SD3/6



### A3/5




(A3/5,SD3/6用)小電池

(A2/4,SD2/5用)大電池

Small/Regular Capacity battery (for A3/5,SD3/6)  
8.4V-600-1100MAh  
9.6V-600-1100MAh 電池




Large/High Capacity battery (for A2/4,SD2/5)  
8.4V-1300-2400MAh  
9.6V-1300-2400MAh 電池

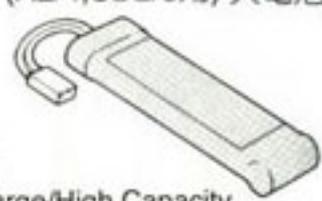

小電池 慢充電器  
Charger for Small size battery



大電池慢充電器  
Charger for Large size battery

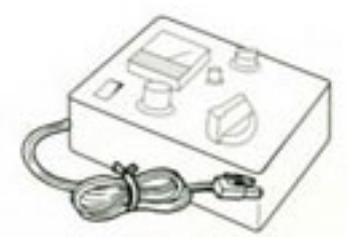

NO. MC-35 9.6V  
AC/DC快速充電器  
AC/AD Quick Charger



## BATTERY POWERED AIR GUNS

Battery and charger sold separately (電池、充電器另購)


## ■ 裝入電池方法 Install Battery and Replace Fuse

A2/4 SD2/5




將托底板向下壓電池插頭向外拉出  
Push down and take off the butt-plate,  
then take the wire, battery connector  
and fuse container out of the buttstock.

### 更換保險絲 FUSE REPLACEMENT

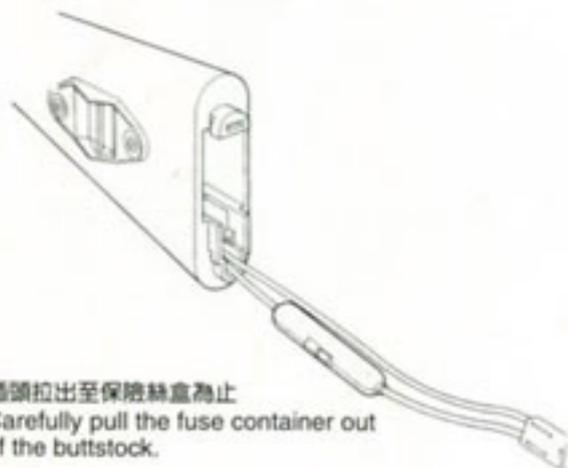


1 插頭拉出至保險絲盒為止  
Carefully pull the fuse container out  
of the buttstock.

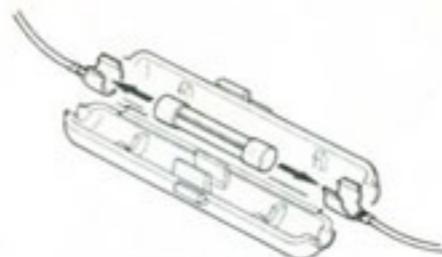


2 打開保險絲盒將保險絲裝上  
Open the fuse container and replace  
the fuse.

### 更換電池 BATTERY INSTALLATION

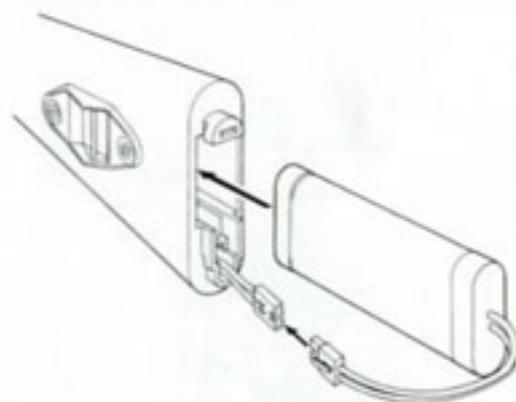

1 將電池插頭接合後再放入電池  
Connect the battery to the battery  
connector carefully.

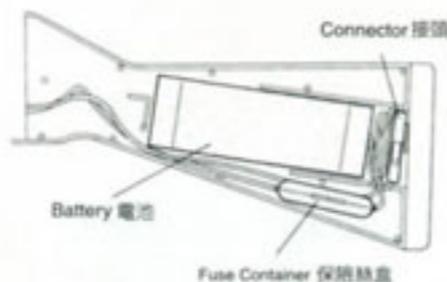


2 電池與保險絲組合完成後位置  
Carefully put the battery and wire  
back into the buttstock.


SD3/6

### 更換保險絲與電池 BATTERY AND FUSE REPLACEMENT


1 將固定銷拆下  
Pull out the locking pin of  
the handguard.

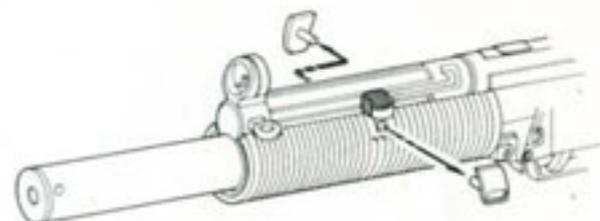


2 將下護木往前拉出  
Slide the handguard forward.

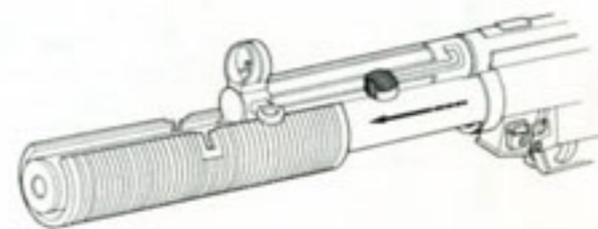


3 將電池與保險絲接合後，  
再裝入護木裡  
(Left) Connect the battery  
to the battery connector.  
(Right) Open the fuse container  
and replace the fuse.  
Slide the handguard backwards  
and re-insert the locking pins.

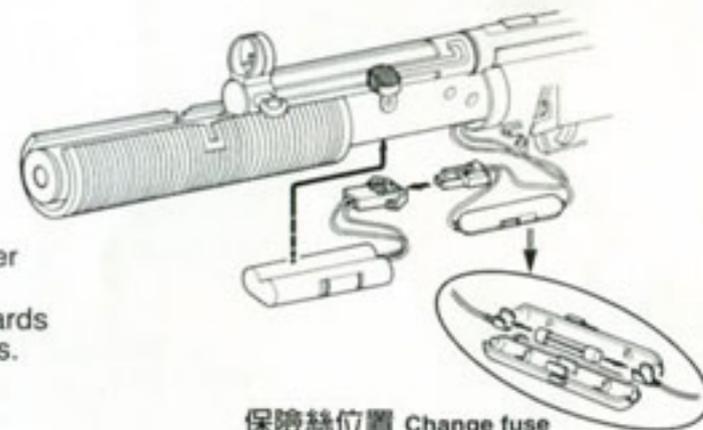


4 組裝後完成位置  
THE POSITION OF THE BATTERY AND FUSE

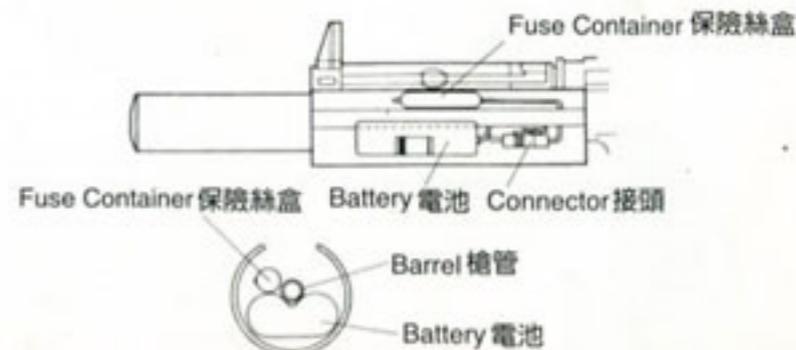

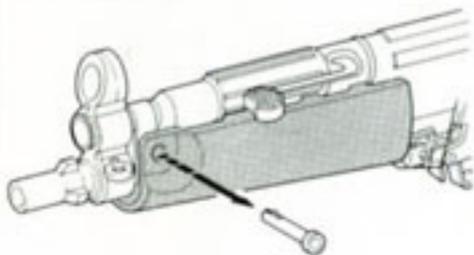


將護木插銷拉出  
Pull out the pin of the handguard.

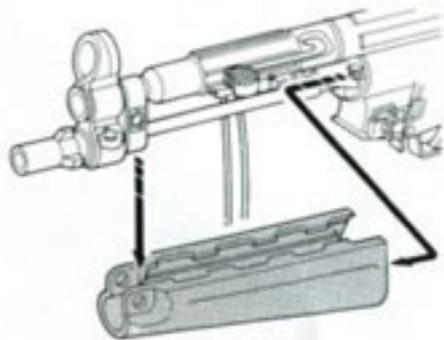

護木前端先下拉再整個往前拉出  
Gently pull the front end of handguard down. Slide the handguard forward and take it out.

**更換保險絲 FUSE REPLACEMENT**

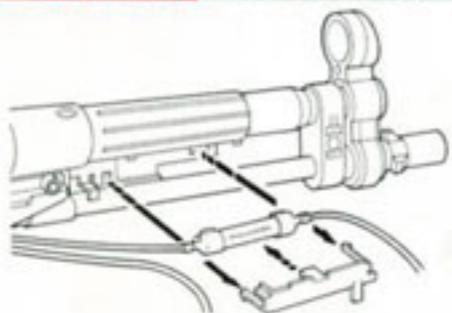


1 保險絲固定座折裝方式  
Carefully take the fuse out from the fuse socket located at the bottom of the cocking tube.




2 更換保險絲  
Replace the fuse.


**更換電池 BATTERY INSTALLATION**

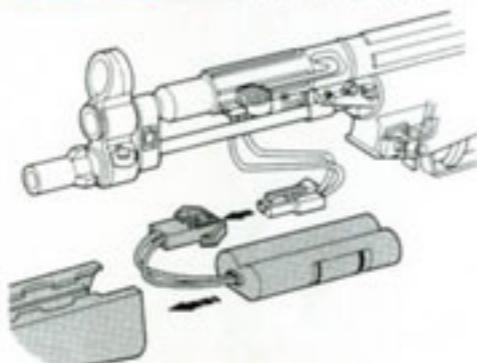


1 將電池接頭接合後，放入下護木裡。  
Connect the battery to the battery connector.

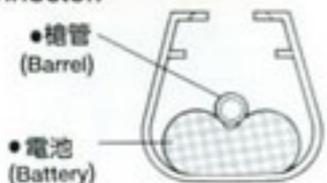



2 組裝後完成位置  
THE POSITION OF THE BATTERY AND FUSE

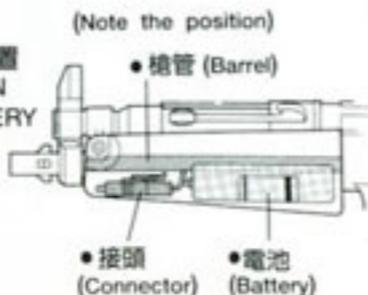

**可動作部份 Movable Parts**

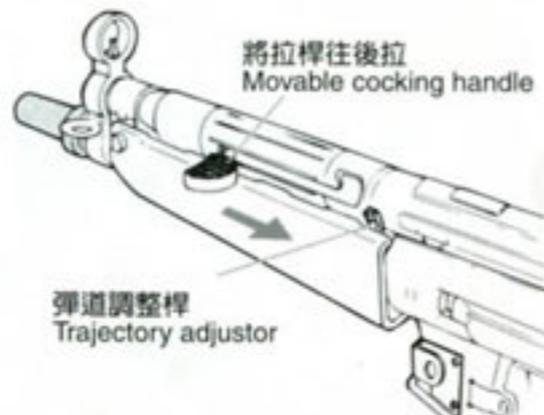

**準心調整 Setting the Sight**

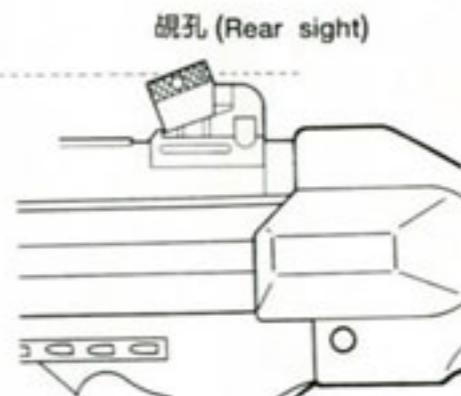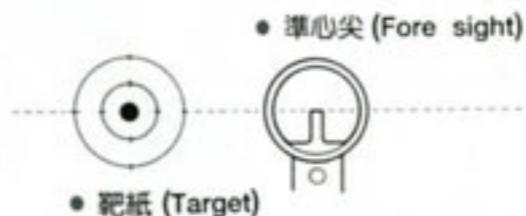

1. 先把螺絲鬆開 Loosen the screw.



3. 左右旋轉即可將準門左右移動  
Turn the screw clockwise to move the rear sight to the left, Counter-clockwise move it to the right.

**馬達間隙調整 Fine Adjustment of Gear Engagement**



以六角板手將馬達齒輪間隙調整到最佳位置  
Use Allen wrench to adjust the motor and gear to the best engagement.


## ■ 單連發選擇方式 Selector and Safety Lever



## ■ 彈夾上下方式 Load and Unload the Magazine



## ■ Hop-up 調整 Trajectory Adjustment (Hop Up)

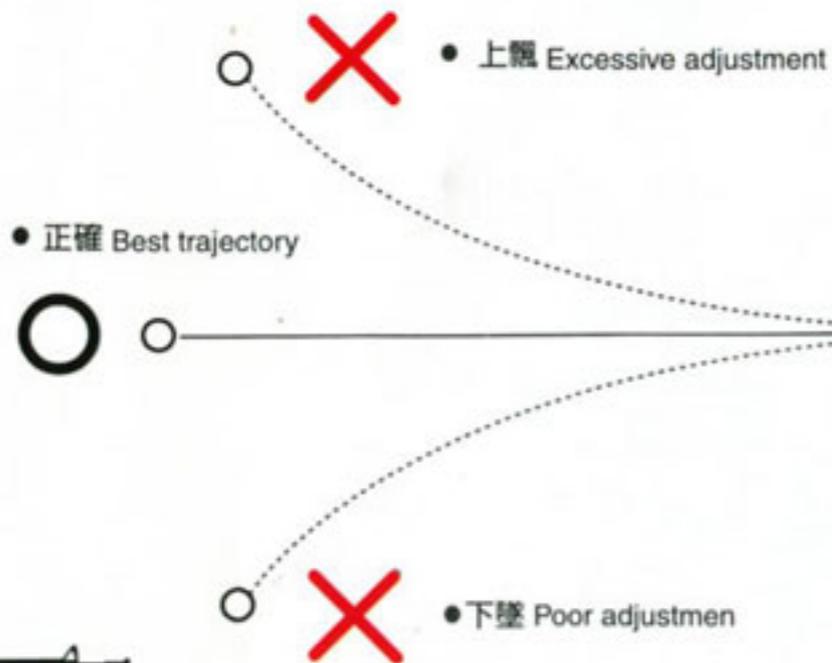


### 調整法

子彈如果向上飄，調整桿請往後拉，向下墜請往前推。子彈向前呈一直線才是正確的方法。有了HOP-UP後，讓您的射擊準確度大大的提升。



### Adjustment



Push the Trajectory Adjustor to low position. Switch the Firing Selector on full Auto position and fire. Slowly adjust the Trajectory Adjustor for the best shooting trajectory

A2/4 A3/5共用

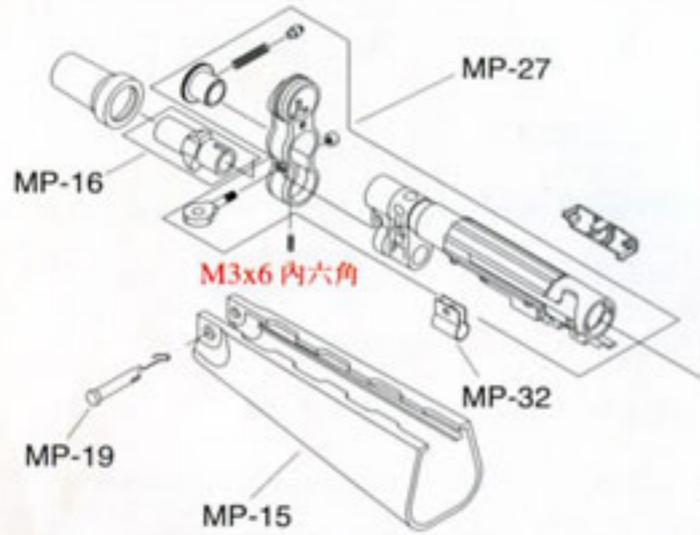

SD2/5 SD3/6 共用

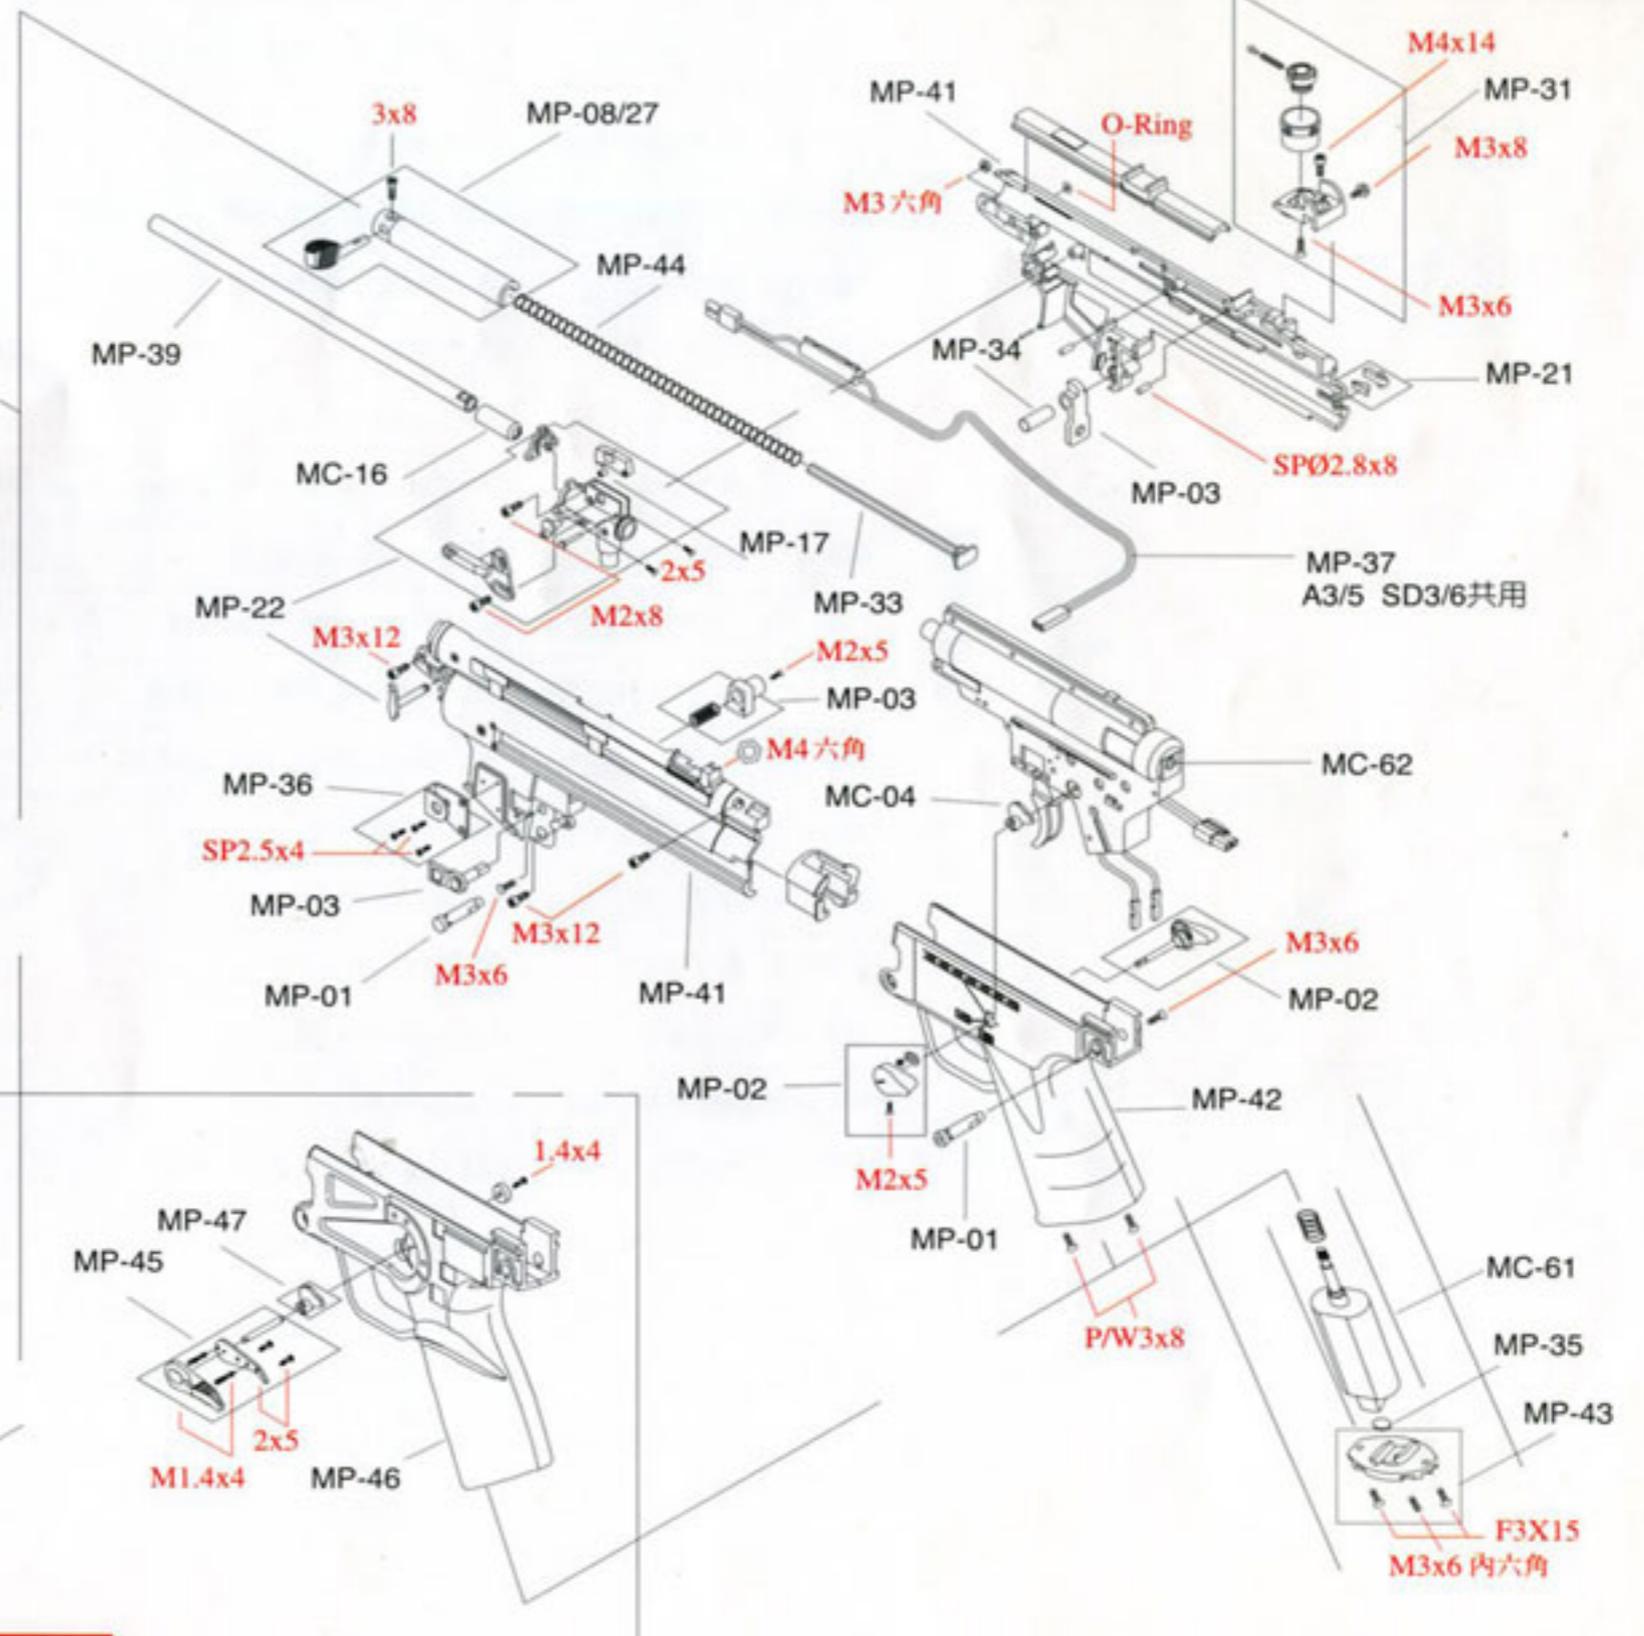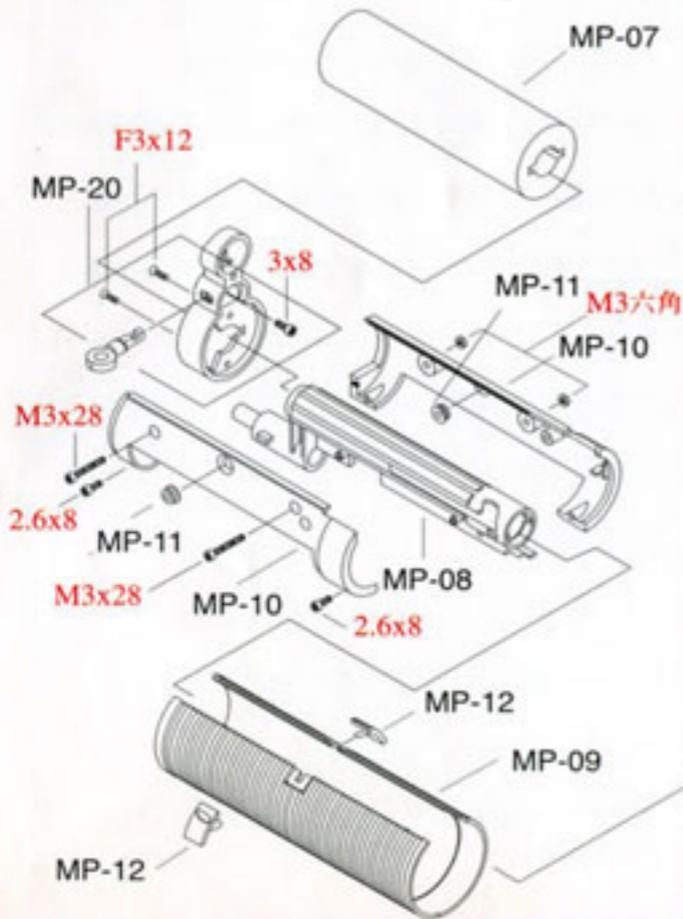

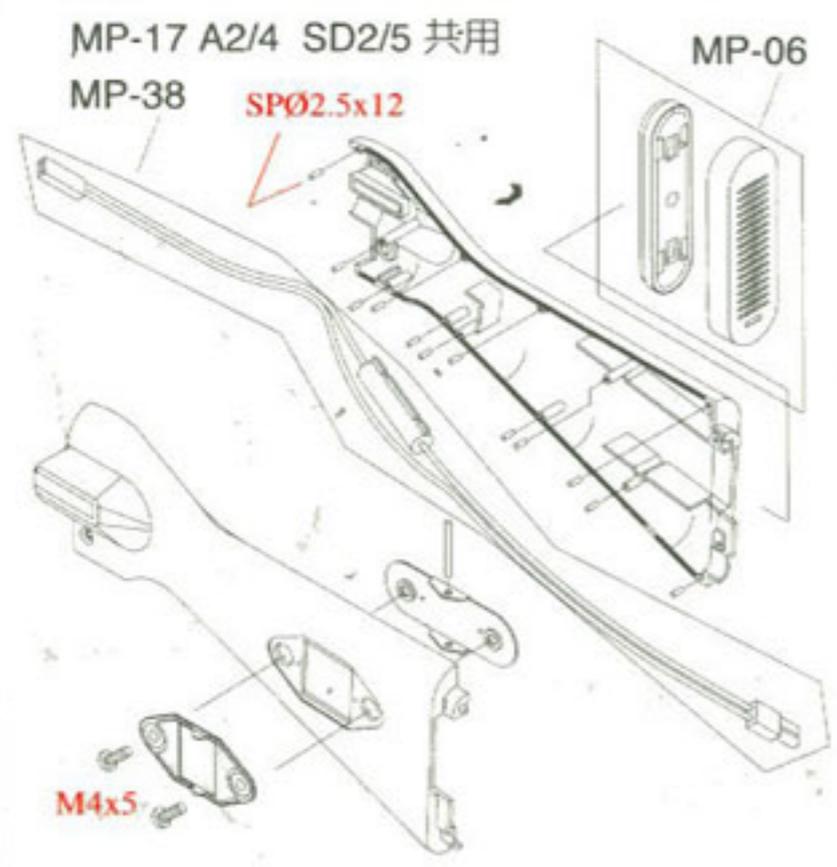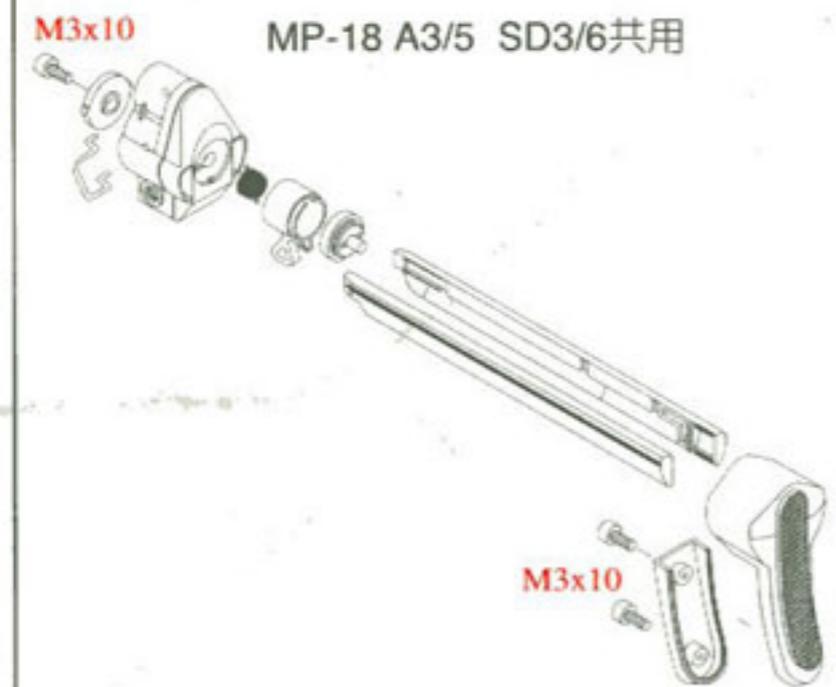

NO	品名	DESCRIPTION	NO	品名	DESCRIPTION
MP-01	槍機箱結合銷	Locking Pin	MP-32	槍管固定環套	Inner Barrel Bracket
MP-02	現今型射擊選擇鈕	Fire Selector Lever (Current)	MP-33	槍機複進簧導桿	Cocking Handle Spring Guard
MP-03	彈匣卡筍組	Magazine Release Button Set	MP-34	卡筍套筒	Magazine Release Lever Sleeve
MP-06	固定托底板	Butt Plate	MP-35	馬達墊片	Motor Spacer
MP-07	滅音管組	SD Fake Silencer	MP-36	戰術槍背帶扣片	Sling Bracket
MP-08	SD拉柄組	SD Cocking Handle/Tube Set	MP-37	A3/5 SD3/6電線組	Handguard Battery Wire
MP-09	SD下護木組	SD Handguard	MP-38	A2/4 SD2/5電線組	Buttstock Battery Wire
MP-10	SD護木固定架	SD Hanguard Bracket	MP-39	A槍管	A Barrel
MP-11	SD護木插銷橡皮墊圈	SD Locking Pin O-Ring	MP-40	SD槍管	SD Barrel
MP-12	SD護木固定銷	SD Handguard Locking Pin	MP-41	鋁合金槍身	Metel Receiver
MP-15	三角護木A4,A5	A Handguard	MP-42	現今型板機握把	Lower Housing(Current)
MP-16	金屬防火帽(3lug)	3 Lug Muzzle	MP-43	馬達散熱底板	Heat Sink Motor Plate
MP-17	固定槍托	Fixed Buttstock	MP-44	槍機拉柄複進簧	Cocking Handle Spring
MP-18	伸縮托	Retractable Stock	MP-45	早期型射擊選擇鈕	Fire Selector Lever(Early)
MP-19	HK護木插銷	Locking Pin	MP-46	早期型板機握把	Lower Housing (Early)
MP-20	SD準星座(金屬)	SD Front Sight Assernbly	MP-47	射擊選擇片(A)	Selector Plate
MP-21	伸縮托檔片	Stock Stop Set	MC-04	射擊選擇片	Selector Plate
MP-22	HOP-UP組	Trajectory Adjustment Group	MC-16	含彈橡皮	Hop Bucking
MP-27	拉柄組	Front End/Cocking Tube Sets	MC-17	HOP緩衝膠圈	Hop Spacer
MP-30	200發高容量彈匣	200 Rounds Hi-Cap Magazine	MC-61	馬達	Motor
MP-31	覘孔組	Rear Sight Sets	MC-62	GEAR-BOX完成品	Complate gear box sets

PDF CREADO POR SNIPER, MATADORES AIRSOFT CLUB  
[www.matadoresairsoft.com](http://www.matadoresairsoft.com)