

# GLADIATOR AG SERIES USER MANUAL



www.aps-concept.com




COMPROMISE IS NOT AN OPTION

## GLADIATOR

— MODEL : AG SERIES —



OVERALL PARTS 01

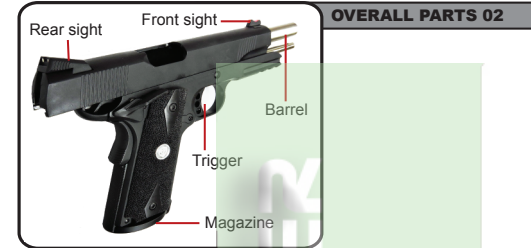

OVERALL PARTS 02

▲ PLEASE READ THIS MANUAL COMPLETELY. REMEMBER TO TREAT THIS AIRSOFT WITH THE SAME RESPECT AS A FIREARM. ALWAYS CAREFULLY FOLLOW THE SAFETY INSTRUCTIONS FOUND IN THIS MANUAL AND KEEP IT IN A SAFE PLACE FOR FUTURE USE.

## GLADIATOR

— MODEL : AG SERIES —



MAGAZINE PARTS




Gas Refill

- Fill the gas in vertical position.


## GLADIATOR

— MODEL : AG SERIES —

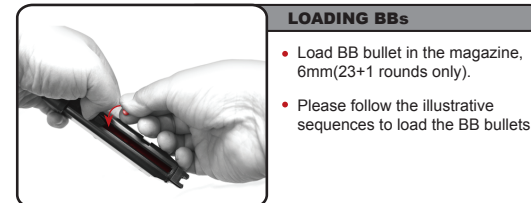

LOADING BBs

- Load BB bullet in the magazine, 6mm(23+1 rounds only).
- Please follow the illustrative sequences to load the BB bullets.

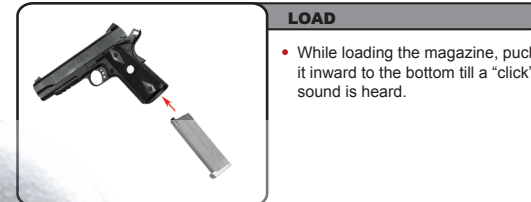

LOAD

- While loading the magazine, push it inward to the bottom till a "click" sound is heard.



UNLOAD

- Press the magazine release catch to unload the magazine.

## GLADIATOR

— MODEL : AG SERIES —



FIRST LOAD & FIRING

- Pull the slide backward to a specific position, then release the slide forward to load the bullet in the chamber.




FIRST LOAD & FIRING

- When the Chamber is load, grip the safety and press the trigger to fire.

▲ Miss handle the Airsoft may condition serious injury or death. Please read the safety instruction before use.

## GLADIATOR

— MODEL : AG SERIES —

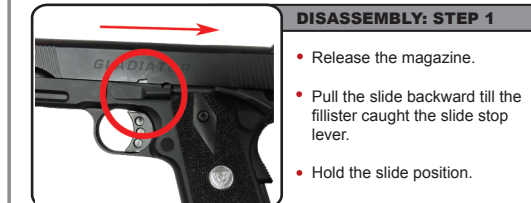

DISASSEMBLY: STEP 1

- Release the magazine.
- Pull the slide backward till the follower caught the slide stop lever.
- Hold the slide position.



DISASSEMBLY: STEP 2

- Remove the slide stop lever by punching out the pin from the other side.




DISASSEMBLY: STEP 3

- Remove the slide stop lever, push the slide forward to separate it from the body.

## GLADIATOR

— MODEL : AG SERIES —


▲ WARNING: OBSERVE SAFE AIRSOFT HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. APS LIMITED SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH, OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.

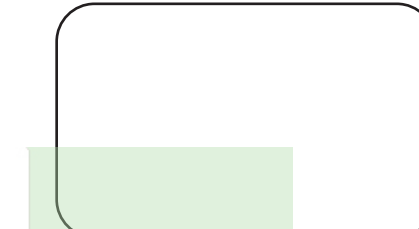

www.aps-concept.com  
Manufactured & Distributed by  
**APS LIMITED**  
4/F, Wing Kwai Fty. Bldg.  
2-8 Wang Wo Tsai St, Tsuen Wan  
N.T. HONG KONG SAR  
Production by APS Hong Kong  
Made in China  
20130524

## GLADIATOR

— MODEL : AG SERIES —

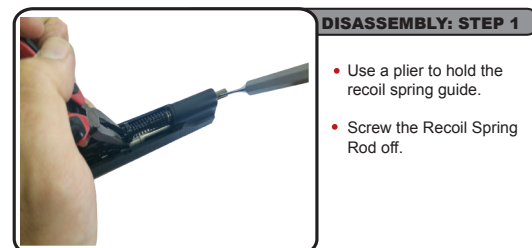

DISASSEMBLY: STEP 1

- Use a plier to hold the recoil spring guide.
- Screw the Recoil Spring Rod off.




DISASSEMBLY: STEP 2

- Remove the Recoil Spring Rod.

▲ DO NOT BRANDISH OR DISPLAY AIRSOFT IN PUBLIC. IT MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A BEFORE USE. IF PRODUCT BECOMES DAMAGED OR BROKEN IN ANY WAY, DISCONTINUE USE. USING DAMAGED PRODUCT MAY CAUSE DAMAGE OR LEAD IT INJURY.


## GLADIATOR

— MODEL : AG SERIES —

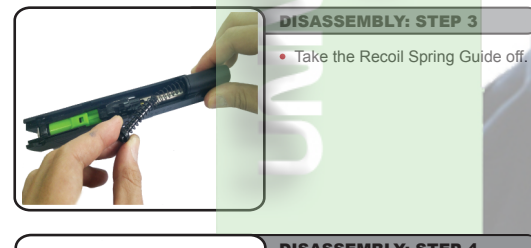

DISASSEMBLY: STEP 3

- Take the Recoil Spring Guide off.

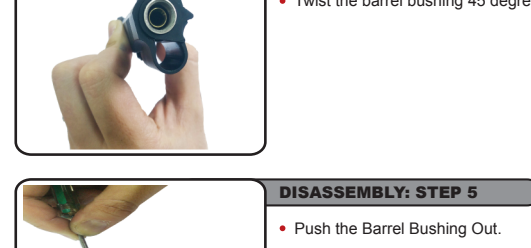

DISASSEMBLY: STEP 4

- Twist the barrel bushing 45 degree.




DISASSEMBLY: STEP 5

- Push the Barrel Bushing Out.

## GLADIATOR

— MODEL : AG SERIES —

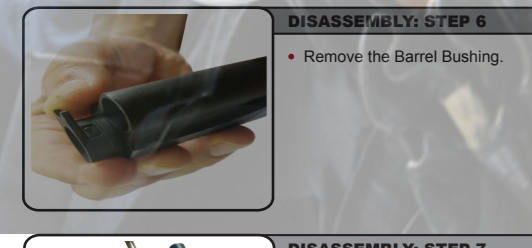

DISASSEMBLY: STEP 6

- Remove the Barrel Bushing.



DISASSEMBLY: STEP 7


- Remove Recoil Spring Guide and the Barrel Bushings.



DISASSEMBLY: STEP 8

## GLADIATOR

— MODEL : AG SERIES —

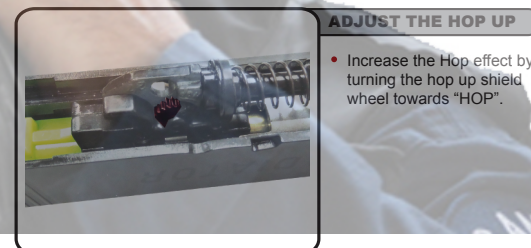


ADJUST THE HOP UP

- Increase the Hop effect by turning the hop up shield wheel towards "HOP".

## GLADIATOR

— MODEL : AG SERIES —

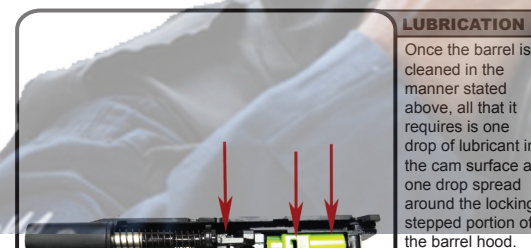

LUBRICATION

Once the barrel is cleaned in the manner stated above, all that requires is one drop of lubricant in the cam surface and one drop spread around the locking stepped portion of the barrel hood.

Put one drop in each rail and stand the slide up front sight down to let it run the length of the slide rails.

Use a small dab of molybdenum grease on the surfaces where there is metal-on-metal contact, like the firing pin safety plunger and striker heel.

▲ READ ALL INSTRUCTIONS AND WARNING IN THIS MANUAL BEFORE USING THIS AIRSOFT. BUYER AND USER HAVE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRSOFT. THIS PRODUCT IS INTENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER.

## GLADIATOR

— MODEL : AG SERIES —



SAFE

- Push the safety lock up as Safety "On".
- Push the safety lock down as Safety "Off".



FIRE

- When you are ready to fire, Push the safety off, push the hammer down, hold the grip safety, point to the firing direction and press the trigger.

## GLADIATOR

— MODEL : AG SERIES —

