





THE REPLACEMENT PARTS WILL BE AVAILABLE AT OURS LOCAL DISTRIBUTOR AND DEALERS

# FIRING MODE / SAFETY

- Switch to firing mode
  Pull the cocking lever
  return the cocking lever to activate the bolt
  One shot is available and pull the trigger to fire
  Repeat Step 1~4 for another shots

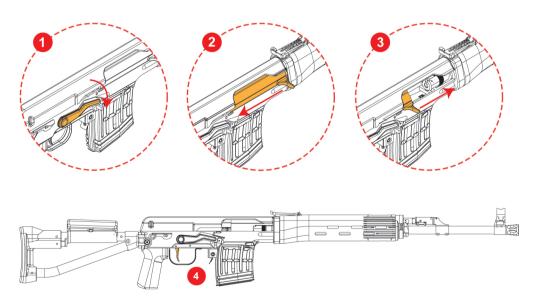

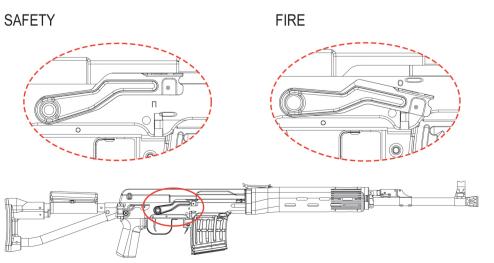


## SETTING MAGAZINE

## **Installing Magazine**




### **Detaching Magazine**

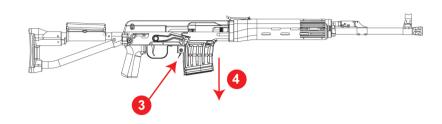


## HOP UP ADJUSTMENT

# **EXCESSIVE HOP UP**

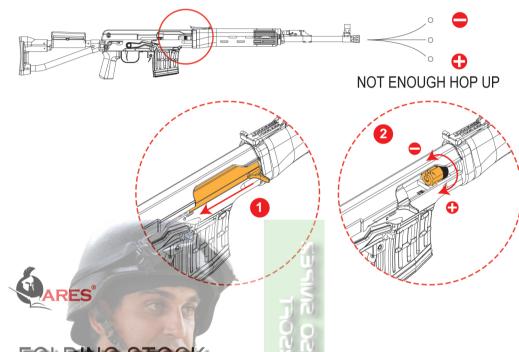



# FOLDING STOCK

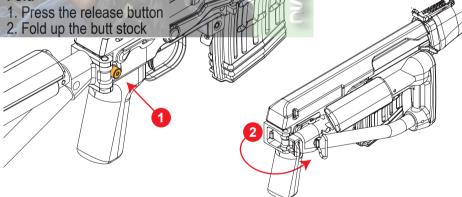

### Unfold

 3. Press the lever to unfold the butt stock



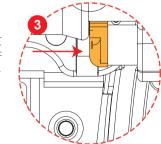

# CHEEK PAD ADJUSTMENT

1. Pull the cheek pad backward 2. Rotate the cheek pad to the specified position and release to lock.

