

XM18 AUTOMATIC ELECTRIC GUN SERIES AIR SPORT GUN



Emulational High-powered Nicety

INSTRUCTION MANUAL 说明书



- 在操作之前必须阅读这些说明书
Always read through this manual before operation.



警告 WARNING:



18岁以上年龄才能使用
Only for 18 years of age or older

18岁以上年龄才能利用这支气枪比赛使用
Operation of this gun for competition use restricted to users of 18 years of older.



注意受损伤
Injury caution

因为BB 弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。
Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.



注意熟读警告指示手册
Careful reading of handling cautions and instruction manual

在操作之前要细心读熟警告手册和指示手册操作气枪时必须认识警告指示
Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.


XM8 AUTOMATIC ELECTRIC GUN SERIES AIR SPORT GUN




Emulational High-powered Nicety

INSTRUCTION MANUAL

说明书

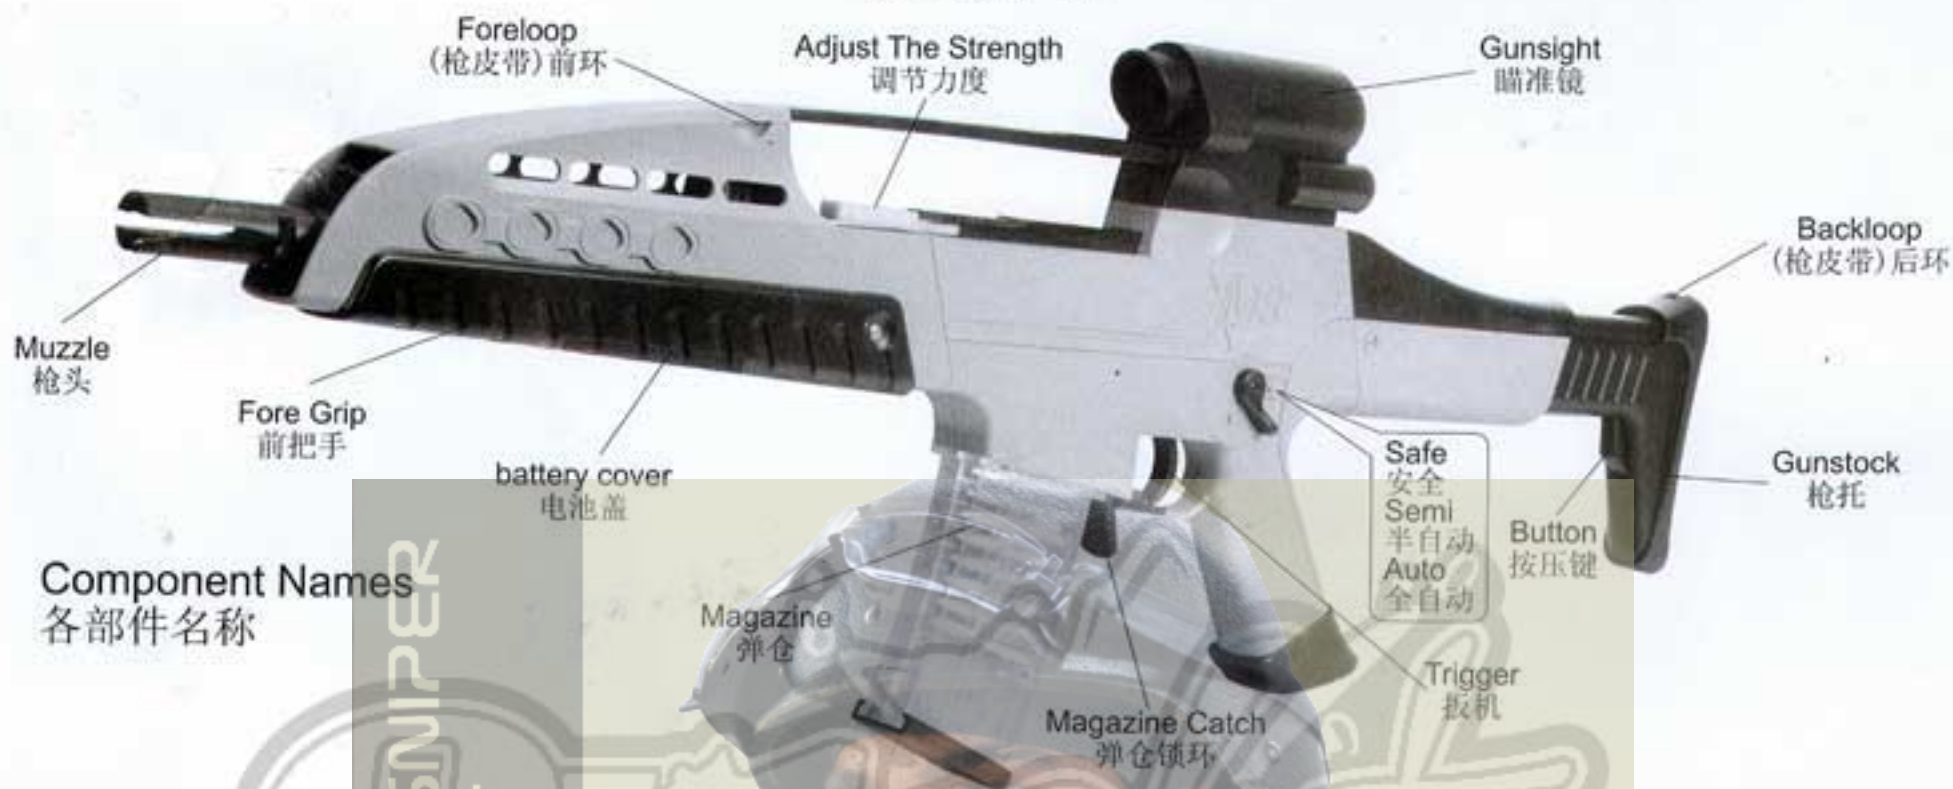


Component Names 各部件名称

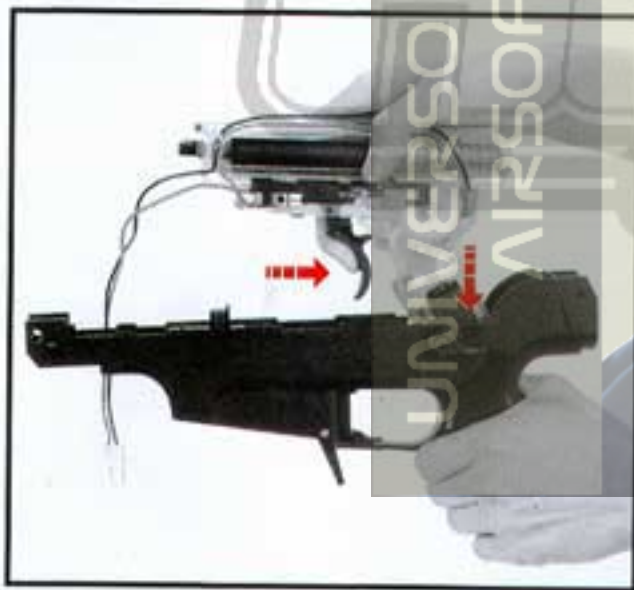

1. Pull the trigger and install into the frame
扳机向后扣动, 装入枪身



2. Use screwdriver to fasten the grip bottom to the grip
用螺丝批拧紧手把底部和枪身

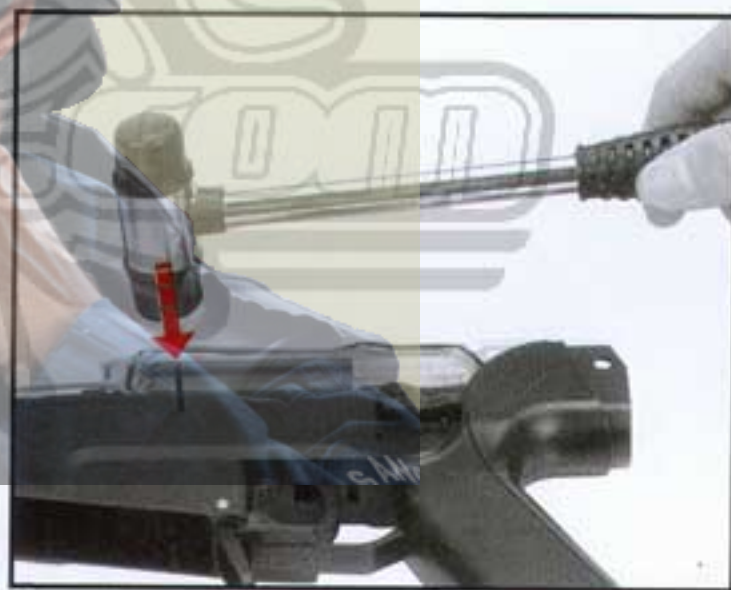

3. Lock the part in position
锁紧部件




4. Install the barrel
安装枪管




5. Push forward and then down to lock
向前推, 然后向下扣紧




6. Diagram of installed barrel
枪管安装完成图

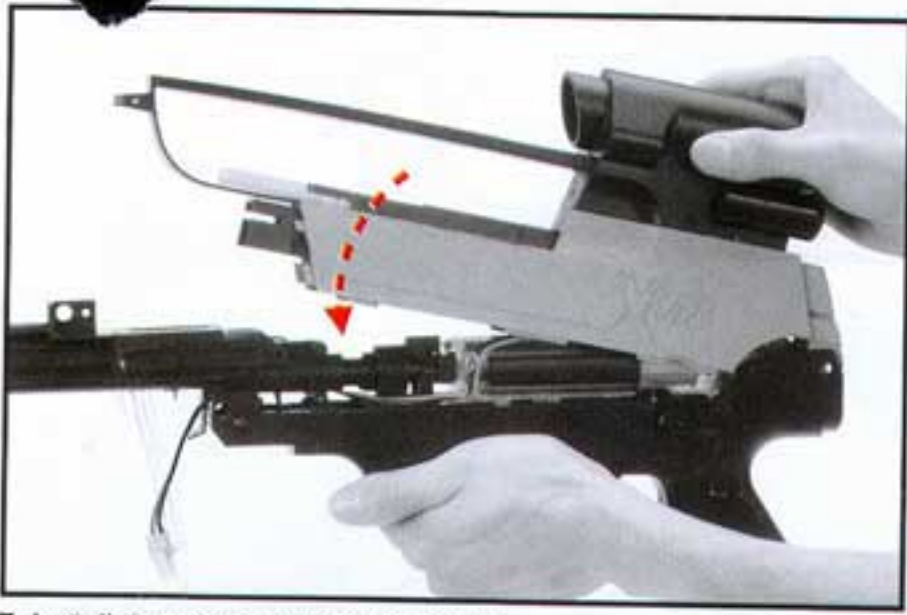


7. Install the part as the figure shows
部件按图示安装

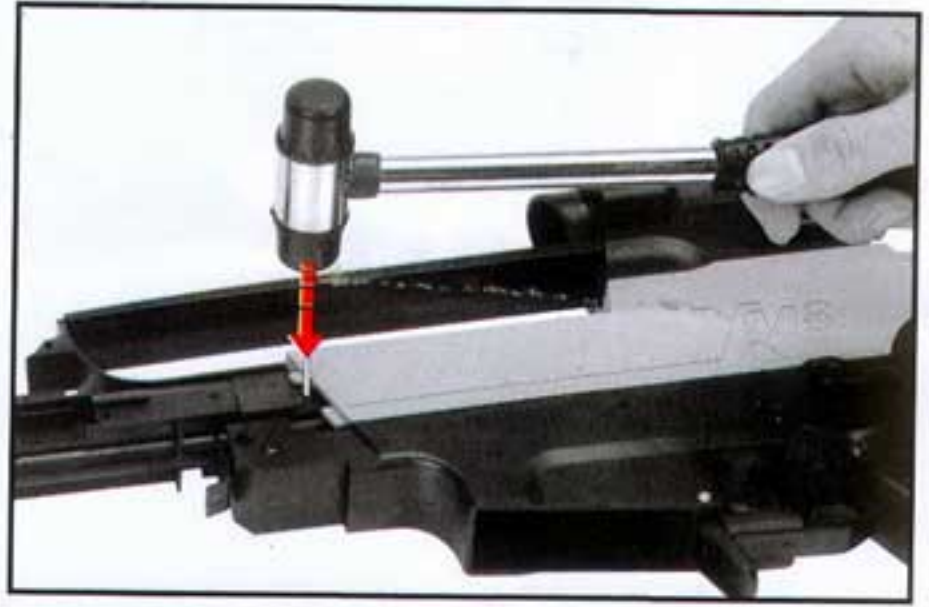

8. Lock the part in position
锁紧部件

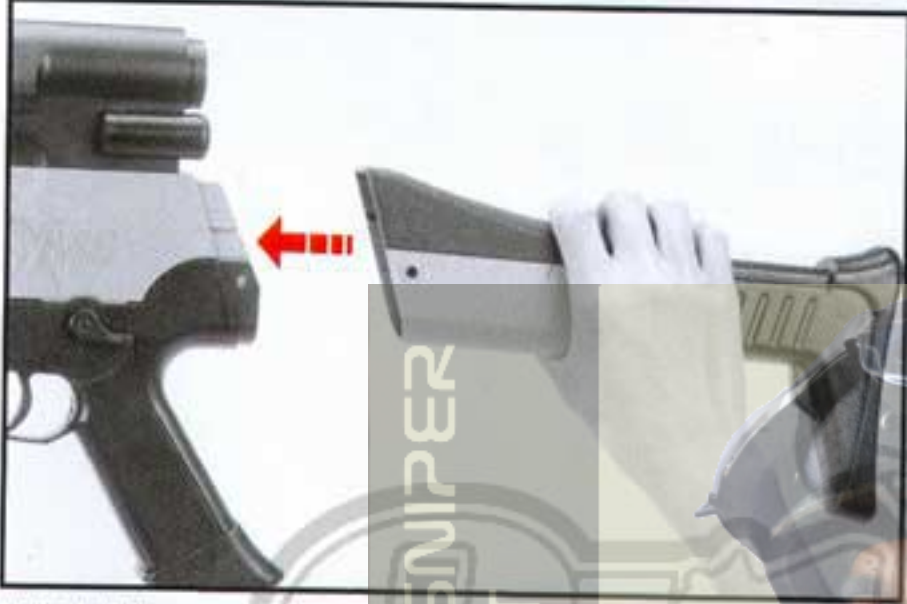

9. Install the gunstock
连接枪托

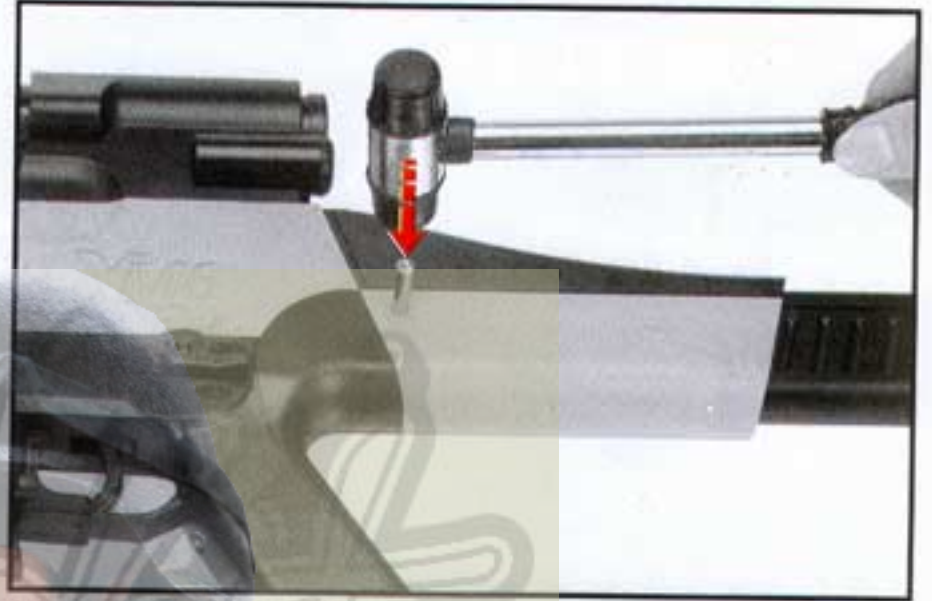

10. Lock the part in position
锁紧部件



11. Install the part as the figure shows
部件按图示安装



12. Lock the part in position
锁紧部件



13. Connect the rechargeable
battery
连接充电后电池



14. Diagram of installed
rechargeable battery
充电电池安装完成图



15. Install the muzzle
安装枪口



16. Setting the magazine
安装弹仓



17. Press the button and compress or stretch
按压按键, 可前后拉伸




18. Press the magazine catch to remove the magazine
(Support the magazine as it may drop)
按压弹仓按钮, 弹仓可退出。(这是用来支撑弹仓)




19. Load Bullets
装入BB弹

Load the Bullets into the loader
将子弹装入装弹器内

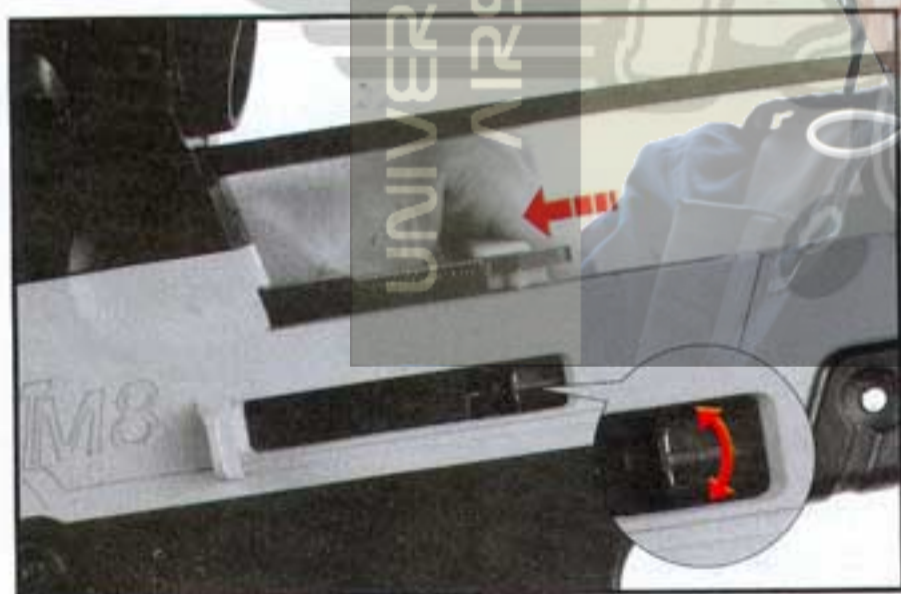

20. Adjust the strength (down to increase
and up to reduce)
调节力度(向下增加力度, 向上降低力度)

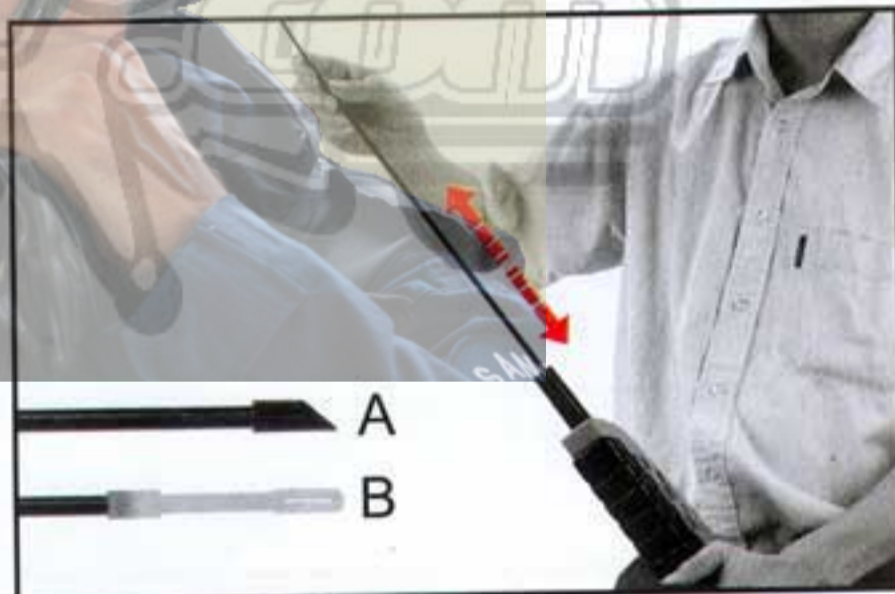

A. Remove the BB bullet blocking the barrel
B. Wrap paper or cloth over it to clean up the interior of the barrel
A. 清除堵塞枪管BB弹 B. 夹带纸或布清洁枪管内部

Always use precision BB Bullets for this air gun. Never use any used BB Bullets
请使用精密BB弹。不要使用任何使用过的BB弹。

Pulling the trigger with the Safety lever being set to SAFE may damage the gun.
当选择杆拨在SAFE档时, 切勿用力扣动扳机。

Never aim or shoot a person or animal as the target, Always set the selector on SAFE position except when you are ready to shoot a target.
不可把人和动物当作目标瞄准发射, 请把选择杆拨在SAFE档, 除非准备射击一个明确的目标。

Do not look directly into the gun barrel to avoid accidental discharge of BB
不要直接看枪管, 避免BB弹意外发射。

When bullets are clogged, immediately stop operation. Remove clogged bullets and then restart operation of the air gun.
当塞弹时, 立刻停止操作。清除阻塞子弹, 然后重新操作气枪。

Keep the rifle in clean condition.
把枪支放置在清洁地方。

Regularly clean the barrel with soft cleaning rod.
定期用洁净导棍清洁枪管。