



AR019M

Special Forces

CA25URX



AR021M

Entry Carbine



Website: www.classicarmy.com
E-mail: info@classicarmy.com

WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.




1 Outlook / Structure

Always set the selector switch to the safe position when you are not firing or during storage

CA25 URX Special Forces

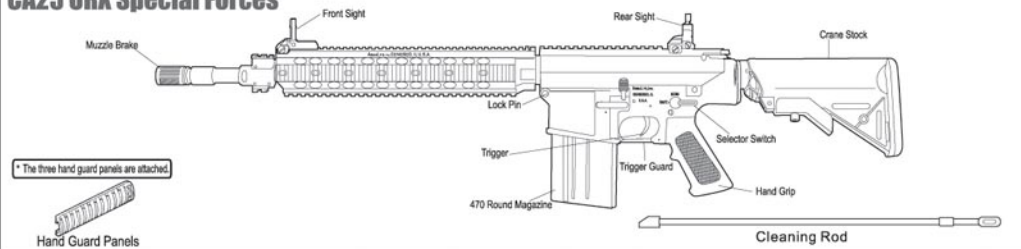

CA25 URX Entry Carbine

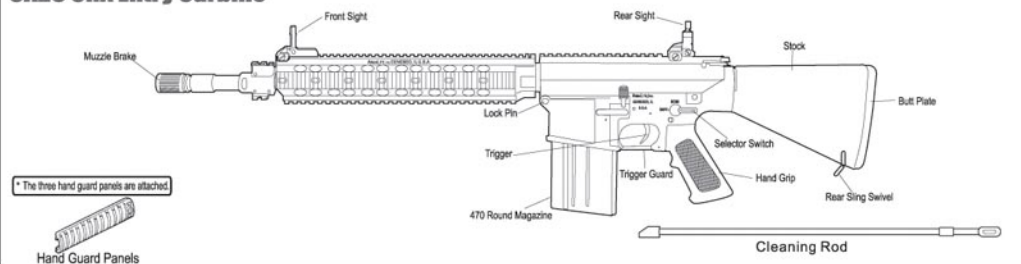

2 Specification

Data of Automatic Electric Gun


Name	CA25 URX Special Forces	CA25 URX Entry Carbine
Weight	3.25kg	3.05kg
Barrel Length	363	363
Barrel Caliber	6.08mm	6.08mm
Pellet Capacity	470	470
Pellet	6mm BB	6mm BB
Initial Pellet Speed	85-105 m/sec	85-105 m/sec
Battery Type	Large Type (8.4v)	Large Type (8.4v)

3 Operation

1 How to use safety lock



S : Safety Lock

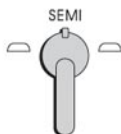

E : Semi Auto




F : Full Auto


2 How to insert battery

Set the battery after charging



1. Press the crane stock and pull it backward.

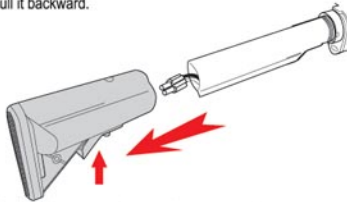

2. Put the middle battery into the stock extension tube and then connect the connectors.

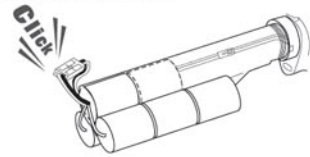


3. Put the wires properly, press the crane stock and install it carefully.

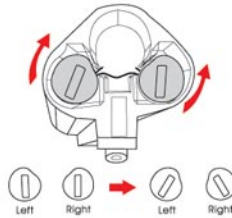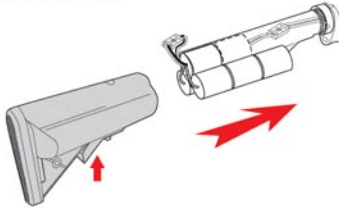


1. Lower the butt plate and open the cover.




2. Pull out the connectors.

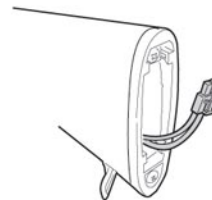

3. Insert the battery into the stock and connect the connectors.

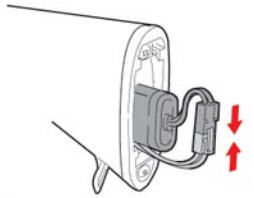

4. Close the cover.

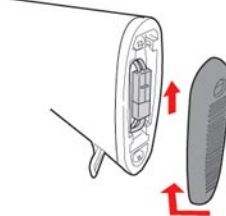

CAUTION • Be careful with your fingers

3 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion by dust and dirt into the magazine to prevent malfunctions.

Action against Problem


Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.

CAUTION
About 30 pellets remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.


Ensure Smooth Pellet Feeding

- Occasionally give slight shocks to the gun or shake vertically for ensuring smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets for ensuring smooth pellet feeding.

1. Press the magazine catch to detach the magazine

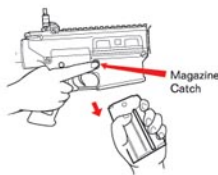

2. Open the top hatch and insert BB pellets. About 470 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

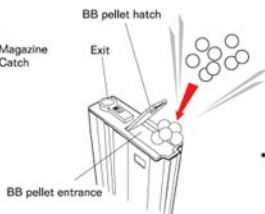

3. Close the hatch



• Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

4. Hold the BB pellets entrance facing up and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.



5. Check the BB pellets are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.


4 Rear sight adjustment

1 Rear Sight :
For precision targeting

1. Flip-up the Rear Sight

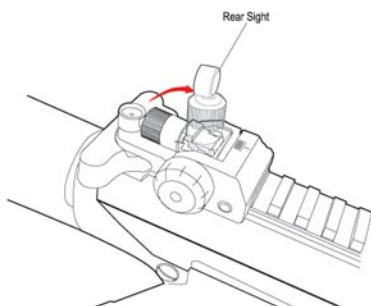


2 Rear Sight:
For left or right adjustment.

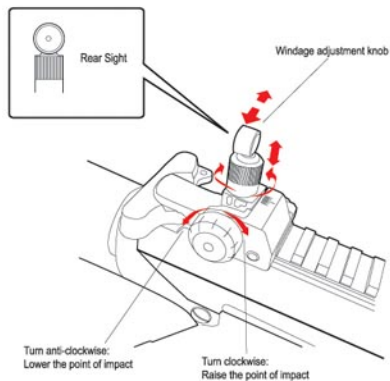


5 Front sight adjustment

1 Front Sight :
For precision targeting


1. Flip-up the Front Sight

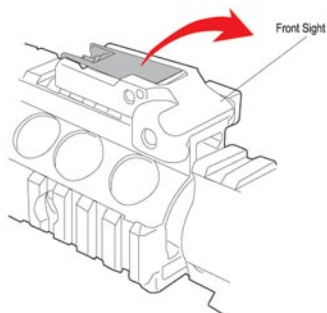

2. Flip-down the Front Sight

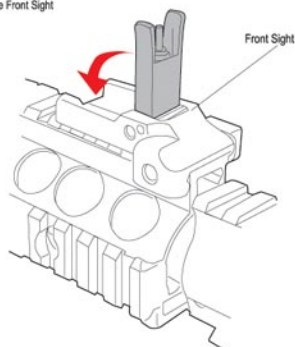

6 How to fire

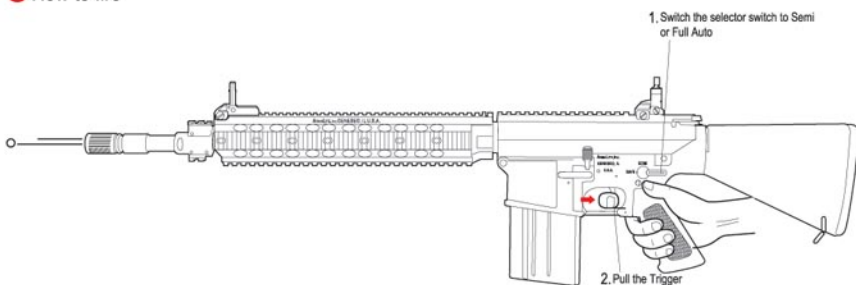

- There are possible cases that no firing occurs after pulling the trigger in the semi auto mode. In case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.



- Smell may be generated from the motor for a while when a new air gun is operated, this is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil, this is the normal operation of the gun.

* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged


- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)

7 How to adjust the hop up system


① Open the ejection port cover

② Keep pulling the charging handle while adjusting the dial


③ Turn the hop up adjustment dial gradually

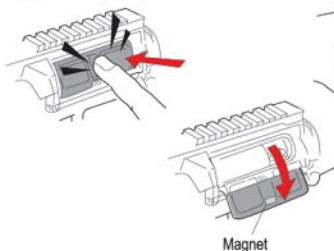

Magnet

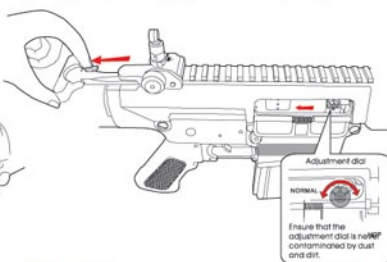

Adjustment dial
Ensure that the adjustment dial is not over-rotated by dust and dirt.

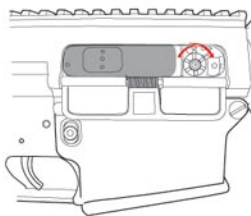

CAUTION Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment dial when pellets shoot horizontally.

CAUTION Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.

CAUTION Be careful with your fingers.

4 Maintenance

1 How to use a cleaning rod



Cotton Cloth

Wind the cotton cloth.

Cut a cotton cloth to the size shown above and insert one end into the hole in the rod. (Adjust the length of cloth for smooth entry into the barrel.)

CAUTION

CAUTION: Always begin the maintenance by returning the Hop Up adjustment lever to NORMAL.


CAUTION

CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

① Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 or 50 pellets to make the magazine more stable.

② Clean up the oil from the chamber by using the cleaning rod (with cotton) to complete the maintenance.

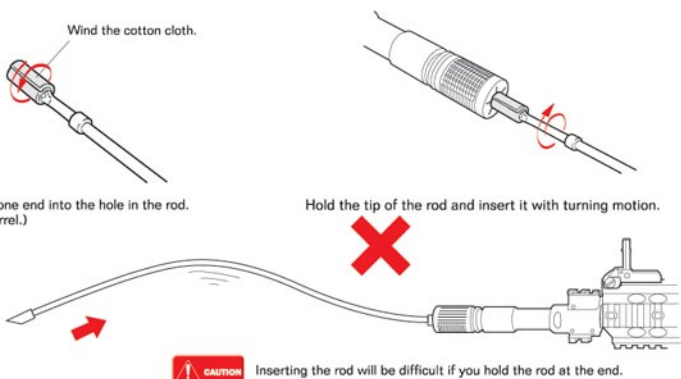


Hold the tip of the rod and insert it with turning motion.

CAUTION

Inserting the rod will be difficult if you hold the rod at the end.

CAUTION

CAUTION: Always begin the maintenance by returning the Hop Up adjustment lever to Normal.

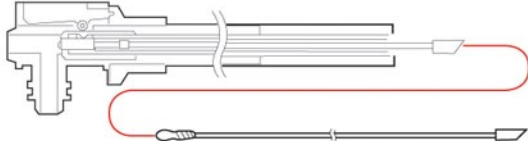

20A Glass Tube Fuse is used



CAUTION Never use any used BB pellets



Using new 6mm BB pellet is a must



Please don't use the BB pellet which is not compressed.



Please don't use the broken BB pellet.



Please don't use the BB pellet which diameter is exceeded 6 mm.

 


5 Proper Disassembling


① Remove the frame lock pin using a screw driver.

② Move the upper receiver forward.

③ Separate the upper and lower receiver.

④ Pull out the barrel.

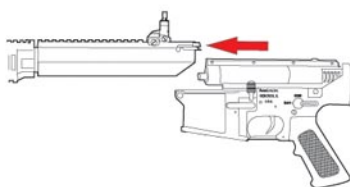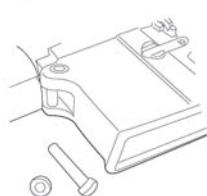

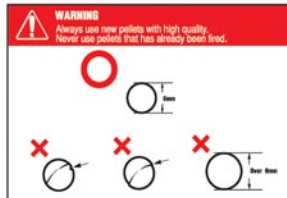6 **WARNING**


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

7 For complete product information, dealer locations and technical support, please visit the website of **Classic Army Sole Distributors**.

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: Bakkegaardsvvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@actionsportgames.com
 Website: <http://www.actionsportgames.com/>

Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.LE Italiana S.r.l.
 Add.: Via Walter Tobagl n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

The United States of America

Co. Name: Spartan Imports, Inc.
 Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080
 Tel: (1) 650 589 5501
 Fax: (1) 650 589 5552
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: 3 Lane 62, Jianguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.
 Tel: (886) 7-710 0198
 Fax: (886) 7-710 0398
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

PDF por Sniper
 Matadores Airsoft Club
www.matadoresairsoft.com

