



# CA36K

HANDLING CAUTIONS AND INSTRUCTION MANUAL



## WARNING

- FOR AGE 18 YEARS OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USAGE. MISUSE OR CARELESS USAGE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO ALL LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.


Produced By Classic Army, Hong Kong

**HOP-UP  
SYSTEM**

## 1 Outlook / Structure of CA36K

Always set the selector switch to the safe position when you are not firing or during storage

### CA36K

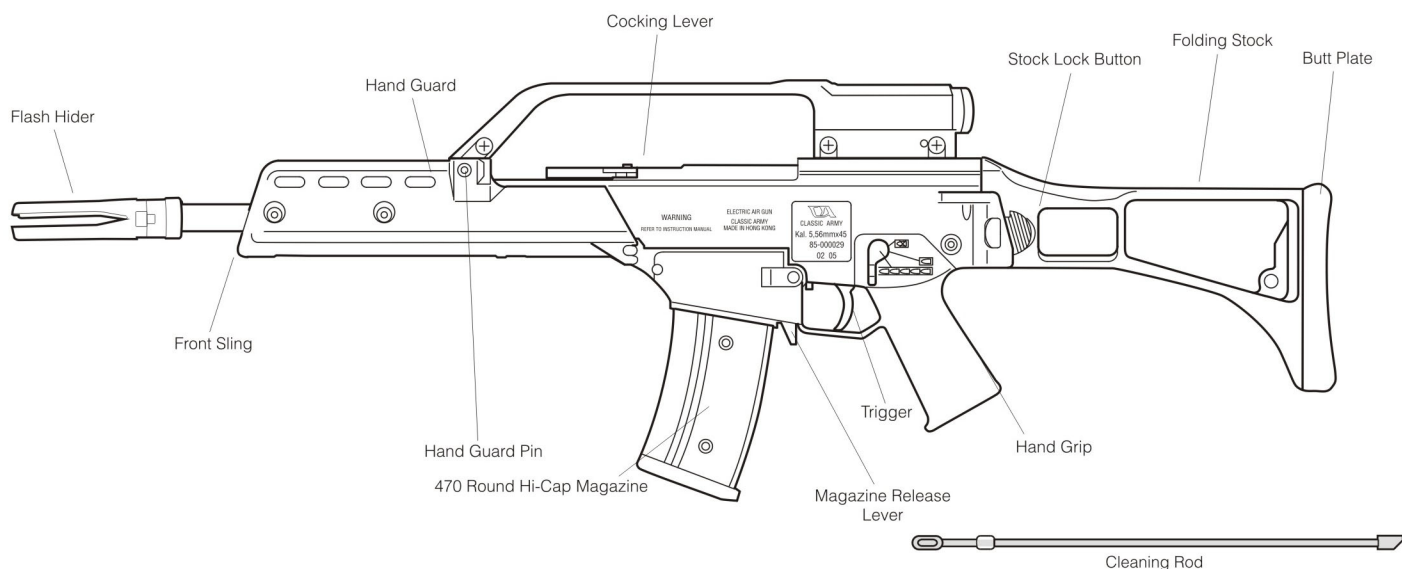


## 2 Specification

### Data of Automatic Electric Gun


Name	<b>CA36K</b>
Weight	2.81 kg
Barrel Length	355mm
Barrel Caliber	6.08mm
Pellet Capacity	470
Pellet	6mm BB
Initial Pellet Speed	85-95m/s
Battery Type	Mini Type 8.4V

## 3 Operation


### 1 How to use safety lock

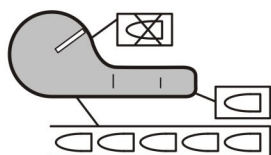

S : Safety Lock

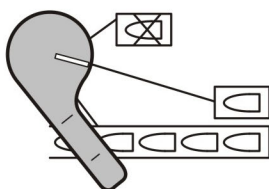

E : Single Lock

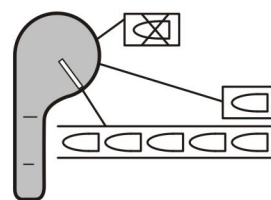

F : Full Auto

## 2 Magazine Attachment / Detachment Procedure

BB pellets are loaded in the magazine of the magazine feed using an tool and the BB magazine's pellet retention.

### Action against problem

Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.

 


About 30 pellets remain in the duct after operation. Be careful with the pellets which will fly out if you hold the gun up-side-down and pull the trigger.


### Ensure Smooth Pellet Feeding

- Occasionally give slight shocks to the gun or shake vertically for ensuring smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets for ensuring smooth pellet feeding.

- 1 Press the magazine catch to detach the magazine



- 2 Open the top hatch and insert BB pellets. (Avoid forcing BB pellets into the magazine.)

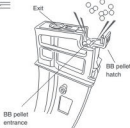

- 3 Close the hatch



- Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

- 4 Hold the magazine with BB pellet entrance facing upward. Turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.



- 5 Check the BB pellets whether they are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.


## 3 How to insert battery

### Set the battery after charging


- 1 Put the battery in the hand guard and connect the connector

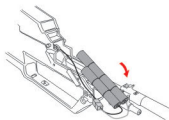

- 2 Install the connector as shown.


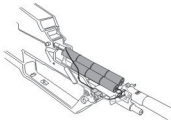


- 3 Fix the connector in the space underneath the battery.

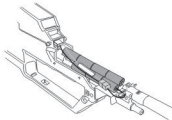

Be careful with your fingers

## 4 How to adjust the hop up system

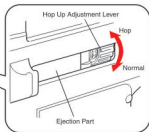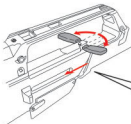


- Keep pulling the cocking lever while adjusting the lever.
- Turn the hop up adjustment lever gradually.
- Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment lever when pellets fly horizontally.




Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.

## 5 How to fold the stock

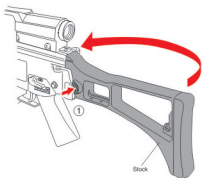


1 Press the stock lock button ①. Fold the stock to the right as shown.

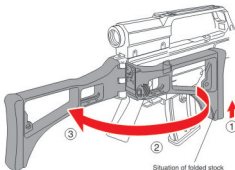

2 Hold the stock a little bit upward. Then, pull the stock back to straight while pushing the stock lock button.

## 6 How to fire

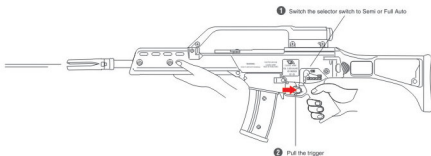

\* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

### Caution on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

### When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)



 
- There are possibilities that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




- Small may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.





### Structural Diagram

 

Make sure to return the hop up adjustment dial to NORMAL position when removing clogged pellets.

## 4 Maintenance
  
### 1 How to use a cleaning rod



Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod.  
(Adjust the length of cloth for smooth entry into the barrel.)

Hold the tip of the rod and insert it with turning motion.



**CAUTION:** Always begin the maintenance by returning the hop up adjustment lever to NORMAL.



 
**CAUTION:** The chamber is a precision component. Never use any used BB pellets.

\*The hop-up performance may become unstable for 50 to 70 pellets after maintenance.



Inserting the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.



**CAUTION:** Always begin the maintenance by returning the hop up adjustment lever to Normal.

### 2 How to replace the fuse

- 1 Open the cover and pull out the fuse box

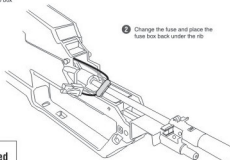

- 2 Change the fuse and place the fuse box back under the rib



**Never use any used BB pellets**



Using new 6mm BB pellet is a must



Please don't use any BB pellet which is not completed.



Please don't use any broken BB pellet.

 


Please don't use any BB pellet which diameter exceeds 6mm.

Glass Tube Fuse is used

20A



**5 WARNING**


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

**6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.**
**Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland**

Co. Name: VI.SE.LE Italiana s.r.l.  
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy  
 Tel: (39) 02 274 09455  
 Fax: (39) 02 274 09455  
 Email: visele@classicarmyitalia.com  
 Website: <http://www.classicarmyitalia.com/>

**Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia**

Co. Name: ActionSportGames A/S  
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark  
 Tel: (45) 89 28 18 88  
 Fax: (45) 49 19 31 60  
 Email: sales@softgun.dk  
 Website: <http://www.actionsportgames.com/>


**The United States of America**

Co. Name: Spartan Imports, Inc.  
 Email: [info@spartanimports.com](mailto:info@spartanimports.com)  
 Website: <http://www.spartanimports.com/>

**Taiwan**

Co. Name: F-Link Int'l Enterprise Co. Ltd.  
 Add.: No. 283, Jo Through 2<sup>nd</sup> Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.  
 Tel: (886) 7 323 0988  
 Fax: (886) 7 323 4055  
 Email: [kssa.kssa@msa.hinet.net](mailto:kssa.kssa@msa.hinet.net)  
 Website: <http://www.soloman.com.tw/>

# 6 Exploded Diagram

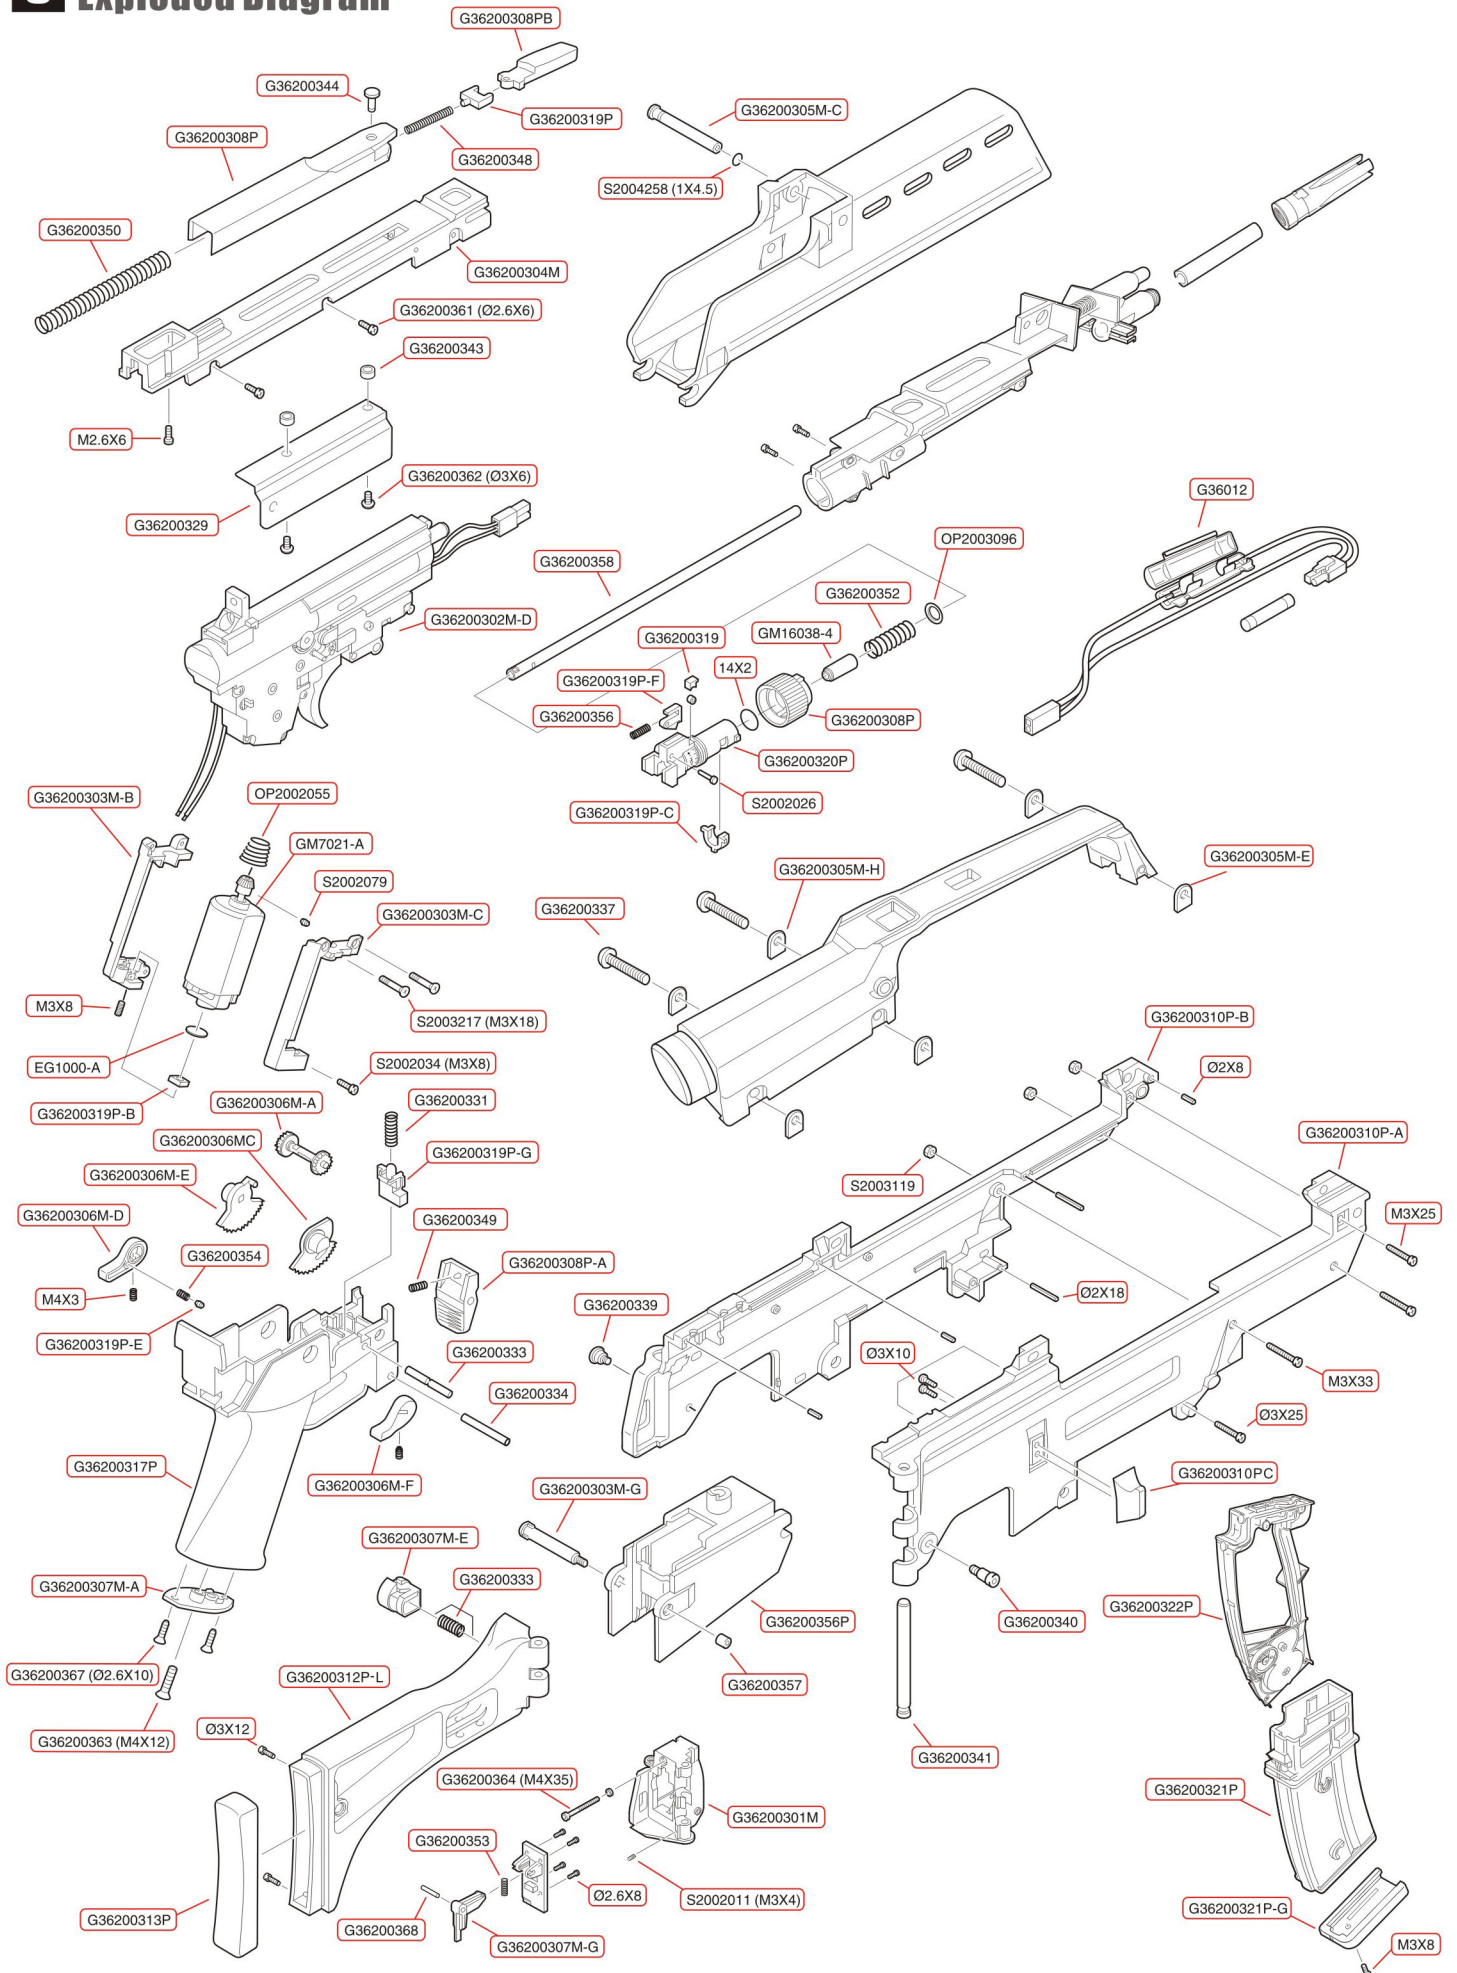



Website: [www.classicarmy.com](http://www.classicarmy.com)  
E-mail: [info@classicarmy.com](mailto:info@classicarmy.com)