


**SP006P**

**AIRSOFT ELECTRIC GUN**

**SPORTLINE SERIES**

# AUG A2

[www.classicarmy.com](http://www.classicarmy.com) [info@classicarmy.com](mailto:info@classicarmy.com)

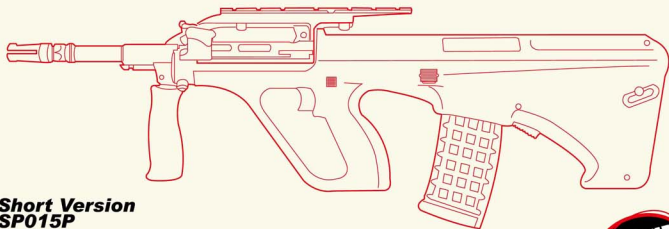

**Short Version  
SP015P**





Always read through this manual before operation.

## 1 User Instruction

1. Always use Classic Army silicone oil; spray a few drops into the chamber from the magazines entrances.
2. Always use Classic Army 6mm BB pellets. Use of other manufacturer's pellets or recycle use of pellets may cause pellet clog (jamming or possibly fatal damage to the gear box. Classic Army shall not be held responsible for any damage or accidents arising from the use of BB pellets supplied by other manufacturers or use of recycle BB pellets.
3. Use Classic Army specified 8.4V battery and charger for the AEG.
4. Use the specified battery and charge according to respective instruction manuals. Classic Army will not be held responsible for any damage or accidents arising from wrongful or usage of non-specified battery and charger.
5. Do "NOT" disassemble or modify the AEG. This AEG is manufactured under consideration of appropriate performance, operability and maintenance. Disassembling or modifying the AEG may be dangerous, may adversely affect its performance and may be damaged.
6. Give the AEG a rest for 5 to 10 minutes after firing about 500 rounds, in order to prevent the overheat of the motor and battery as well as to ensure long service life of it.
7. Immediately STOP any operation, when the BB pellets are clogged or the gear box has overly loud operating noise.
8. Please discharge the battery before it is recharge again.
9. Be aware of the weather changing, STOP operation immediately when it is raining or when the AEG is wet; also disconnect the battery.
10. Be aware of unnecessary collision to your AEG.
11. Do NOT wear a damaged safety goggles. Please note that Classic Army safety goggle can resist up to 1.5 joules muzzle energy.
12. Immediately remove the magazine and disconnect the battery, when the AEG is firing out of control.



Always read through this manual before operation.

## 2 Warranty Instruction

1. Always use Classic Army silicone oil and the cleaning rod to clean the Inner Barrel.
2. Please remember to keep your warranty card against maintenances.
3. Please use prompt amount of silicone oil. Excess use of silicone oil will caused corrosion or damage to the AEG.
4. Avoid over exposure of your AEG under the sun.
5. Be aware of unnecessary collision to your AEG.
6. Please discharge the battery before it is recharge again.
7. After 20,000 Rrounds of BB pellets had been shoot out from the AEG, please consult our dealer for the needs of regular maintenance or repair.



Always read through this manual before operation.

## 3 Maintenance Instruction

1. If the AEG is not working, please check if the connector is connected properly, and that the fuse is not blown out.
2. If the fired pellets spread in an unusual direction, please check whether the "Hop-up" packing is damaged or not.
3. Do "NOT" disassemble or modify the AEG. This AEG is manufactured under consideration of appropriate performance, operability and maintenance. Disassembling or modifying the AEG may be dangerous, may adversely affect its performance and may be damaged. Please consult our dealer for any disassembly, product enhancement, maintenance or repair.

## 4 Outlook / Structure of AUG A2

Always set the selector switch to the safe position when you are not firing or during storage.

### AUG A2



Weight	: 2.15 kg
Barrel Length	: 510 mm
Barrel Caliber	: 6.8 mm
Pellet Capacity	: 330 Rd
Pellet	: 8 mm BB
Initial Pellet Speed	: 85-105 m/s
Battery Type	: Mini Type 84r
Model No.	: SP00GP

### AUG A2 (Short Version)



Weight	: 2.1 kg
Barrel Length	: 425 mm
Barrel Caliber	: 6.8 mm
Pellet Capacity	: 330 Rd
Pellet	: 8 mm BB
Initial Pellet Speed	: 85-105 m/s
Battery Type	: Mini Type 84r
Model No.	: SP00SP




## 5 Operation


### 1 How to use the trigger



Safety Lock

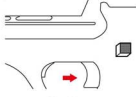


Semi Auto  
Pulling the trigger to 4 mm

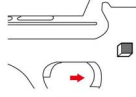

Full Auto  
Pulling the whole trigger to 7mm

### 2 How to insert battery

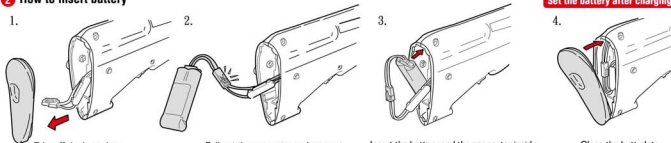

Set the battery after charging



- Be careful with your fingers
- Assure the connector and fuse box are placed in the proper position

### 3 Magazine Attachment / Detachment Procedure

High precision is required for the operation of the magazine. Avoid motion of dust and dirt into the magazine to prevent malfunctions.

- **Action against problem**  
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.



About 30 pellets will remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.


#### Ensure Smooth Pellet Feeding

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets to ensure smooth pellet feeding.

1. Press the magazine catch to detach the magazine



2. Open the top hatch and insert BB pellets. About 330 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

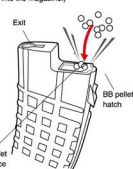

3. Close the hatch



- Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

4. Hold the magazine with BB pellet entrance facing upward. Turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)




The gear will not be damaged even if you turn it excessively.

5. Check the BB pellets whether they are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

## 4 How to fold the grip

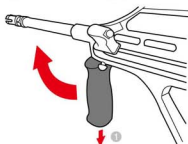


1. Pull the grip downward and fold the grip under the barrel.

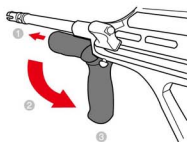

2. Three positions can be used.

## 5 How to fire

1. Switch the selector switch to Semi or Full Auto

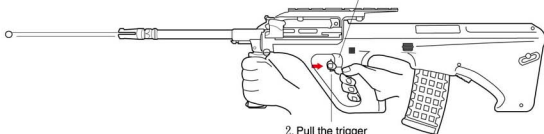

2. Pull the trigger

\* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

### Caution on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

### When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)



• There are possibilities that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




• Small may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



• The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

## 6 How to adjust the hop up system

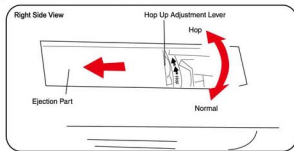

1 Continue pulling the cocking lever while adjusting the lever.

2 Turn the hop up adjustment lever gradually.

3 Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment lever when pellets fly horizontally.




Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.


The port cover may be removed and attached to the left ejection port.

## 6 Maintenance

### 1 How to use a cleaning rod

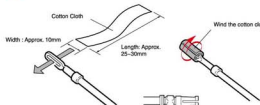

Cut a cotton cloth to the size as shown above and insert one end into the hole of the rod. (Adjust the length of cloth for smooth entry into the barrel.)

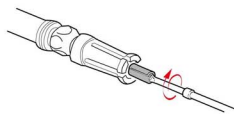

Hold the tip of the rod and insert it with turning motion.



CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component. Never use any used BB pellets.

\* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.



Inserting the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 To complete the maintenance, clean the oil from the chamber by using the clean rod.

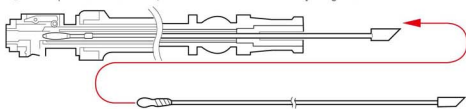

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to Normal.

## 2 How to replace the fuse

2. Open the cover and pull out the fuse box

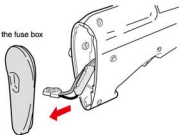

1. Change the fuse and place the fuse box back under the rib



Never use any used BB pellets

Using new driven BB pellet is a must



Please do not use incomplete BB.



Please don't use any broken BB pellet.




Please don't use any BB pellet which diameter exceeds 6 mm.

20A Glass Tube Fuse is used



## 7 Normal Disassembly for Overhaul

### 1 How to Remove the Barrel Assembly

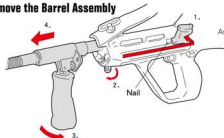

Assure to remove the magazine beforehand.





Be careful as it may damage the chamber.

- 1 Pull the cocking handle and hook it to the receiver nail.
- 2 Press down the barrel lock button at an angle and maintain it there.

- 3 Viewing from the front. Turn the barrel assembly counterclockwise (about 20 degrees)
- 4 Slowly pull out the barrel assembly to the front.

### 2 How to Assemble the Barrel Assembly

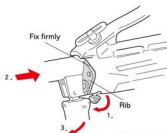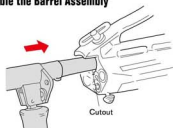


Press the barrel lock button and keep pressing it down.


- 1 Press in the barrel assembly, aligning the projection in the assembly with the cutout in the receiver.

- 2 Turn the barrel assembly so that the rib of the assembly is located at the front edge of the receiver.

### 3 How to Remove and Assemble the Receiver

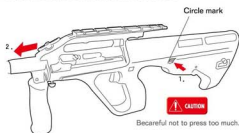

Be careful not to press too much.

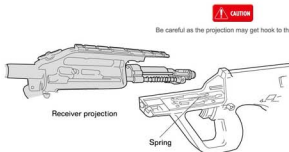

Be careful as the projection may get hook to the spring.

### Removal


- 1 Press the take-down latch from the circle marked position to a position where a click sound is generated (about 1 cm). (Be careful not to press it too much.)
- 2 Pull out the receiver towards the front. (Be careful not to hook the projection in the receiver to the spring in the stock and above the trigger.)

**8** **WARNING**

**WARNING**  
Never point the muzzle at people or animals.



**WARNING**  
Please keep the rifles far away from children.

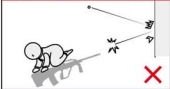

**WARNING**  
Always clean the magazine and battery from the gun during storage.



**WARNING**  
Never load the rifle if you don't intend to fire it.



**WARNING**



Always read this manual before use.

**WARNING**  
Don't hang your finger on the trigger if you are not shooting.




**WARNING**  
Please remember to wear protective glasses or shooting glasses to protect the eyes.



**WARNING**  
Don't try to look at the muzzle directly.



**WARNING**  
Always use fire pellets with high quality. Never use pellets that has already been fired.

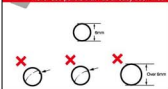

In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

**9** For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.

**Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland**

Co. Name: Evolution International S.r.l.  
Add.: Via dell'Annunciatina n.31, 20121 Milan, Italy  
Tel: (39) 02 25490037  
Fax: (39) 02 25118356  
Email: info@evolution-airsoft.com  
Website: www.evolution-airsoft.com

**Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia**

Co. Name: ActionSportGames A/S  
Add.: Bakkegaardvej 304, DK-3050 Humlebaek, Denmark  
Tel: (45) 89 28 18 88  
Fax: (45) 49 19 31 60  
Email: sales@actionsportgames.com  
Website: http://www.actionsportgames.com/

**The United States of America**

Co. Name: Spartan Imports, Inc.  
Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080  
Tel: (1) 650 589 5501  
Fax: (1) 650 589 5552  
Email: info@spartanimports.com  
Website: http://www.spartanimports.com/

**Taiwan**

Co. Name: F-Links Int'l Enterprise Co. Ltd.  
Add.: No.3 Lane 82, Jiangguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.  
Tel: (886) 7-710 0158  
Fax: (886) 7-710 0388  
Email: kssa.kssa@mss.hinet.net  
Website: http://www.solokan.com.tw/

**Thailand**

Co. Name: Vottech Co., Ltd  
Add.: 92 Kasat - Nawamintra Rd. Soi Ladplacow 39 Jorakebau Ladphrao Bangkok  
Tel: +662 8422829 (auto 4 lines) / +668 1 8692117  
Fax: +662 8402670  
Email: polaris\_adventure@yahoo.com  
Website: http://www.classicarmy-thailand.com

**Japan**

Co. Name: Union Fire Company (UFC)  
Add.: 92-0067-8-10-101 - MATSUYAMACHI,CHUD-KU,OSAKA,JAPAN  
Tel: +81-6-4304-7750  
Fax: +81-6-4304-7799  
Email: ufctrading@ufc-web.com  
Website: http://www.ufc-web.com/

**Ukraine**

Co. Name: Vizantiya-1  
Add.: Kiev Av. A. Navoi, 76, Ukraine  
Tel: (380)44 4084389  
Fax: (380)44 4086033  
Email: vizantiya\_1@svtonline.com  
Website: http://www.militarist.com.ua/





PDF por: Sniper  
Universo  
Sniper  
Airsoft

**WARNING**

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

Produced By Classic Army, Hong Kong

2009-4-17 Edition 1 Yick Fung Ind. Int'l Ltd. All Rights Reserved



STEYR ARMS, AUG and the STEYR ARMS logo are registered trademarks of STEYR MANNLICHER HOLDING GmbH, Austria, used under exclusive worldwide licenses for Air Soft Guns by ASG A/S, Denmark. [www.actionsportgames.com](http://www.actionsportgames.com)