

WA
CLASSIC ARMY



BT5 A2, A3, SD2 & SD3

AUTOMATIC ELECTRIC GUN SERIES

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

**HOP-UP
SYSTEM**

1 Outlook / Structure of BT5

Always set the selector switch to the safe position when you are not firing or during storage

BT5 A2 Tactical Lighted Forearm

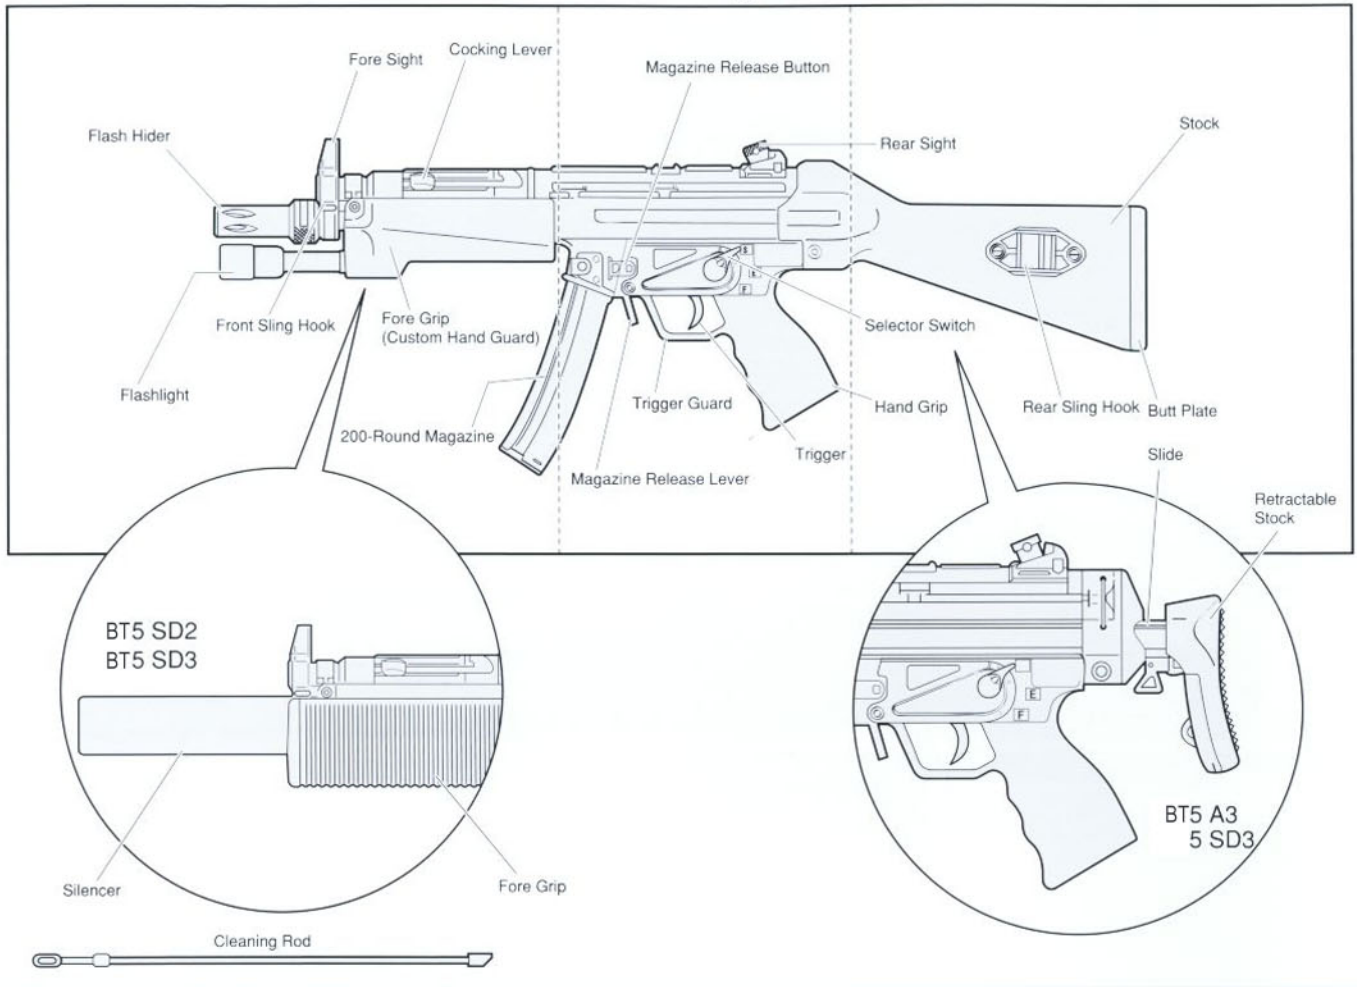


2 Specification

Data of BT5 Airsoft Electric Gun


Name	BT5 A2 Tactical Lighted Forearm	BT5 SD2	BT5 A2 Wide Forearm
			
	BT5 A3 Tactical Lighted Forearm	BT5 SD3	BT5 A3 Wide Forearm
			
Weight	2.635 kg 2.764 kg	2.925 kg 2.954 kg	2.506 kg 2.461 kg
Barrel Length	229 mm	229 mm	229 mm
Barrel Caliber	6.08 mm	6.08 mm	6.08 mm
Pellet Capacity	200	200	200
Pellet	6mm BB	6mm BB	6mm BB
Initial Bullet Speed	85-105 m/Sec	85-105 m/Sec	85-105 m/Sec
Battery Type	Large Type Mini Type	Large Type Mini Type	Large Type Mini Type

3 How to operate


1 How to use selector switch

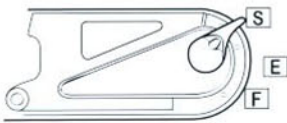

S : Safety Lock

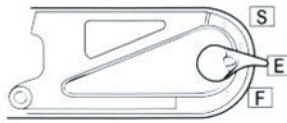

E : Semi Auto

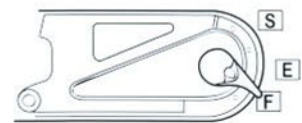

F : Full Auto

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

- Action against problem
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 20 pellets remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.


Ensure smooth pellet feeding.

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Open the top hatch and insert BB pellets. About 200 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

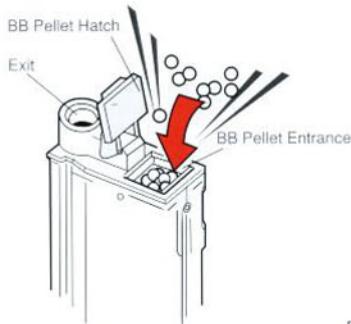

- 2 Close the hatch

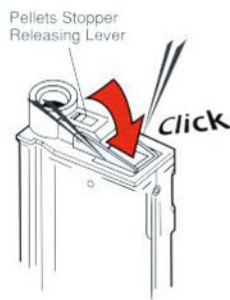


Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

- 3 Hold the Magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.

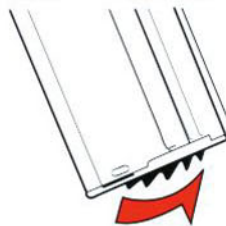

- 4 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently faulty, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.


3 How to change battery

A2 / SD2


- 1 Remove the butt plate by pressing it downwards and pull out the connector.

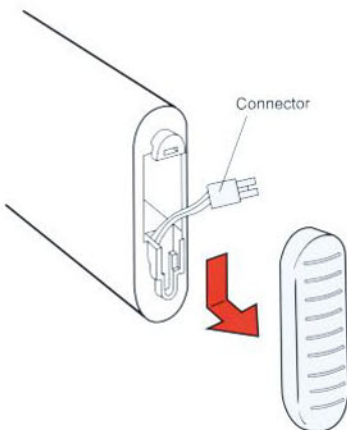


- 2 Insert the battery into the stock and connect the connector.

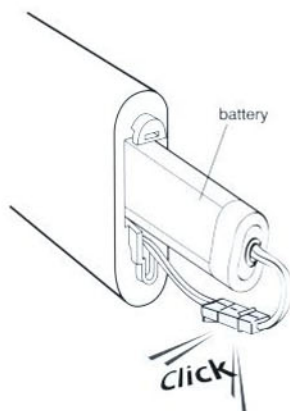


- 3 Insert connector and battery. Bend the cord in S shape.

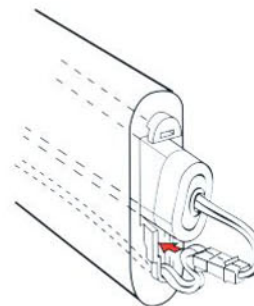


- 4 When the battery and cord are set in position, reinstall the butt plate as shown.

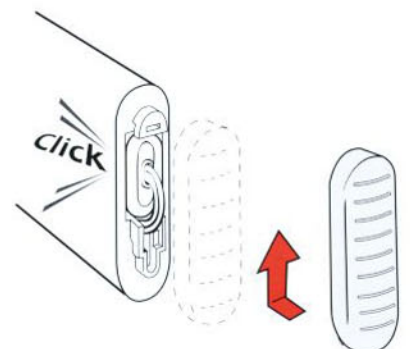

A3

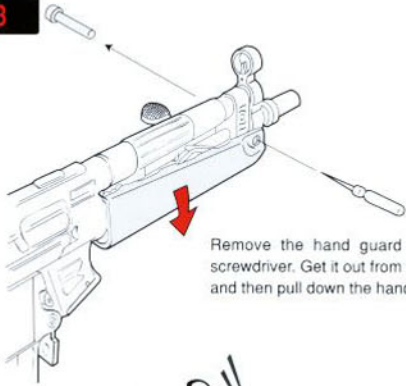


Remove the hand guard pin by using a screwdriver. Get it out from the opposite side and then pull down the hand guard.

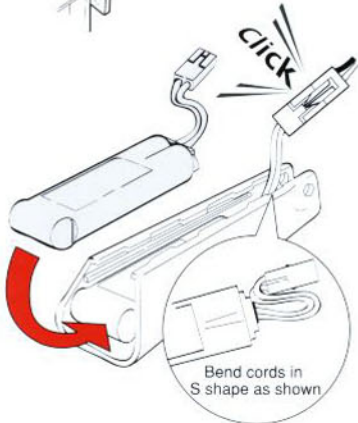


Set the battery in the hand guard, with the cord side facing towards the muzzle, and connect the connector.

Bend cords in S shape as shown

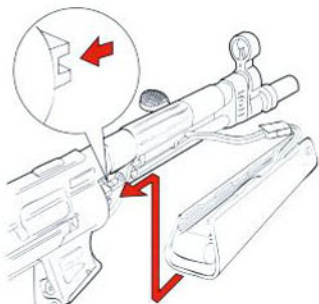

Fit the rib built in the hand guard to the groove shown by the arrow. (Also, set the other side in the same manner.)

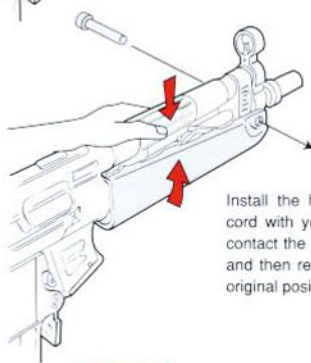


Install the hand guard while securing the cord with your fingers so that they do not contact the area shown by the oblique lines and then restore the hand guard pin to the original position.




Do not force the fore grip into place. It may bend the handle.

SD3

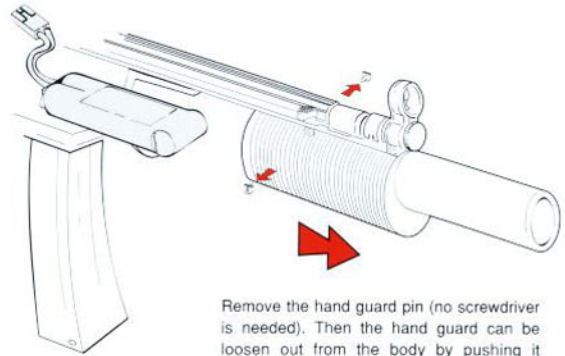


Remove the hand guard pin (no screwdriver is needed). Then the hand guard can be loosen out from the body by pushing it forward.

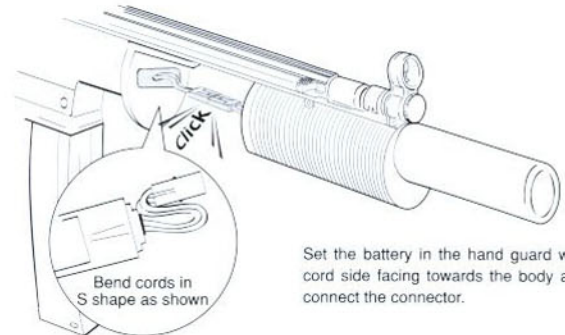


Set the battery in the hand guard with cord side facing towards the body and connect the connector.

Bend cords in S shape as shown

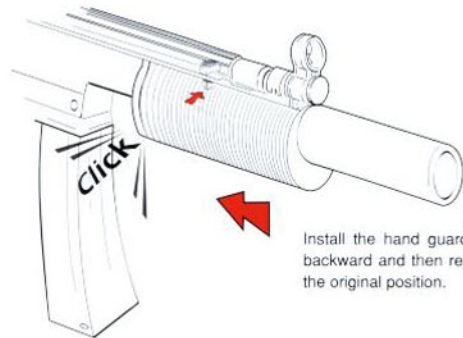

Install the hand guard by pushing it backward and then restore the pin to the original position.


5 How to adjust the hop up system

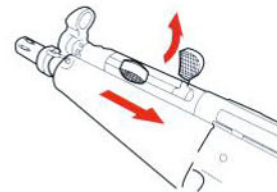


Keep pulling the cocking lever until fixing the lever.

4 Flash Hider Attachment / Detachment Procedure

Removal

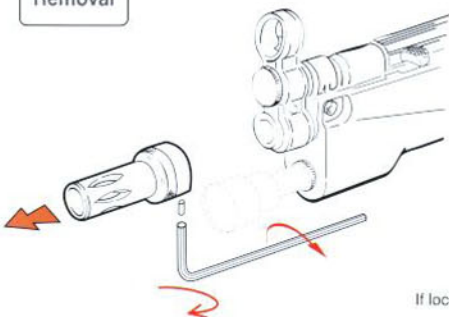


Installation

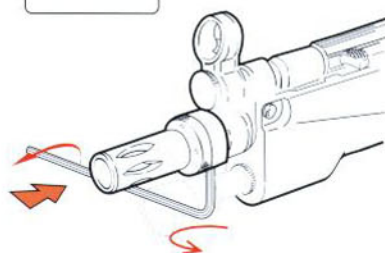

If locking cannot be set, slowly turn to the right or left to adjust the position.

Hop Up Adjustment Lever

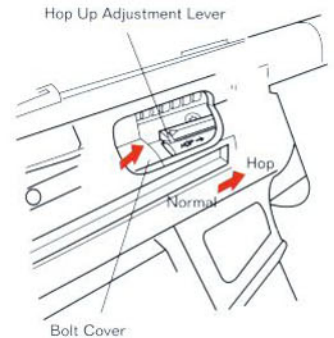

Turn the hop up adjustment lever gradually. Moving forward the level will raise the hop up. Moving backward the level will resume to normal.

6 How to fire


* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- Remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec. to obtain smooth continuous firing. (never use CRC-556 or other mineral oil)




- There is possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

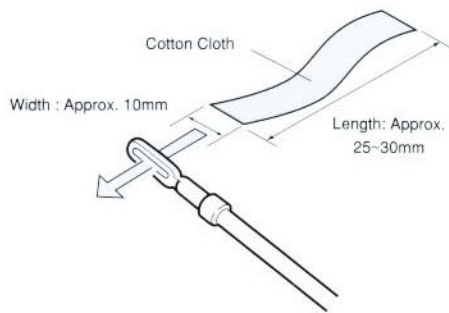4 Maintenance
1 How to use a cleaning rod


Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)

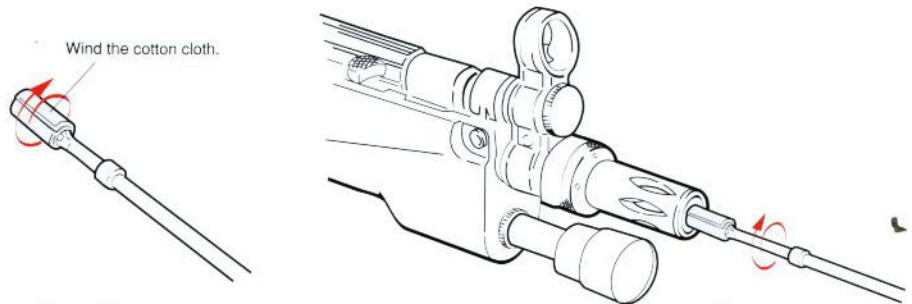


Hold the tip of the rod and insert it with turning motion.

CAUTION
Always begin the maintenance by returning the hop up adjustment lever to NORMAL.


CAUTION
The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

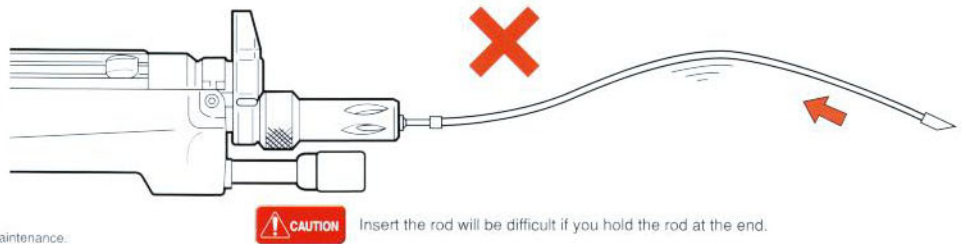

CAUTION Insert the rod will be difficult if you hold the rod at the end.

- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

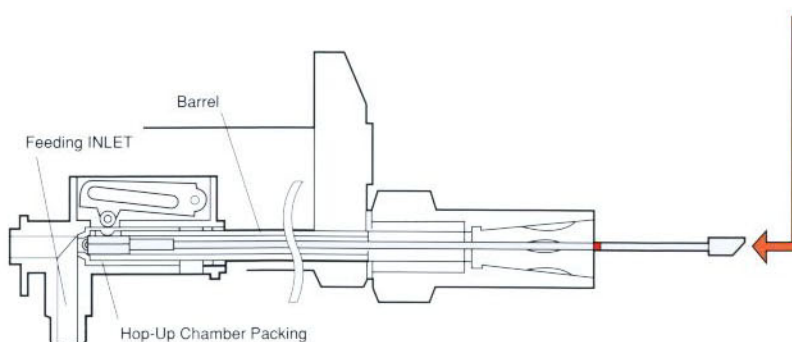
2 Never use any used BB pellets


Use new 6mm pellet is a must.



Please don't use any BB pellet which is not completed.

Please don't use any broken BB pellet.

Please don't use any BB pellet which diameter exceeds 6mm.

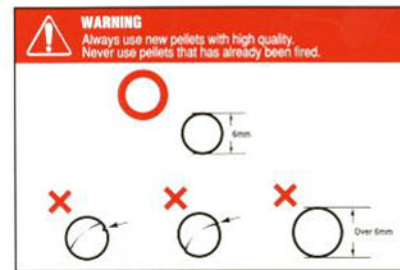5 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.IE Italiana s.r.l.
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@softgun.dk
 Website: <http://www.actionsportgames.com/>


The United States of America

Co. Name: Spartan Imports, Inc.
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: No. 283, Jo Through 2nd Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.
 Tel: (886) 7 323 0988
 Fax: (886) 7 323 4055
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

7 Exploded Diagram

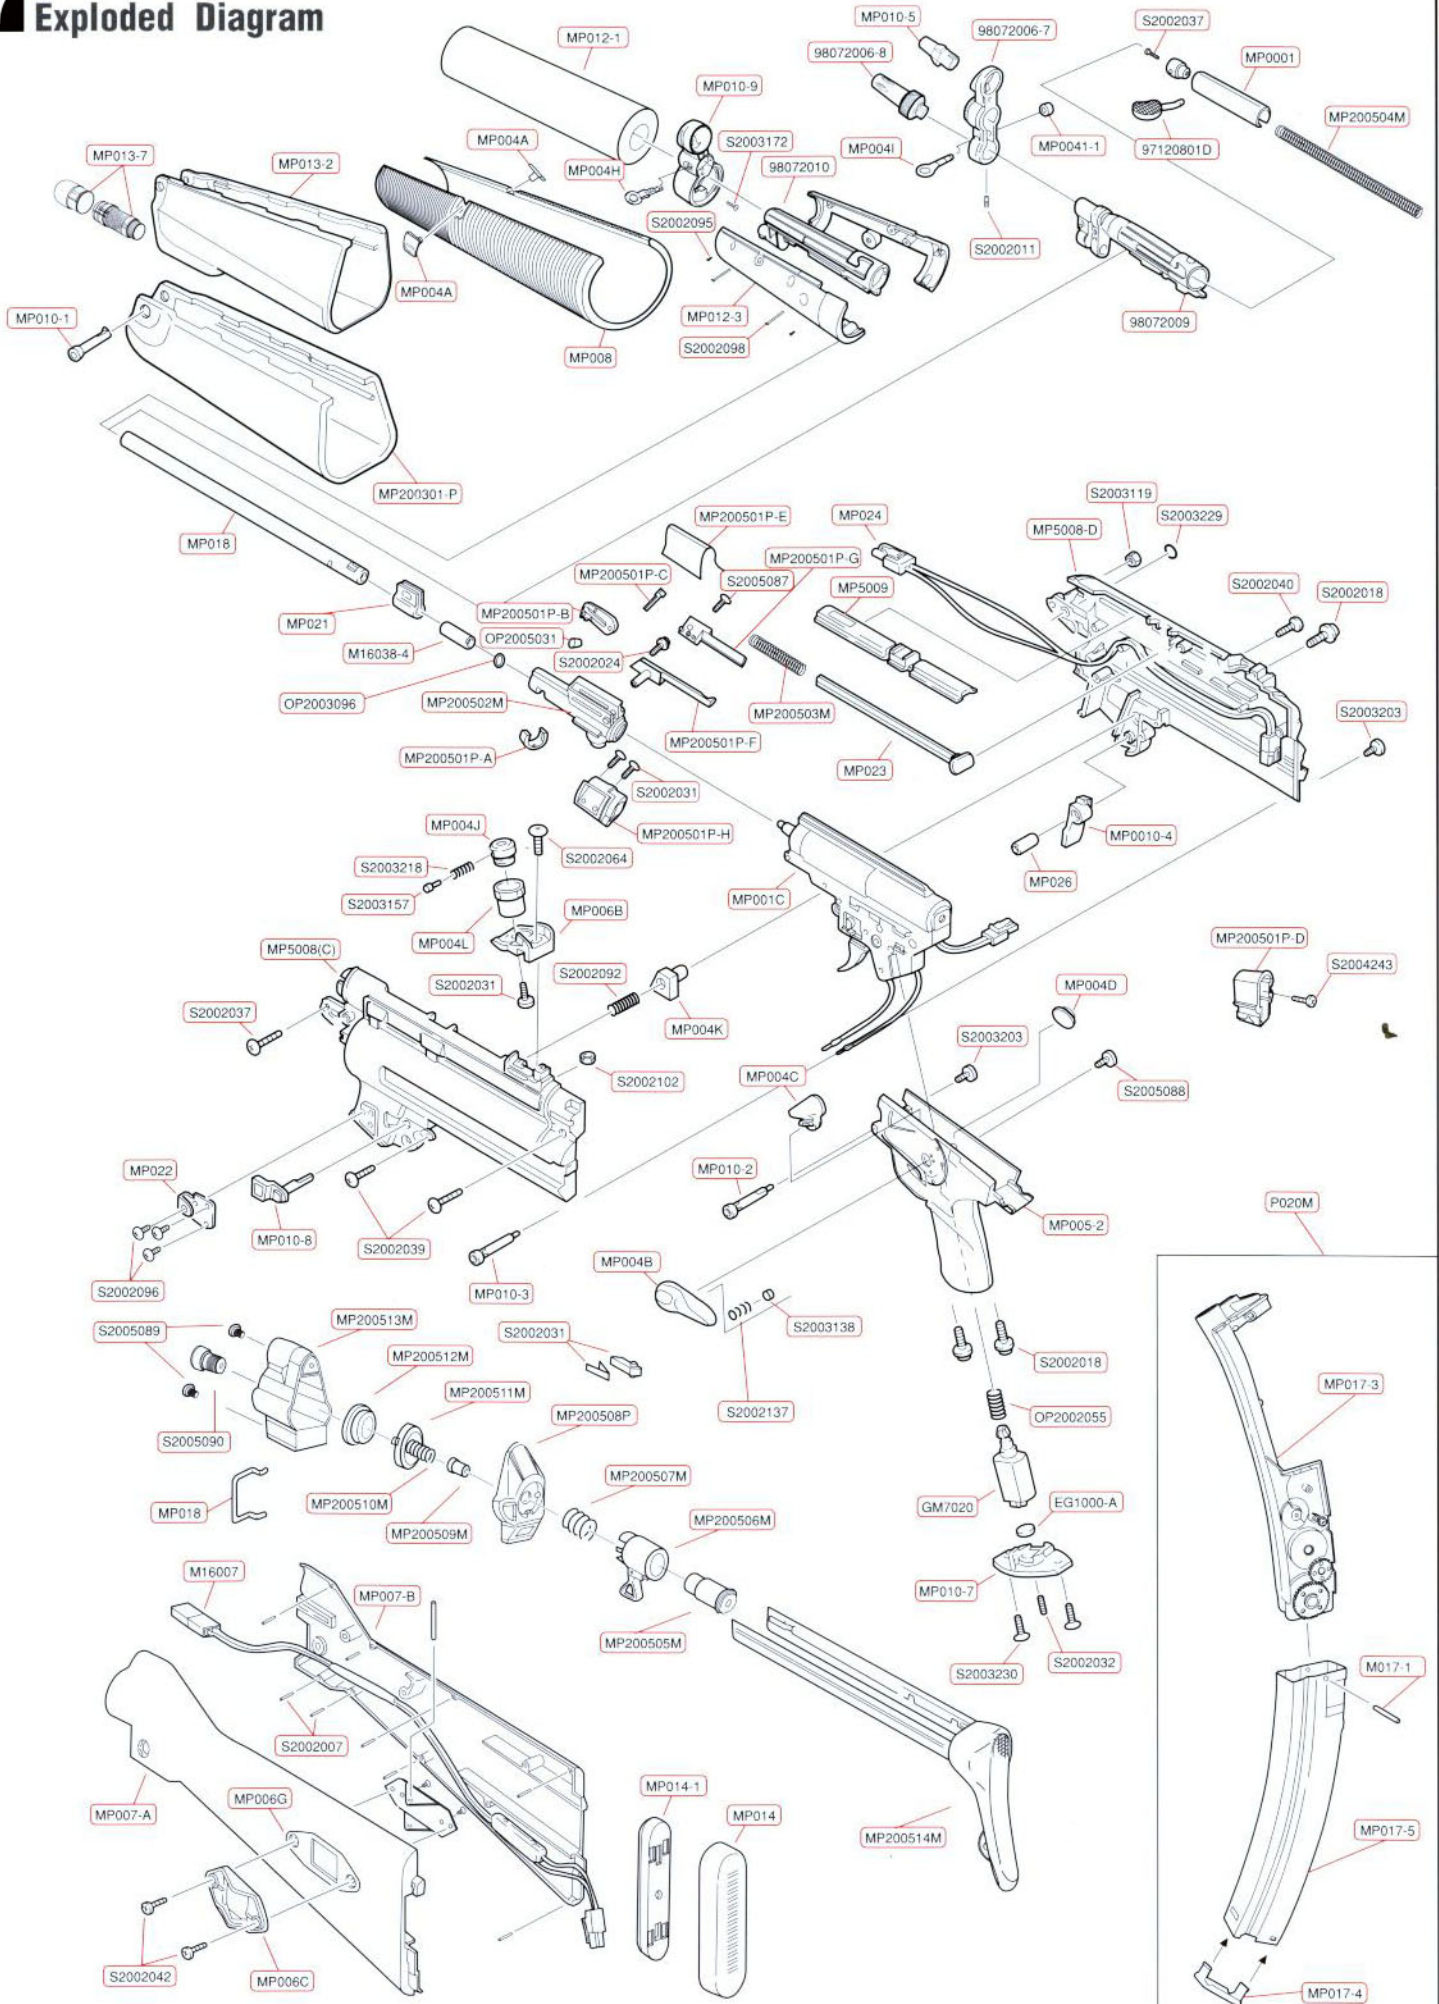



Website: www.classicarmy.com
E-mail: info@classicarmy.com



BRÜGGER & THOMET and the B&T logo are registered trademarks of BRÜGGER & THOMET AG., Switzerland and are used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark, www.actionsportgames.com

WA[®]
CLASSIC ARMY

B & T

BT5
A2, A3,
SD2 & SD3

AUTOMATIC ELECTRIC GUN SERIES

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

HOP-UP
SYSTEM

1 Outlook / Structure of BT5

Always set the selector switch to the safe position when you are not firing or during storage

BT5 A2 Tactical Lighted Forearm

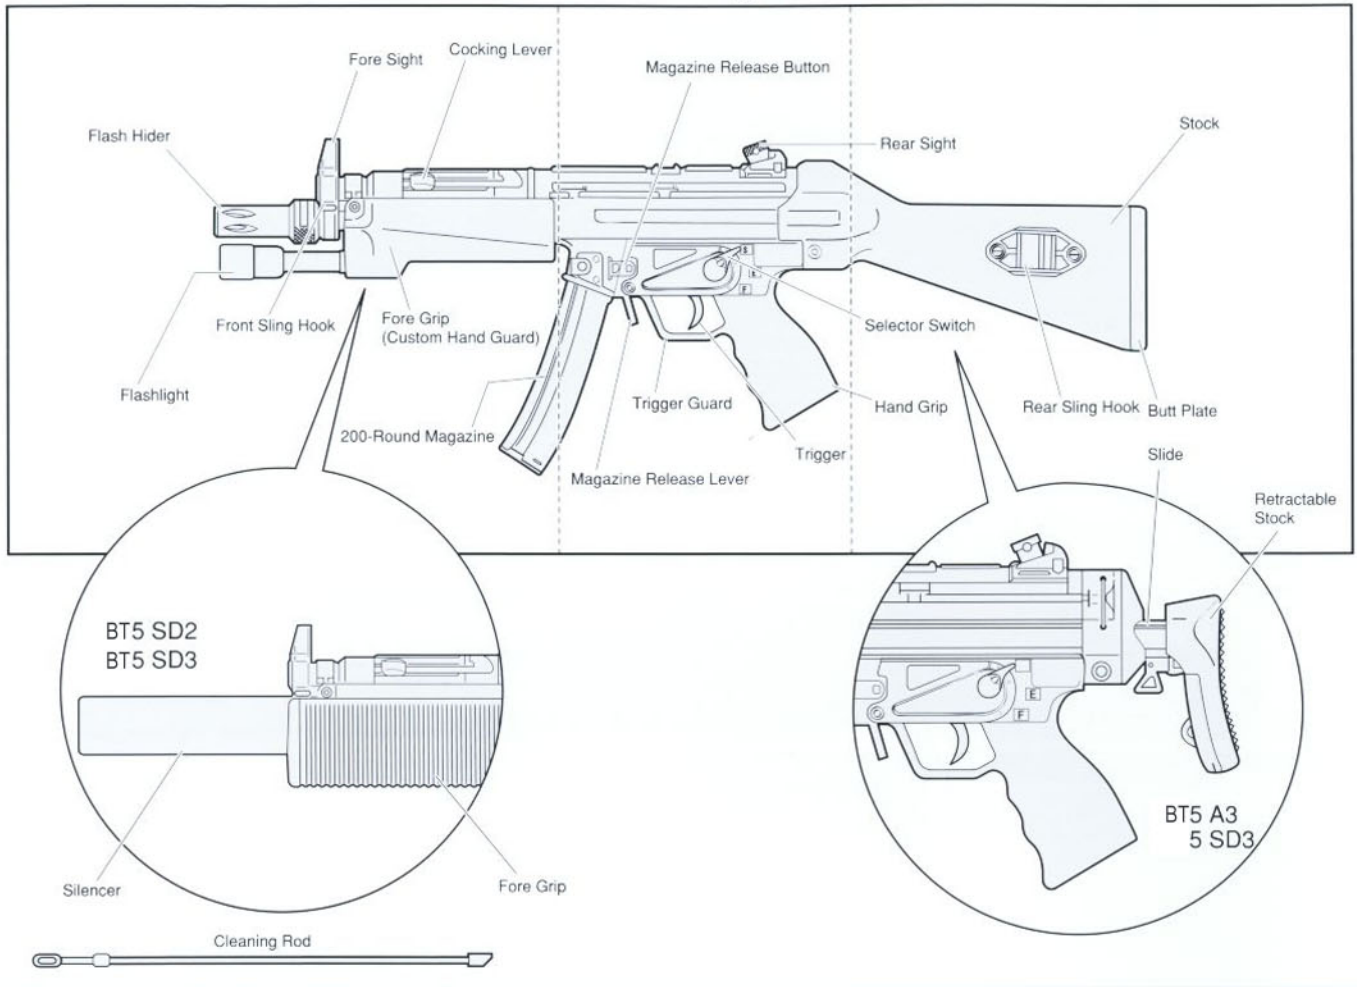


2 Specification

Data of BT5 Airsoft Electric Gun


Name	BT5 A2 Tactical Lighted Forearm	BT5 SD2	BT5 A2 Wide Forearm
			
	BT5 A3 Tactical Lighted Forearm	BT5 SD3	BT5 A3 Wide Forearm
			
Weight	2.635 kg 2.764 kg	2.925 kg 2.954 kg	2.506 kg 2.461 kg
Barrel Length	229 mm	229 mm	229 mm
Barrel Caliber	6.08 mm	6.08 mm	6.08 mm
Pellet Capacity	200	200	200
Pellet	6mm BB	6mm BB	6mm BB
Initial Bullet Speed	85-105 m/Sec	85-105 m/Sec	85-105 m/Sec
Battery Type	Large Type Mini Type	Large Type Mini Type	Large Type Mini Type

3 How to operate


1 How to use selector switch

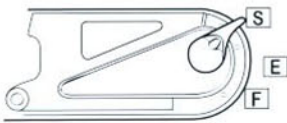

S : Safety Lock

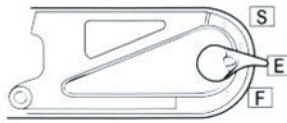

E : Semi Auto

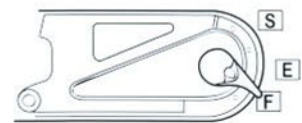

F : Full Auto

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

- Action against problem
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 20 pellets remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.


Ensure smooth pellet feeding.

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Open the top hatch and insert BB pellets. About 200 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

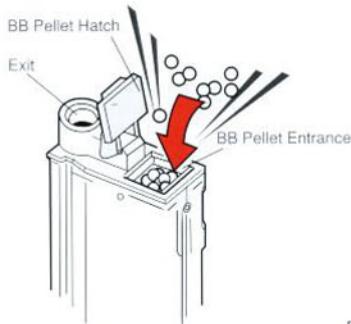

- 2 Close the hatch

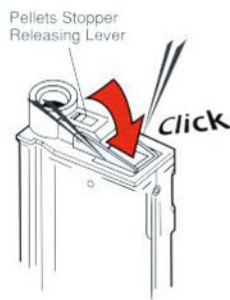


Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.

- 3 Hold the Magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.

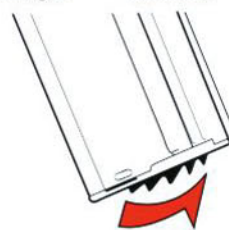

- 4 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.




If pellet feeding is frequently faulty, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.


3 How to change battery

A2 / SD2


- 1 Remove the butt plate by pressing it downwards and pull out the connector.

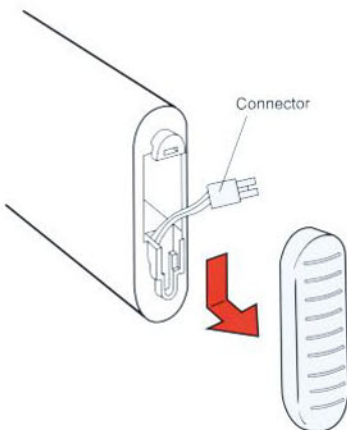


- 2 Insert the battery into the stock and connect the connector.

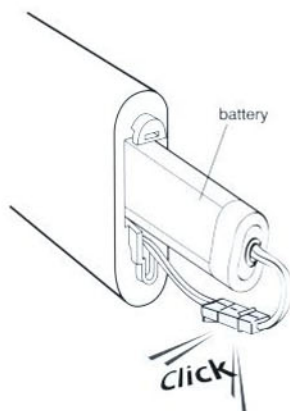


- 3 Insert connector and battery. Bend the cord in S shape.

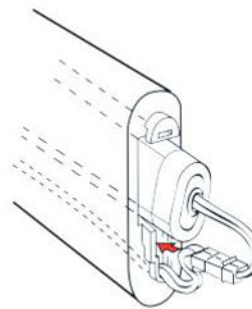


- 4 When the battery and cord are set in position, reinstall the butt plate as shown.

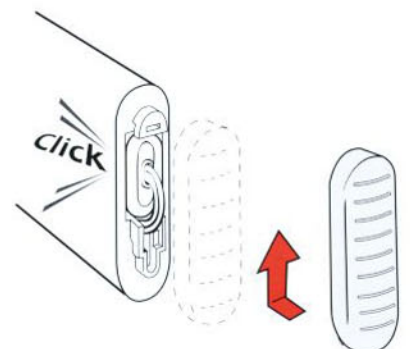

A3

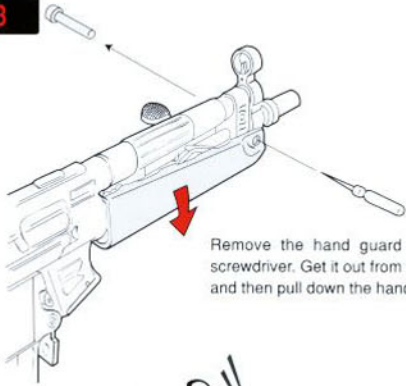


Remove the hand guard pin by using a screwdriver. Get it out from the opposite side and then pull down the hand guard.

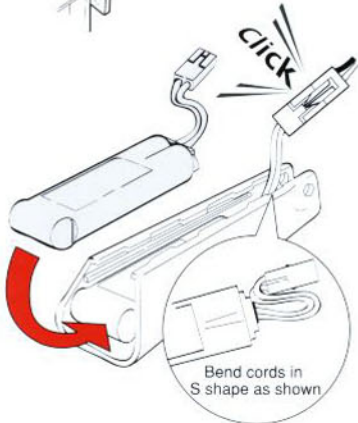


Set the battery in the hand guard, with the cord side facing towards the muzzle, and connect the connector.

Bend cords in S shape as shown

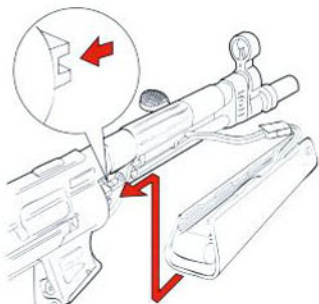

Fit the rib built in the hand guard to the groove shown by the arrow. (Also, set the other side in the same manner.)

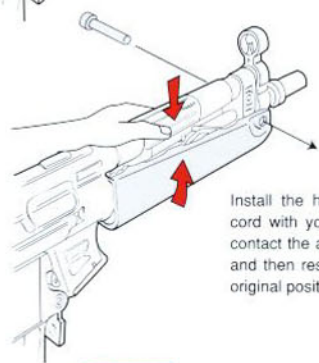


Install the hand guard while securing the cord with your fingers so that they do not contact the area shown by the oblique lines and then restore the hand guard pin to the original position.




Do not force the fore grip into place. It may bend the handle.

SD3

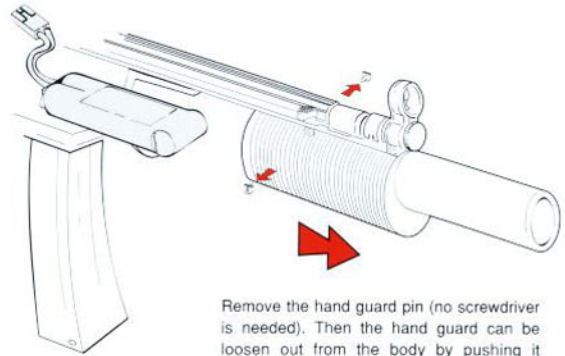


Remove the hand guard pin (no screwdriver is needed). Then the hand guard can be loosen out from the body by pushing it forward.

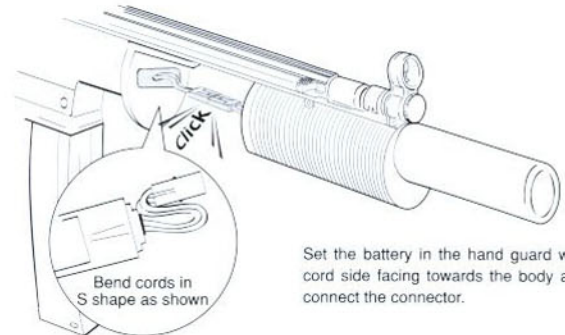


Set the battery in the hand guard with cord side facing towards the body and connect the connector.

Bend cords in S shape as shown

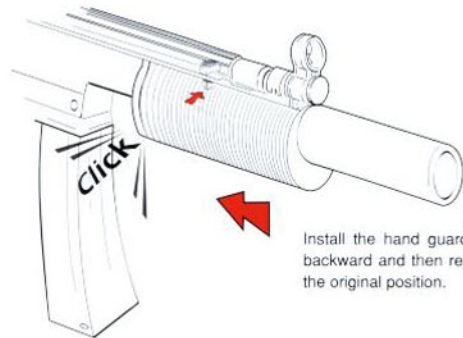

Install the hand guard by pushing it backward and then restore the pin to the original position.


5 How to adjust the hop up system

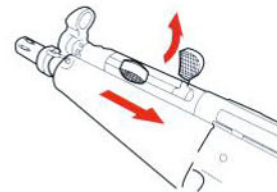


Keep pulling the cocking lever until fixing the lever.

4 Flash Hider Attachment / Detachment Procedure

Removal

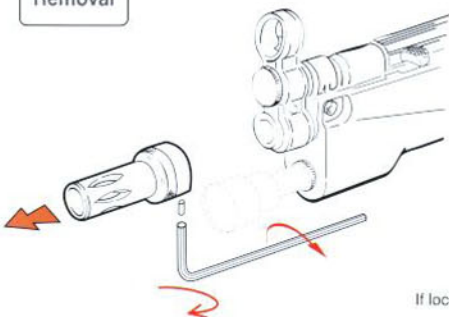


Installation

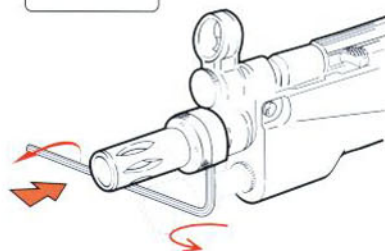

If locking cannot be set, slowly turn to the right or left to adjust the position.

Hop Up Adjustment Lever

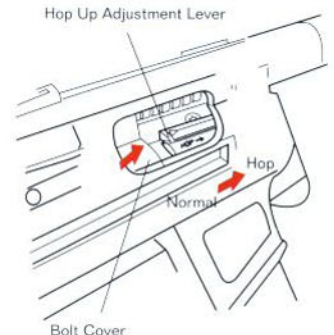

Bolt Cover

Turn the hop up adjustment lever gradually. Moving forward the level will raise the hop up. Moving backward the level will resume to normal.

6 How to fire


* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- Remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec. to obtain smooth continuous firing. (never use CRC-556 or other mineral oil)




- There is possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

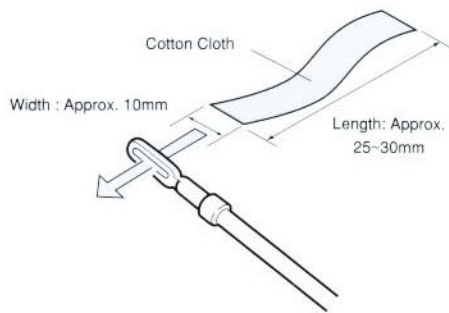4 Maintenance
1 How to use a cleaning rod


Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)

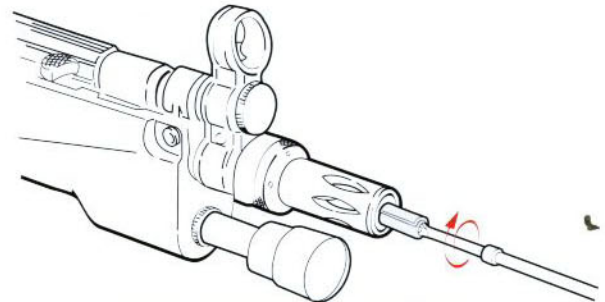


Hold the tip of the rod and insert it with turning motion.

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.


CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

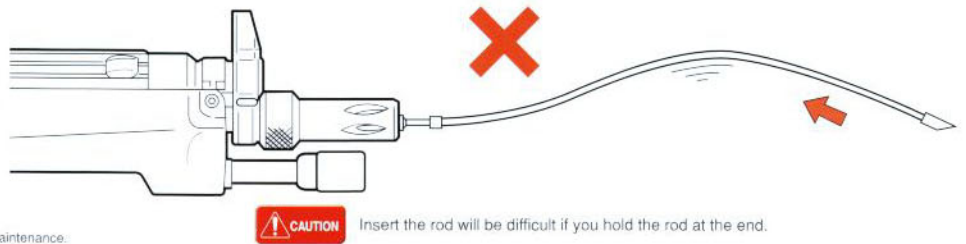

CAUTION Insert the rod will be difficult if you hold the rod at the end.

- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

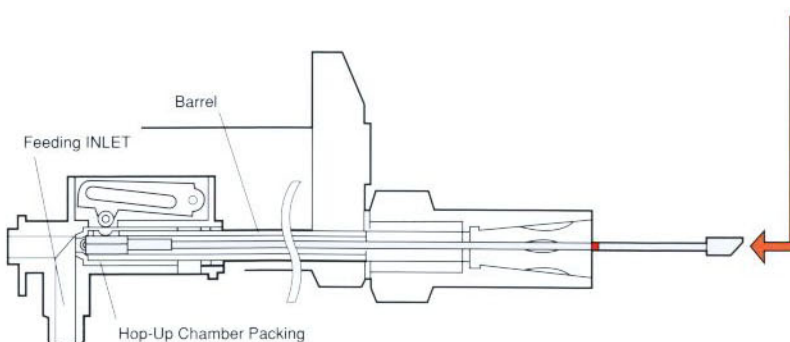
2 Never use any used BB pellets


Use new 6mm pellet is a must.



Please don't use any BB pellet which is not completed.

Please don't use any broken BB pellet.

Please don't use any BB pellet which diameter exceeds 6mm.

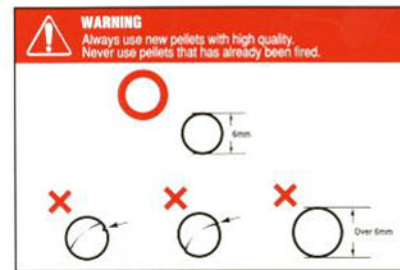5 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.IE Italiana s.r.l.
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia


Co. Name: ActionSportGames A/S
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@softgun.dk
 Website: <http://www.actionsportgames.com/>

The United States of America

Co. Name: Spartan Imports, Inc.
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: No. 283, Jo Through 2nd Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.
 Tel: (886) 7 323 0988
 Fax: (886) 7 323 4055
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

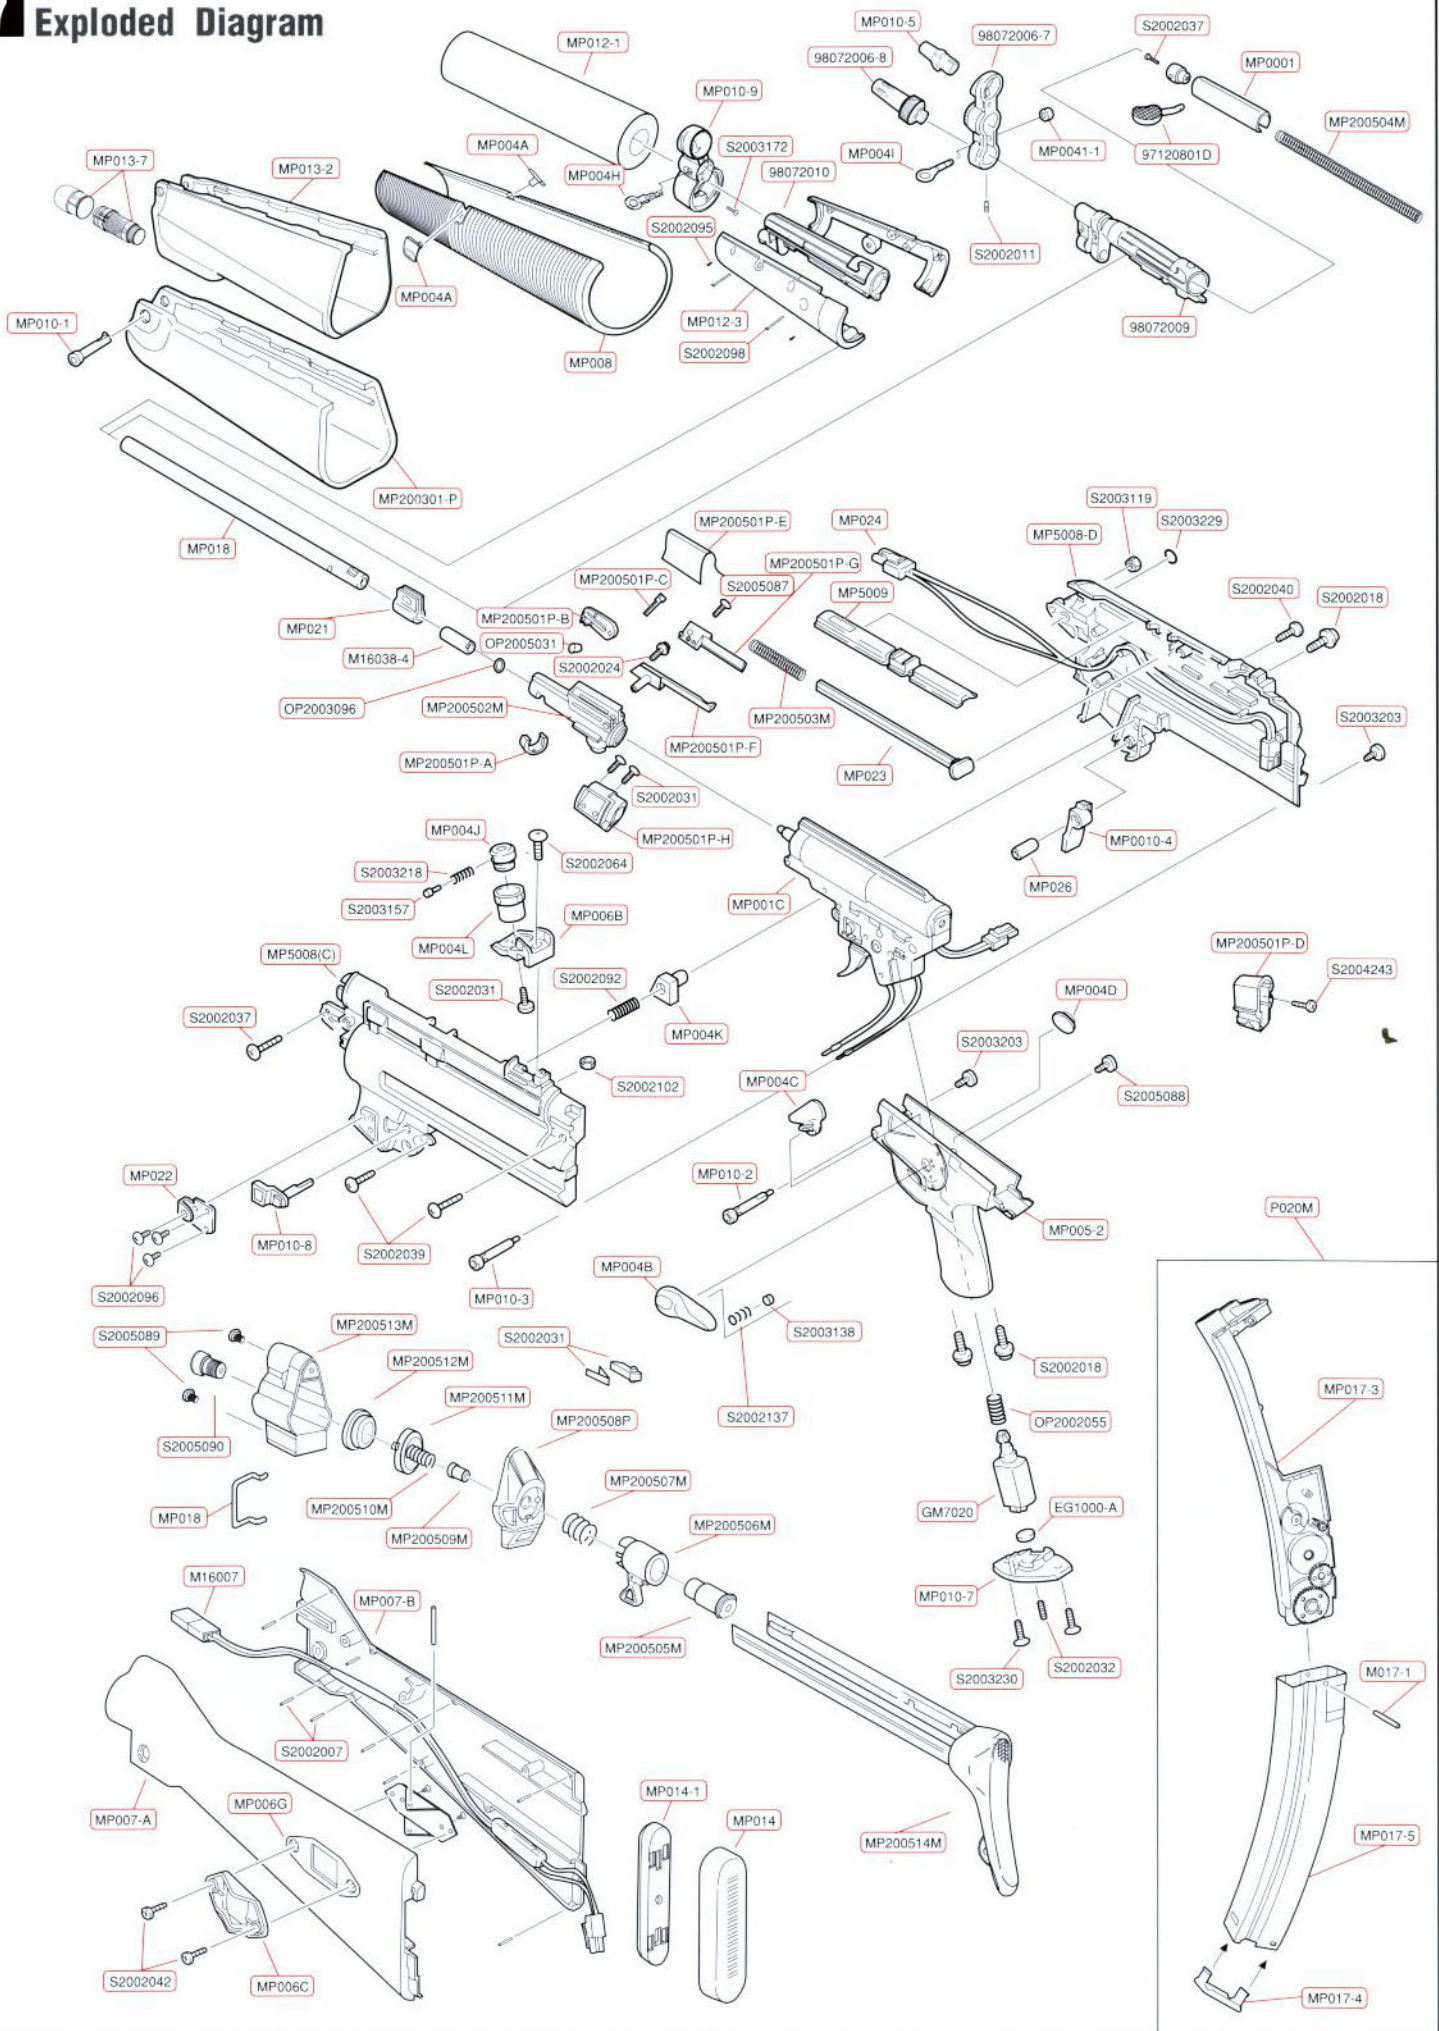7 Exploded Diagram



Website: www.classicarmy.com
E-mail: info@classicarmy.com



BRÜGGER & THOMET and the B&T logo are registered trademarks of BRÜGGER & THOMET AG., Switzerland and are used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark, www.actionsportgames.com

WA[®]
CLASSIC ARMY

B & T

BT5
A2, A3,
SD2 & SD3

AUTOMATIC ELECTRIC GUN SERIES

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

HOP-UP
SYSTEM

1 Outlook / Structure of BT5

Always set the selector switch to the safe position when you are not firing or during storage

BT5 A2 Tactical Lighted Forearm

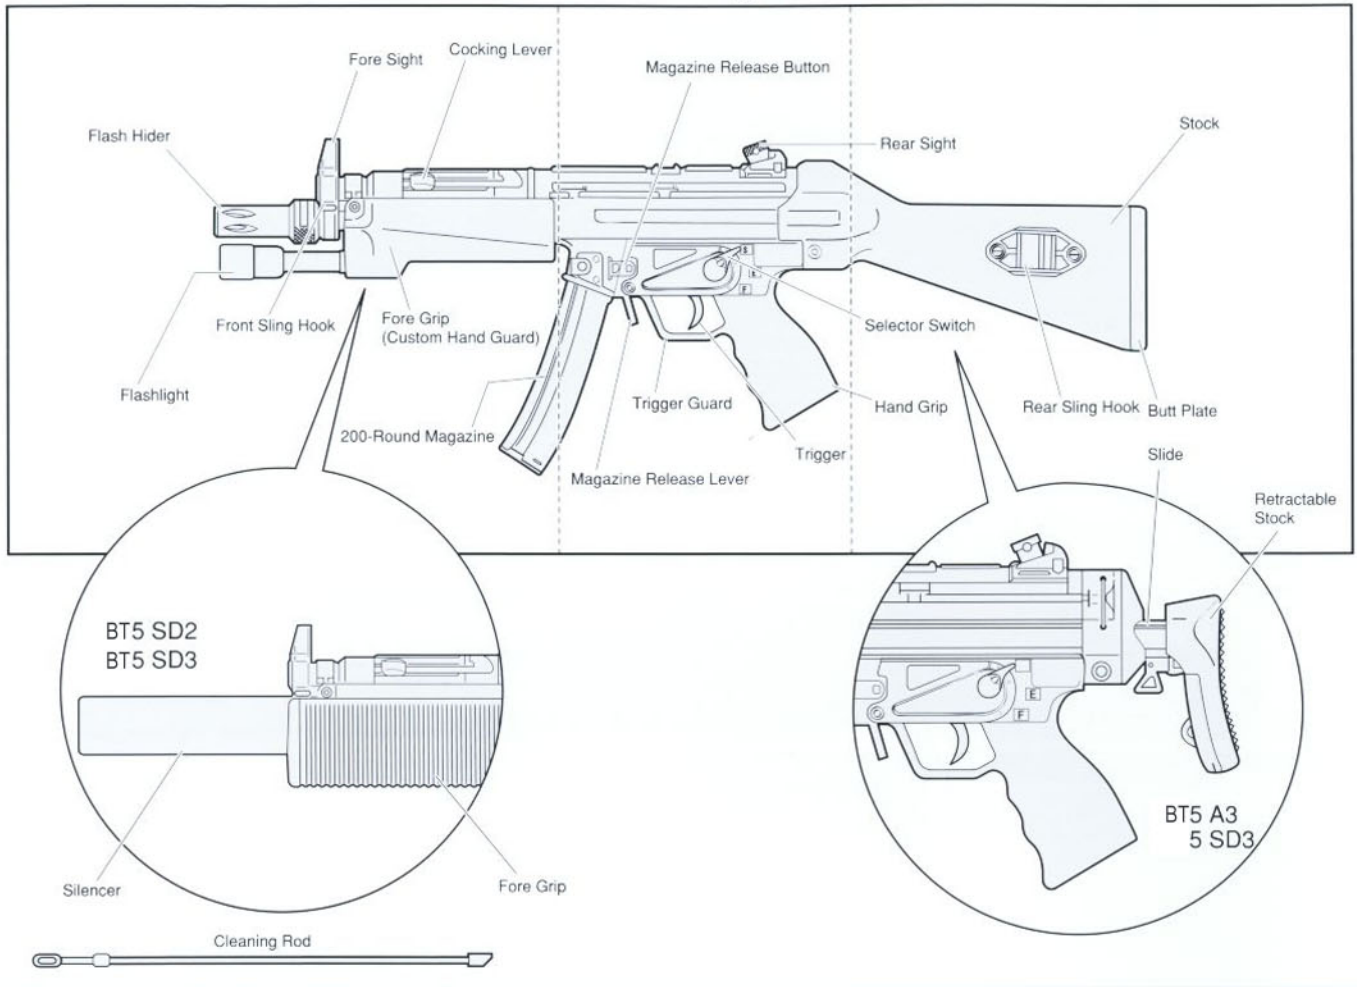


2 Specification

Data of BT5 Airsoft Electric Gun


Name	BT5 A2 Tactical Lighted Forearm	BT5 SD2	BT5 A2 Wide Forearm
			
	BT5 A3 Tactical Lighted Forearm	BT5 SD3	BT5 A3 Wide Forearm
			
Weight	2.635 kg 2.764 kg	2.925 kg 2.954 kg	2.506 kg 2.461 kg
Barrel Length	229 mm	229 mm	229 mm
Barrel Caliber	6.08 mm	6.08 mm	6.08 mm
Pellet Capacity	200	200	200
Pellet	6mm BB	6mm BB	6mm BB
Initial Bullet Speed	85-105 m/Sec	85-105 m/Sec	85-105 m/Sec
Battery Type	Large Type Mini Type	Large Type Mini Type	Large Type Mini Type

3 How to operate


1 How to use selector switch

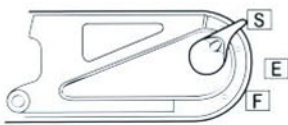

S : Safety Lock

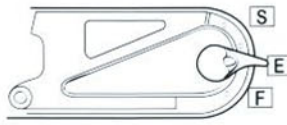

E : Semi Auto

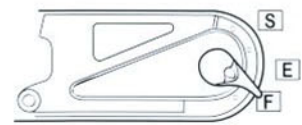

F : Full Auto

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

- Action against problem
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 20 pellets remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.


Ensure smooth pellet feeding.

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Open the top hatch and insert BB pellets. About 200 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

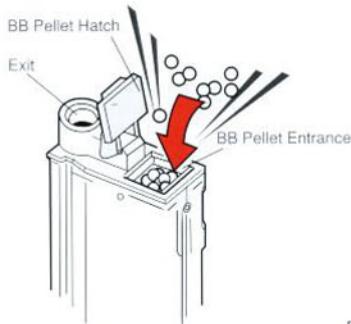

- 2 Close the hatch

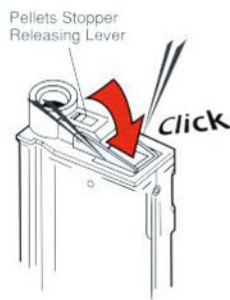


Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.


- 3 Hold the Magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.

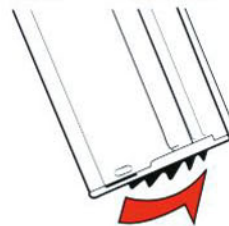

- 4 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.

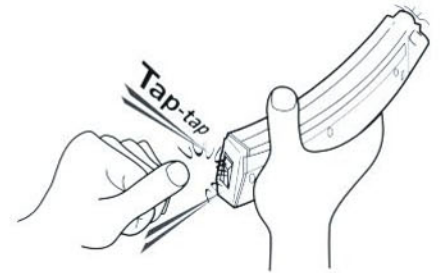


If pellet feeding is frequently faulty, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.


3 How to change battery

A2 / SD2


- 1 Remove the butt plate by pressing it downwards and pull out the connector.

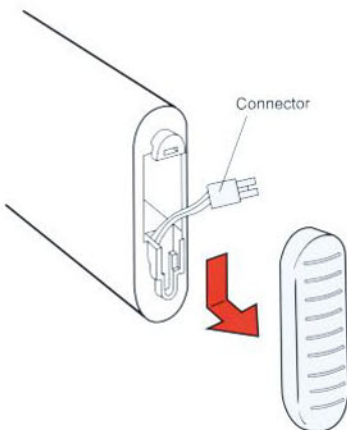


- 2 Insert the battery into the stock and connect the connector.

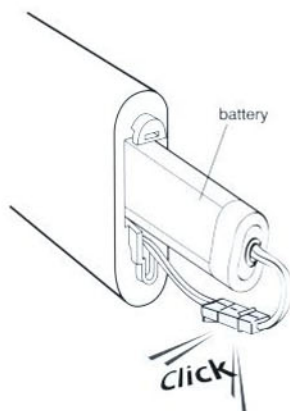


- 3 Insert connector and battery. Bend the cord in S shape.

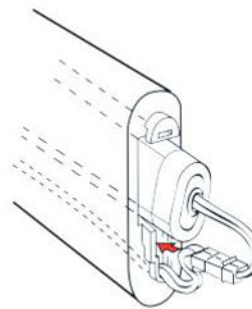


- 4 When the battery and cord are set in position, reinstall the butt plate as shown.

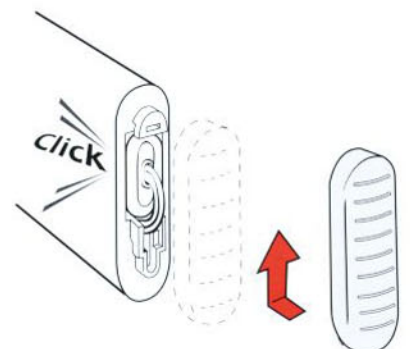

A3

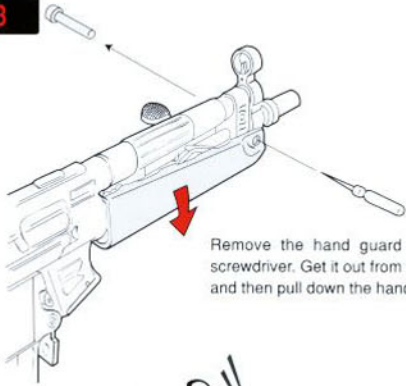


Remove the hand guard pin by using a screwdriver. Get it out from the opposite side and then pull down the hand guard.

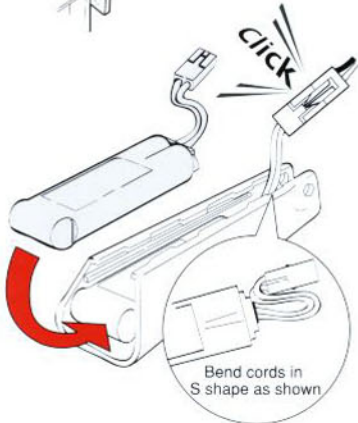


Set the battery in the hand guard, with the cord side facing towards the muzzle, and connect the connector.

Bend cords in S shape as shown

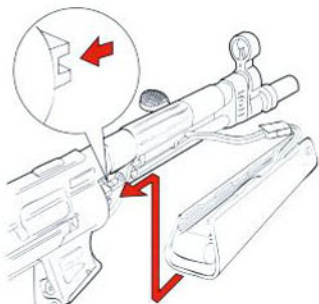

Fit the rib built in the hand guard to the groove shown by the arrow. (Also, set the other side in the same manner.)

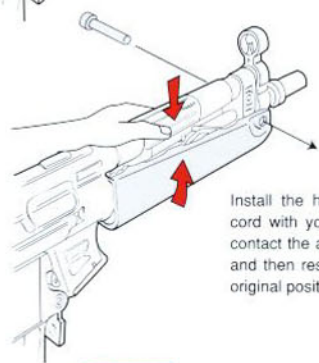


Install the hand guard while securing the cord with your fingers so that they do not contact the area shown by the oblique lines and then restore the hand guard pin to the original position.




Do not force the fore grip into place. It may bend the handle.

SD3

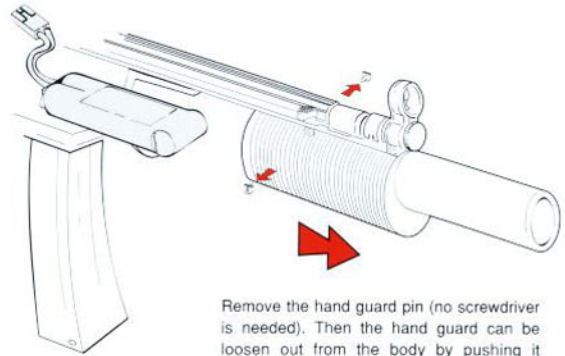


Remove the hand guard pin (no screwdriver is needed). Then the hand guard can be loosen out from the body by pushing it forward.

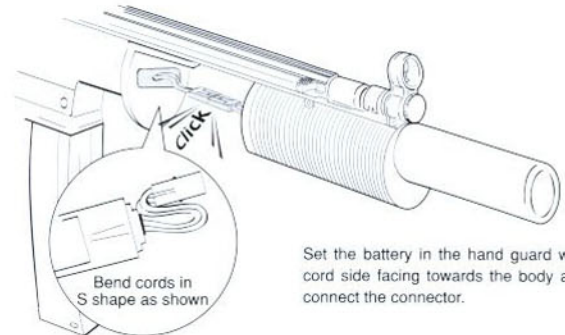


Set the battery in the hand guard with cord side facing towards the body and connect the connector.

Bend cords in S shape as shown

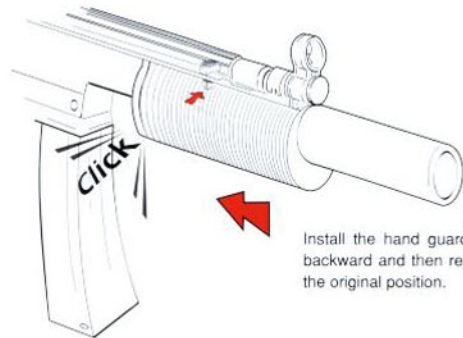

Install the hand guard by pushing it backward and then restore the pin to the original position.


5 How to adjust the hop up system

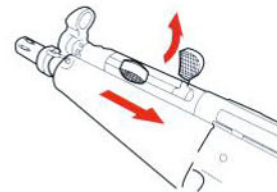


Keep pulling the cocking lever until fixing the lever.

4 Flash Hider Attachment / Detachment Procedure

Removal

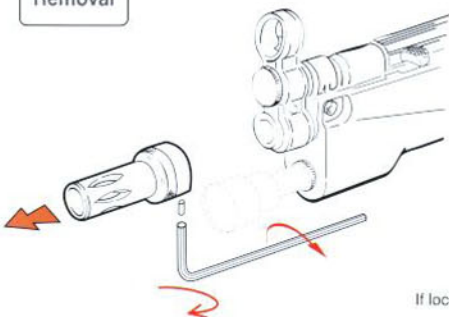


Installation

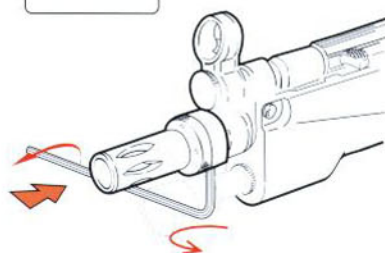

If locking cannot be set, slowly turn to the right or left to adjust the position.

Hop Up Adjustment Lever

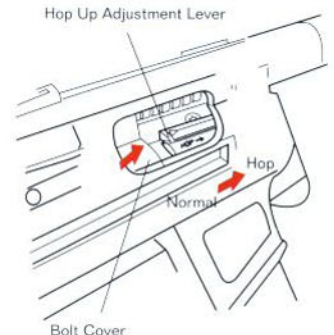

Turn the hop up adjustment lever gradually. Moving forward the level will raise the hop up. Moving backward the level will resume to normal.

6 How to fire


* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- Remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec. to obtain smooth continuous firing. (never use CRC-556 or other mineral oil)






- There is possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.



- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

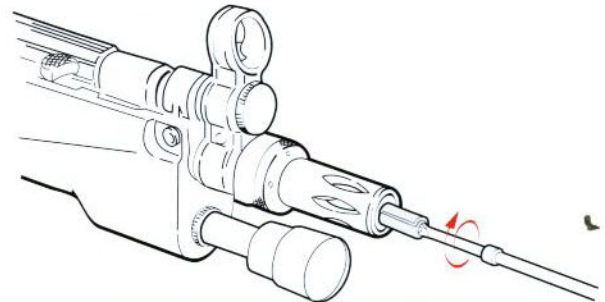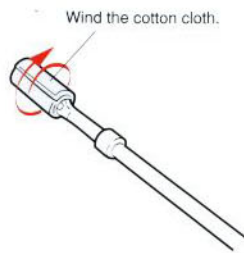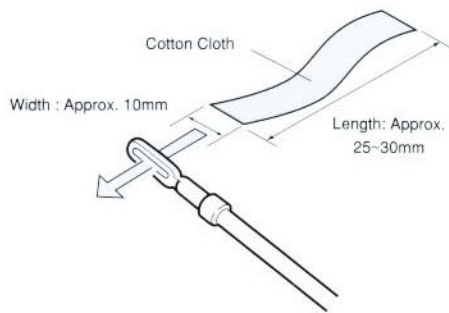4 Maintenance
1 How to use a cleaning rod


Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)




CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

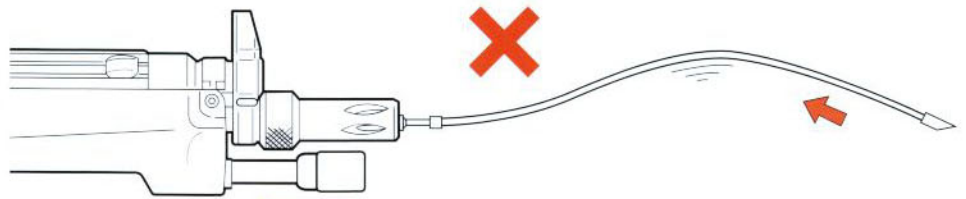


Insert the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

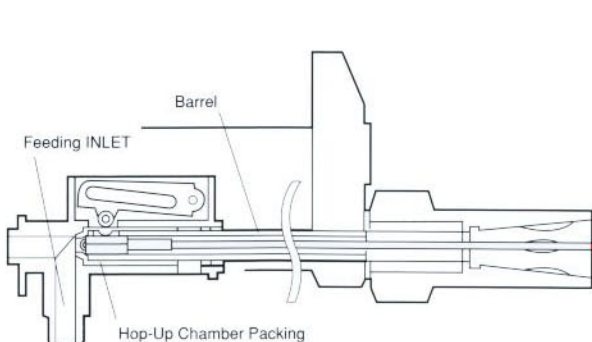
2 Never use any used BB pellets


Use new 6mm pellet is a must.

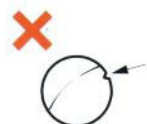


Please don't use any BB pellet which is not completed.

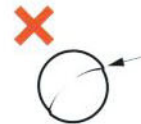

Please don't use any broken BB pellet.



Please don't use any BB pellet which diameter exceeds 6mm.

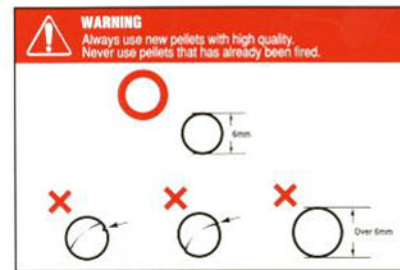5 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.IE Italiana s.r.l.
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@softgun.dk
 Website: <http://www.actionsportgames.com/>


The United States of America

Co. Name: Spartan Imports, Inc.
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: No. 283, Jo Through 2nd Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.
 Tel: (886) 7 323 0988
 Fax: (886) 7 323 4055
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

7 Exploded Diagram

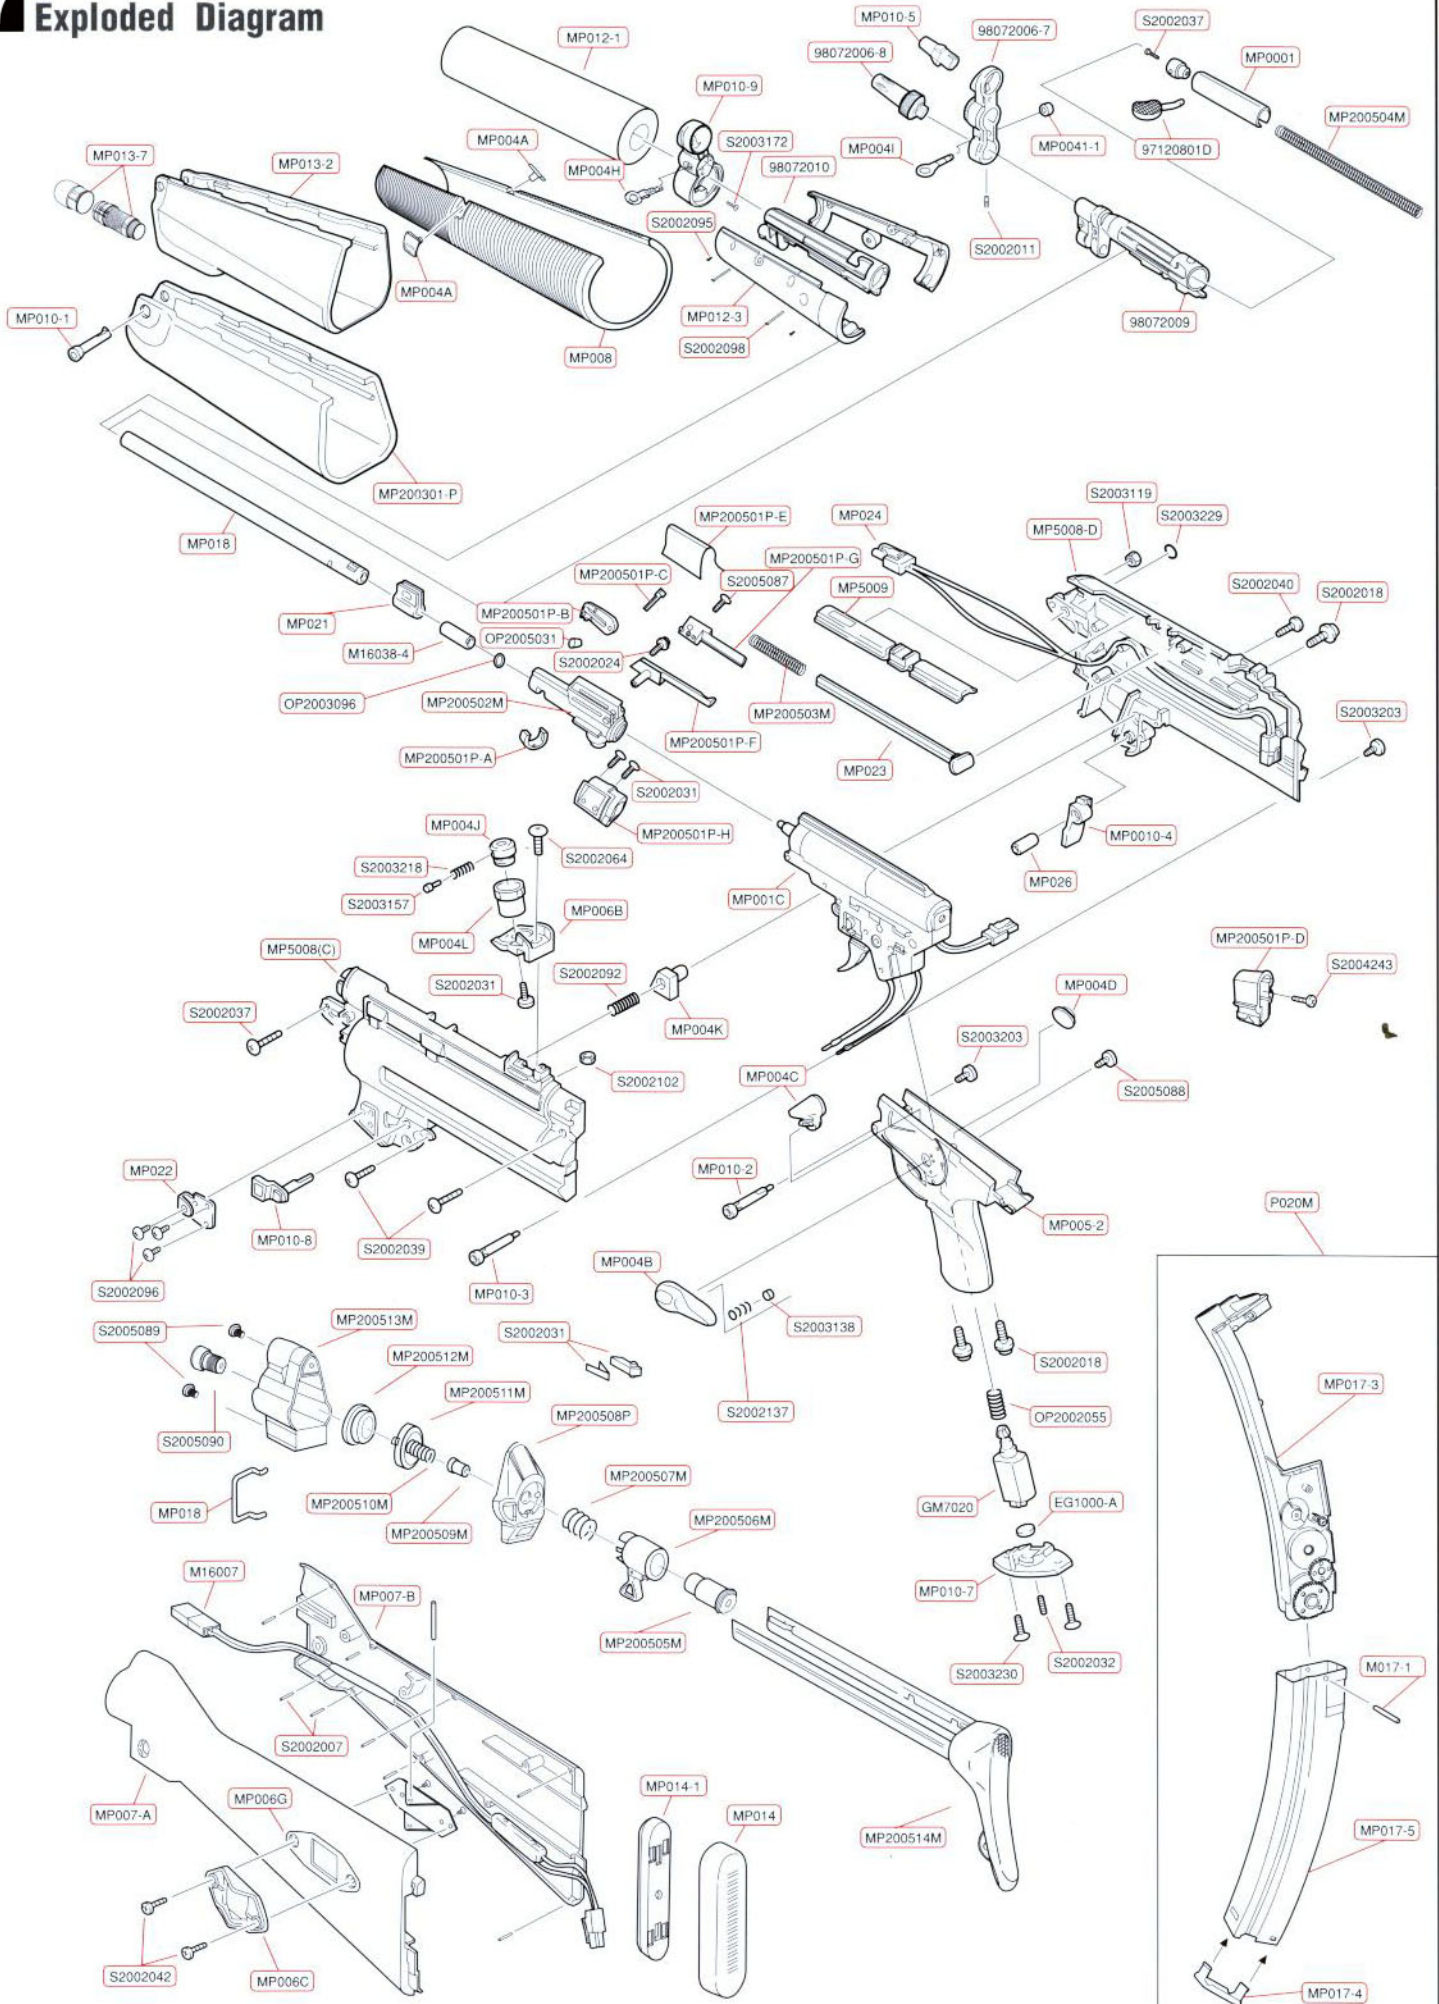



Website: www.classicarmy.com
E-mail: info@classicarmy.com



BRÜGGER & THOMET and the B&T logo are registered trademarks of BRÜGGER & THOMET AG., Switzerland and are used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark, www.actionsportgames.com

WA[®]
CLASSIC ARMY

B & T

BT5
A2, A3,
SD2 & SD3

AUTOMATIC ELECTRIC GUN SERIES

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

HOP-UP
SYSTEM

1 Outlook / Structure of BT5

Always set the selector switch to the safe position when you are not firing or during storage

BT5 A2 Tactical Lighted Forearm

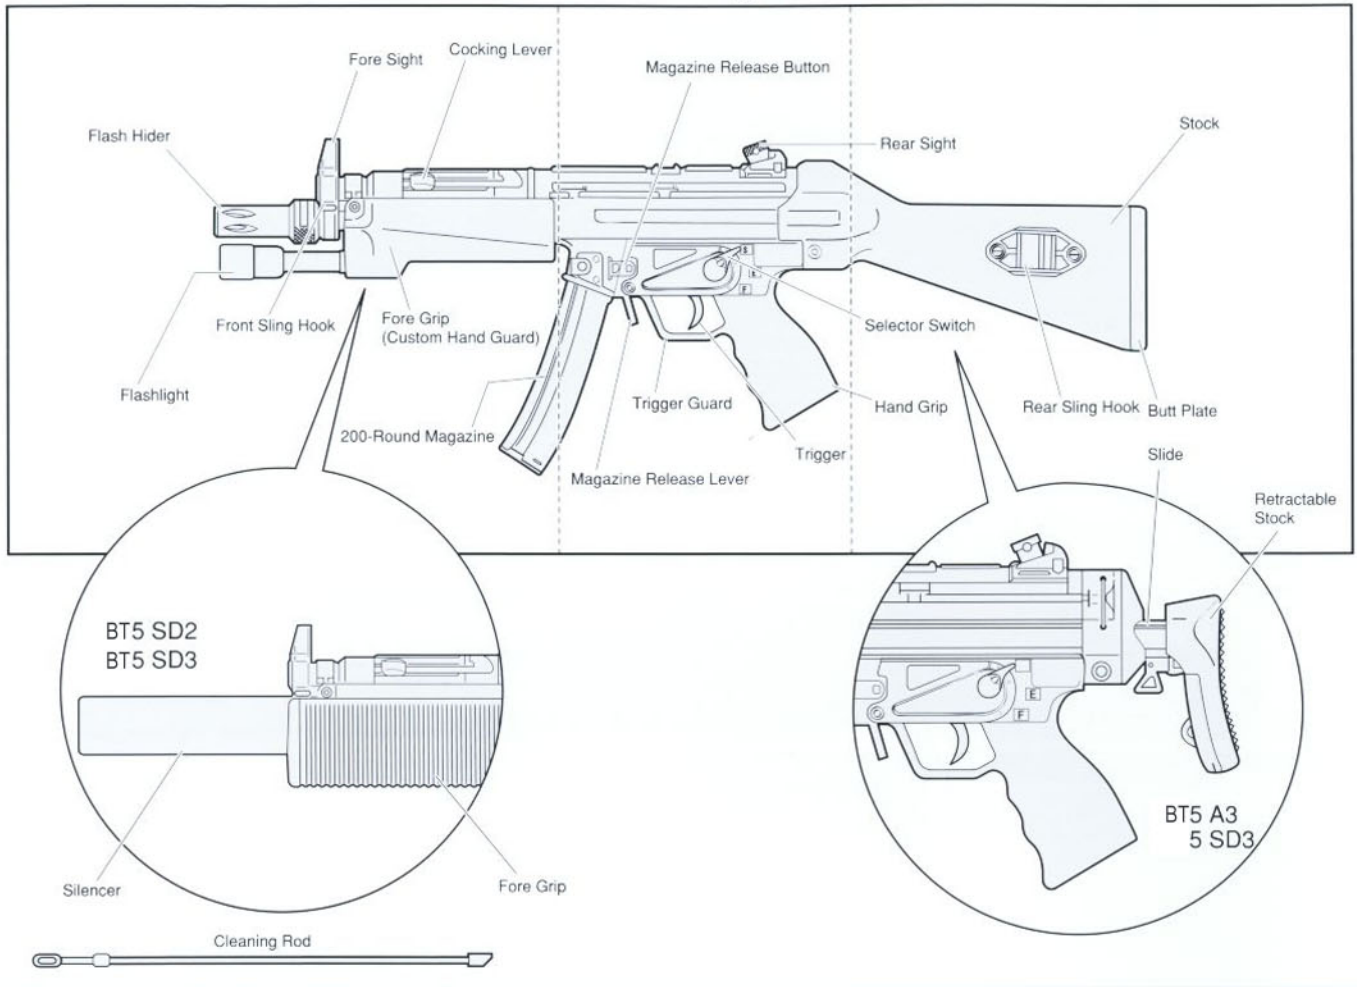


2 Specification

Data of BT5 Airsoft Electric Gun


Name	BT5 A2 Tactical Lighted Forearm	BT5 SD2	BT5 A2 Wide Forearm
			
	BT5 A3 Tactical Lighted Forearm	BT5 SD3	BT5 A3 Wide Forearm
			
Weight	2.635 kg 2.764 kg	2.925 kg 2.954 kg	2.506 kg 2.461 kg
Barrel Length	229 mm	229 mm	229 mm
Barrel Caliber	6.08 mm	6.08 mm	6.08 mm
Pellet Capacity	200	200	200
Pellet	6mm BB	6mm BB	6mm BB
Initial Bullet Speed	85-105 m/Sec	85-105 m/Sec	85-105 m/Sec
Battery Type	Large Type Mini Type	Large Type Mini Type	Large Type Mini Type

3 How to operate


1 How to use selector switch

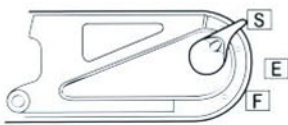

S : Safety Lock

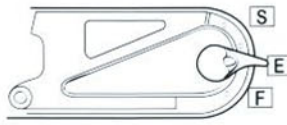

E : Semi Auto

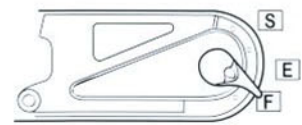

F : Full Auto

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

- Action against problem
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 20 pellets remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.


Ensure smooth pellet feeding.

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Open the top hatch and insert BB pellets. About 200 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

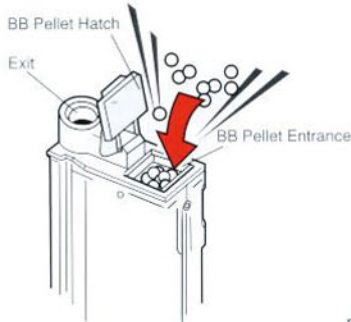

- 2 Close the hatch

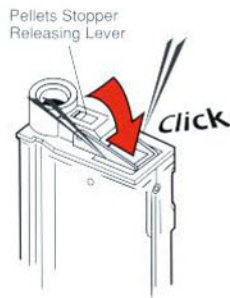


Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.


- 3 Hold the Magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.

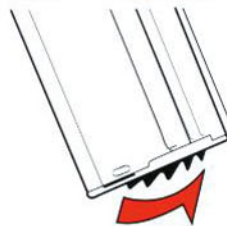

- 4 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.

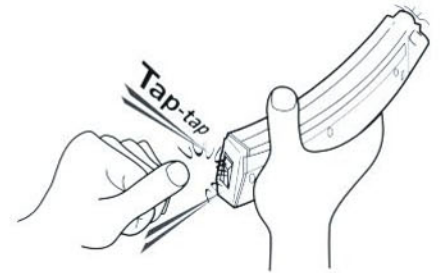


If pellet feeding is frequently faulty, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.


3 How to change battery

A2 / SD2


- 1 Remove the butt plate by pressing it downwards and pull out the connector.

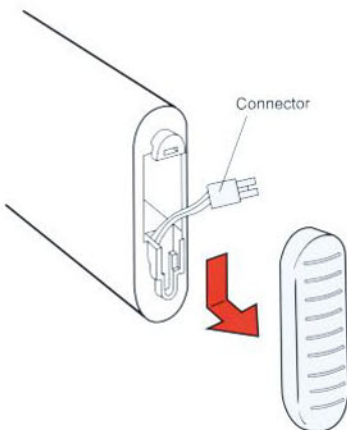


- 2 Insert the battery into the stock and connect the connector.

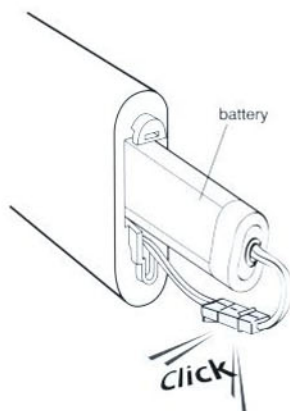


- 3 Insert connector and battery. Bend the cord in S shape.

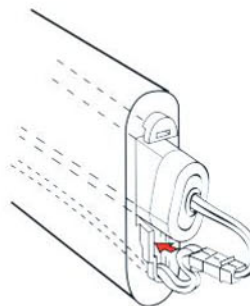


- 4 When the battery and cord are set in position, reinstall the butt plate as shown.

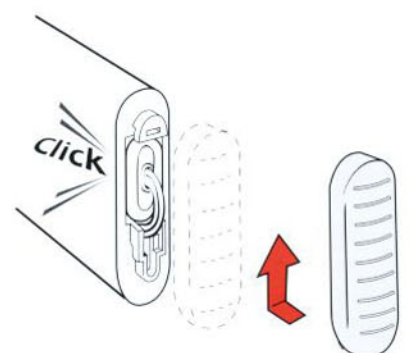

A3

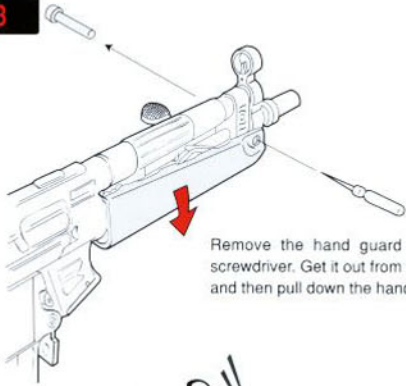


Remove the hand guard pin by using a screwdriver. Get it out from the opposite side and then pull down the hand guard.

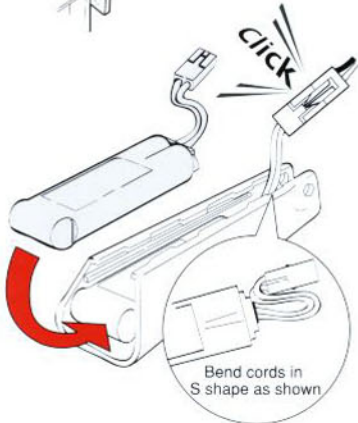


Set the battery in the hand guard, with the cord side facing towards the muzzle, and connect the connector.

Bend cords in S shape as shown

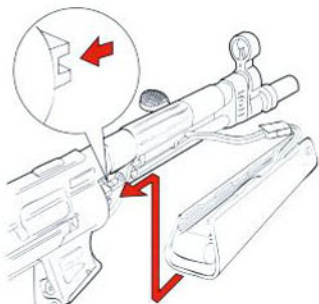

Fit the rib built in the hand guard to the groove shown by the arrow. (Also, set the other side in the same manner.)

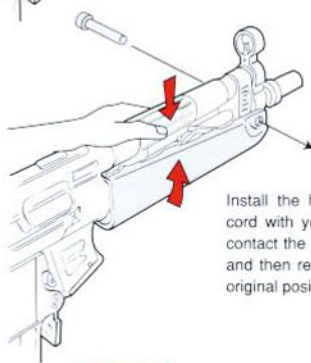


Install the hand guard while securing the cord with your fingers so that they do not contact the area shown by the oblique lines and then restore the hand guard pin to the original position.




Do not force the fore grip into place. It may bend the handle.

SD3

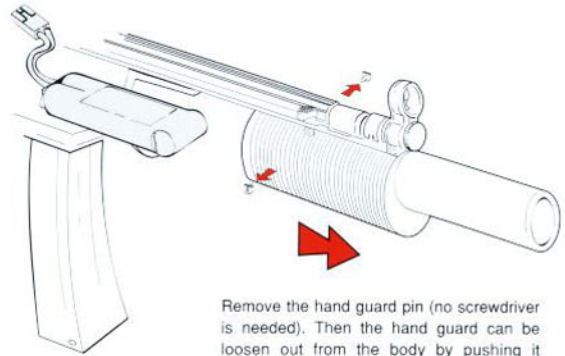


Remove the hand guard pin (no screwdriver is needed). Then the hand guard can be loosen out from the body by pushing it forward.

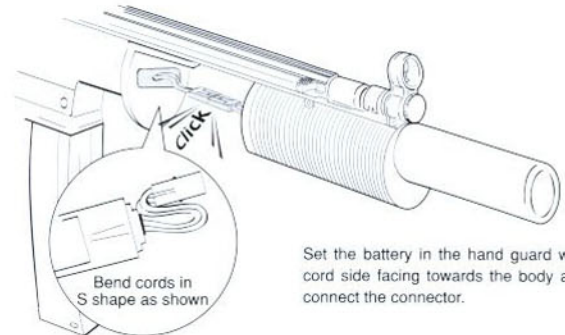


Set the battery in the hand guard with cord side facing towards the body and connect the connector.

Bend cords in S shape as shown

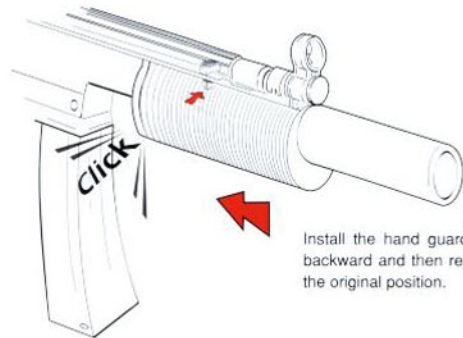

Install the hand guard by pushing it backward and then restore the pin to the original position.


5 How to adjust the hop up system

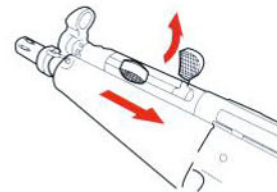


Keep pulling the cocking lever until fixing the lever.

4 Flash Hider Attachment / Detachment Procedure

Removal

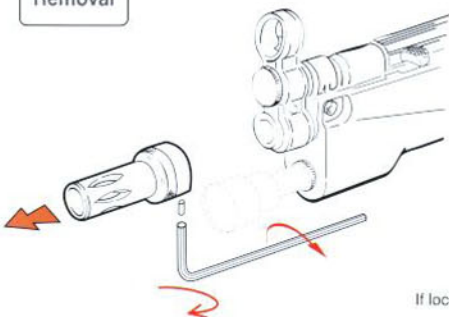


Installation

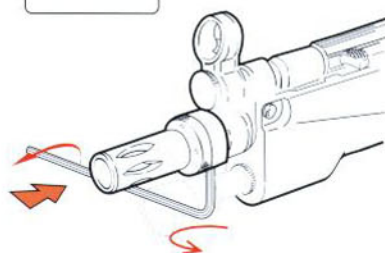

If locking cannot be set, slowly turn to the right or left to adjust the position.

Hop Up Adjustment Lever

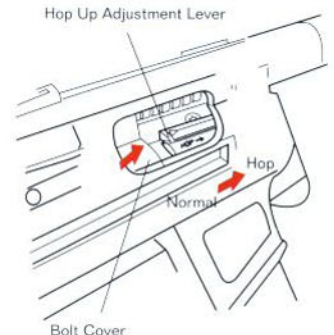

Turn the hop up adjustment lever gradually. Moving forward the level will raise the hop up. Moving backward the level will resume to normal.

6 How to fire


* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- Remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec. to obtain smooth continuous firing. (never use CRC-556 or other mineral oil)






- There is possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.



- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

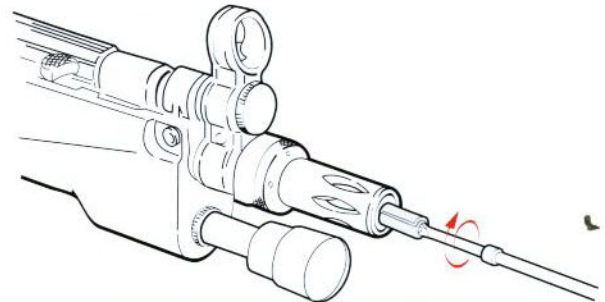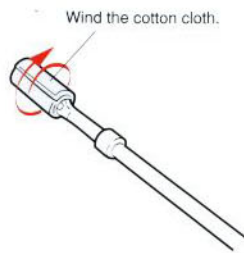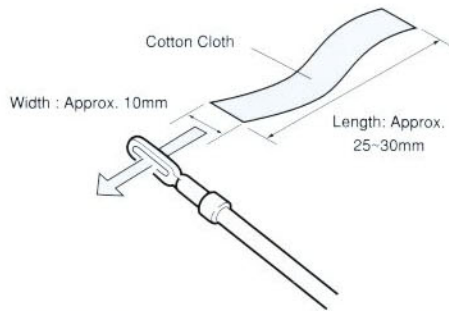4 Maintenance
1 How to use a cleaning rod


Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)




CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

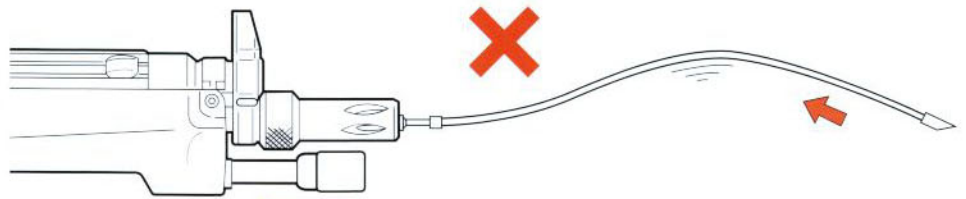


Insert the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

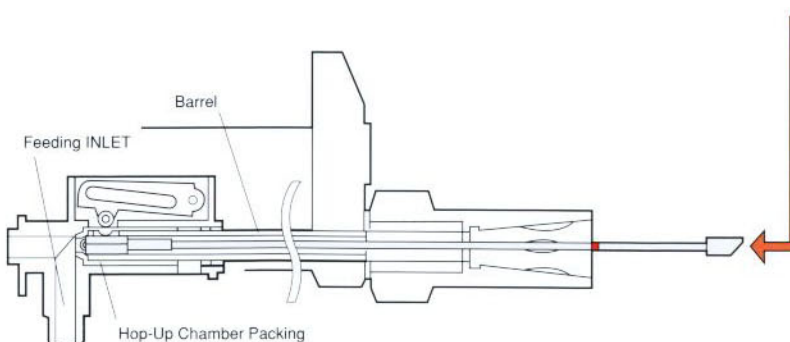
2 Never use any used BB pellets


Use new 6mm pellet is a must.

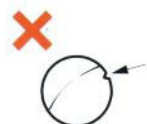


Please don't use any BB pellet which is not completed.

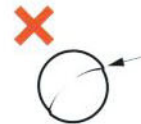

Please don't use any broken BB pellet.



Please don't use any BB pellet which diameter exceeds 6mm.

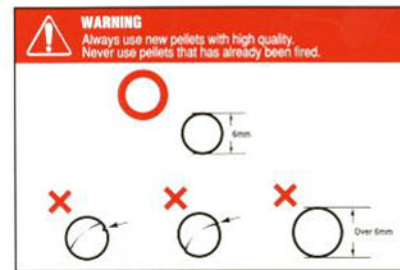5 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.IE Italiana s.r.l.
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@softgun.dk
 Website: <http://www.actionsportgames.com/>


The United States of America

Co. Name: Spartan Imports, Inc.
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: No. 283, Jo Through 2nd Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.
 Tel: (886) 7 323 0988
 Fax: (886) 7 323 4055
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

7 Exploded Diagram

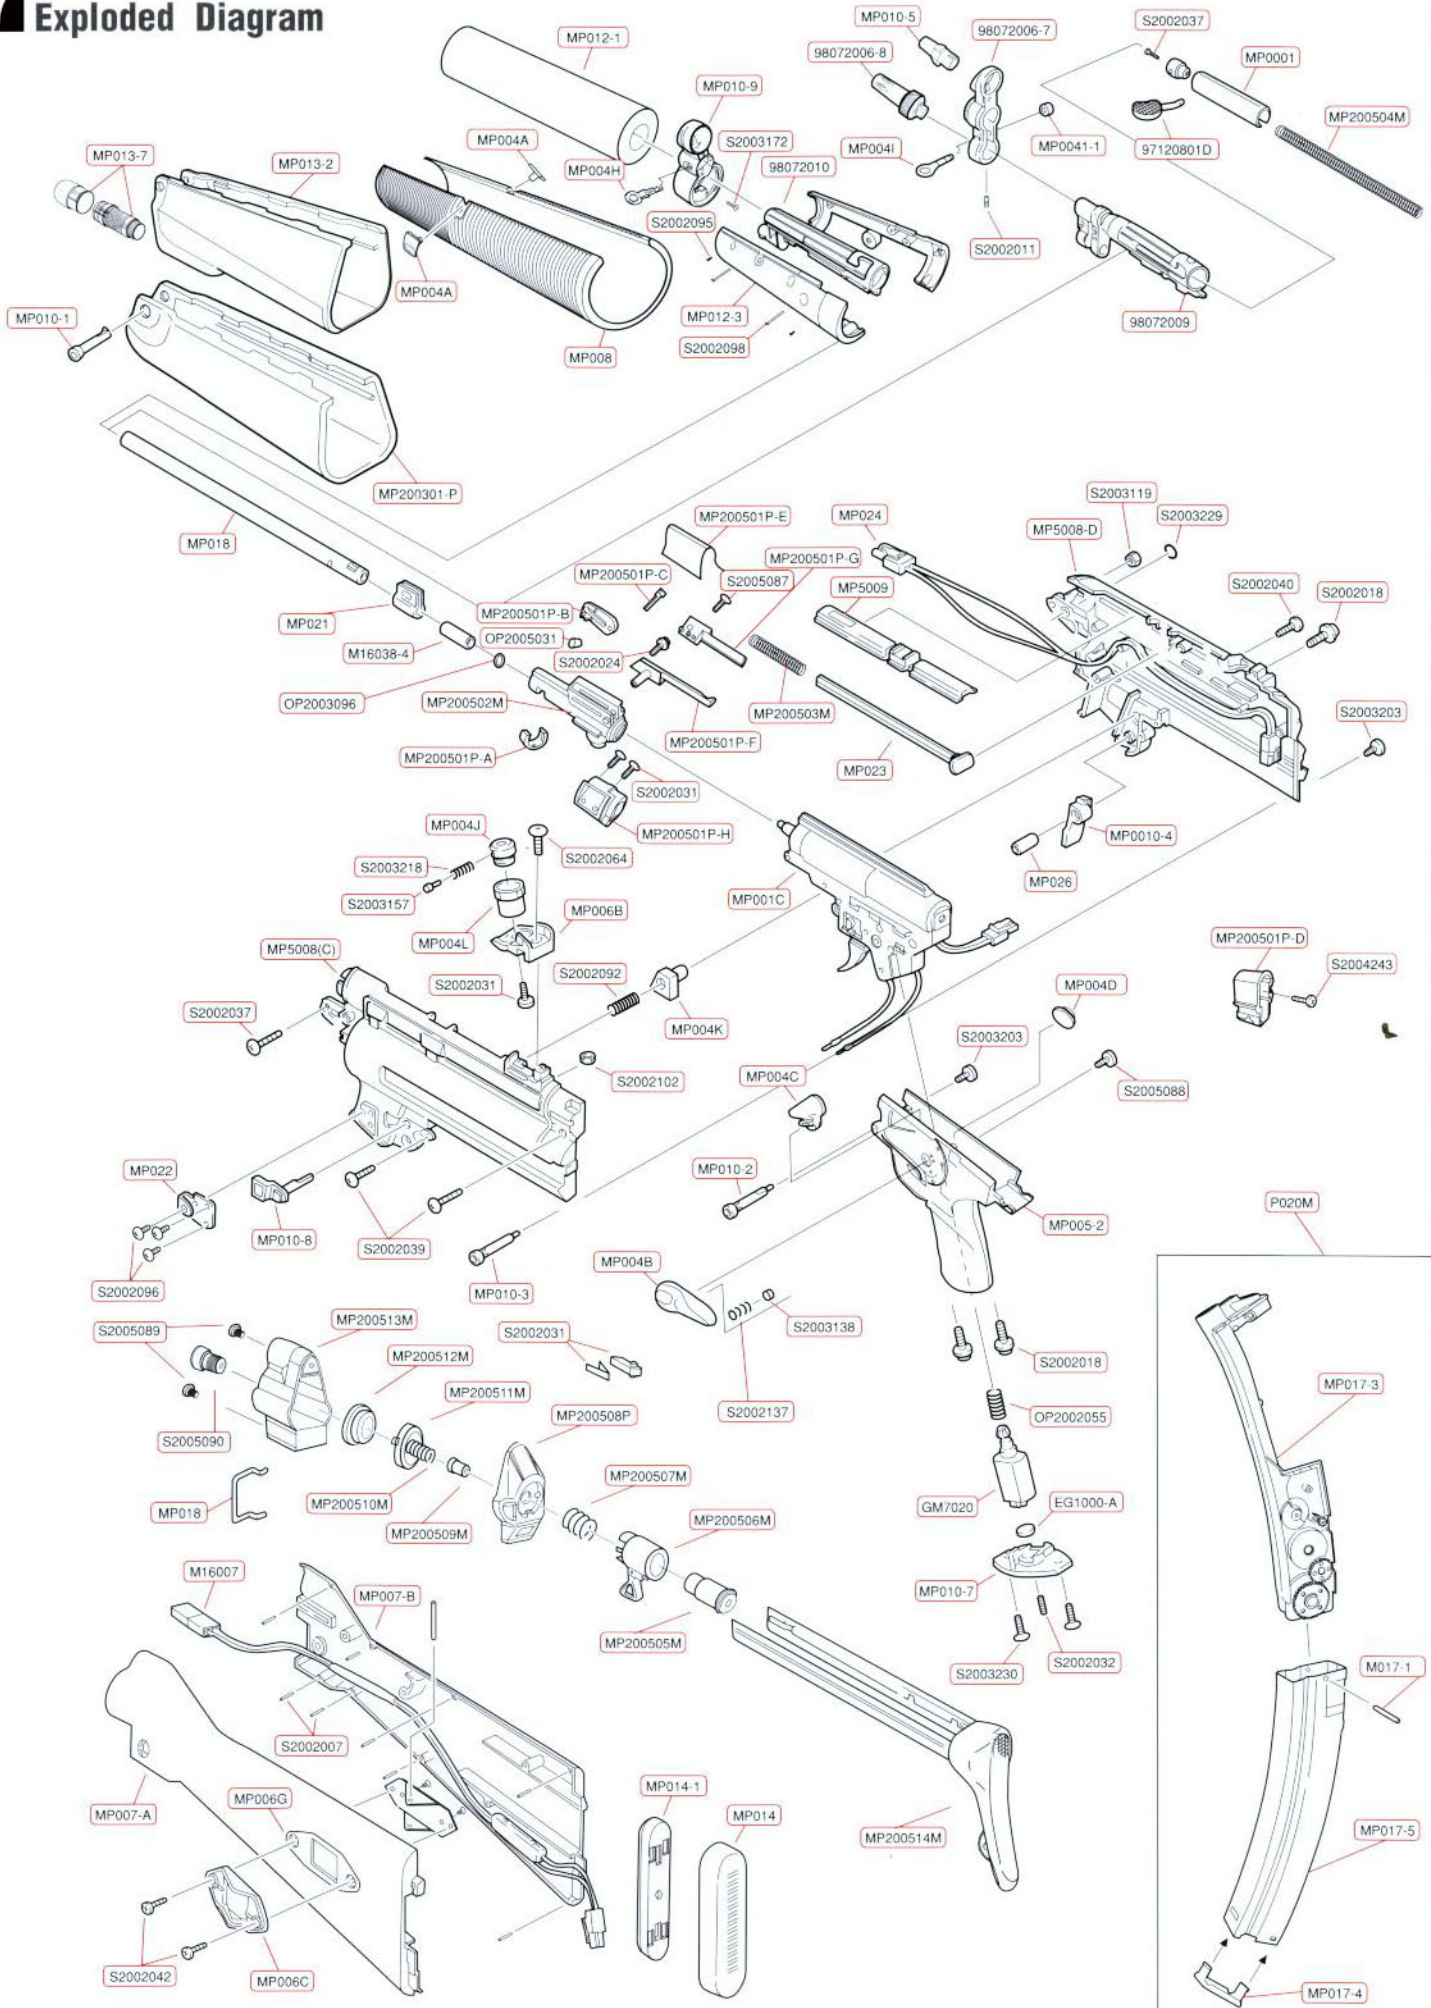



Website: www.classicarmy.com
E-mail: info@classicarmy.com



BRÜGGER & THOMET and the B&T logo are registered trademarks of BRÜGGER & THOMET AG., Switzerland and are used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark, www.actionsportgames.com

WA[®]
CLASSIC ARMY

B & T

BT5
A2, A3,
SD2 & SD3

AUTOMATIC ELECTRIC GUN SERIES

HANDLING CAUTIONS AND INSTRUCTION MANUAL



WARNING


- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

HOP-UP
SYSTEM

1 Outlook / Structure of BT5

Always set the selector switch to the safe position when you are not firing or during storage

BT5 A2 Tactical Lighted Forearm

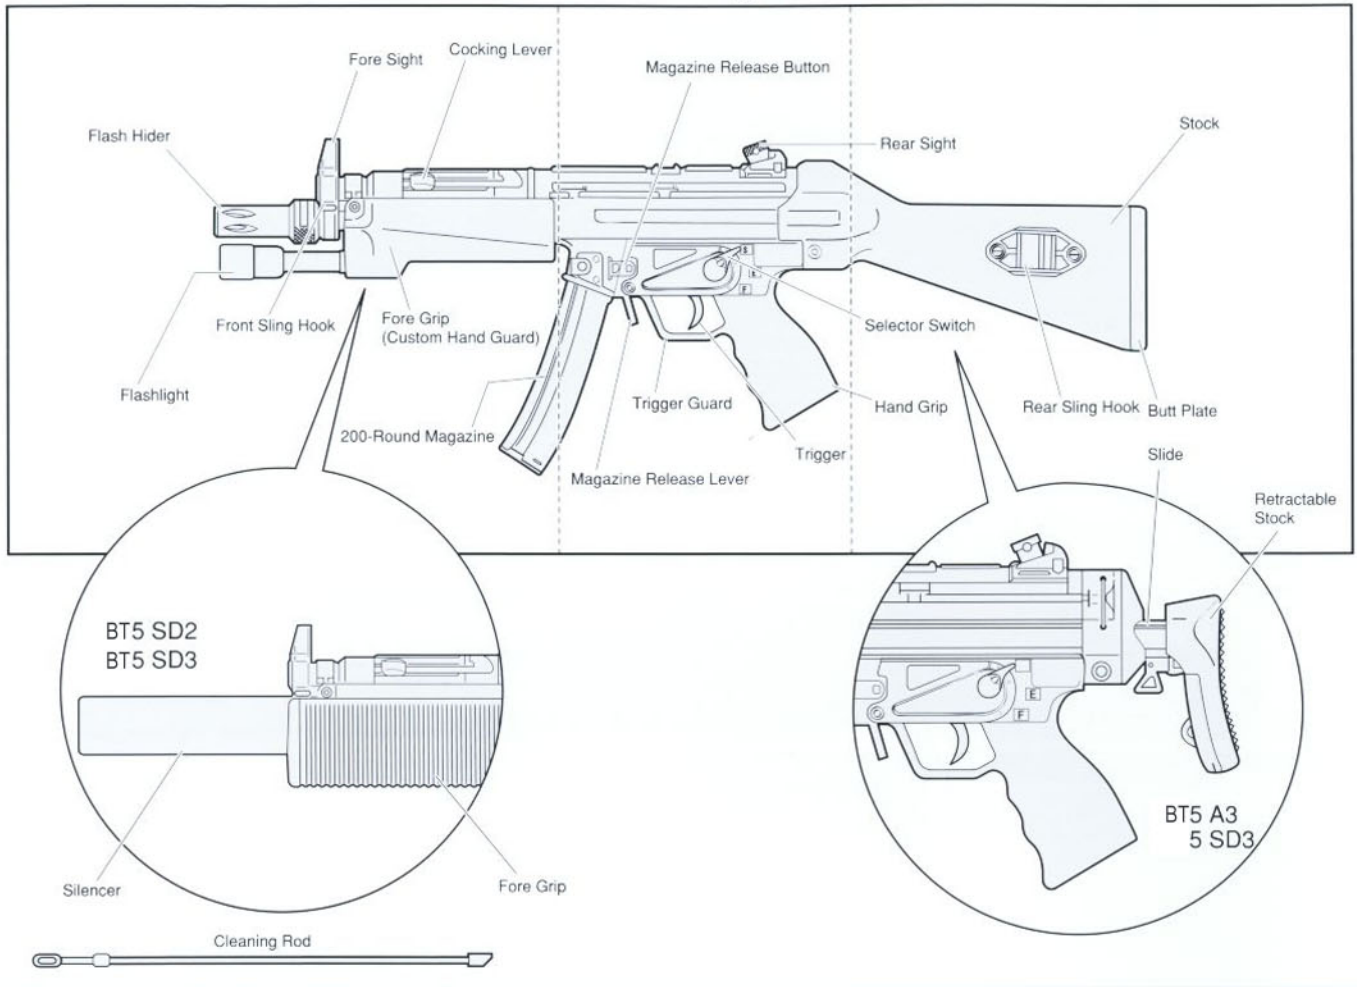


2 Specification

Data of BT5 Airsoft Electric Gun


Name	BT5 A2 Tactical Lighted Forearm	BT5 SD2	BT5 A2 Wide Forearm
			
	BT5 A3 Tactical Lighted Forearm	BT5 SD3	BT5 A3 Wide Forearm
			
Weight	2.635 kg 2.764 kg	2.925 kg 2.954 kg	2.506 kg 2.461 kg
Barrel Length	229 mm	229 mm	229 mm
Barrel Caliber	6.08 mm	6.08 mm	6.08 mm
Pellet Capacity	200	200	200
Pellet	6mm BB	6mm BB	6mm BB
Initial Bullet Speed	85-105 m/Sec	85-105 m/Sec	85-105 m/Sec
Battery Type	Large Type Mini Type	Large Type Mini Type	Large Type Mini Type

3 How to operate


1 How to use selector switch

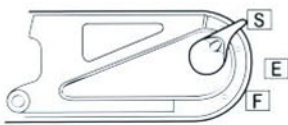

S : Safety Lock

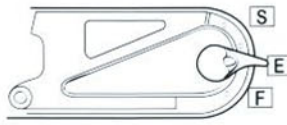

E : Semi Auto

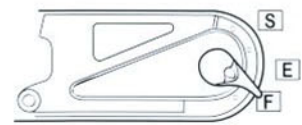

F : Full Auto

2 Magazine Attachment / Detachment Procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

- Action against problem
Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.




About 20 pellets remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.


Ensure smooth pellet feeding.

- Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.
- Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Open the top hatch and insert BB pellets. About 200 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

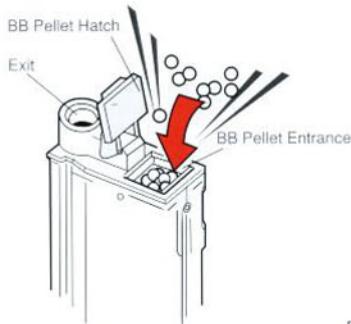

- 2 Close the hatch

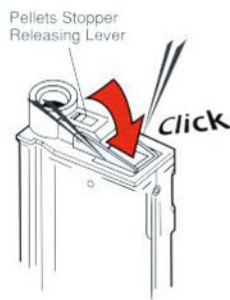


Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.


- 3 Hold the Magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.

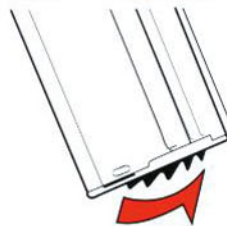

- 4 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.

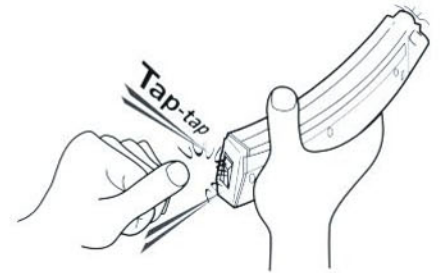


If pellet feeding is frequently faulty, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.


3 How to change battery

A2 / SD2


- 1 Remove the butt plate by pressing it downwards and pull out the connector.

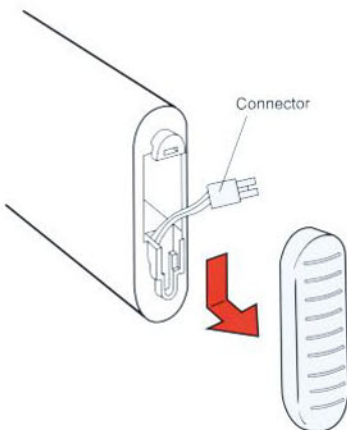


- 2 Insert the battery into the stock and connect the connector.

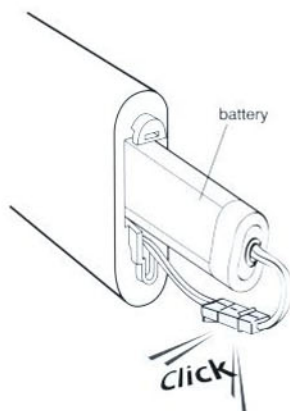


- 3 Insert connector and battery. Bend the cord in S shape.

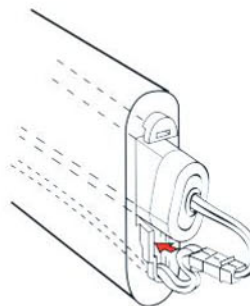


- 4 When the battery and cord are set in position, reinstall the butt plate as shown.

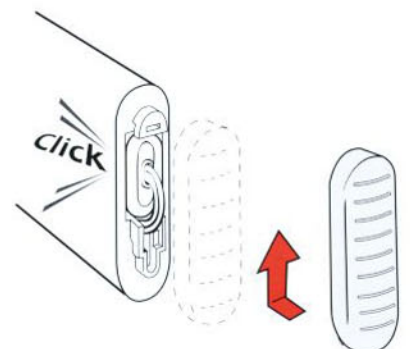

A3

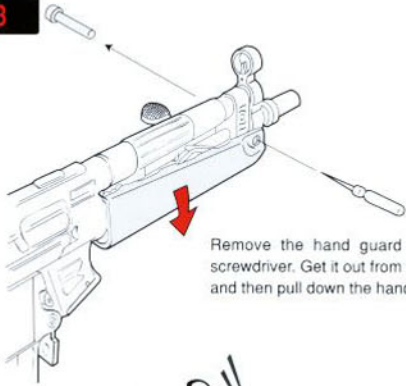


Remove the hand guard pin by using a screwdriver. Get it out from the opposite side and then pull down the hand guard.

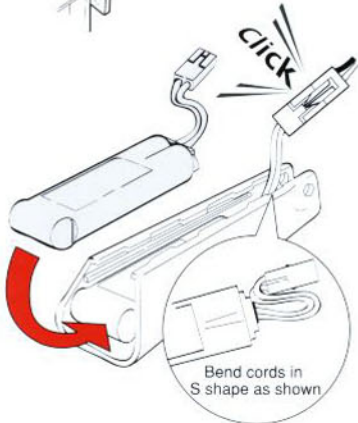


Set the battery in the hand guard, with the cord side facing towards the muzzle, and connect the connector.

Bend cords in S shape as shown

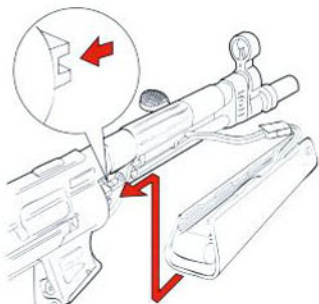

Fit the rib built in the hand guard to the groove shown by the arrow. (Also, set the other side in the same manner.)

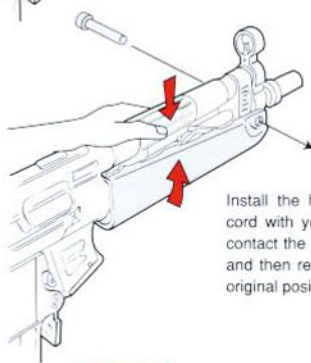


Install the hand guard while securing the cord with your fingers so that they do not contact the area shown by the oblique lines and then restore the hand guard pin to the original position.




Do not force the fore grip into place. It may bend the handle.

SD3

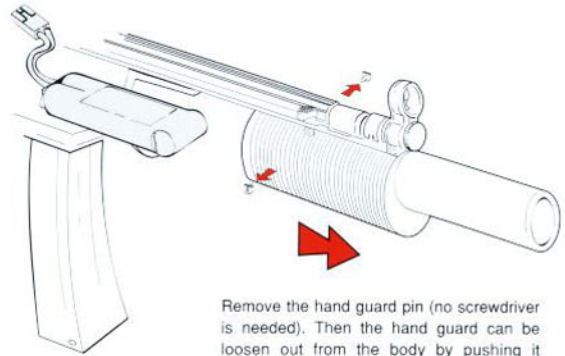


Remove the hand guard pin (no screwdriver is needed). Then the hand guard can be loosen out from the body by pushing it forward.

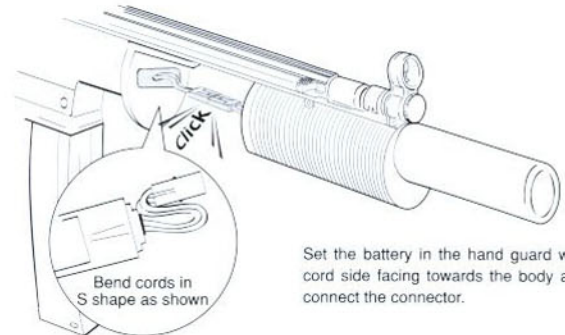


Set the battery in the hand guard with cord side facing towards the body and connect the connector.

Bend cords in S shape as shown

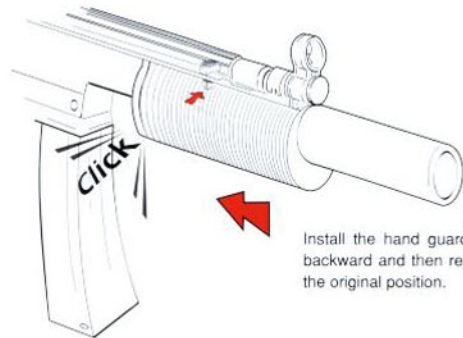

Install the hand guard by pushing it backward and then restore the pin to the original position.


5 How to adjust the hop up system

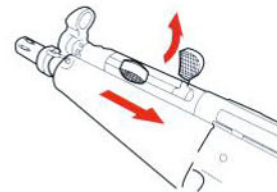


Keep pulling the cocking lever until fixing the lever.

4 Flash Hider Attachment / Detachment Procedure

Removal

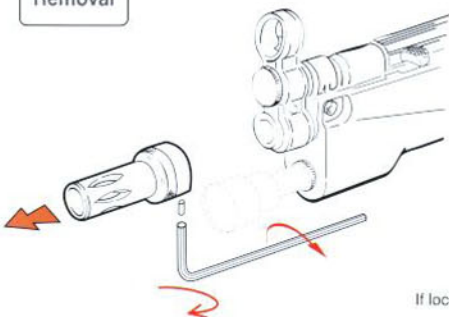


Installation

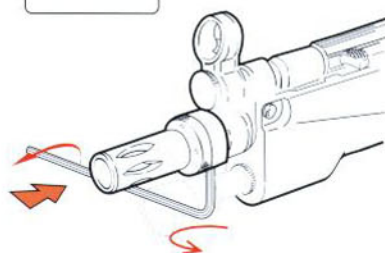

If locking cannot be set, slowly turn to the right or left to adjust the position.

Hop Up Adjustment Lever

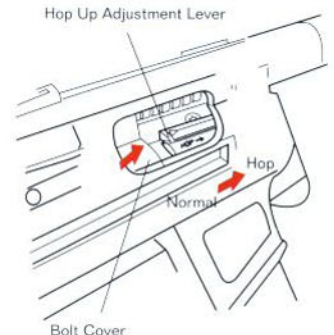

Turn the hop up adjustment lever gradually. Moving forward the level will raise the hop up. Moving backward the level will resume to normal.

6 How to fire


* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- Remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec. to obtain smooth continuous firing. (never use CRC-556 or other mineral oil)




- There is possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




- Smell may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



- The hop up operation may be unstable for 200 to 300 pellets after using silicone oil. This is the normal operation of the gun.

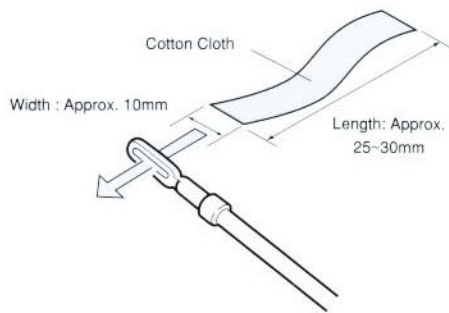4 Maintenance
1 How to use a cleaning rod


Wind the cotton cloth.

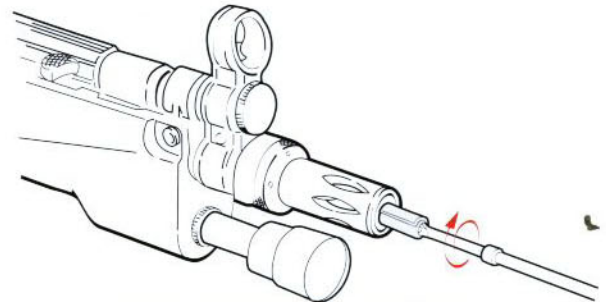

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod. (Adjust the length of the cloth for smooth entry into the barrel.)




CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

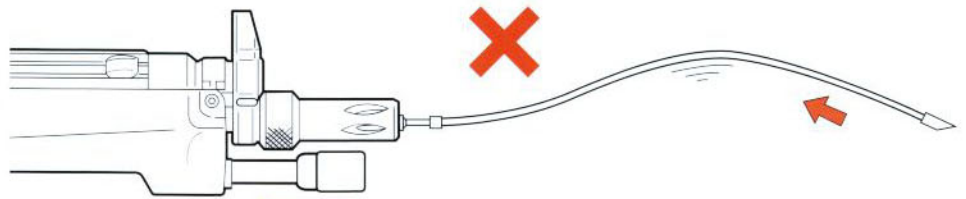


Insert the rod will be difficult if you hold the rod at the end.


- 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- 2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

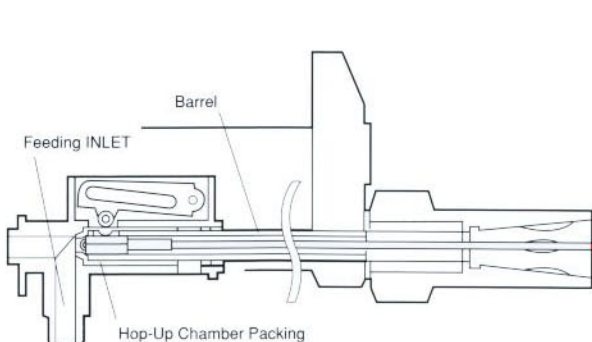
2 Never use any used BB pellets


Use new 6mm pellet is a must.

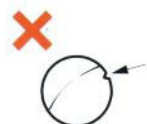


Please don't use any BB pellet which is not completed.

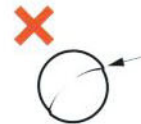

Please don't use any broken BB pellet.



Please don't use any BB pellet which diameter exceeds 6mm.

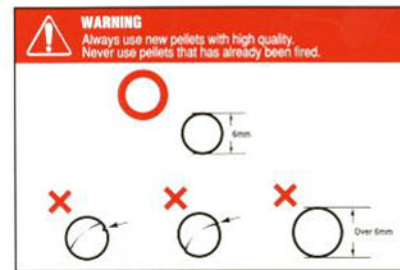5 ! WARNING


In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

6 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .
Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.IE Italiana s.r.l.
 Add.: Via Walter Tobagi n.13, 20090 - Vimodrone (Milan), Italy
 Tel: (39) 02 274 09455
 Fax: (39) 02 274 09455
 Email: visele@classicarmyitalia.com
 Website: <http://www.classicarmyitalia.com/>

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: No.: Bakkegaardsvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 89 28 18 88
 Fax: (45) 49 19 31 60
 Email: sales@softgun.dk
 Website: <http://www.actionsportgames.com/>


The United States of America

Co. Name: Spartan Imports, Inc.
 Email: info@spartanimports.com
 Website: <http://www.spartanimports.com/>

Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.
 Add.: No. 283, Jo Through 2nd Road, Sun Min Dist, Kaohsiung, Taiwan, R.O.C.
 Tel: (886) 7 323 0988
 Fax: (886) 7 323 4055
 Email: kssa.kssa@msa.hinet.net
 Website: <http://www.soloman.com.tw/>

7 Exploded Diagram

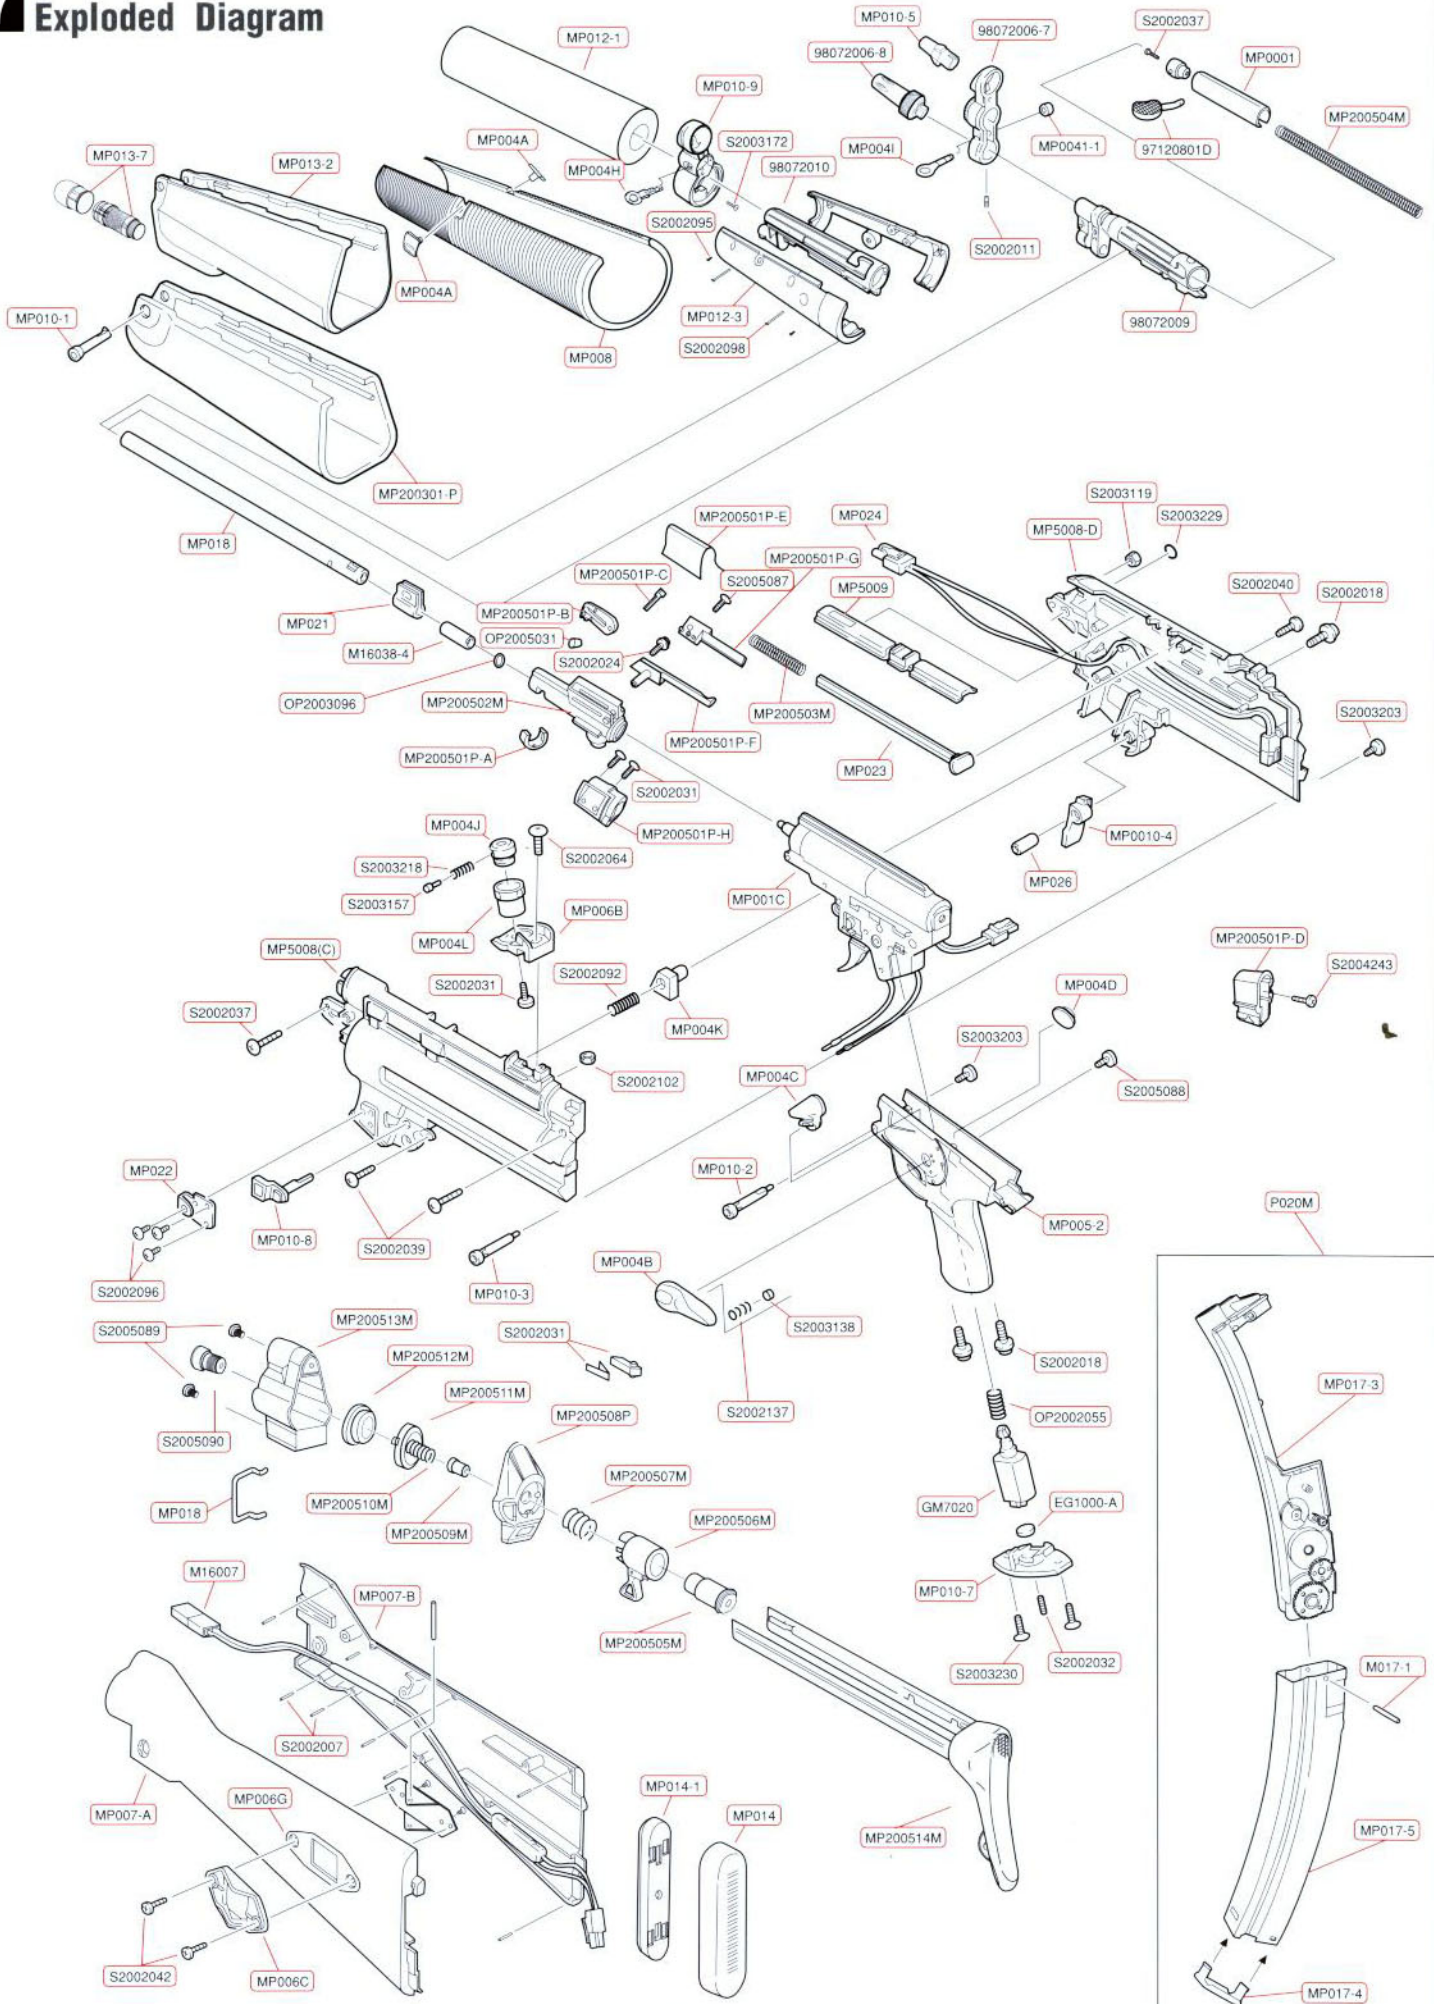




Website: www.classicarmy.com

E-mail: info@classicarmy.com

 UNIVERSO SNIPER
AIRSOFT



BRÜGGER & THOMET and the B&T logo are registered trademarks of BRÜGGER & THOMET AG., Switzerland and are used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark, www.actionsportgames.com