
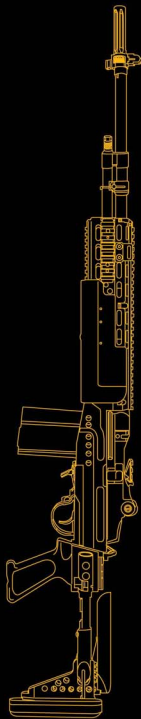


M14 EBR

AIRSOFT ELECTRIC GUN

M14 EBR (Scout)

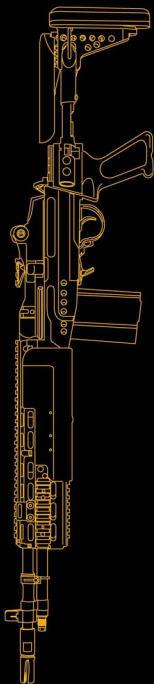

M14 EBR (Match)


HANDLING CAUTIONS AND INSTRUCTION MANUAL

HOP-UP
SYSTEM


1 Outlook / Structure of M14 EBR (Match) & (Scout)

Always set the selector switch to the safe position when you are not firing or during storage

M14 EBR (Match)

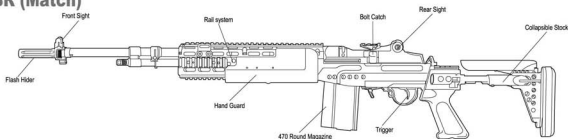

M14 EBR (Scout)

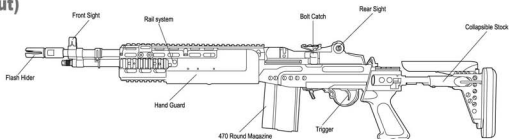


2 Specification

Data of Automatic Electric Gun


| Name | M14 EBR (Match) | M14 EBR (Scout) |
|----------------------|------------------|------------------|
| | | |
| Weight | 4.5kg | 4.5kg |
| Barrel Length | 510mm | 463mm |
| Barrel Caliber | 6.08mm | 6.08mm |
| Pellet Capacity | 470 | 470 |
| Pellet | 6mm BB | 6mm BB |
| Initial Pellet Speed | 105~130 m/s | 105~130 m/s |
| Battery Type | Mini Type (8.4v) | Mini Type (8.4v) |

3 Operation

 
1 How to use safety lock

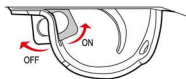

Safety Lock

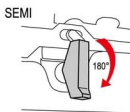 


Semi Auto

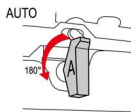 

Full Auto

2 How to insert battery

- 1 Loosen the screws & detach the hand guard.
- 2 Connect the battery.
- 3 Place the battery underneath the space of the rail system.
- 4 Reattach the hand guard.

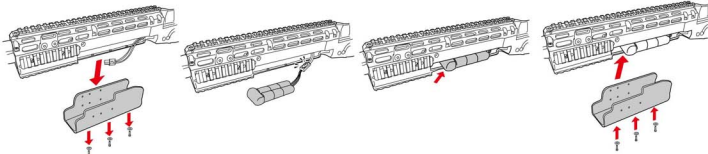

CAUTION Be careful with your fingers.

Set the battery after charging

3 Magazine Attachment / Detachment Procedure

High precision BB pellets is required for the operation of this magazine. Avoid invasion by dust and dirt into the magazine to prevent malfunctions.

Action against Problem

Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.

 



About 30 pellets will remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.

Ensure Smooth Pellet Feeding

Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding. Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

- 1 Press the magazine release button to detach the magazine.
- 2 Open the BB pellets hatch and insert BB pellets. About 470 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)
- 3 Close the hatch.
- 4 Hold the magazine with BB pellet entrance facing upward. Turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)
- 5 Check the BB pellets whether they are lifted up to the exit, and then attach the magazine onto the gun.

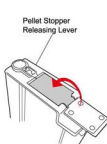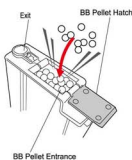

Turn the gear all the way until the sound changes.

The gear will not be damaged even if you turn it excessively.




Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.


If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

4 Setting the sight


- 1 Rear Sight: For precision targeting

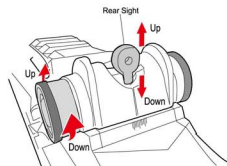

- 2 Rear Sight: For left or right adjustment

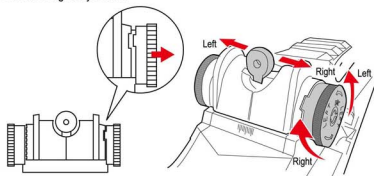

5 How to fire

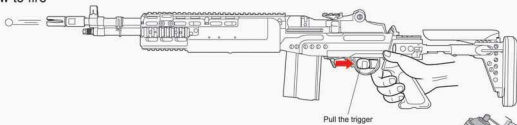

* A blank firing may occur at triggering after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.

When pellets are clogged

- If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)



• There are possible cases that no firing occurs after pulling the trigger in the semi auto mode. In this case, do not pull the trigger forcefully for 5 to 10 pellets in the full auto mode and then return to the semi auto mode.




• Sweat may be generated from the motor for a while when a new air gun is operated, this is the normal operation of the gun.



• The hop up operation may be unstable for 200 to 300 pellets after using silicone oil, this is the normal operation of the gun.

6 How to adjust the Hop Up system

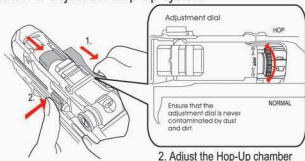

2. Adjust the Hop-Up chamber


- 1 continue pulling the charging handle while pressing the bolt catch button outward to hold the charging handle.
- 2 Turn the hop up adjustment dial gradually.
- 3 Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment dial when pellets shoot horizontally.
- 4 Release the charging handle while pressing the bolt catch button inward.



Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment dial when pellets shoot horizontally.




Over turning towards the hop up will cause pellets to dig easily, continue pulling the trigger with clogged pellets will damage the piston and gears.

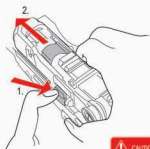

Be careful with your fingers.

 
Collapsible Stock

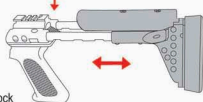


Adjustable Cheek Rest

4 Proper Disassembling


- 1 Unscrew the cover and barrel's screw.

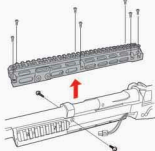


- 2 Unscrew the retractable stock screw, press the switch and put out the whole stock.

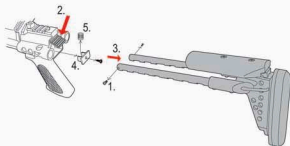

- 3 Open up the trigger guard and take out the trigger.

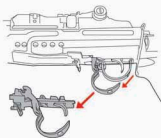


- 4 The whole upper body can be then taken out.

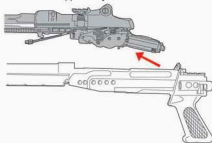

5 Maintenance

1 How to use a cleaning rod

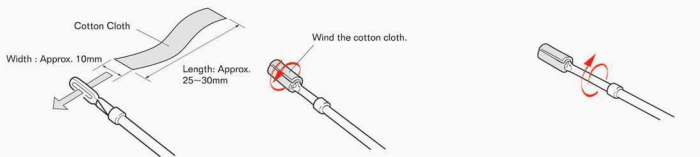

Cut a cotton cloth to the size shown above and insert one end into the hole of the rod. (Adjust the length of cloth for smooth entry into the barrel.)

 


CAUTION: Always begin the maintenance by returning the Hop Up adjustment lever to **NORMAL**.




CAUTION: The chamber is a precision component. Never use any used BB pellets

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

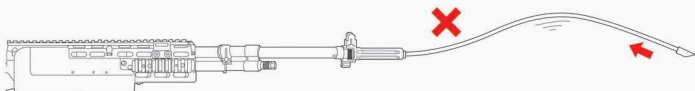

Inserting the rod will be difficult if you hold the rod at the end.

 - 1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 or 50 pellets to make the magazine more stable.
- 2 Clean up the oil from the chamber by using the cleaning rod (with cotton) to complete the maintenance.

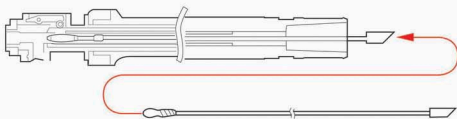

CAUTION: Always begin the maintenance by returning the Hop Up adjustment lever to **Normal**.



Never use any used BB pellets



Using new 6mm BB pellet is a must



Please don't use incomplete BB.



Please don't use the broken BB pellet.



Please don't use the BB pellet which diameter is exceeded 6 mm.

20A Glass Tube Fuse is used



6 WARNING



In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

7 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.

Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: Evolution International S.r.l.
 Add.: Via dell'Annunziata n.31, 20121 Milan, Italy
 Tel: (39) 02 2545027
 Fax: (39) 02 2518356
 Email: info@evolution-airsoft.com
 Website: www.evolution-airsoft.com

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S
 Add.: Bakkegaardvej 304, DK-3050 Humlebaek, Denmark
 Tel: (45) 85 28 18 88
 Fax: (45) 48 19 31 80
 Email: sales@actionsportgames.com
 Website: http://www.actionsportgames.com/

The United States of America

Co. Name: Spartan Imports, Inc.
 Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080
 Tel: (1) 850 589 5501
 Fax: (1) 850 589 5552
 Email: info@spartanimports.com
 Website: http://www.spartanimports.com/

Taiwan

Co. Name: F-Linka Int'l Enterprise Co. Ltd.
 Add.: No.3 Lane 62, Jangjue 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.
 Tel: (886) 7-710 0198
 Fax: (886) 7-710 0388
 Email: kosa.issa@fma.hinet.net
 Website: http://www.soloman.com.tw/

Thailand

Co. Name: Vortech Co., Ltd
 Add.: 92 Kasel - Nawamintra Rd. Soi Ladplaoew 39 Jorakebus Ladphrao Bangkok
 Tel: +662 9402829 / (auto 4 lines) / +6681 8892117
 Fax: +662 9402879
 Email: polaris_adventure@yahoo.com
 Website: http://www.classicarmy-thailand.com

Japan

Co. Name: Union Fire Company (UFC)
 Add.: 542-0087, 6-10-101 - MATSUYAMACHI, CHUO-KU, OSAKA, JAPAN
 Tel: +81-6-6334-7750
 Fax: +81-6-6334-7799
 Email: ulctrading@ufc-web.com
 Website: http://www.ufc-web.com/

Ukraine

Co. Name: Vizarriya-1
 Add.: Khry A. A. Navol, 76, Ukraine
 Tel: (380)44 4084369
 Fax: (380)44 4086033
 Email: vizarriya_1@vizonline.com
 Website: http://www.militar.com.ua/

www.classicarmy.com
info@classicarmy.com



UNIVERSO SNIPER
AIRSOFT



WARNING

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE.
- MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.

Produced By Classic Army, Hong Kong

2009-4-17 Edition 1.Yick Fung Int'l Ltd .All Rights Reserved.