



AIRSOFT ELECTRIC GUN

M15A4

CARBINE & R.I.S. CARBINE
TACTICAL CARBINE & S.P.C.
(BLOWBACK VERSION)

HANDLING CAUTIONS AND INSTRUCTION MANUAL

WARNING

- FOR AGE 18 OR ABOVE.
- PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE.
MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY.
- USER SHOULD OBEY TO THE LAWS REGARDING THE USAGE AND OWNERSHIP
OF AIRSOFT ELECTRIC GUNS.
- FACIAL PROTECTION IS REQUIRED.


**HOP-UP
SYSTEM**

Produced By Classic Army, Hong Kong


1 Outlook / Structure

Always set the selector switch to the safe position when you are not firing or during storage

M15A4 Tactical Carbine

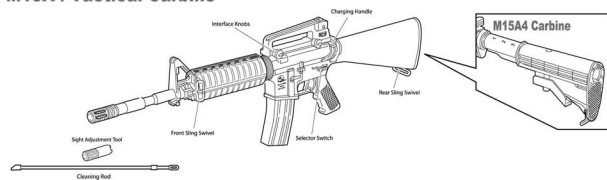

M15A4 S.P.C.

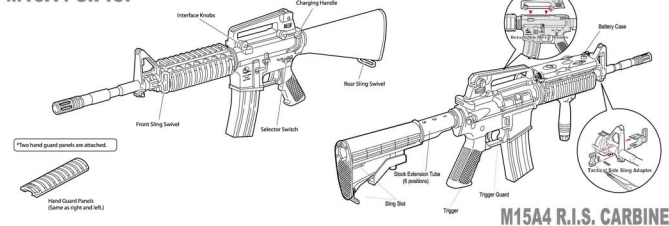

M15A4 R.I.S. CARBINE

2 Specification

Data of Automatic Electric Gun

Name	M15A4 Carbine	M15A4 Tactical Carbine	M15A4 R.I.S. Carbine	M15A4 S.P.C. (Special Purpose Carbine)
Model NO.	AR024M	AR025M	AR026M	AR027M
Weight	3.0kg	3.05kg	3.5kg	3.35kg
Barrel Length	363mm	363mm	363mm	363mm
Barrel Caliber	6.08mm	6.08mm	6.08mm	6.08mm
Pellet Capacity	300	300	300	300
Pellet	6mm BB	6mm BB	6mm BB	6mm BB
Initial Pellet Speed	95-130 m/s	95-130 m/s	95-130 m/s	95-130 m/s
Battery Type	Mini Type or V Shaped Type	Large Type	Mini Type (8.4v)	Large Type

3 Operation

1 How to use safety lock



S : Safety Lock



E : Semi Auto



F : Full Auto

2 Magazine Attachment / Detachment procedure

High precision is required for the operation of this magazine. Avoid invasion of dust and dirt into the magazine to prevent malfunctions.

Action against Problem

Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.



About 30 pellets will remain in the duct after operation. Be careful of any pellets firing out if you hold the gun up-side-down and pull the trigger.

Ensure smooth pellet feeding.

 
Occasionally give slight shocks to the gun or shake vertically to ensure smooth pellet feeding.

Slightly turn the gear every 50 to 60 pellets to ensure smooth pellet feeding.

1 Press the magazine catch to remove the magazine



2 Open the top hatch and insert BB pellets. About 300 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)



3 Close the hatch



Remove pellets remaining in the duct by reversing the magazine and using the releasing lever as shown. This ensures smooth operation next time.

4 Hold the magazine with BB pellet entrance facing upward and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)



5 Check whether the BB pellets are lifted up to the exit, and then connect the magazine to the gun.



If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

3 How to fire

1 Switch the selector switch to Semi or Full Auto



* There are possibility that no BB comes out after pulling the trigger in the semi auto mode. In that case do not pull the trigger forcibly. This is 10 pellets in the full auto mode and then return to the semi auto mode



* Small may be generated from the motor for a while when a new air gun is operated. This is the normal operation of the gun.



* The hop up operation may be unstable for 200 to 300 pellets after using silicone oil, this is the normal operation of the gun.



* The vibration cannot from being suppressed when the trigger is pulled by unstable posture of the posture with one hand etc. and the main body is dropped, the breakdown, and the injury and it is dangerous.



* Blank firing may occur after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

-Change the battery if the firing cycle becomes slow.
-Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets in order to ensure high durability of the motor and battery.

When pellets are clogged

-If pellets are clogged, remove them and apply a few drops of silicone oil into the chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec, to obtain smooth continuous firing (Never use CRC-356 or other mineral oil)

4 How to insert battery

M15A4 R.I.S. Carbine

Set the battery after charging



1 Pull out the plastic button & open the battery case



2 Insert 8.4V ~ 9.6V Large Type battery in the battery case as shown on the picture



3 Take back the plastic button onto the battery case

 


4 Combine the connectors and place the wiring into the battery case. Then, install it onto the RIS.


M15A4 Carbine




1 Pull the slip ring back and remove the hand guard from the rear



 2 Insert the battery in the hand guard as shown and connect the connectors



 3 Store the connectors in the space as shown above the hand guard



4 Put back the front part of hand guard while securing the battery in position, pull the slip ring back and set the rear of hand guard

 
M15A4 Tactical Carbine & M15A4 S.P.C




1 Lower the butt plate and open the cover



2 Pull out the connector



 3 Insert the battery into the stock and connect the connectors



4 Close the cover



Do not force hand guard into place. It may bend the handle.



Be careful your fingers in the movable parts




CLASSIC ARMY AUTOMATIC ELECTRIC GUN SERIES

5 How to assemble the hand guard panels and R.I.S.


1 Remove the hand guard panel

Push down the spring to release the right and left hand guard panels

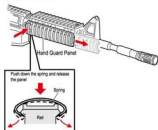


2 Assemble the hand guard panels

Loose the joint dial and remove the R.I.S. fore grip. Push down the spring of the lower hand guard panel

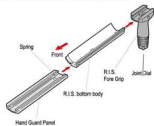


3 Remove the R.I.S. upper body

Remove the screw. Slide the slip ring backward and remove the R.I.S. upper body upward



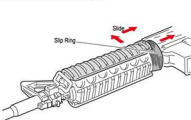


4 Remove the R.I.S. bottom body

Slide the slip ring backward and remove the R.I.S. bottom body downward

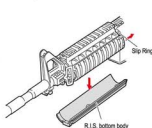

6 How to adjust the Hop Up system

 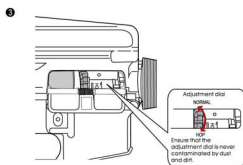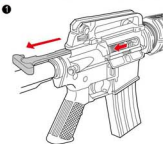

- 1-2 Continue to pull the cocking lever while adjusting the dial.
- 3 Turn the hop up adjustment dial gradually.
- 4-5 Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment dial when pellets shoot horizontally.

CAUTION Turning excessively will adversely affect the trajectory. Stop turning the hop up adjustment dial when pellets shoot horizontally.


CAUTION Over turning towards the hop up will cause pellets clogging easily. Keep pulling the trigger with clogged pellets will damage the piston and gears.

CAUTION Be careful with your fingers.


4 Sight Adjustment

CAUTION The front sight will come off if turning too much.


1 Front Sight : Setting the point of impact.

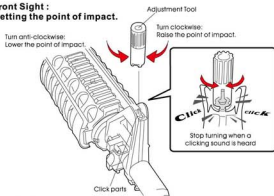


2 Rear Sight : For left or right adjustment.

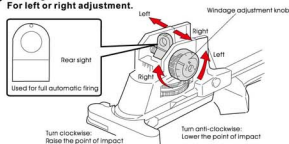

3 Rear Sight : For precision targeting.

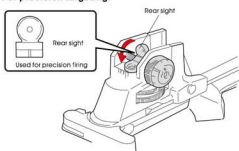

4 Rear Sight : For up or down adjustment.

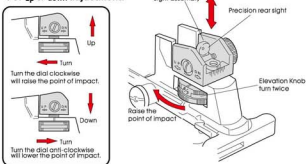


5 Proper Disassembling

- 1 Remove the frame lock pin using a screw driver
- 2 Move the upper receiver forward
- 3 Separate the upper and lower receiver. Be careful of the wire
- 4 Pull out the inner barrel



6 Maintenance

1 How to use a cleaning rod

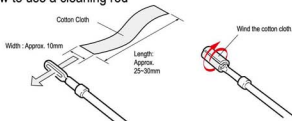

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod.
(Adjust the length of cloth for smooth entry into the barrel.)



CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.

 


CAUTION: The chamber is a precision component. Never use any used BB pellets.

* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.

1 Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.

2 Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.




CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.

2 How to replace the fuse

M15A4 Carbine

 1 Open the R.I.S. carefully



2 Open the fuse box and change the fuse



M15A4 Tactical Carbine & M15A4 S.P.C

1 Open the cover and pull out the fuse box



2 Change the fuse and place the fuse box back under the rib



M15A4 R.I.S. CARBINE

1 Open the R.I.S. carefully



2 Open the fuse box and change the fuse



CAUTION Never use any used BB pellets

 


20A Glass Tube Fuse is used





7 **WARNING**



In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

8 For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors.

Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar)

Portugal and Switzerland
Co. Name: Evolution International S.r.l.
Add.: Via dell'Annunciazione n.31, 20121 Milan, Italy
Tel: (39) 02 25459027
Fax: (39) 02 25118356
Email: info@evolution-airsoft.com
Website: www.evolution-airsoft.com

Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Add.: Bakkegaardvej 304, DK-3050 Humlebaek, Denmark
Tel: (45) 89 28 18 88
Fax: (45) 49 19 31 60
Email: sales@actionsporgames.com
Website: http://www.actionsporgames.com/

The United States of America

Co. Name: Spartan Imports, Inc.
Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080
Tel: (1) 650 589 5501
Fax: (1) 650 589 5552
Email: info@spartanimports.com
Website: http://www.spartanimports.com/

Taiwan

Co. Name: F-Links Int'l Enterprise Co. Ltd.
Add.: No.3 Lane 82, Jianguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.
Tel: (886) 7-710 0198
Fax: (886) 7-710 0398
Email: kasa.kasa@msa.hinet.net
Website: http://www.soldan.com.tw/

Thailand

Co. Name: Vixtech Co., Ltd.
Add.: 92 Kasat - Navaamrintra Rd. Soi Ladplaoz 39 Jorakueba Ladphrao Bangkok.
Tel: +662 9402529 / auto 4 lines / +666 1 8662117
Fax: +662 9402679
Email: polaris_adventure@yahoo.com
Website: http://www.classicarmy-thailand.com

Japan


Co. Name: Union Fire Company (UFC)
Add.: 5-10-087, 5-10-101 - MATSUYAMACHI, CHUO-KU, OSAKA, JAPAN
Tel: +81-6-4304-7750
Fax: +81-6-4304-7799
Email: ufc@trading@ufc-web.com
Website: http://www.ufc-web.com/

Ukraine

Co. Name: Vizantiya-1
Add.: Kiev Av. A. Navoi, 76, Ukraine
Tel: (380) 44 4084369
Fax: (380) 44 4080633
Email: vizantiya_1@svtonline.com
Website: http://www.military1.com.ua/

9 Exploded Diagram

AR026M

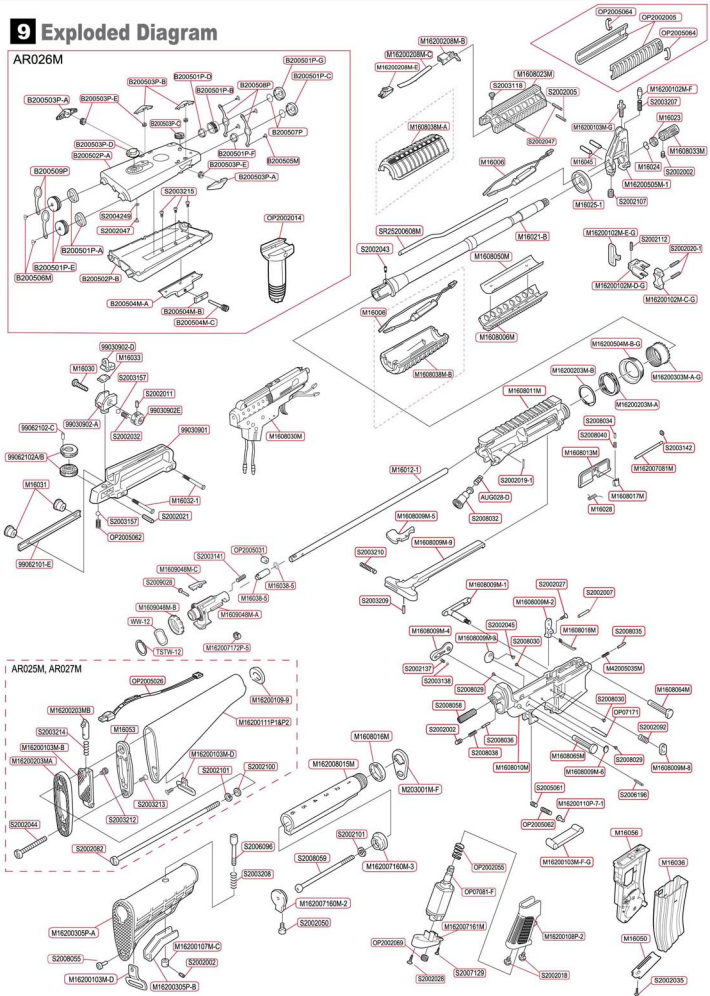

AR026M



AR024M



UNIVERSO SNIPER
AIRSOFT



AR025M



AR027M



ARMALITE and the ARMALITE logo are registered trademarks of ARMALITE inc. U.S.A., Used under exclusive worldwide license for Air Soft Guns by ASG A/S, Denmark. www.actionportgames.com

Website: www.classicarmy.com

E-mail: info@classicarmy.com