









 
Not enough hop-up (Sliding the hop-up adjustment piece backward)




1. Loosening the screw at the bottom of the grip.

2. Remove the grip.





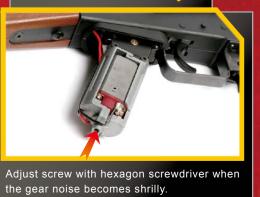










Rear sight adjustment

2. Slide forward or backward to adjustment.

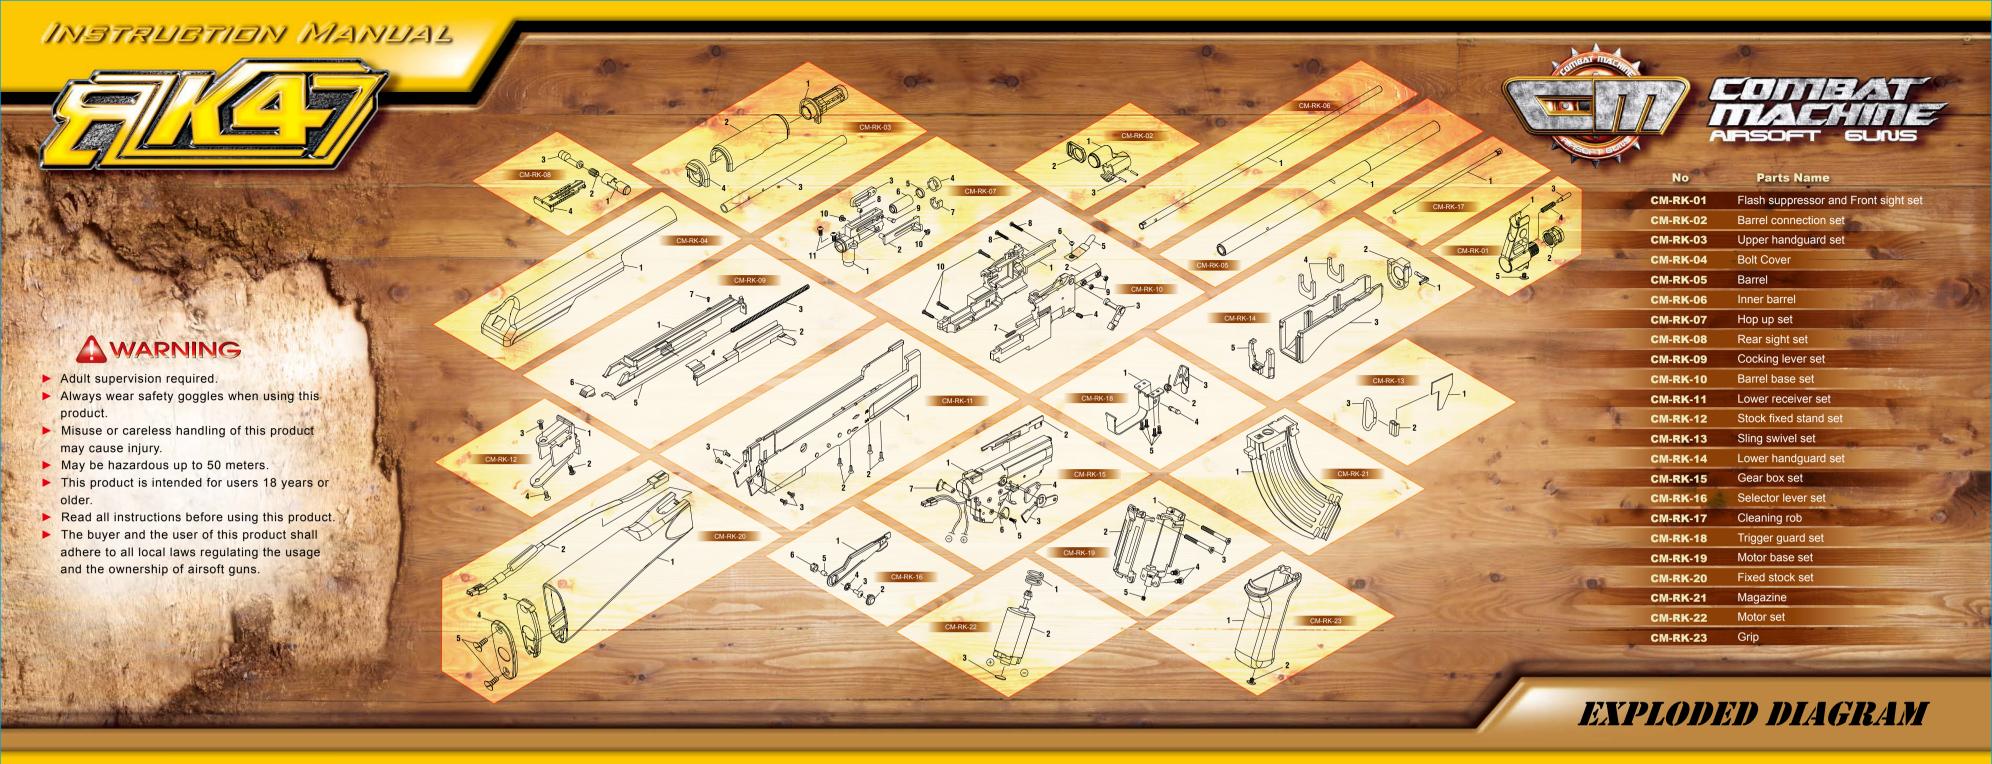

MAINTENANCE

Step for local maintenance

Maintenance by yourself

Maintenance by Retailer or Dealer



1. Find the required parts number from the exploded diagram.



2. Find the retailer or dealer closest to you from G&G website.



3. Purchase the maintenance parts from any retailer and repair the product yourself.



1. Find your local retailer from G&G or dealer website 2. Ask your local retailer or dealer about the way to maintain your airsoft gun.



Retailer or dealer provides maintenance for your airsoft gun.

Step for international maintenance

Maintenance by yourself

For more product information please visit our website www.guay2.com



1. Find the required parts number from the exploded diagram.



3. Receive invoice from G&G then make payment by "PAYPAL".







5. Receive the purchased item.Replace or maintain the product by yourself.

