

AUTO ELECTRIC GUN

CM.032(032A)

SEMI&FULL AUTOMATIC GNU

Users restricted to
18 years of age or older
使用年齡對象18歲以上



Always read through this manual before operation.

在操作之前必需读熟这些说明书



警告 WARNING



18岁以上年龄才能使用
Only for 18 years
of age or older

18岁以上年龄才能利用这支汽枪比赛使用
Operation of this air gun for competition use is restricted to users of 18 years of age or older.




注意受损伤
Injury caution

因为BB弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。
Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.



注意熟读警告指示手册
Careful reading of
Handling cautions
and
Instruction manual

 在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示
Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation.
Operate the air gun with full recognition of warnings and cautions.

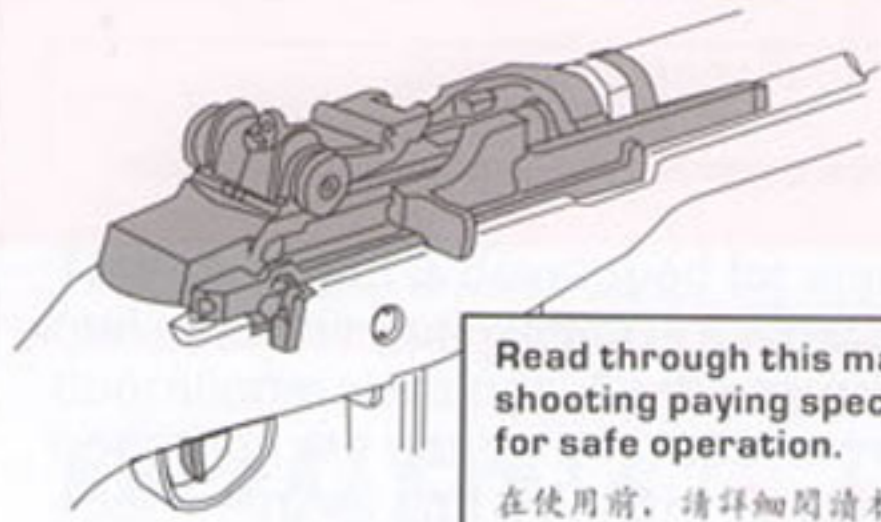

Read through this manual before shooting paying special attention for safe operation.

在使用前，請詳細閱讀本說明書，以便安全的操作本產品。

● THOROUGHLY UNDERSTAND THE WARNINGS AND CAUTIONS FOR SAFE OPERATION.

詳細閱讀說明書中要注意的操作，才能安全的使用本產品。

WARNING
警告

Always observe warnings and cautions strictly. Failing to do so may cause injury, accidents, or damage to the gun.

CAUTION
注意

要嚴格遵守本產品中的警告及注意事項。否則將造成傷害或是槍支的損害。

● Charging the Battery (Battery and charger sold separately.)

電池充電器(電池和充電器有單獨出售)

● Use the specified battery for the gun. 8.4V. 1200mAh Hyper Command Mini Battery Hyper Command Mini Battery.

Avoid use of non-standard or other brand name batteries. Otherwise, the originally designed functions will not be obtained.

使用槍支專用的電池。8.4伏，1200毫安小電池。Hyper Command 請避免使用非標準或其他品牌的電池，否則將達不到設計要求。

CAUTION The SD and Mini Battery can not be used.
注意 不能使用SD和小類型的電池。

● Use the specified battery charger which is applicable to the above battery. The charger Exclusive Type ac Speed Charger.

使用上述電池專用充電器。

● The battery's capacity power is increased with use of the Appropriation (battery) Discharger(Sold separately)

使用專用電池充電器會增加電池的能量。(有單獨銷售)

● Use the correct battery and charge according to respective instruction manuals. We will not be held responsible for any accidents or damage caused by wrongful operation or usage of non-specified batteries.

請根據使用手冊使用標準的電池和充電器。如果沒有按照說明書操作或者使用非專用的電池而引起的事務或傷害，我們將不負責任。

CM.032

Use the specified battery.
請使用專用電池



● 8.4V Ni-Cd Battery Pack
8.4V 鎳鎘電池



● Exclusive Charge for Ni-Cd Battery Pack.
8.4V 鎳鎘電池專用的充電器

● Discharge the battery completely before charging it for the first time and the charging time is 12 hours.

● Battery charging time is about 8 hours, do not extra to avoid the over-charge.

● The temperature can't over 45° during charging or will damage to the battery.

 
● 在第一次充電前，先將電池余電放淨，充電時間為12小時。

● 電池充電需要8小時左右，不要超過這個時間，以免過度充電。

● 在充電過程中請注意電池溫度不得超過45度，否則將損壞電池。

1 THE NAME OF THE PARTS (For details, see the following pages.)

各部件名稱(具體請參照下面)

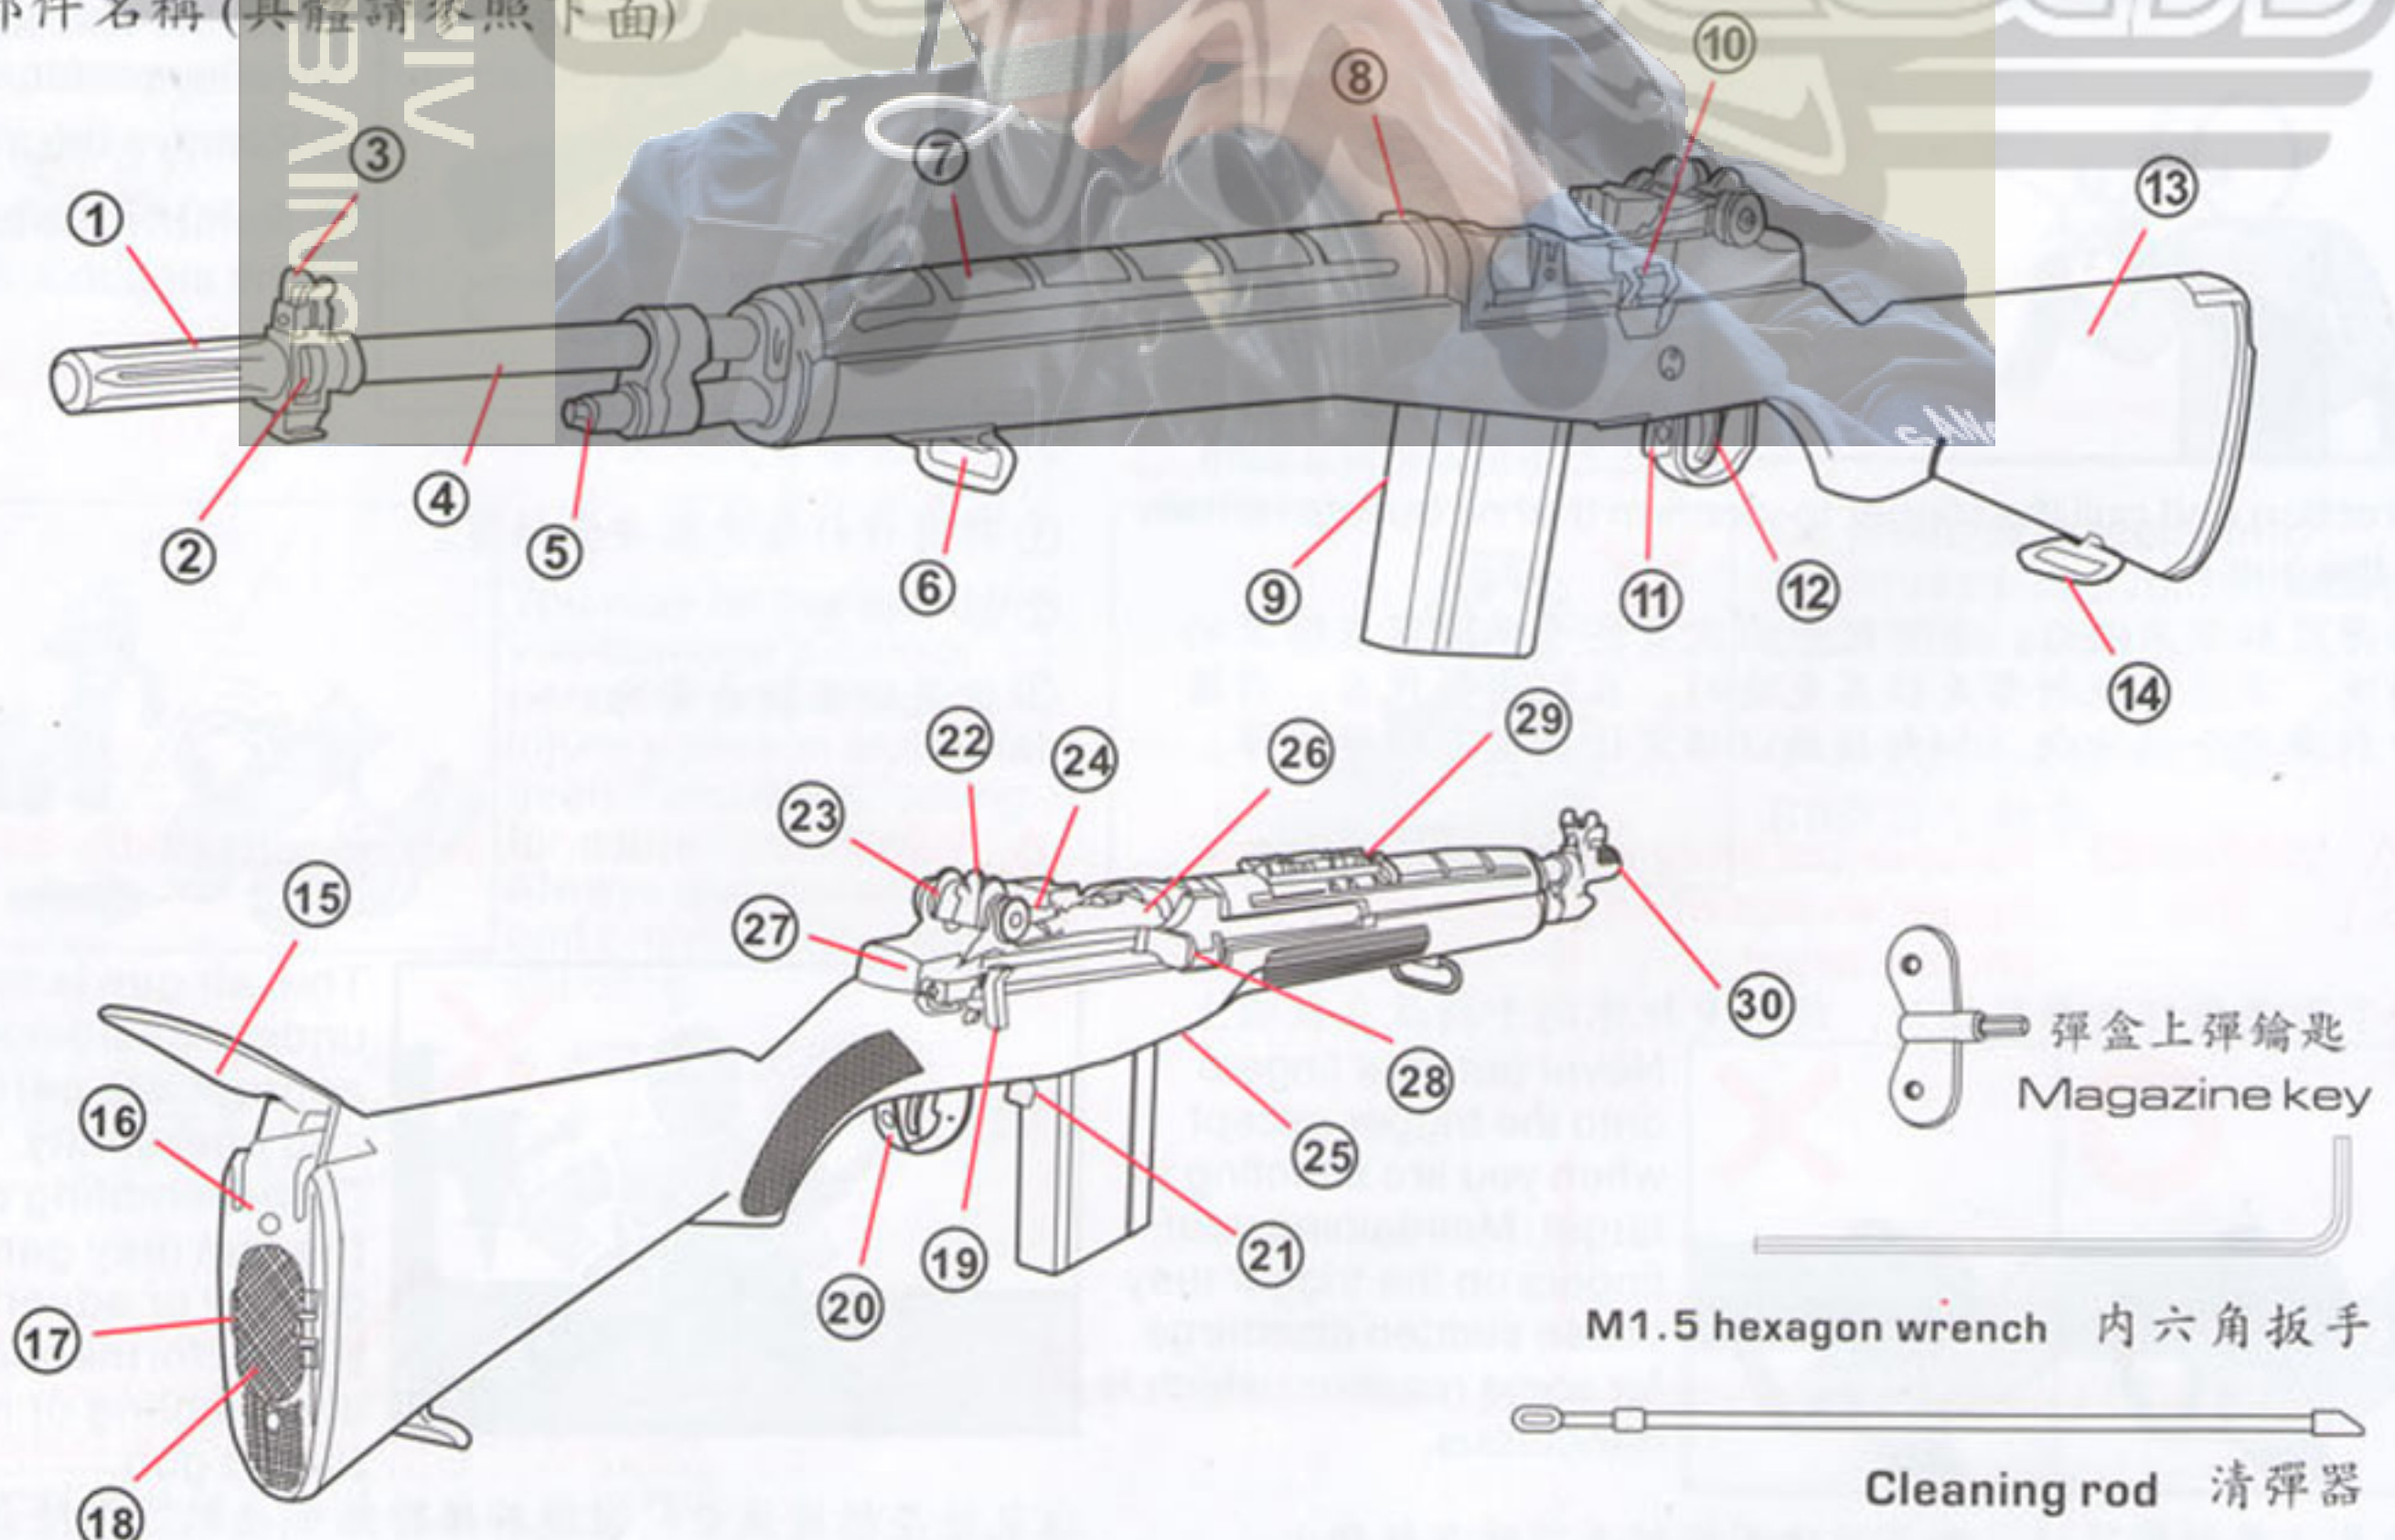


彈盒上彈鑰匙
Magazine key

M1.5 hexagon wrench 內六角扳手



Cleaning rod 清彈器

 2 Safety Setting (Always set safety lever to SAFE until immediately before firing)
安全設定 (在射擊之前把安全杆設定為SAFE)

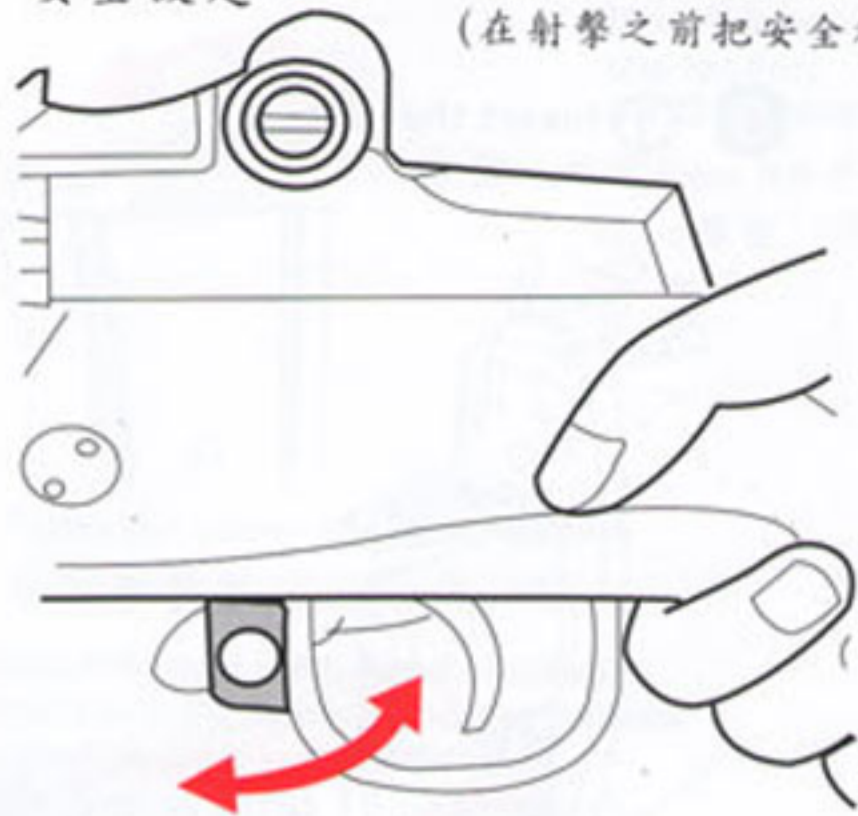

CAUTION
注意

  Pulling the trigger with the Selector being set to safe may damage the gun.
 為防止意外拉扳機造成不必要的傷害，而設定了安全杆。

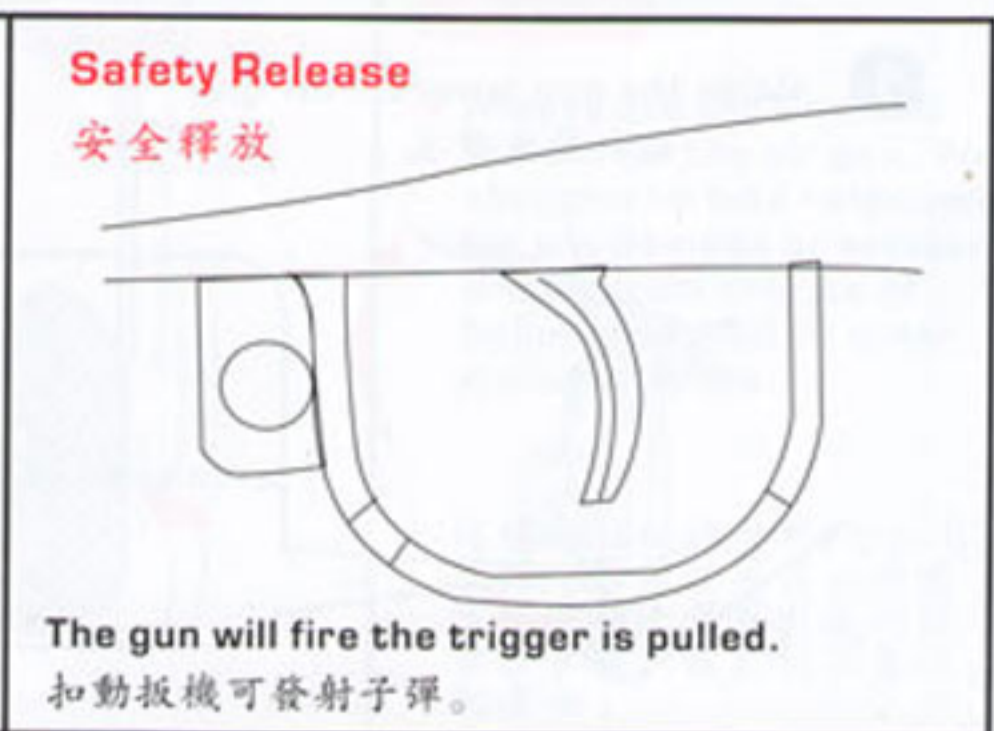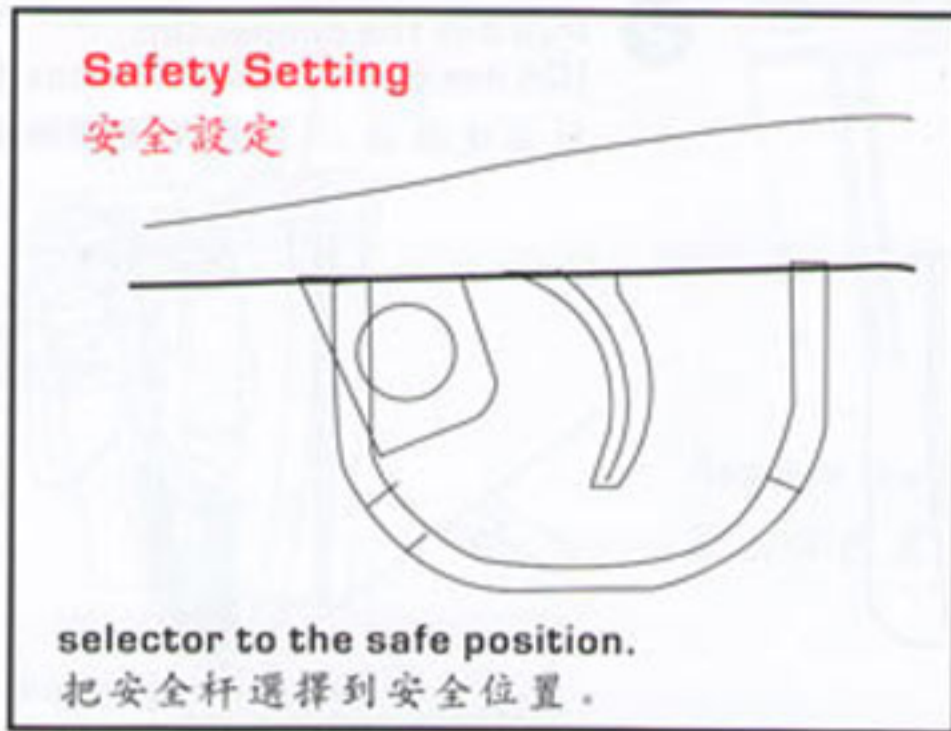

3 List/connect hair regulate
單/連發調節件

CAUTION
注意

Set the selector lever correctly in position; otherwise, malfunction may occur.
 將單/連發調節件設置在正確的位置，否則將會發生故障。

 
WARNING
警告

To prevent malfunction of the switch do not change the List/connect hair regulate from semi to full auto while pulling the trigger.

為防止開關發生故障，在按扳機時，不要將單/連發調節件從半自動改到全自動。

The selector cannot be rotated by 360°, Because it causes the breakdown when turning by force, it is a noted thing.

射擊選擇杆不能360度旋轉，因此，強行旋轉會造成故障。

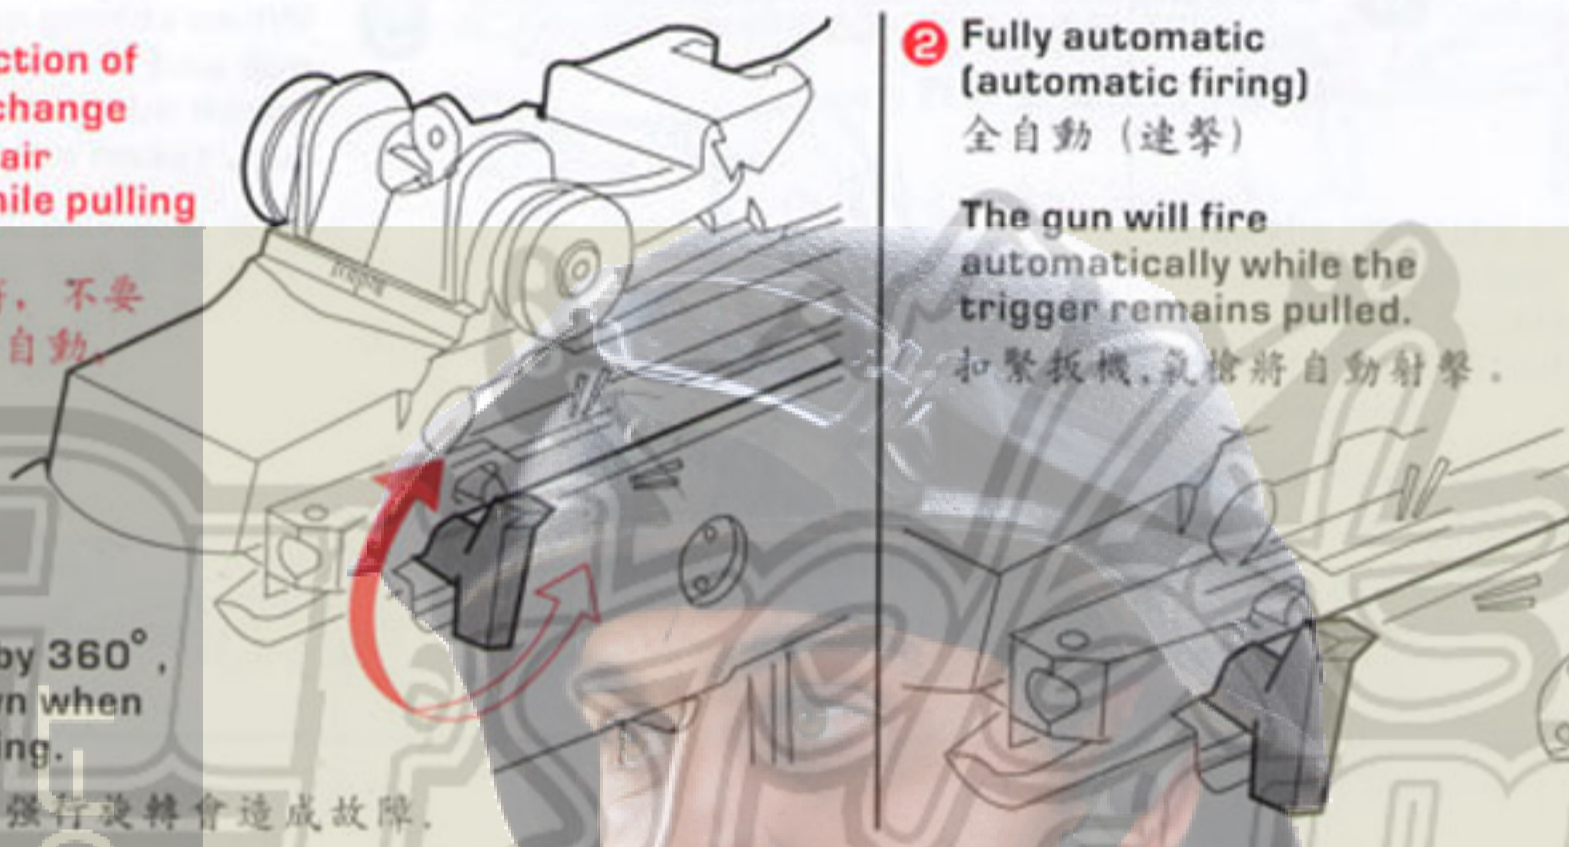


2 Fully automatic (automatic firing)
全自動 (連擊)

The gun will fire automatically while the trigger remains pulled.
 扣緊扳機，氣槍將自動射擊。

3 Semi automatic
半自動

 The gun will fire one shot each time the trigger is pulled.
 每扣一次扳機，氣槍將發射一發子彈。

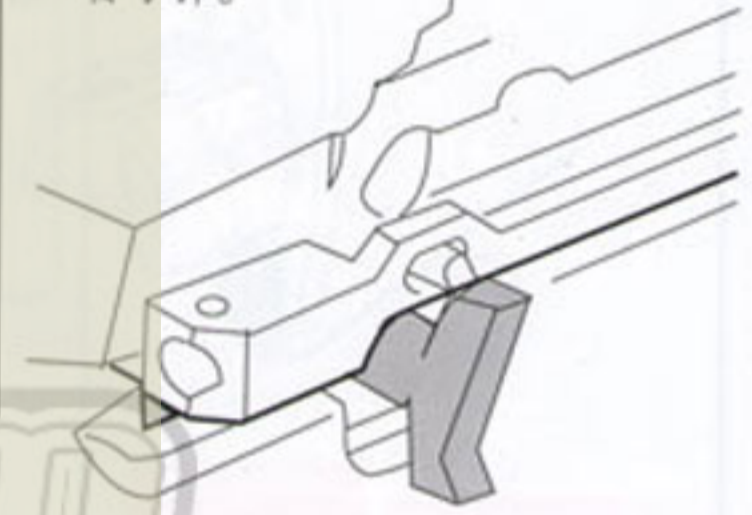


THE NAME OF THE PARTS (For details, see the following pages.)
各部件名稱 (具體請參照下面)

名稱 Name	名稱 Name
① Gun head 槍頭	⑬ Gunbody 槍身
② Gun head target piece 槍頭鎖定件	⑭ Rear sling hook 後背帶環
③ Front sight 前準星	⑮ Gunstock rear cover 槍托後蓋
④ Gun barrel tube 槍筒管	⑯ Buttplate 槍托座
⑤ Decoration 裝飾件	⑰ Battery cover hook 電池蓋扣件
⑥ Front sling hook 前背帶環	⑱ List/connect hair regulate 單/連發調節件
⑦ Gun cover 槍罩	⑳ Trigger guard 扳機圈
⑧ Gun cover hook 槍罩扣環	㉑ Magazine safety 彈匣保險
⑨ Magazine 彈匣	㉒ Rear sight 後準星
⑩ Jump to play cover fix piece 跳彈蓋固定件	㉓ Up/down revolve piece 上下旋轉件
⑪ Trigger safety 扳機保險	㉔ Left/right revolve piece 左右旋轉件
⑫ Trigger 扳機	㉕ Hop up regulate Hop up 調節件
	㉖ Jump to play cover 跳彈蓋
	㉗ Main 主架
	㉘ Hold hands 拉手
	㉙ Lens bridge 鏡橋
	㉚ Silencer 消焰器

4 Setting the Battery (Set the battery after charging)


安裝電池(用充電器先把電池充滿)

 - ① Raise the gun covers after give
掀起槍托後蓋

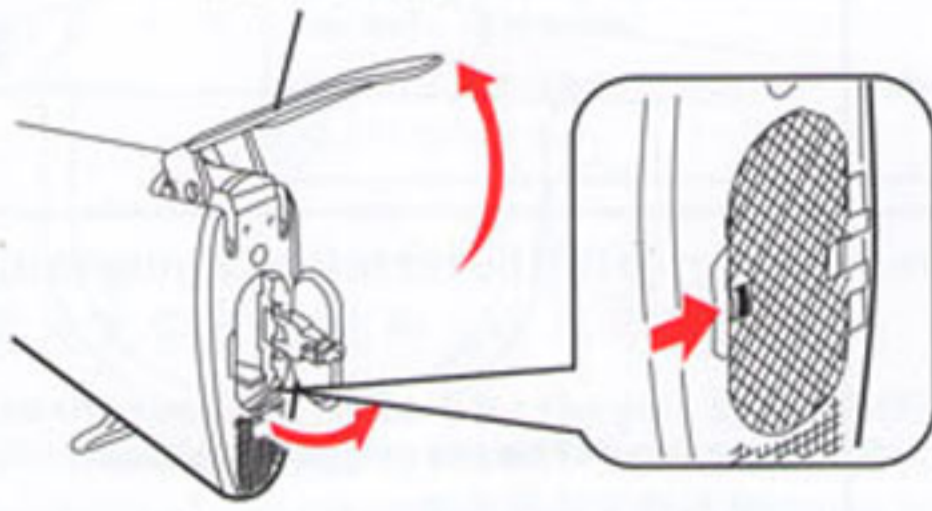


Open the door that the battery stores the place.
打開電池儲藏處的門。

 - ② Pull out the connector.
(Do not pull out the fuse box.)
拉出連接器。(不要拉斷保險管。)

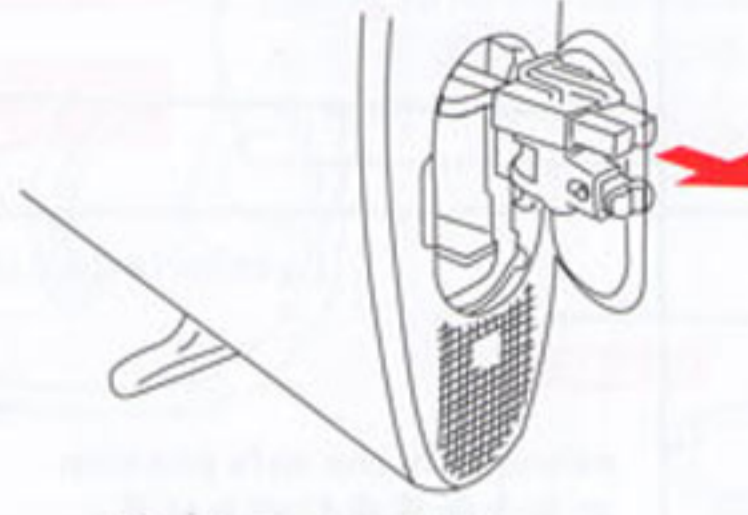

Battery connection
電池連接器

 
- ③ ① Insert the battery.
插入電池。

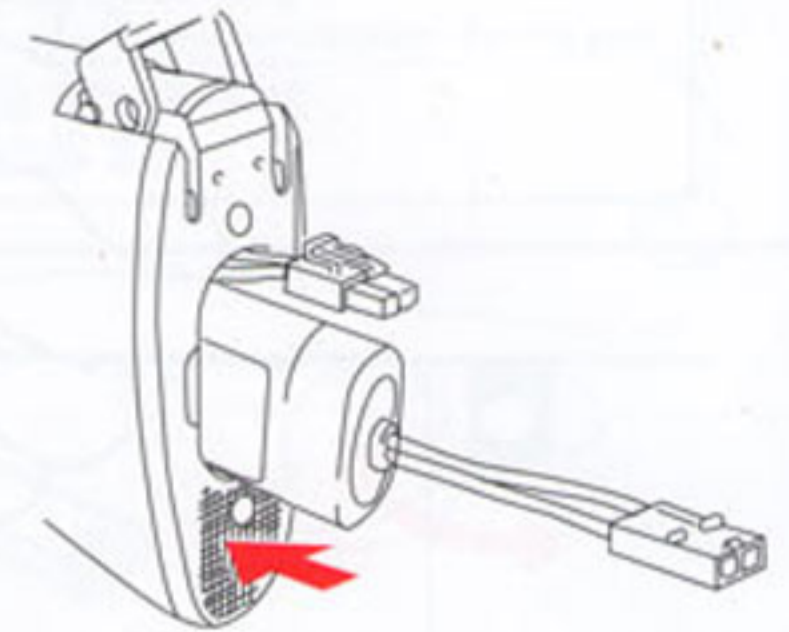

- ② The connector is connected.
接上連接器。




 - ④ Close the door that the battery stores the place.
關閉電池儲藏處的門。

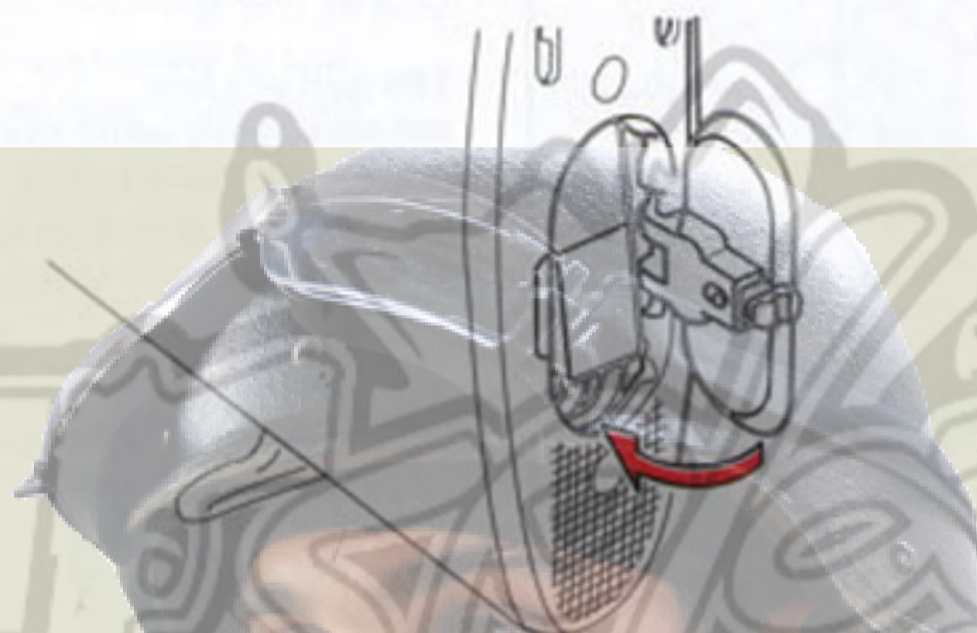

- ⑤ When taking out a battery, after taking out and removing a connector, a code is taken out from the position of a battery top, taken out.

 更換電池的時候，拔去電池和電線的連接器，將電池從托柄內拉出，取出。

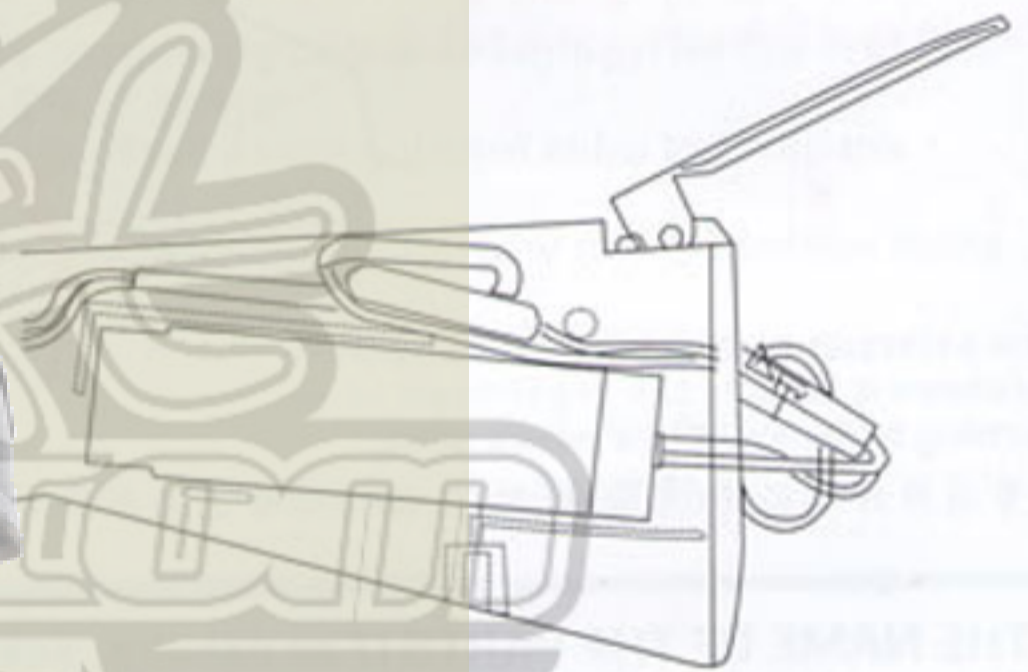

WARNING ⚠ 警告 **CAUTION** ⚠ 注意

- Don't close a trap door by force. Because, it becomes the cause of breakage, such as a code. 不要強行關上門。當心，會造成損壞。

- If a trap door uses it in the state where it is not locked completely, there is a possibility that omission of battery and disconnection of the code accompanying it may occur. 門不能完全關閉時，電池容易掉落，造成電路短路。

5 SETTING THE REAR SIGHT

 
調節後準星

Turning the left rear sight regulate will move the sight the up or down.

轉動左邊的后準星調節件能把瞄準器上、下移動。

Turning clockwise: key up sight (rear sight).

順時針方向的旋轉:調高瞄準器(後準星)。

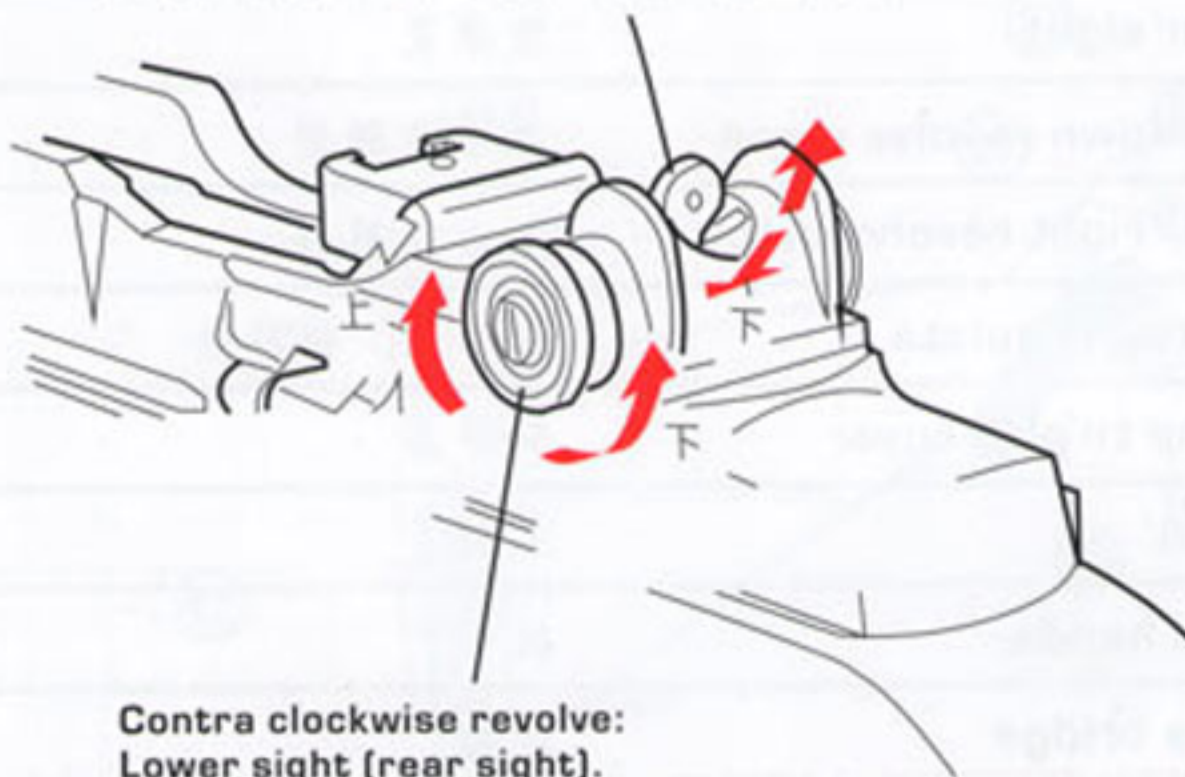


Contra clockwise revolve: Lower sight (rear sight).

逆時針方向的旋轉:調低瞄準器(後準星)。

Elevation adjustment 瞄準器設定


Turning the windage adjustment dial will move the bullet hitting point to the left or Right.

 轉游隙調整刻度盤將會移動子彈碰撞，對左右移動。

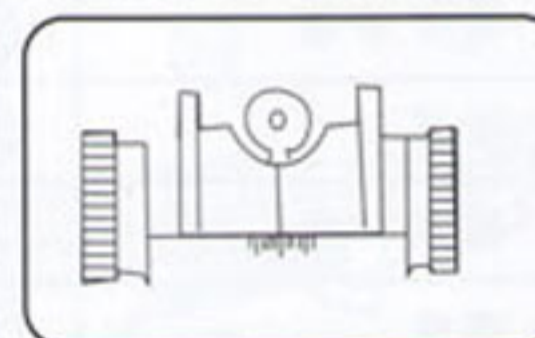

Turning clockwise: go toward the left side adjustment takes aim at the machine.

 逆時針方向的旋轉:往左邊調整瞄準器。

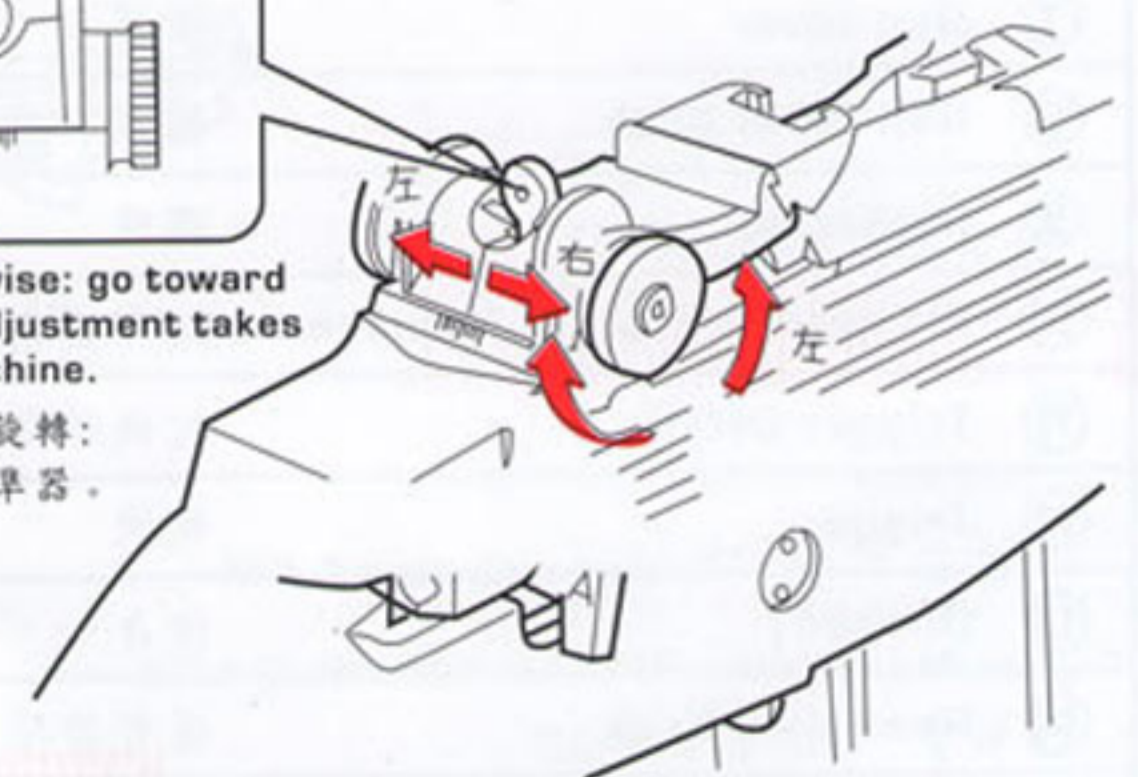

Turning counter clockwise: go toward the right side adjustment takes aim at the machine.

順時針方向的旋轉:往右邊調整瞄準器。

6 SETTING THE MAGAZINE

 
安裝彈匣



Open the cover of the magazine
打開彈匣蓋。

Move the gear with hand clockwise until it is fully wound, and the bullets will be sent up automatically. (It can send about 150 rounds automatically)

以順時針方向拔動牙輪，直到上滿鏈，子彈就會自動往上述。(能自動送彈約150發)

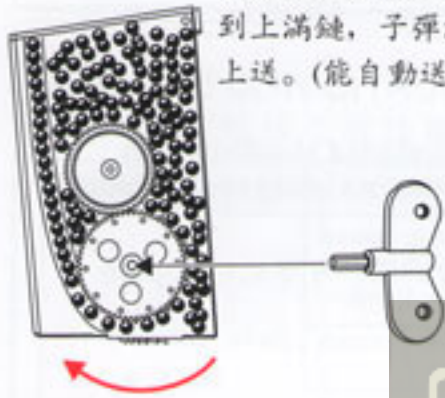

CAUTION
注意

The magazine is capable of containing 400 rounds.
彈匣可裝400發子彈。

Insert 6mm BB bullets into the loader.
(400 bullets can be loaded)

 
將6mm BB子彈裝入彈匣。(可裝入400發子彈)



Replace the magazine cover.
蓋上彈匣蓋。

Set the magazine upward.
Install the magazine as illustration.


從上方安裝彈匣。
可以按箭頭所示步驟安裝彈匣。

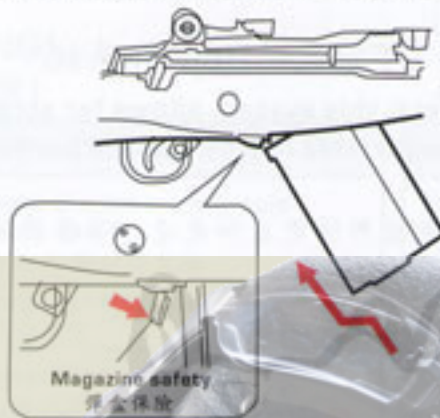

Magazine safety
彈匣保險

Press the release lever towards the trigger to lock.
朝扳機方向按下并鎖定。

 Magazine stopper relief rib.
彈匣自動裝置解除鈕。

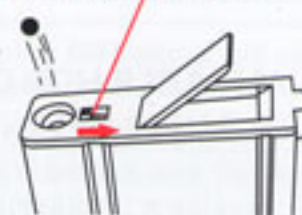

Slide the rib in the arrow direction to remove remaining BB bullets. (Be careful since BB bullets may jump out.)

按箭頭方向移動按鈕取出剩餘BB子彈。(小心BB子彈可能會跳出)

CAUTION
注意

Always use the 6mm BB Bullets for the air gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

這種氣槍祇能使用6mm BB子彈。如果使用其他供應商提供的子彈而引起的損害和事故，我們將不負任何責任。

 


7 Movable Parts 可移動部件

When the ambulation hold hands, noticing the finger not want to be clip wound.
當移動拉手時，注意手指不要被夾傷。

Jump to play cover
跳彈蓋

CAUTION
注意

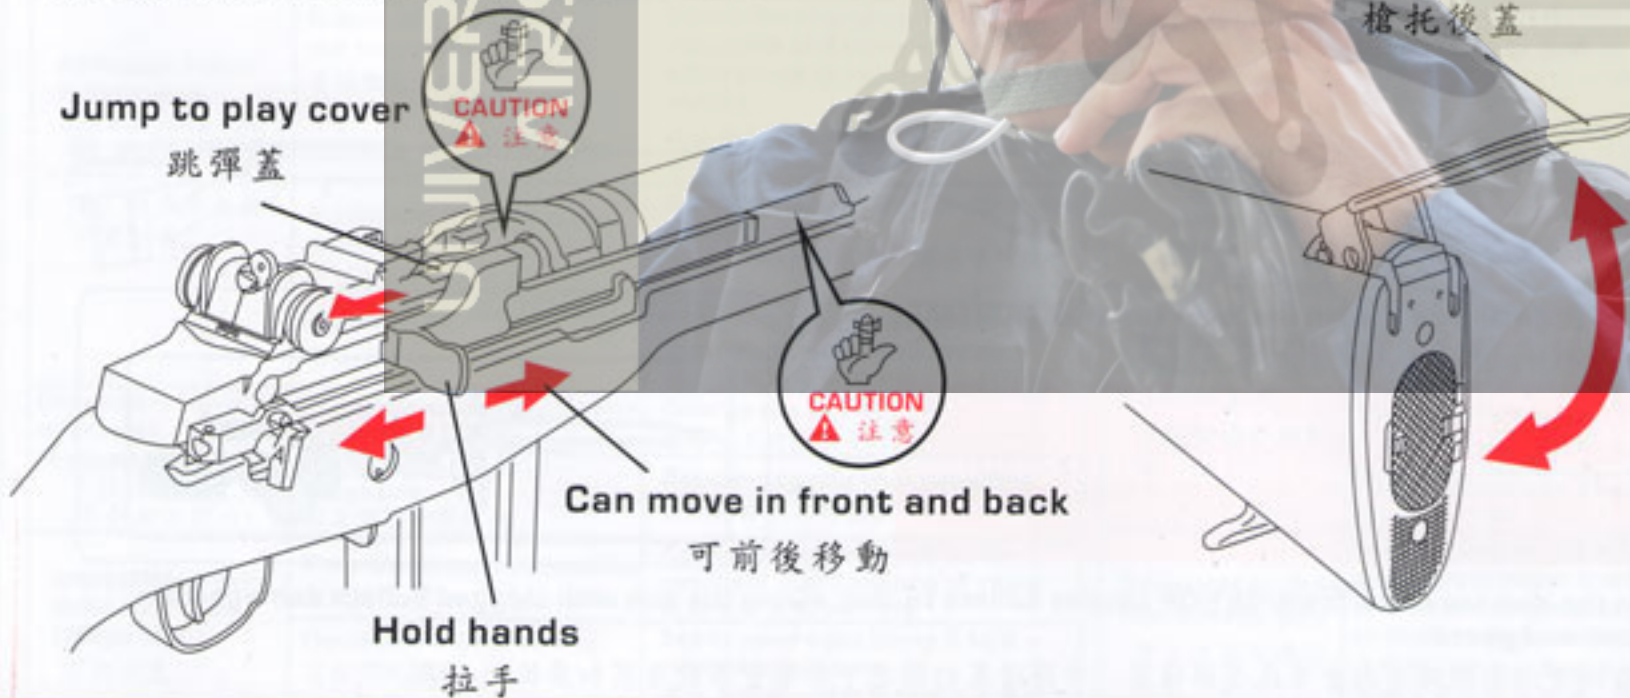

Can move in front and back
可前後移動

Hold hands
拉手

CAUTION
注意

Gunstock rear cover
槍托後蓋

CAUTION
注意



Be careful not to catch your finger in the bolt as it will close quickly when the operation rod is released.

當放開拉手時，它將會很快回位，注意手指不要被拉手和跳彈蓋夾傷。

8 Firing (Confirm your shooting area is safe before beginning firing.)

 
射擊(射擊前，確保射擊地方是安全的)

CAUTIONS ON MOTOR AND BATTERY
發動機和電池使用注意事項

- Charge the battery if the firing cycle becomes slow.
當射擊速度變慢，請充電。
- Give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.
為了確保電機和電池的壽命，在射擊500發後，給氣槍5-10分鐘的間歇。

1 Please establish the selector control column in the half the automatic or full-automatic appearance

請將選擇器控制杆設置在半自動或全自動狀態

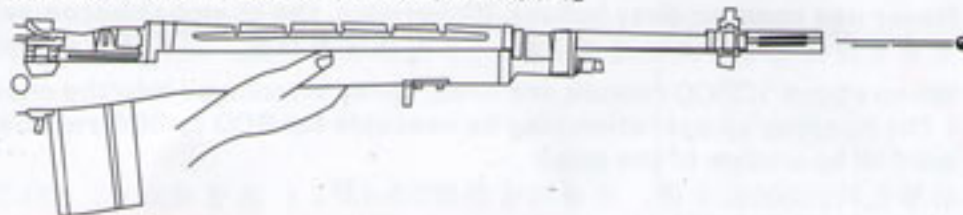

CAUTION
注意

A blank firing may occur or triggering after the magazine, this is the normal operation of the gun.
當在你裝上子彈開始射擊時，可能會有空白的射擊，這是屬於槍的正常的情況。

2 Pull the trigger.
按住扳機

- There are possible cases that no firing occurs after pulling the trigger in the semi-auto mode. In this case, do not pull the trigger furiously. Fire 5 to 6 shots in the full auto mode and then return to the semi auto operation. In the semi auto mode, you may not fire after pulling the trigger. In this case, do not pull the trigger furiously. Fire 5 to 6 shots in the full auto mode and then return to the semi auto operation.