

Users restricted to
18 years of age or older
使用年齡對象18歲以上

電動手槍




AUTO ELECTRIC GUN

CM.121



 
 
《完成品》

在操作之前必需读熟这些说明书
Always read through this manual before operation.

 警告 WARNING	
 <p>18岁以上年龄才能使用 Only for 18 years of age or older</p>	18岁以上年龄才能利用这支汽枪比赛使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.
 <p>注意受损伤 Injury caution</p>	因为BB弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。 Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.
 <p>注意熟读警告指示手册 Careful reading of Handling cautions and Instruction manual</p>	在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示 Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.


电池与充电器

ACCUMULATOR AND CHARGER

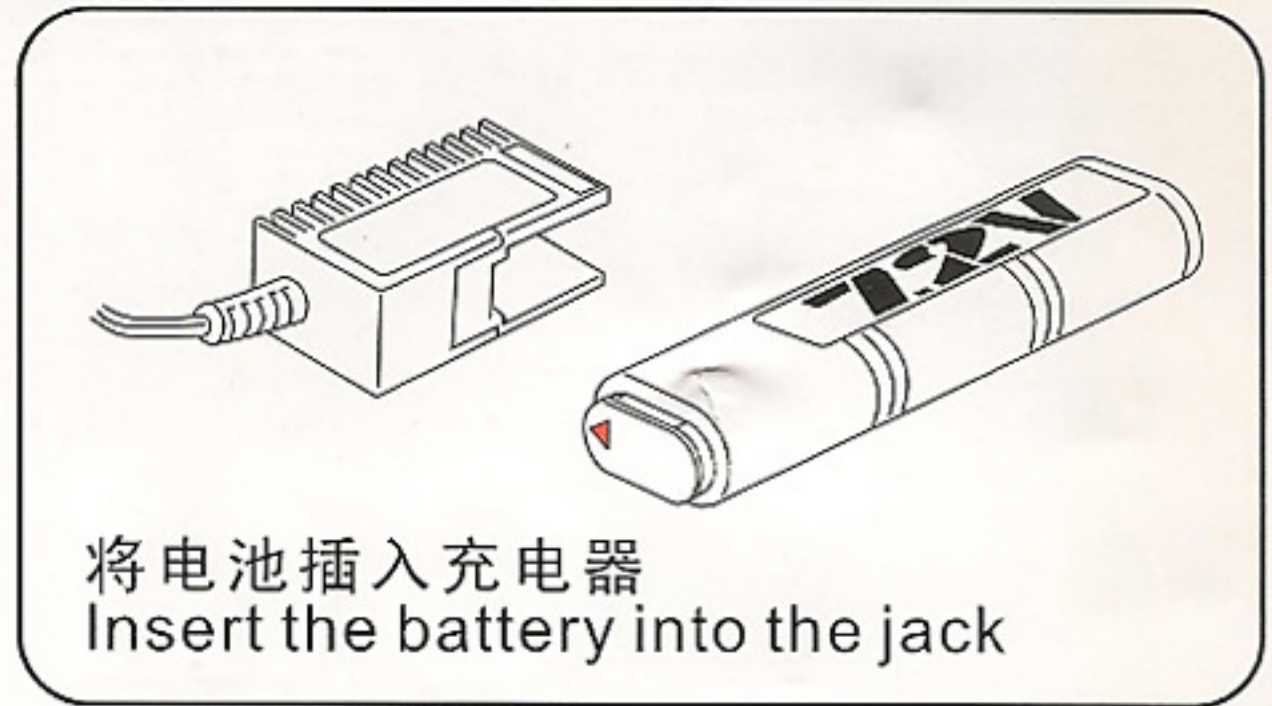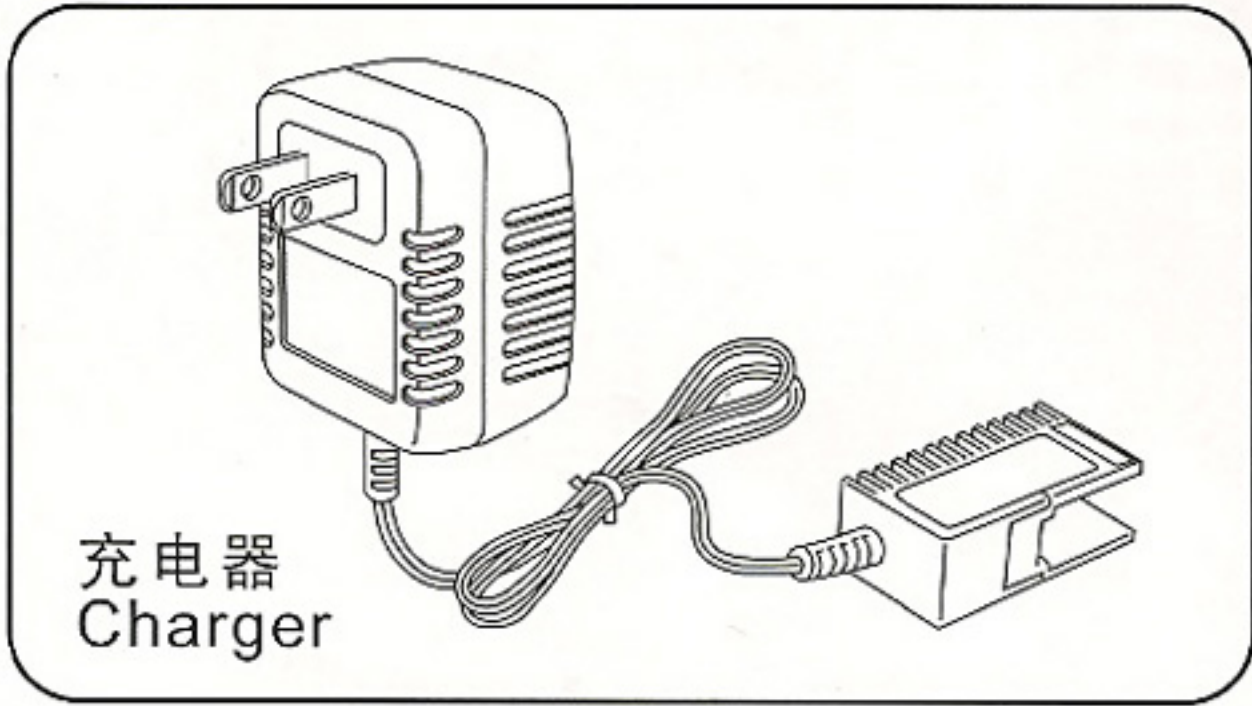


1.各部分名称

 NAME OF EACH PART

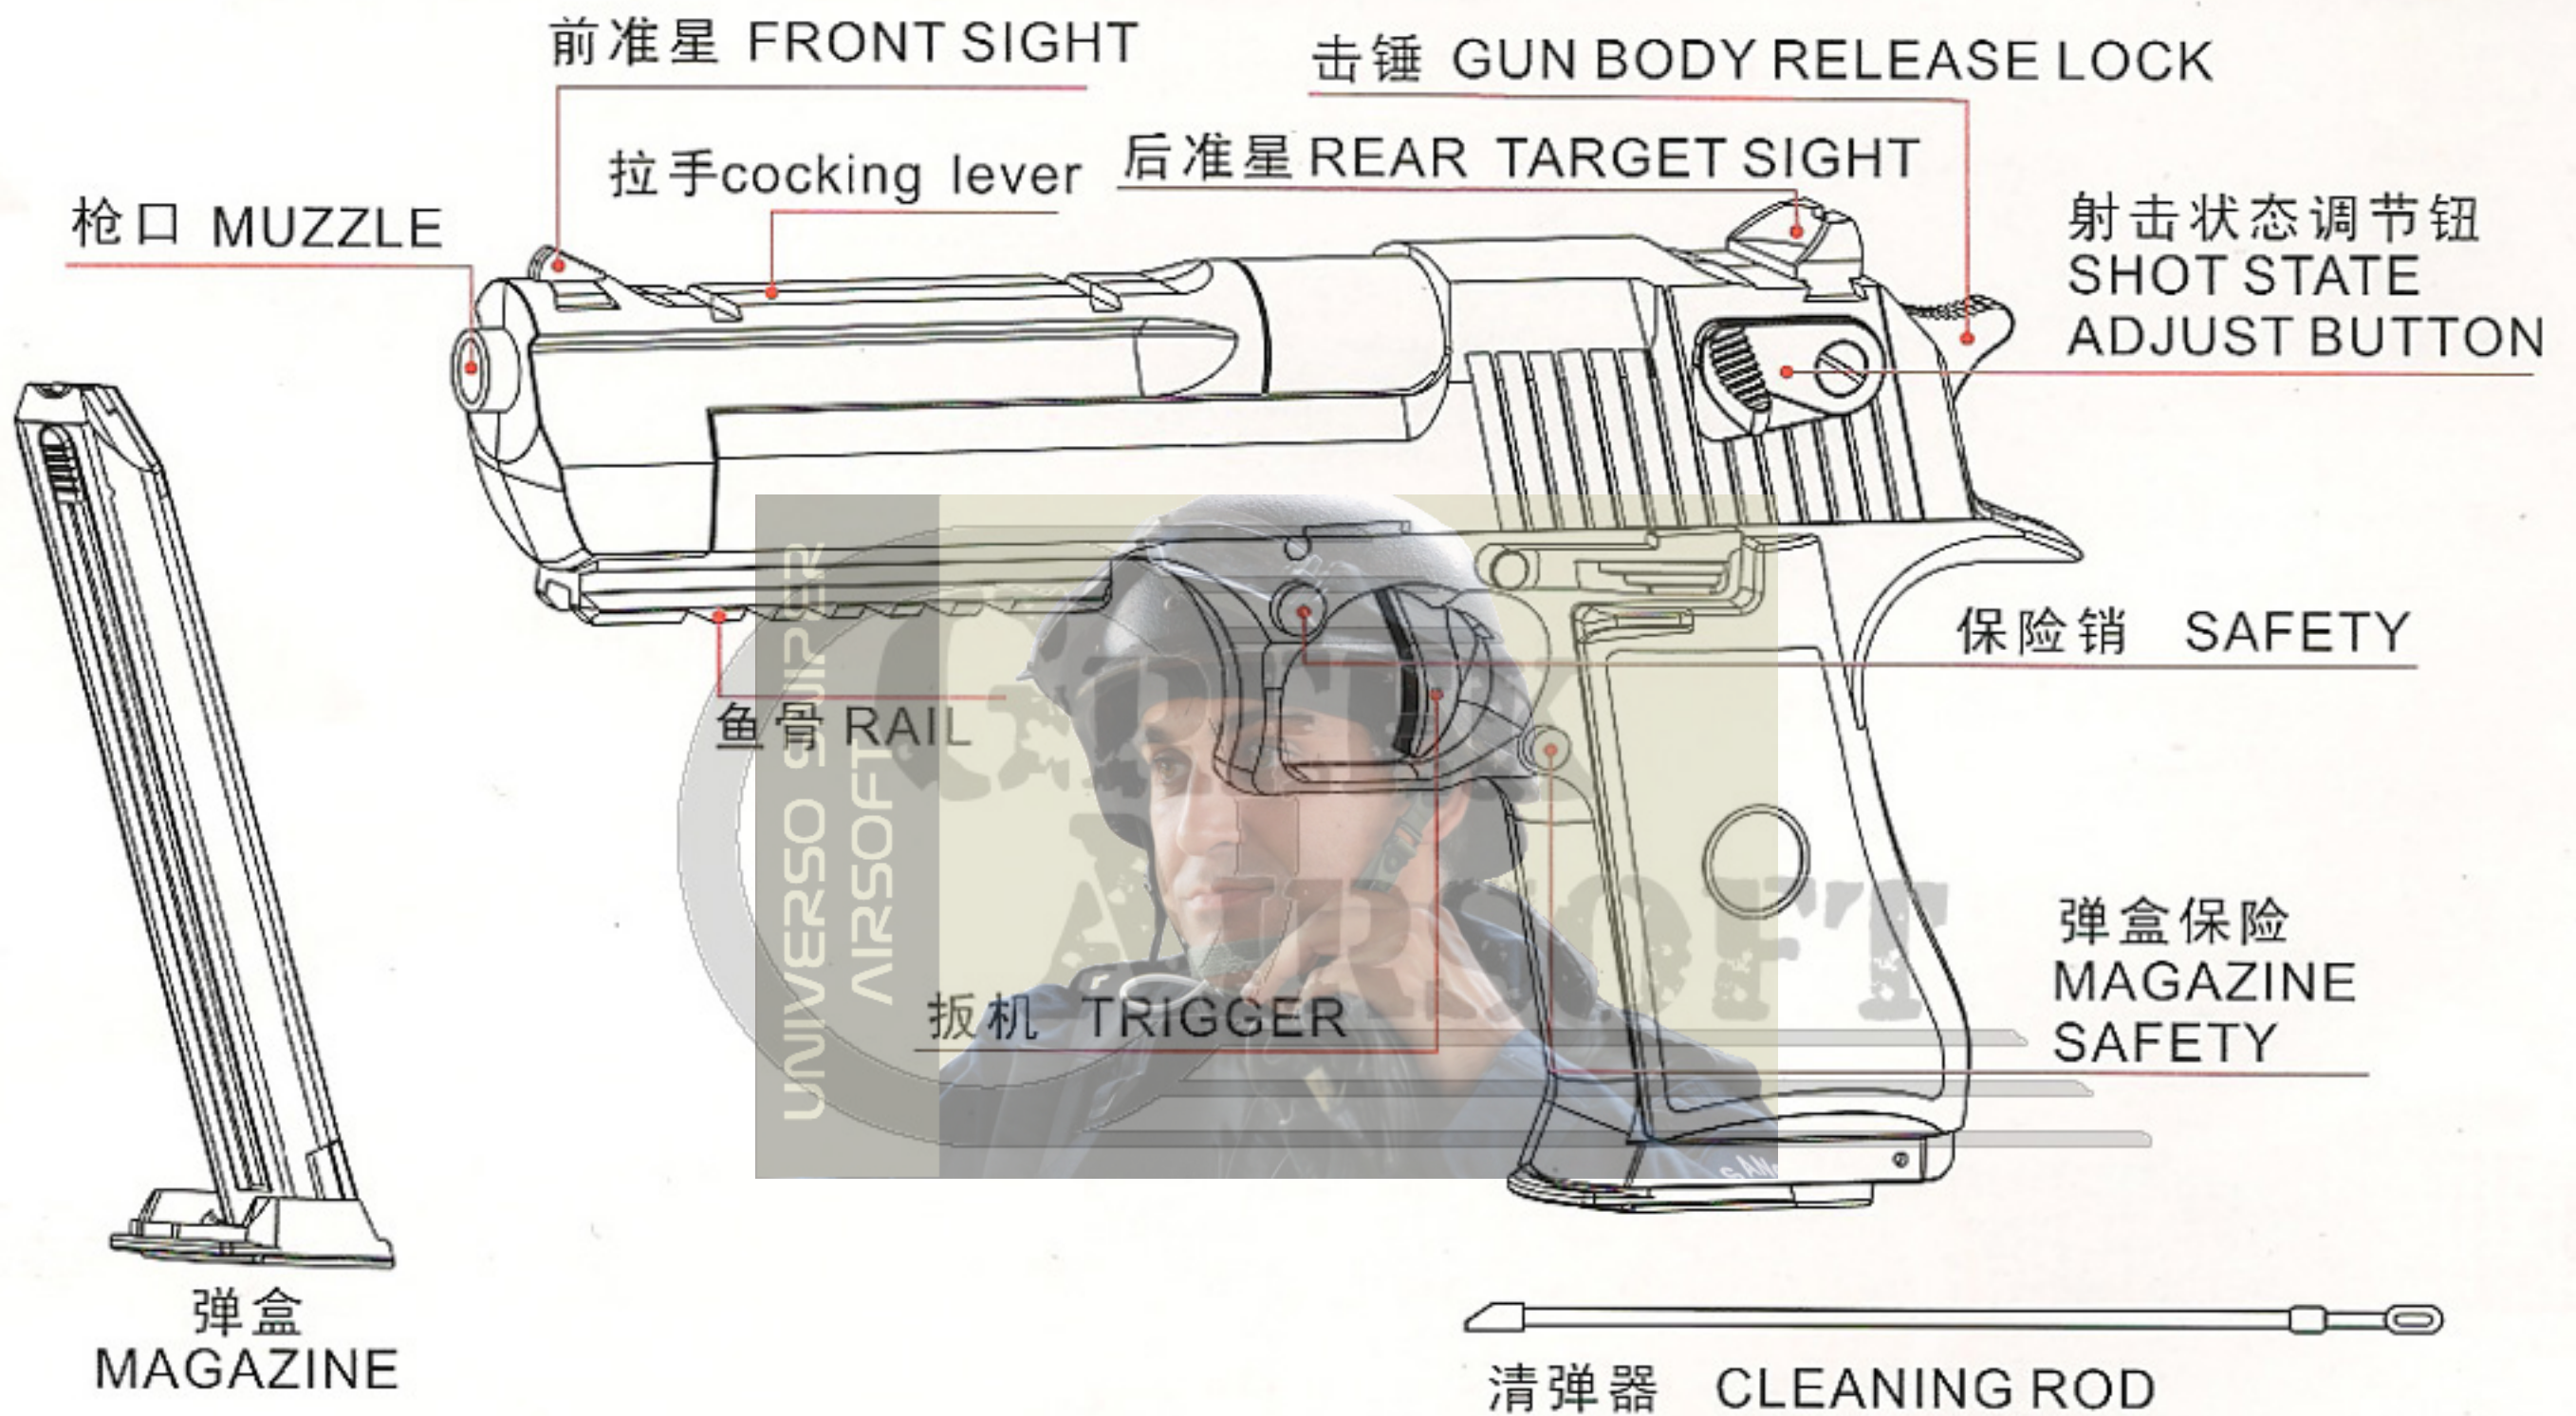

2.保险销

 SAFETY

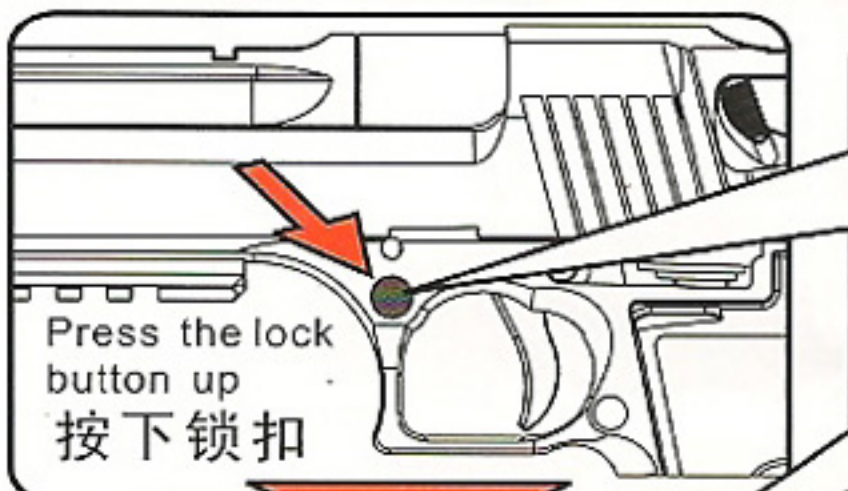



- KEEP THE SAFETY AT "SAFE POSITION" WHEN THE GUN IS UNUSED.

当枪是不用的时候，请把保险拨到 "SAFE POSITON"位置


安全位置
SAFE
POSITION



  射击位置
SHOT
POSITION

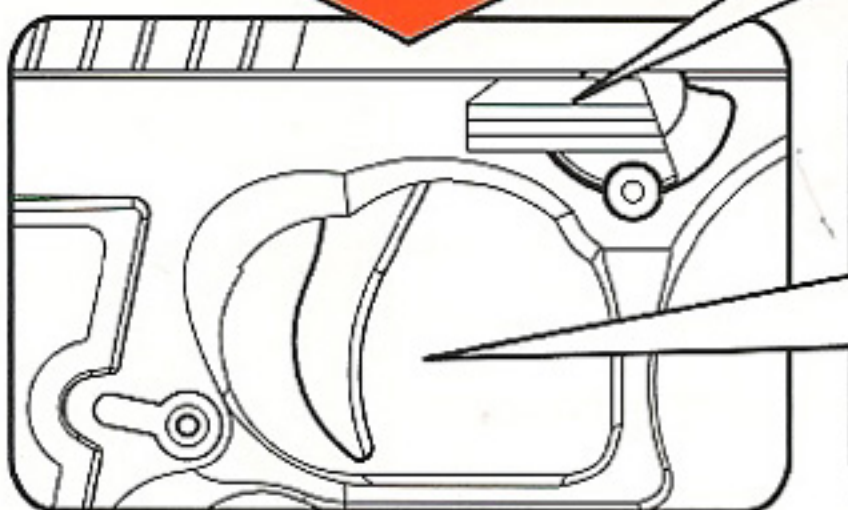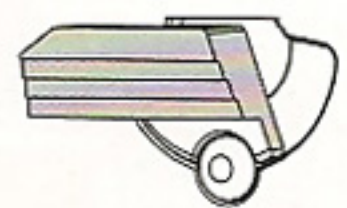

 - USE THE FIRST FINGER TO PULL THE TRIGGER 用食指扳动扳机
NEVER PUT THE FINGER ON THE TRIGGER BEFORE SHOOTING
射击前切勿将手指放在扳机上

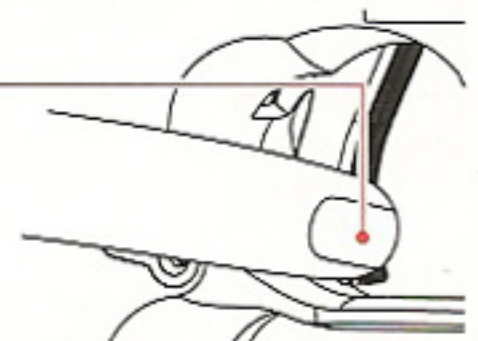

3. 充电池 ACCUMULATOR

- ① Press the button at the end of the handle to disassemble the handle.
用拇指压住拉杆尾端的按钮卸下拉杆。

cocking lever release button
拉手拆卸钮



 
cocking lever
拉手

- ② Install the battery in the battery case.
将电池装入电池座




电池的正确插入方向
Exactitude insert direction of the battery


- ③ Then cover the gun body.
再将拉手盖上

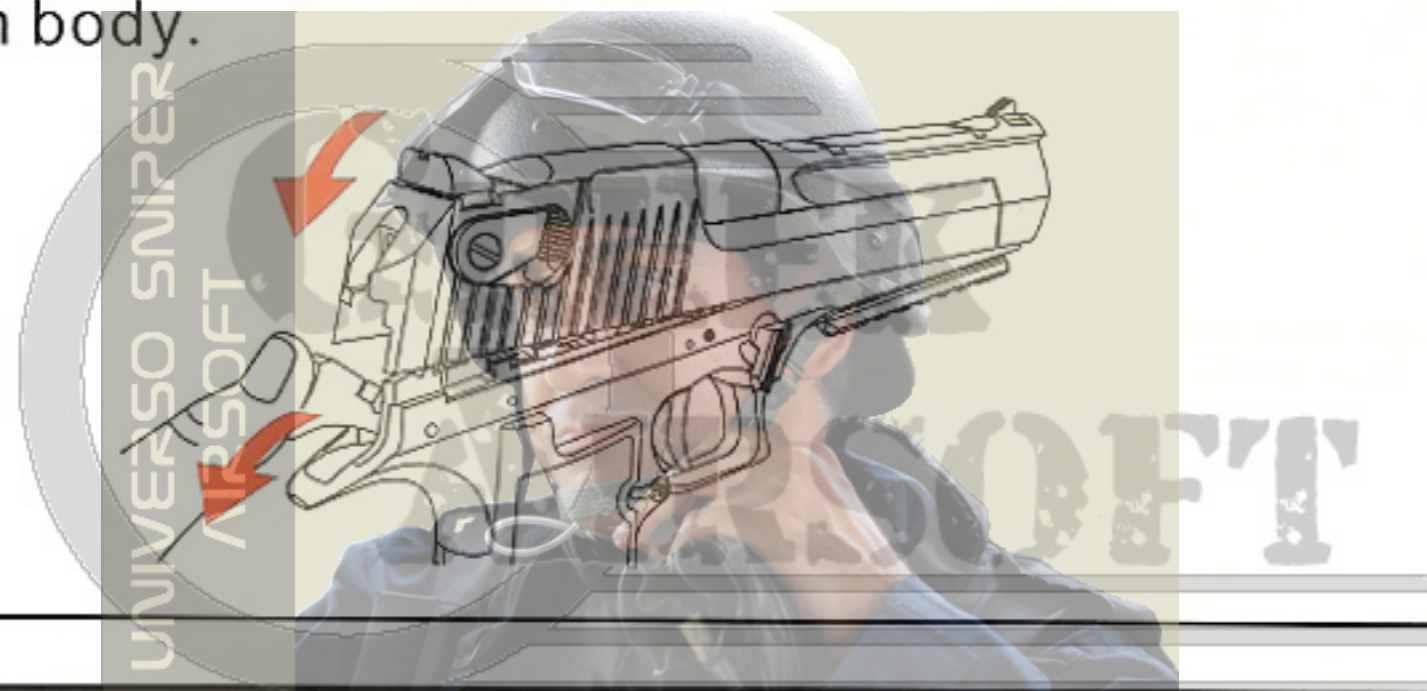

 4. 单发\连发 SINGLE\RUNNING SHOOT

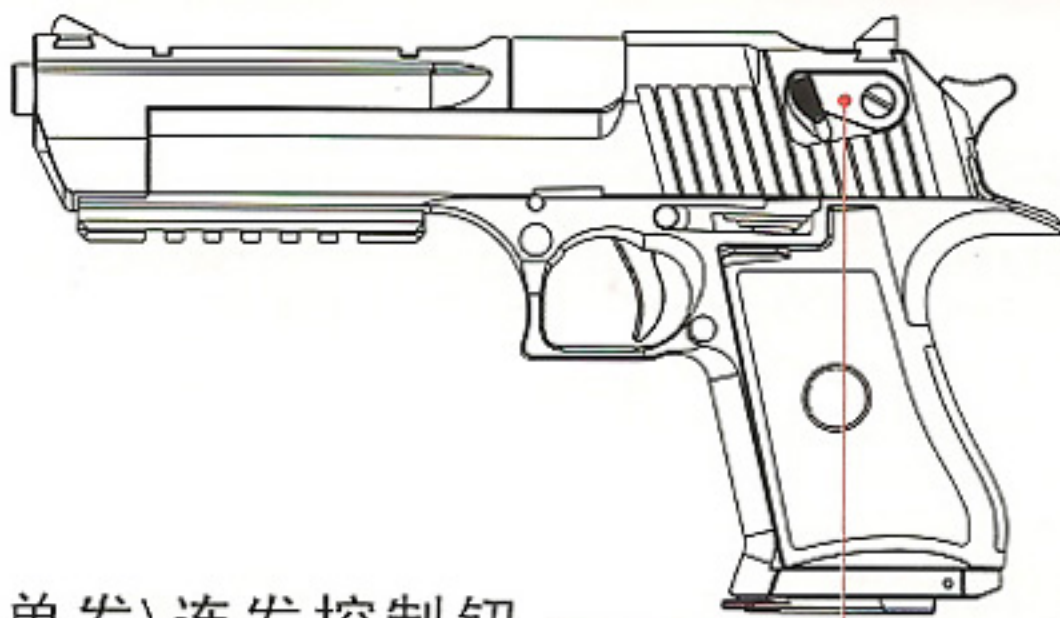


 单发\连发控制钮
Running\single shot control button

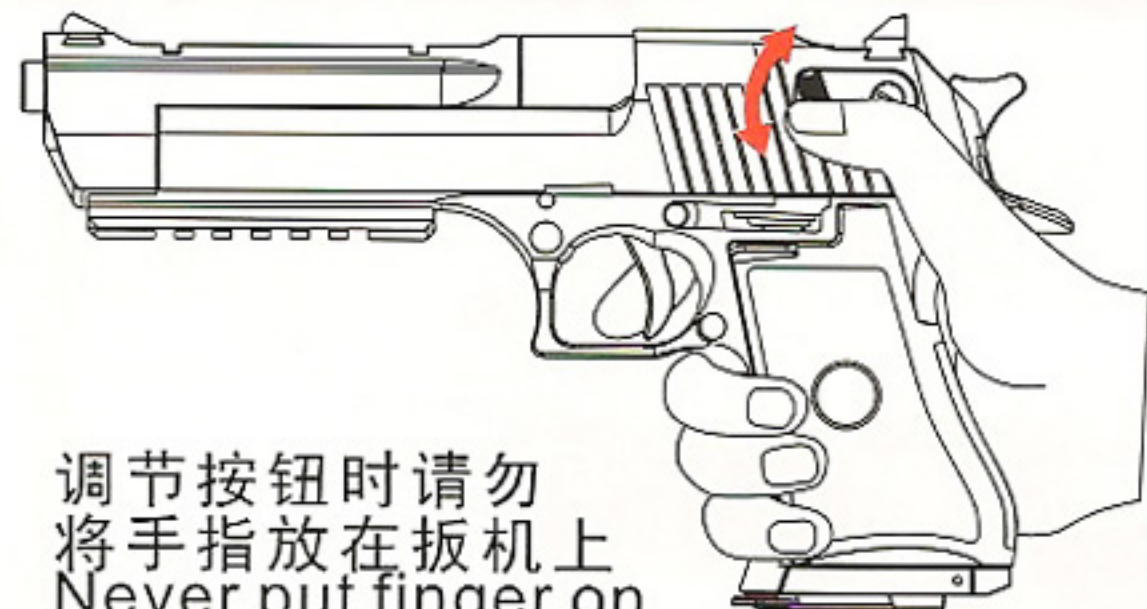

调节按钮时请勿
将手指放在扳机上
Never put finger on
the trigger when adjust the button

 Single shoot
position<●>
单发位置

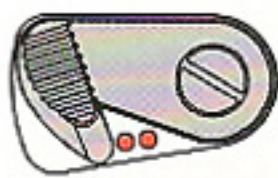

Single shoot:the button point upward,
one bullet shoot out one time.
单发: 将按钮拨向单发位置,
射击时每次只发一弹。

Running shoot
position<●●>
连发位置

 


Running shoot:the button point downward,
more bullets shoot out one time.
连发: 将按钮拨向连发位置,
射击时可连续发射多弹。

5. 安装\拆卸弹仓


INSTALL DISASSEMBLE THE MAGAZINE

- ① PRESS THE MAGAZINE RELEASE BUTTON TO RELEASE THE MAGAZINE.
按住弹仓拆卸钮拆卸弹仓。

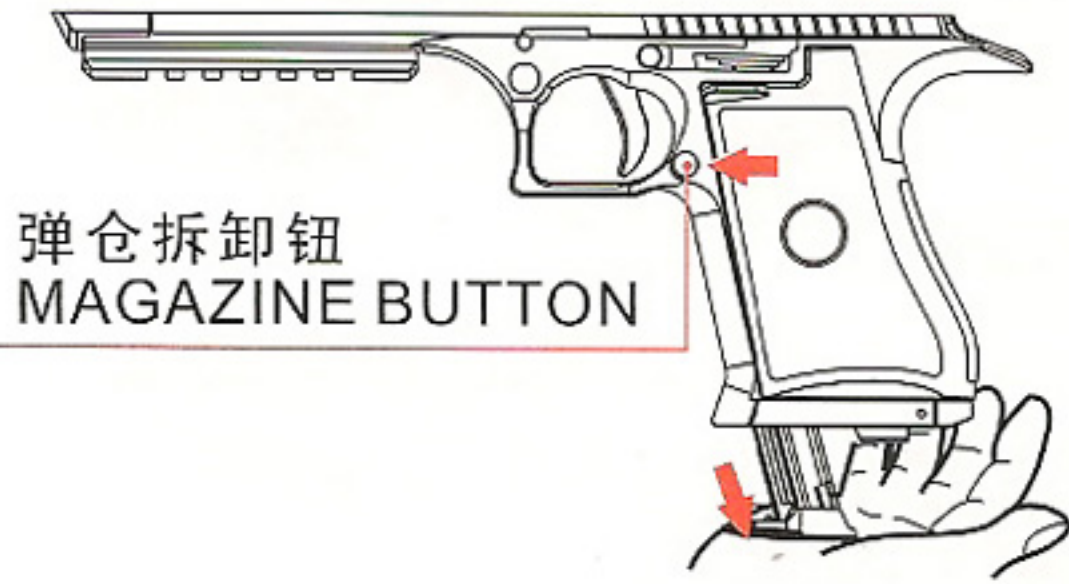


弹仓拆卸钮
MAGAZINE BUTTON

 - ② LOAD 6MM BB BULLETS INTO THE MAGAZINE.
装入6MM BB弹。

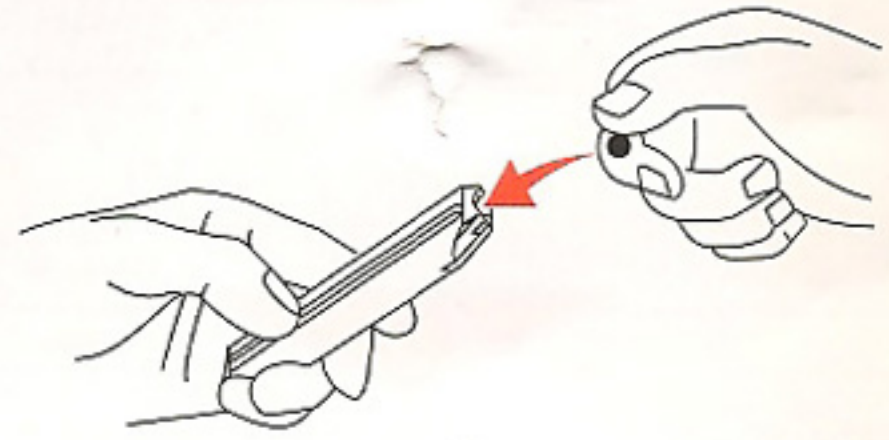


 - Adjust the parabola regulate button to adjust the direction of the parabola.
通过调节抛物线调节钮调节抛物线的方向。

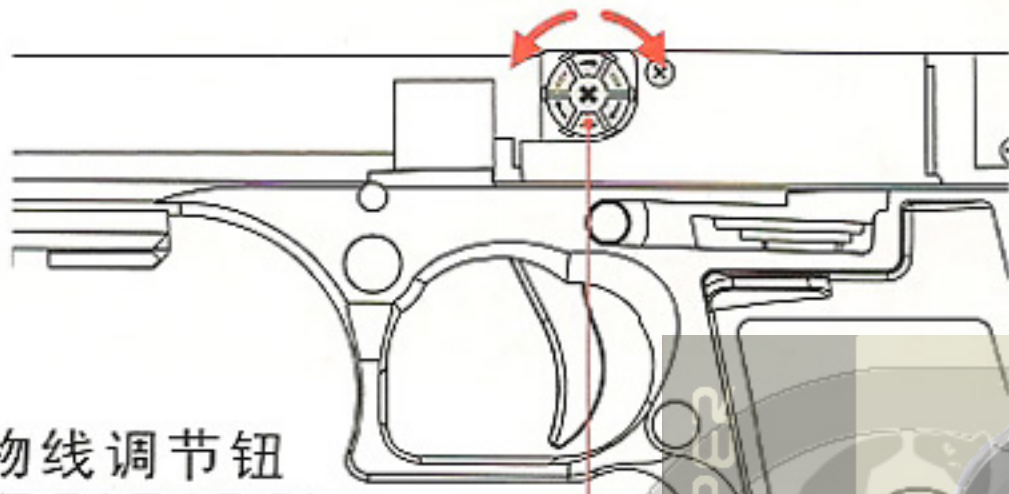


抛物线调节钮
THE PARABOLA
REGULATE BUTTON

 - ③ PUSH THE MAGAZINE INTO THE GUN TILL A CLICK SOUND HEARD.
将弹仓推入枪身直至听到“喀嚓”一声。



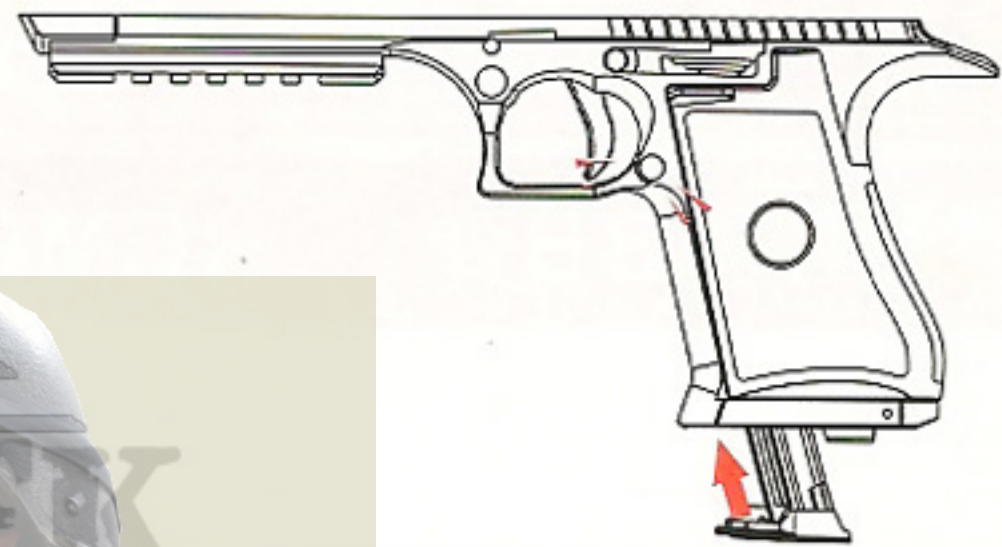


 - The best position is where the bullets fly horizontally, and the longest range is obtained.
保持水平方向的射击能够使BB弹获得最远射程。

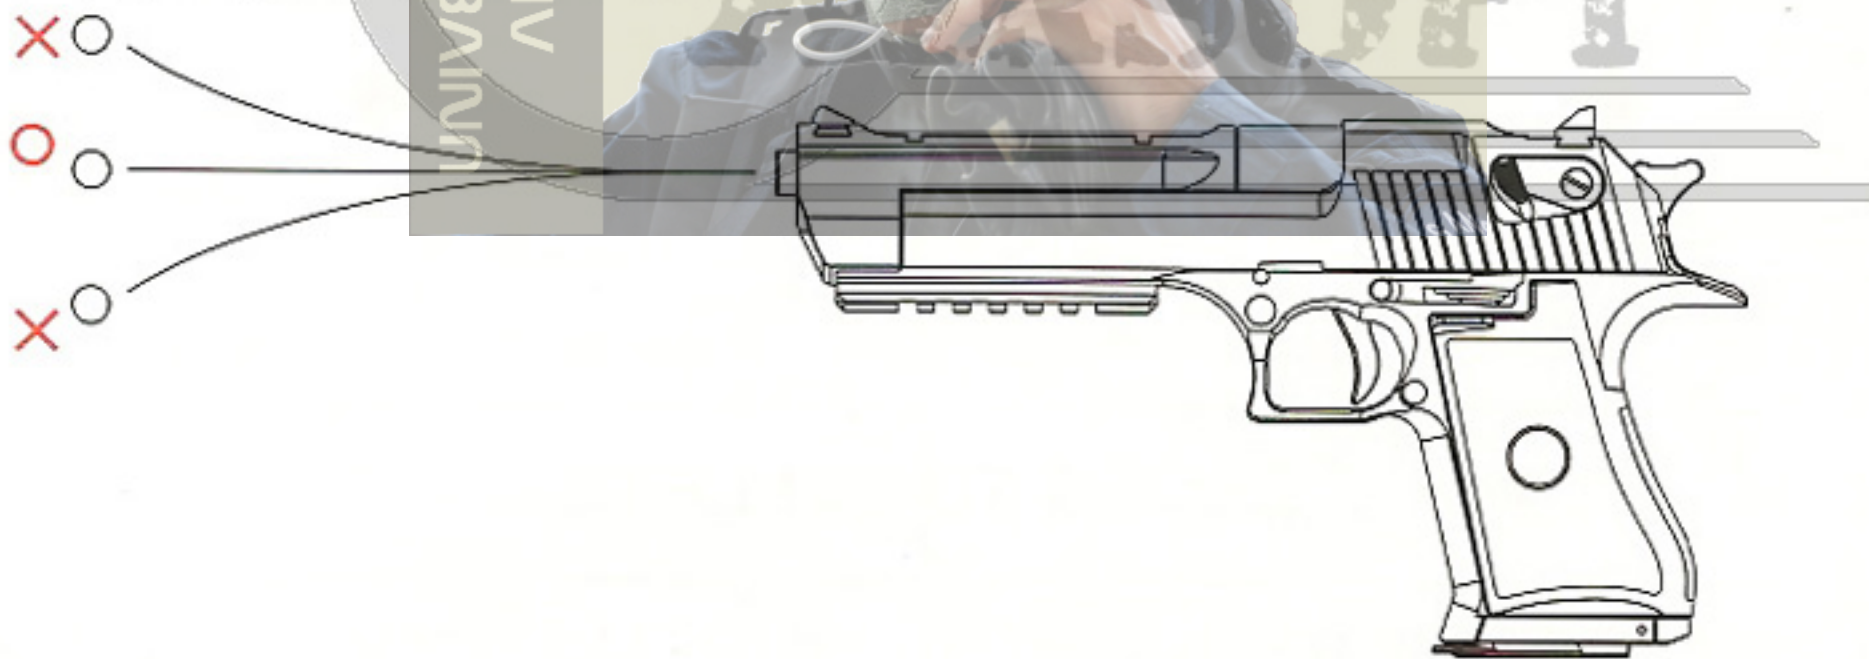


CAUTION 注意 WARNING 警告

   - Our company will not be responsible for trouble caused by using the bullet produced by other company.
我公司不对使用其它公司BB弹产品而引起事故负责。
- The bunglesome bb bullet is damage with the gun. Please use the precision bb bullet of our company.
拙劣的BB弹会对枪支造成严重损害，请使用我公司的标准BB弹系列产品。

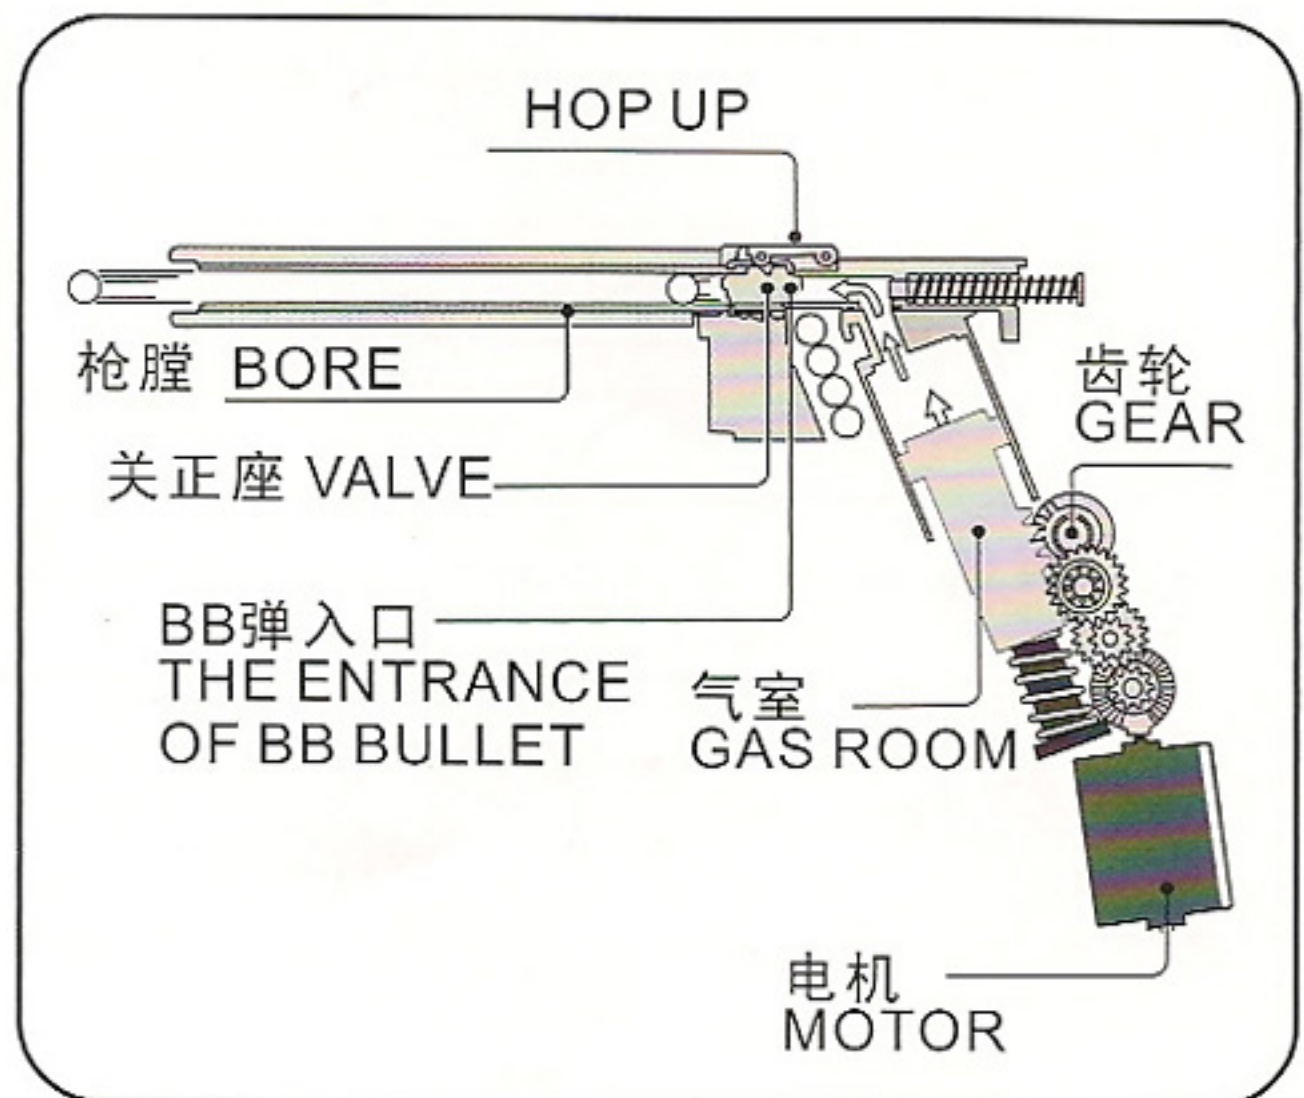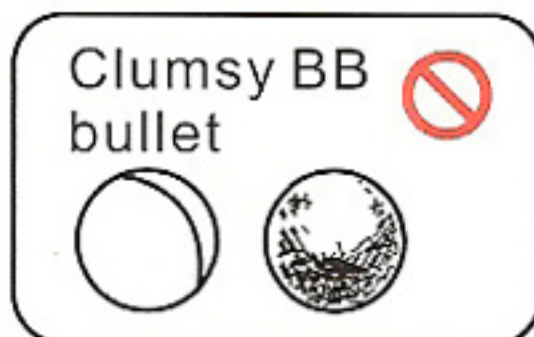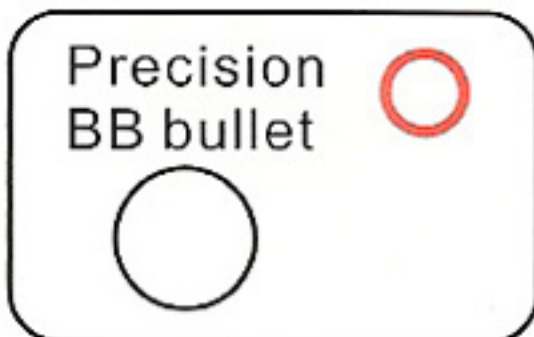


6. 射击 SHOT

 
- ① DIAL THE POINTER TO THE RUNNING/SINGLE SHOT POSITION
将调节钮拨到连发/单发位置

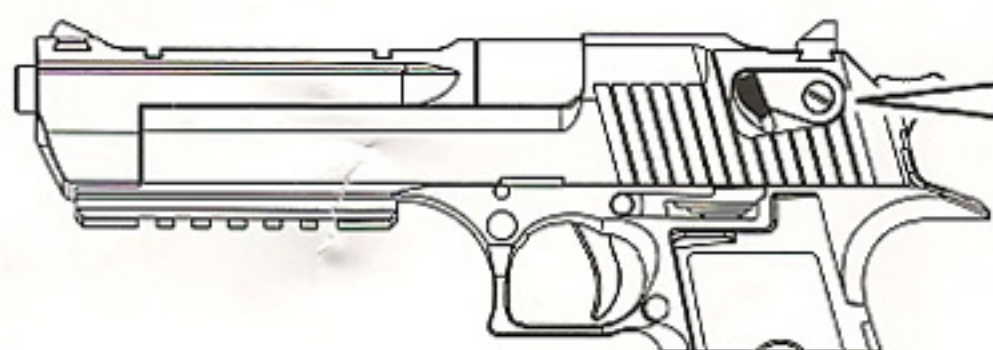


SINGLE SHOT : RUNNING SHOT
单发射击 : 连发射击

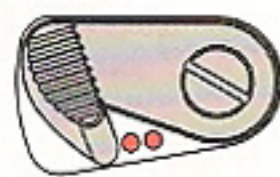 

- ② PUSH THE SAFETY TO THE TOP
将安全销推到上端

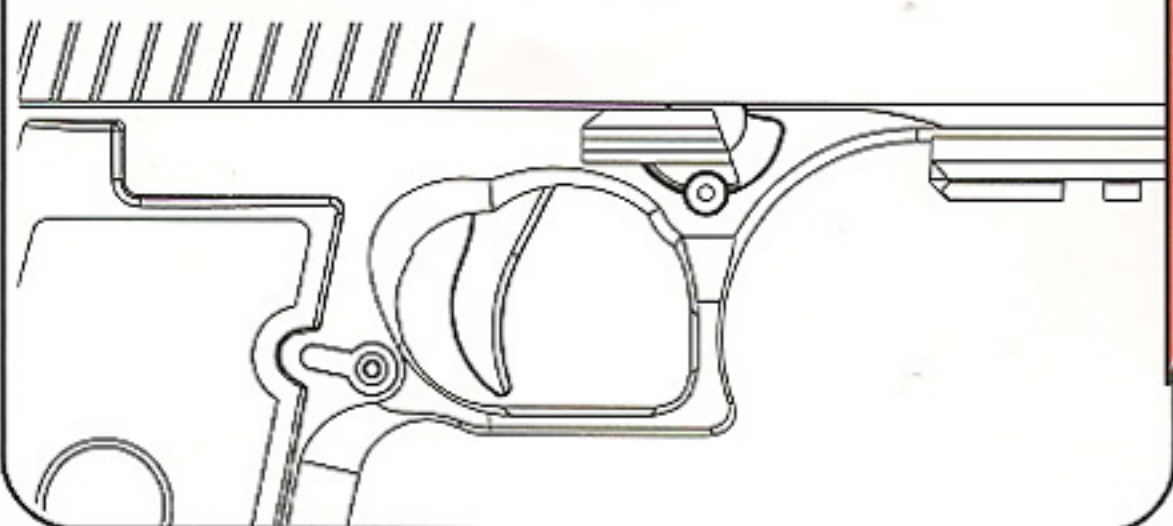 


- ③ PULL THE TRIGGER TO SHOT
扣动扳机射击

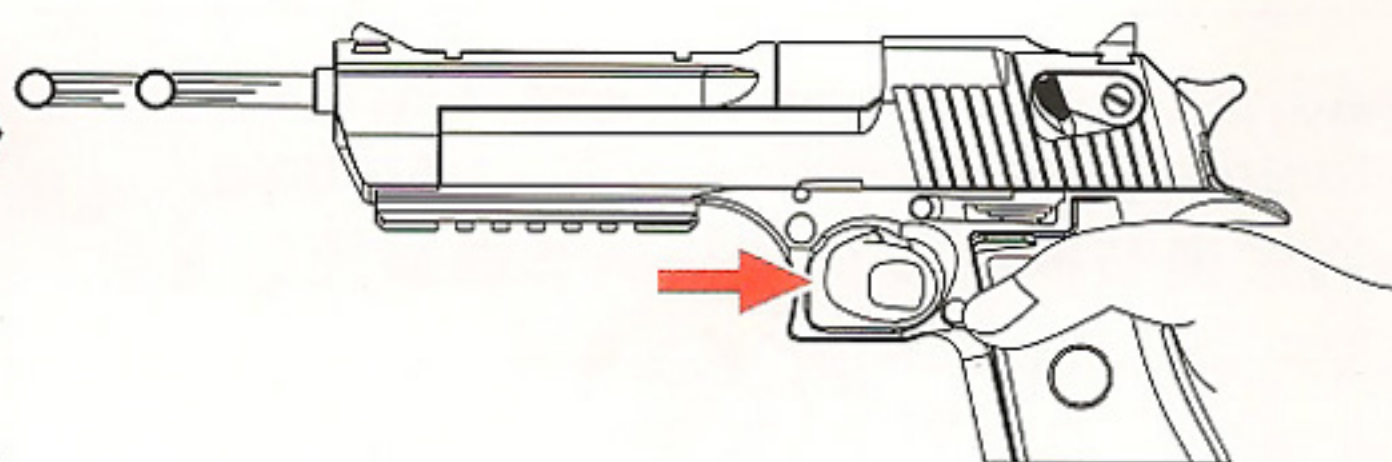 


7. 清除阻塞BB弹 REMOVE CLOGGED BULLETS

 1. 清通枪膛 CLEAN THE BORE

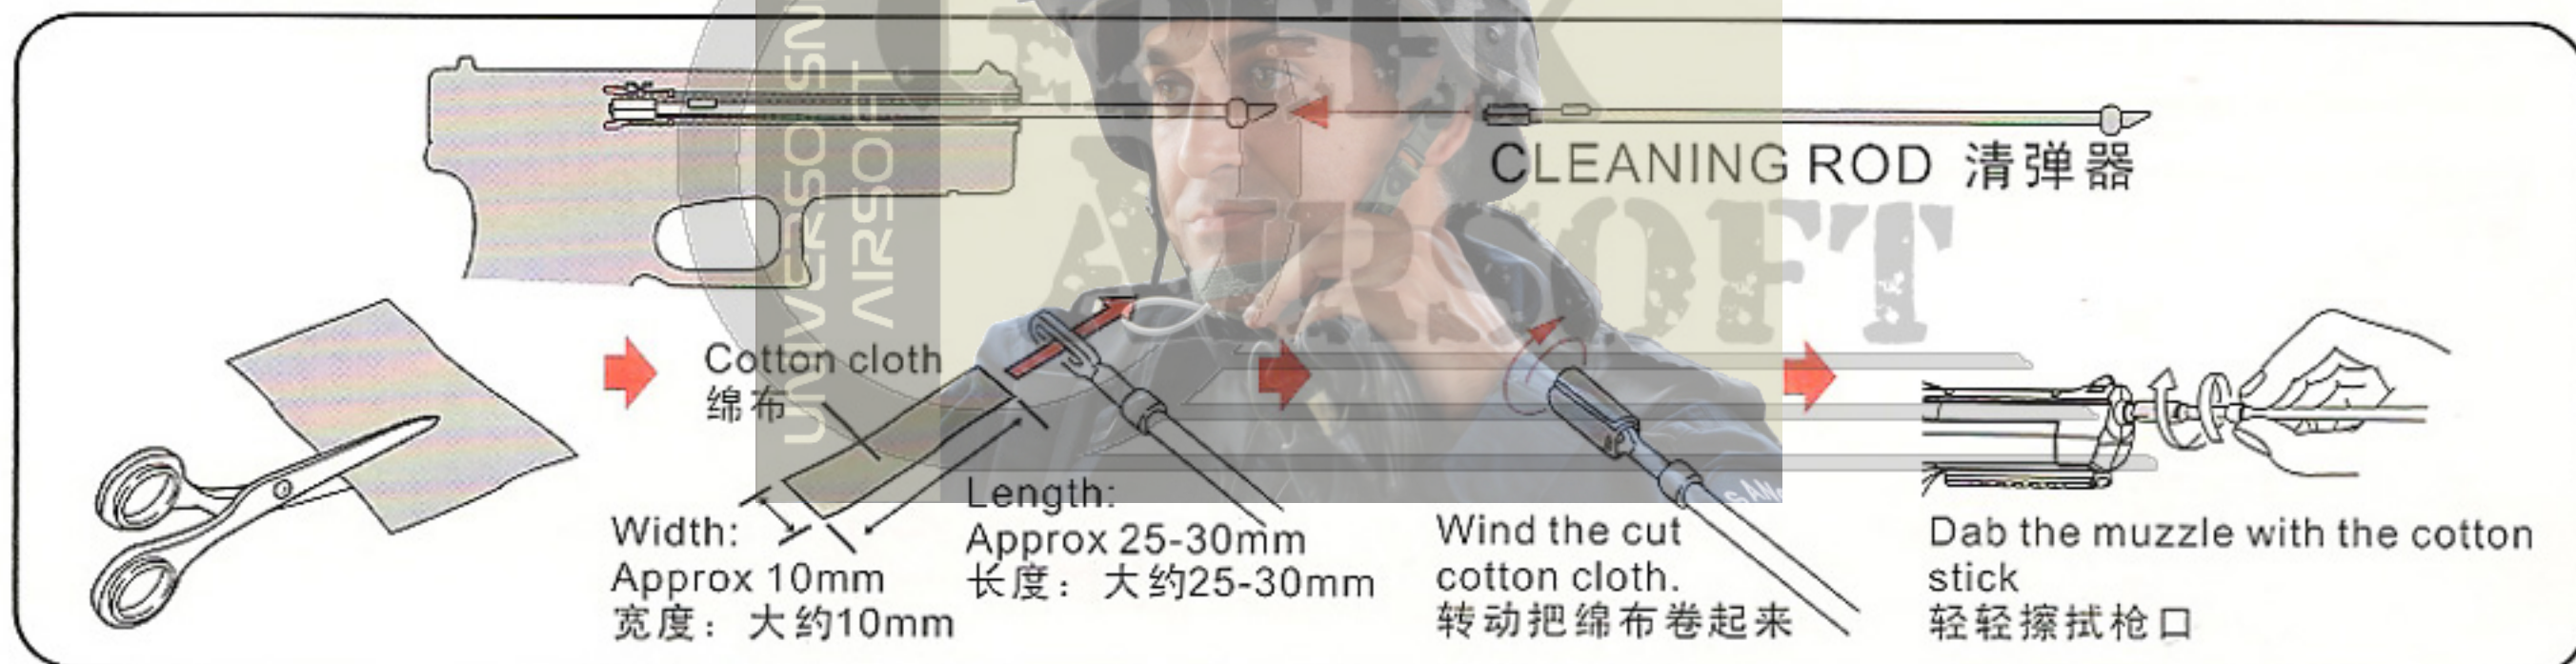


2. 清除阻塞BB弹 REMOVE CLOGGED BULLETS

 - ② WILL CLEANING ROD TO INSERT A GUN TUBE
将清弹器插入枪管。

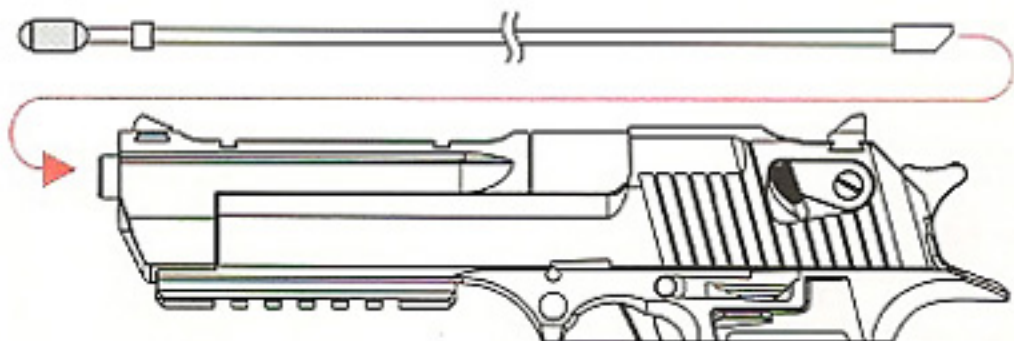

 - ③ REMOVE THE CLOGGED BULLETS.
清除阻塞的BB弹。




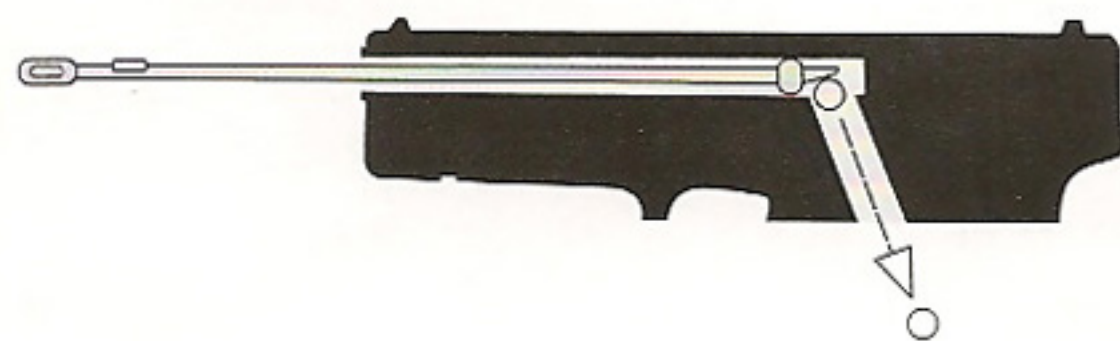


3. 电机的微调 ELECTRICAL ENGINEERING OF TINY ADJUST

ONLY WHEN THE MOTOR NOISE BECOMES HIGH AFTER OPERATIONS FOR A LONG PERIOD OF TIME, CONDUCT THE FINE ADJUSTMENT AS SHOWN.
若使用时间过长, 电机发出很大的噪音时, 请按如图所示对电机进行微调。



    ● THE COMPOSITION OF CM.121

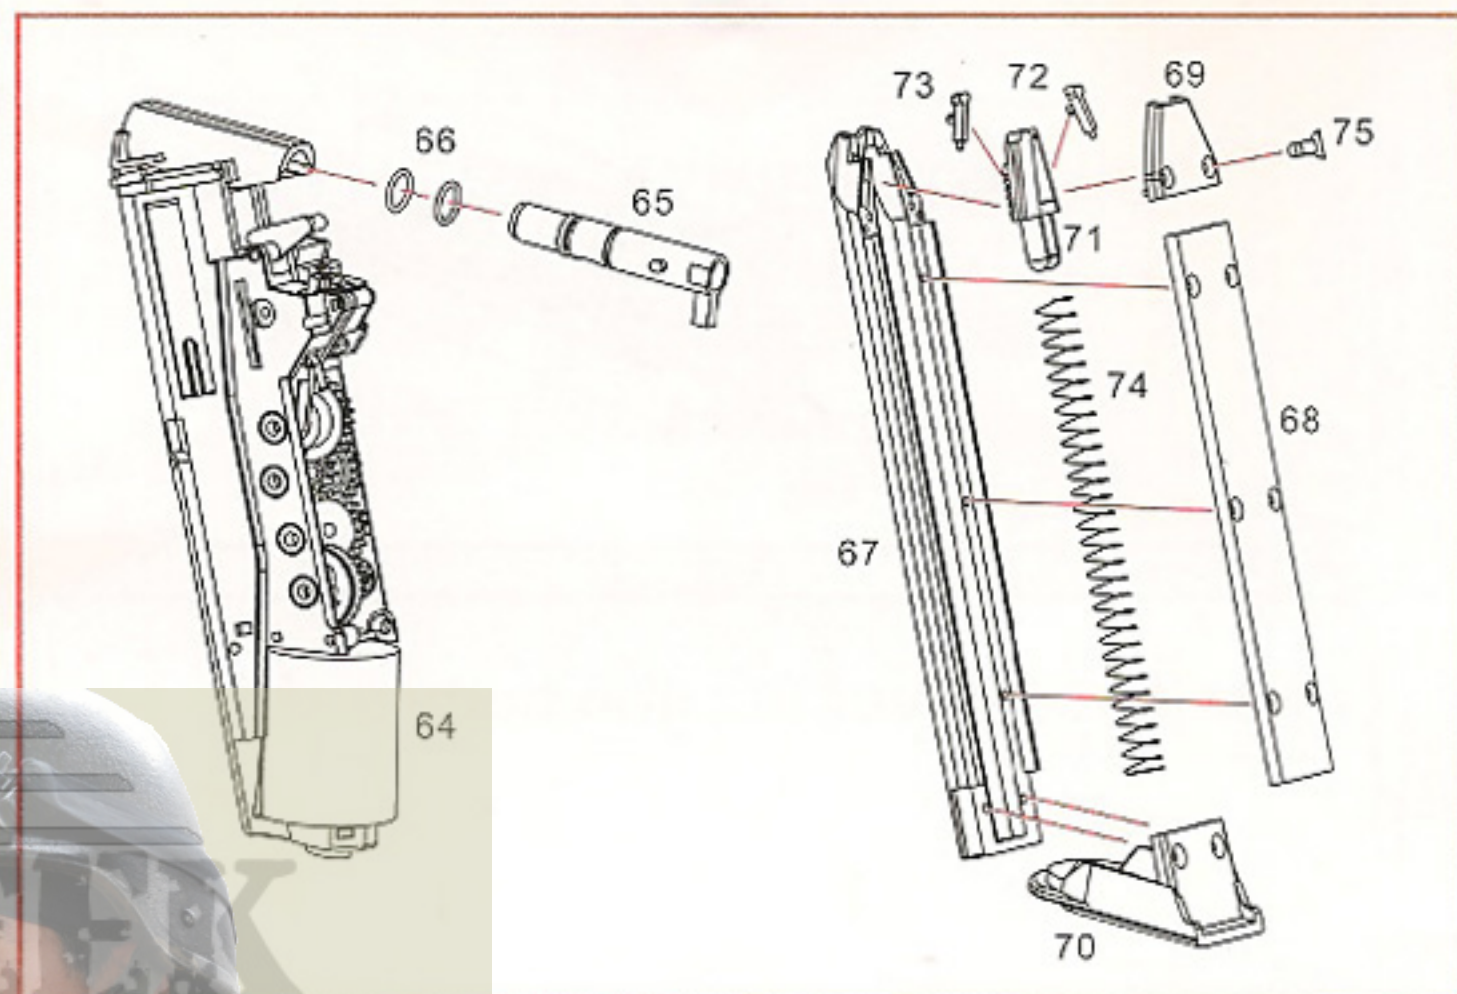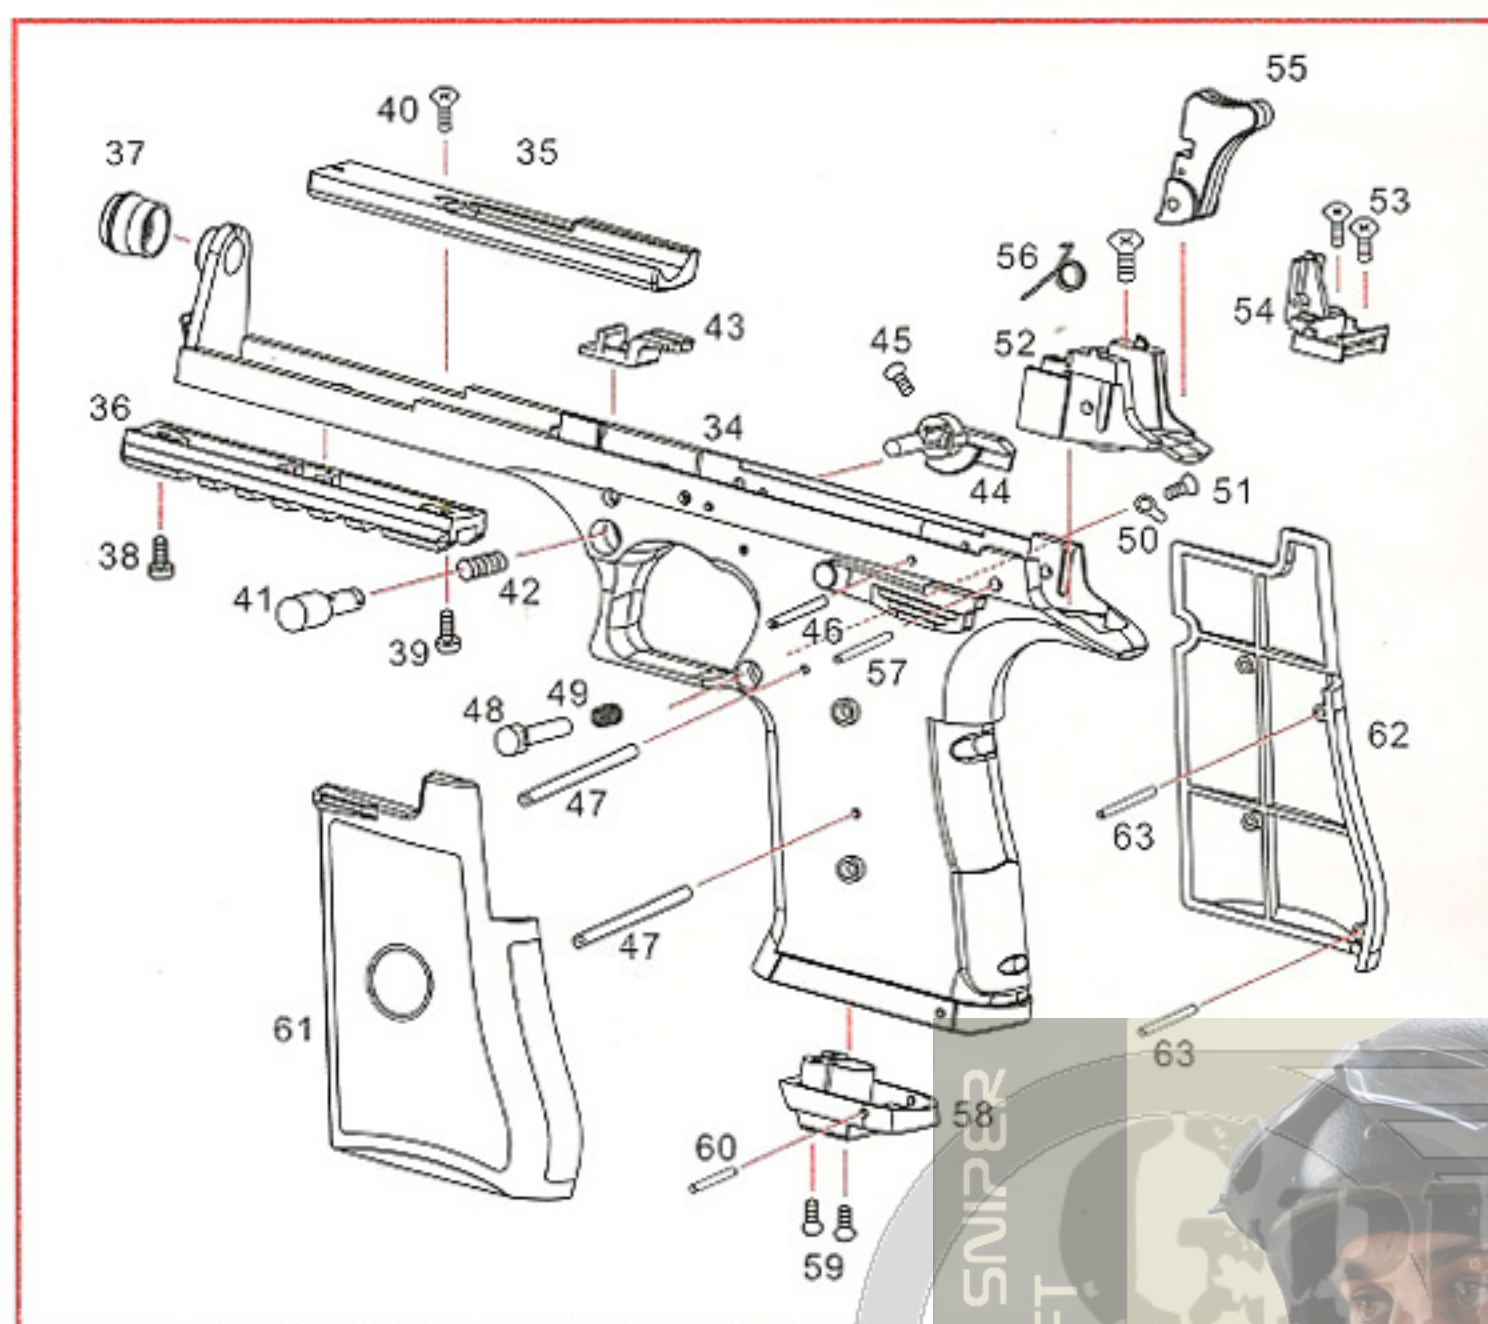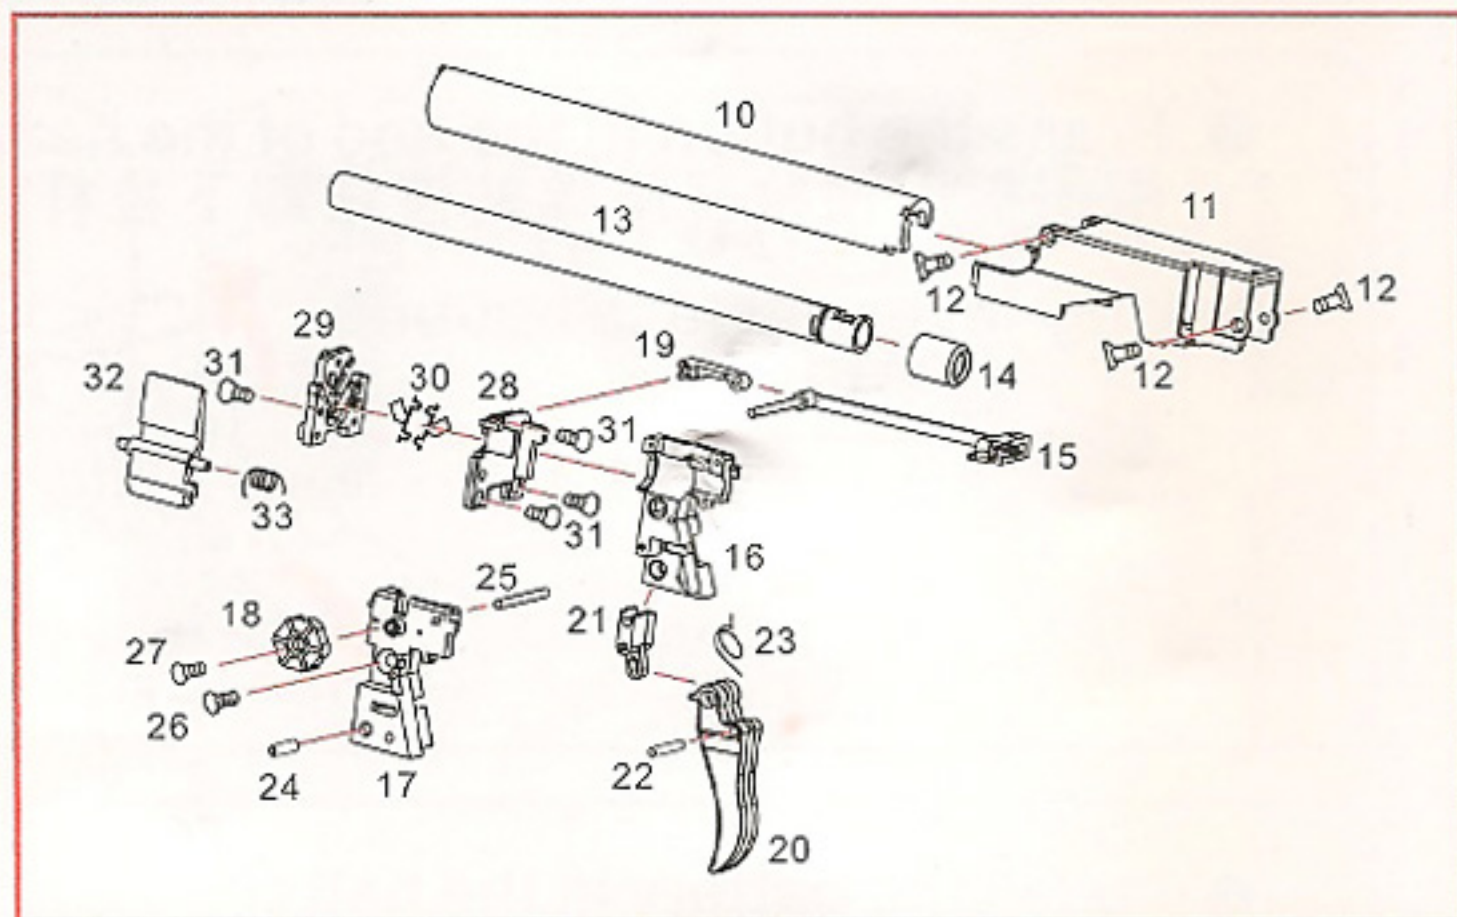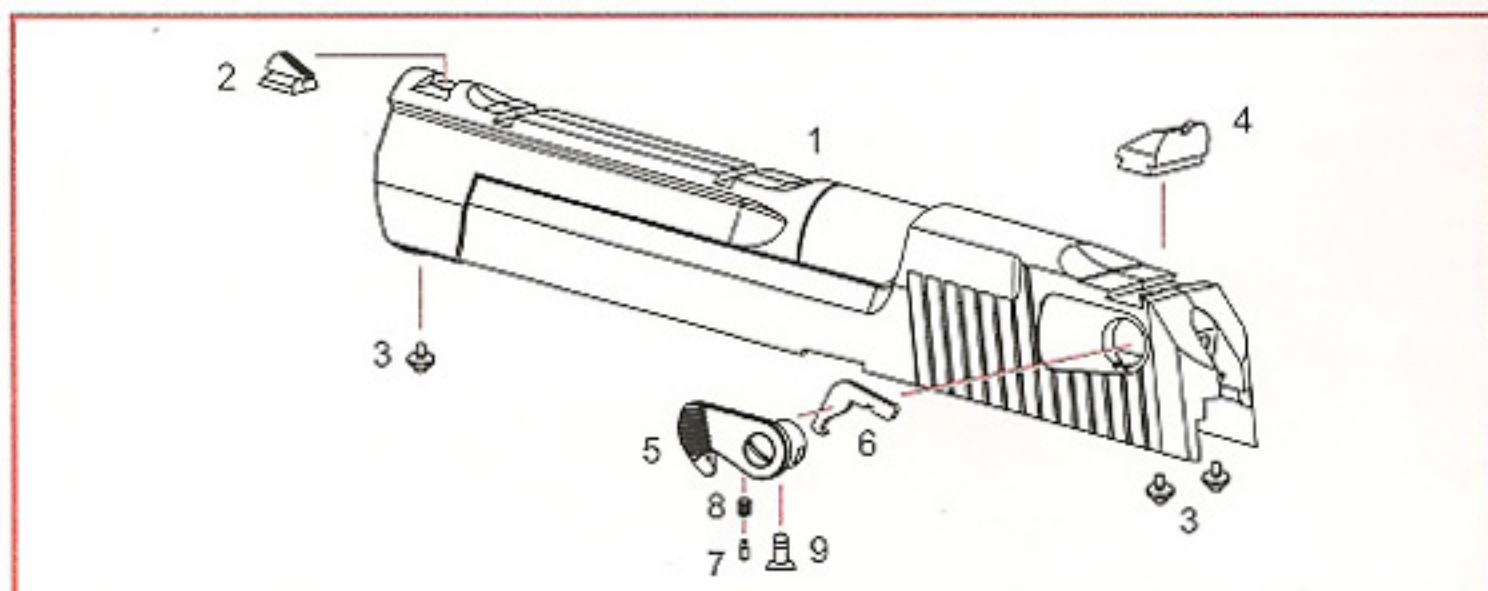

- 1.Puller
- 2.Front sight
- 3.Ø2×4 PWBHO D=5.5
- 4.Rear sight
- 5.Outo-semi changer
- 6.Auto shooting block
- 7.Semi shooting block
- 8.Spring
- 9.M2×6 KMHO
- 10.Barral cover
- 11.Hop-up cover
- 12.M2×6 KMHO
- 13.Inner barral
- 14.Hop-up rubber
- 15.Cock lever
- 16.Right hop-up base
- 17.Left hop-up bas
- 18.Hop-up adjust button
- 19.Hop-up adjust
- 20.Trigger
- 21.Driver
- 22.Ø2×9 shaft
- 23.Trigger spring
- 24.Copper
- 25.Ø1.5×12.5 shaft
- 26.M3×12 KMHO
- 27.M2×5 KMHO
- 28.Battery base
- 29.Battery cover
- 30.Battery base copper slice
- 31.Ø2×5 KBHO
- 32.Battery release
- 33.Battery release spring
- 34.Gun body
- 35.Additional weight metal slice
- 36.Rail
- 37.Gun tip
- 38.M3×12 PMHO inner-hexangular

- 拉手
- 前准星
- Ø2×4 PWBHO D=Ø5.5
- 后准星
- 单连发转换件
- 连发限位件
- 单连发限位粒
- 压簧
- M2×6 KMHO
- 枪管盖
- 过只罩
- M2×6 KMHO
- 枪内管
- 过只橡胶
- 拉杆
- 右过只座
- 左过只座
- Hop Up调节钮
- 过只调节件
- 扳机
- 传动件
- Ø2×9 光轴
- 扳机扭簧
- 铜套
- Ø1.5×12.5 铁轴
- M3×12 KMHO
- M2×5 KMHO
- 电池座底座
- 电池座盖
- 电池座铜片
- Ø2×5 KBHO
- 电池卸件
- 电池卸件扭簧
- 主体
- 加重块
- 鱼骨
- 枪头
- M3×12 PMHO内六角

- 39.M3×6 PMHO inner-hexangular
- 40.Ø3×7 KBHO
- 41.Safety button
- 42.Spring (Ø0.5×Ø6.2×17×12T)
- 43.Safety
- 44.Safety selector
- 45.Ø2.3×5 PBHO
- 46.Ø2×27 shaft
- 47.Ø2×26 shaft
- 48.Magazine safety button
- 49.Spring(Ø0.5×Ø5.3×6×4T)
- 50.Safety block
- 51.Ø2×6 KAHO
- 52.Gun body rear base
- 53.Ø3×7 KBHO
- 54.Loading rear base
- 55.Gun body release button
- 56.Spring(Ø0.8×Ø6.0×3T)
- 57.Ø3×27 shaft
- 58.Hand grip down cover
- 59.M2×6 PMHO
- 60.Ø2×28 shaft
- 61.Left grip cover
- 62.Right grip cover
- 63.Ø2×11.5 shaft
- 64.Gear box
- 65.Loading sets
- 66.O type ring
- 67.Magazine main body
- 68.Magazine coner
- 69.Magazine blocked cover
- 70.Magazine base
- 71.Bullets lifting tip
- 72.Right block
- 73.Left block
- 74.Spring
- 75.M2×6 KMHO

- M3×6 PMHO内六角
- Ø3×7 KBHO
- 保险按键
- 压簧(Ø0.5×Ø6.2×17×12T)
- 保险件
- 保险拨件
- Ø2.3×5 PBHO
- Ø2×27 花轴
- Ø2×26 花轴
- 弹盒保险按键
- 压簧(Ø0.5×Ø5.3×6×4T)
- 保险卡件
- Ø2×6 KAHO
- Ø3×7 KBHO
- 膛后座
- 击锤
- 扭簧(Ø0.8×Ø6.0×3T)
- Ø3×27 光轴
- 手把下盖
- M2×6 PMHO
- Ø2×28 花轴
- 左贴片
- 右贴片
- Ø2×11.5 单花轴
- 保箱
- 上膛套件
- 膛套O型圈
- 弹盒主体
- 弹盒盖
- 弹盒咀盖
- 弹盒座
- 开弹头
- 右咀卡件
- 左咀卡件
- 扁压簧
- M2×6 KMHO