


WWII01





MAUSER KAR 98K MODELS

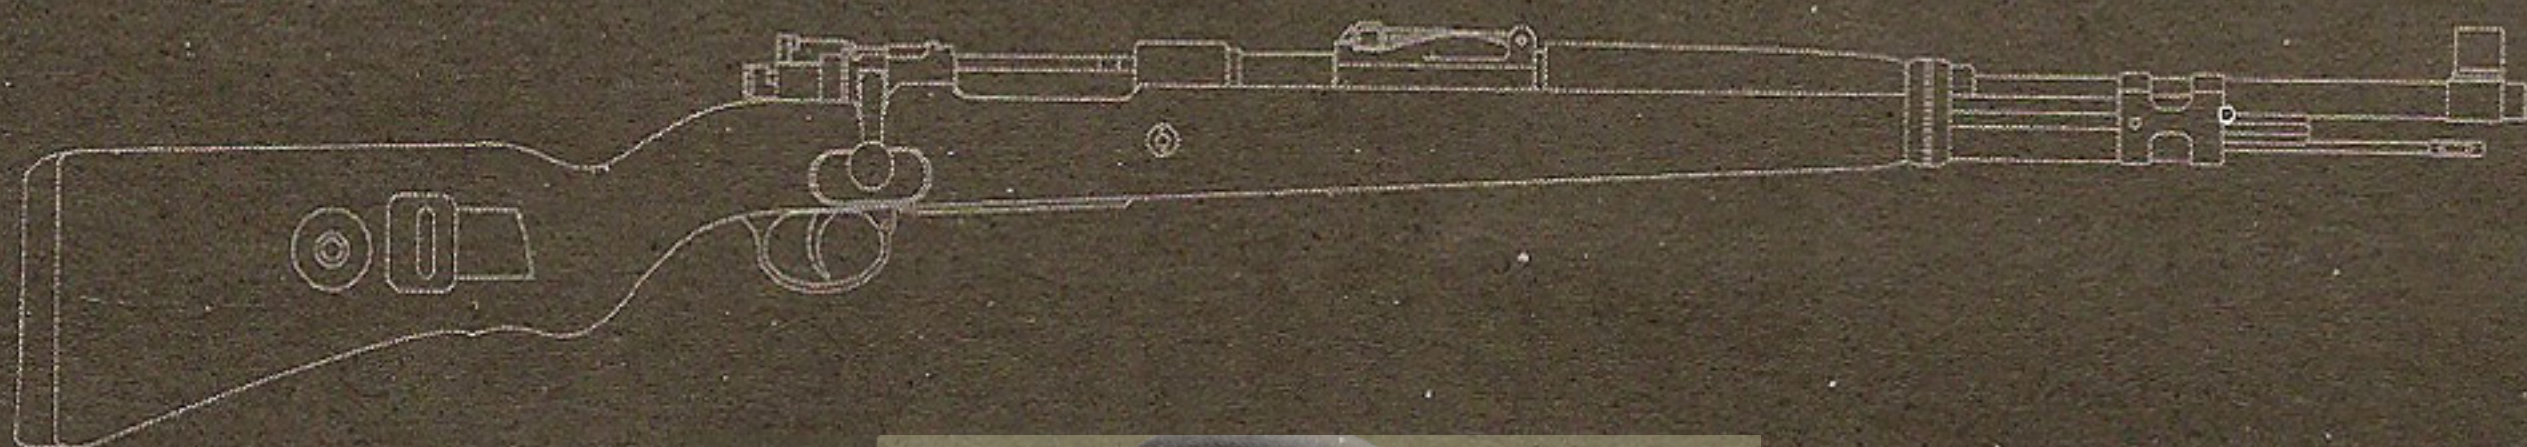

! Always read through this manual before operation.



- Always wear eye protective gear.
- Never aim or shoot a person or animal as the target.
- You may be punished if you are shooting for a practical joke.
- Never look into the gun muzzle.
- Always direct the muzzle towards a safe direction.
- Never shoot the air gun at places where people and cars pass cross.
- Avoid pulling the trigger carelessly.
- Please put away your fingers from the trigger, except when you are ready to shoot a target.
- Always put the gun in a case or bag when you are carrying it.
- Store the gun at places out of reach by children.
- Never disassemble or modify the air gun.
- Always set the selector lever to the Safely position.

VARIABLE HOPUP SYSTEM

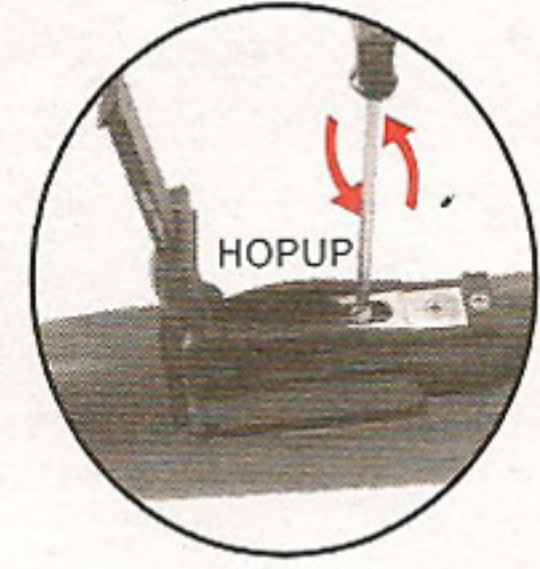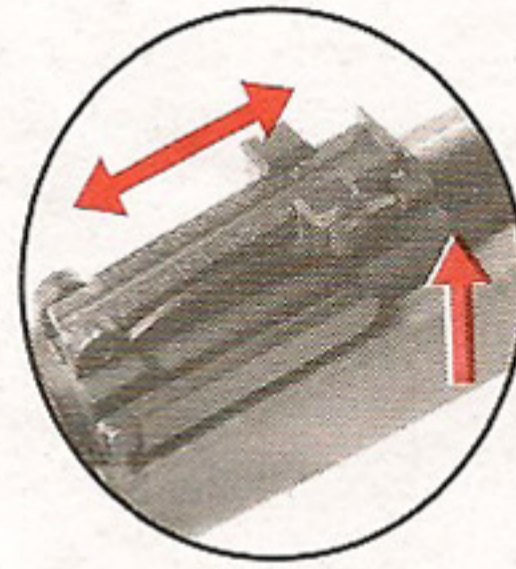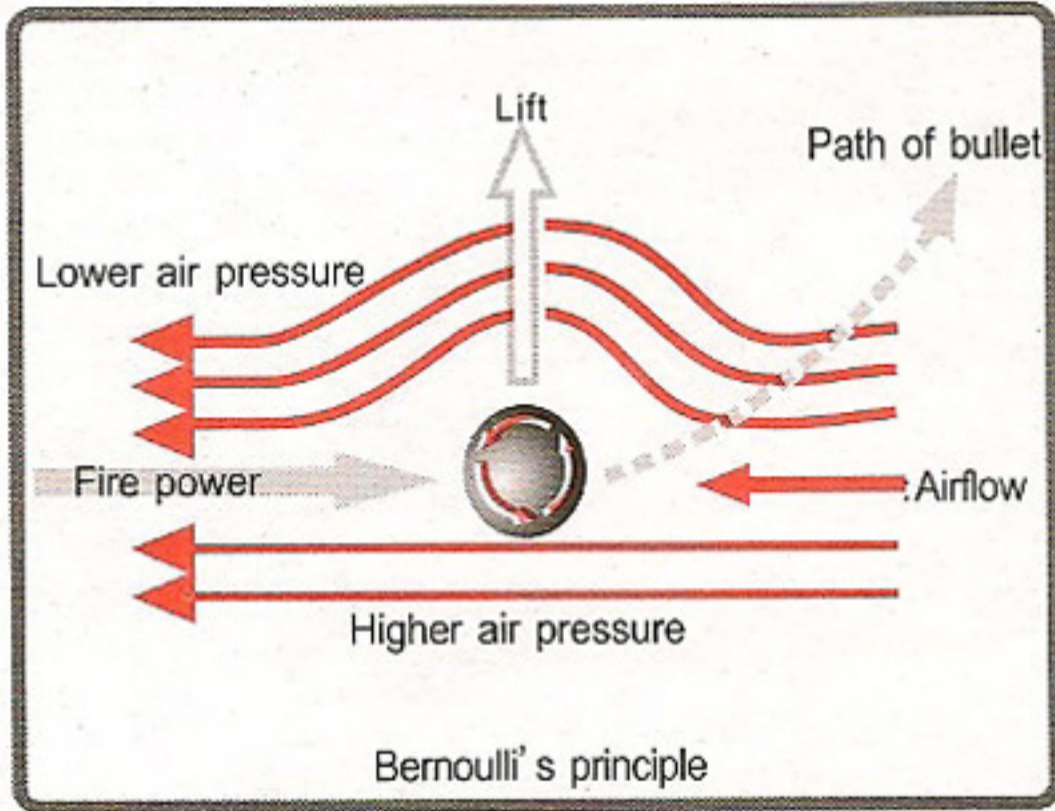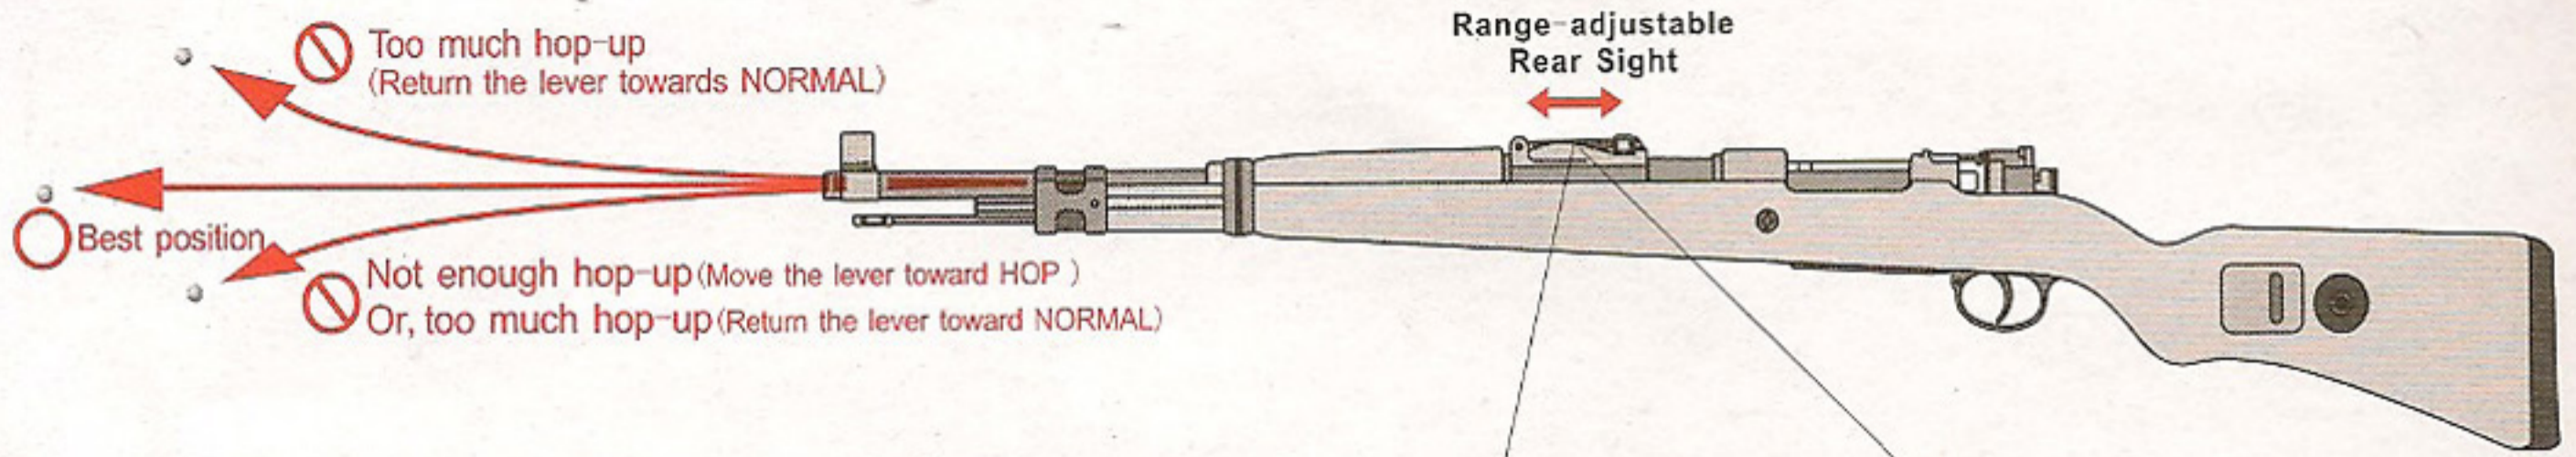

GENERAL DISMANTLE FOR MAINTENANCE (field-stripping)


1. Unload your rifle and remove all bullet from the area.
2. Remove the Bolt.
3. Remove the Magazine Floor Plate and Follower.

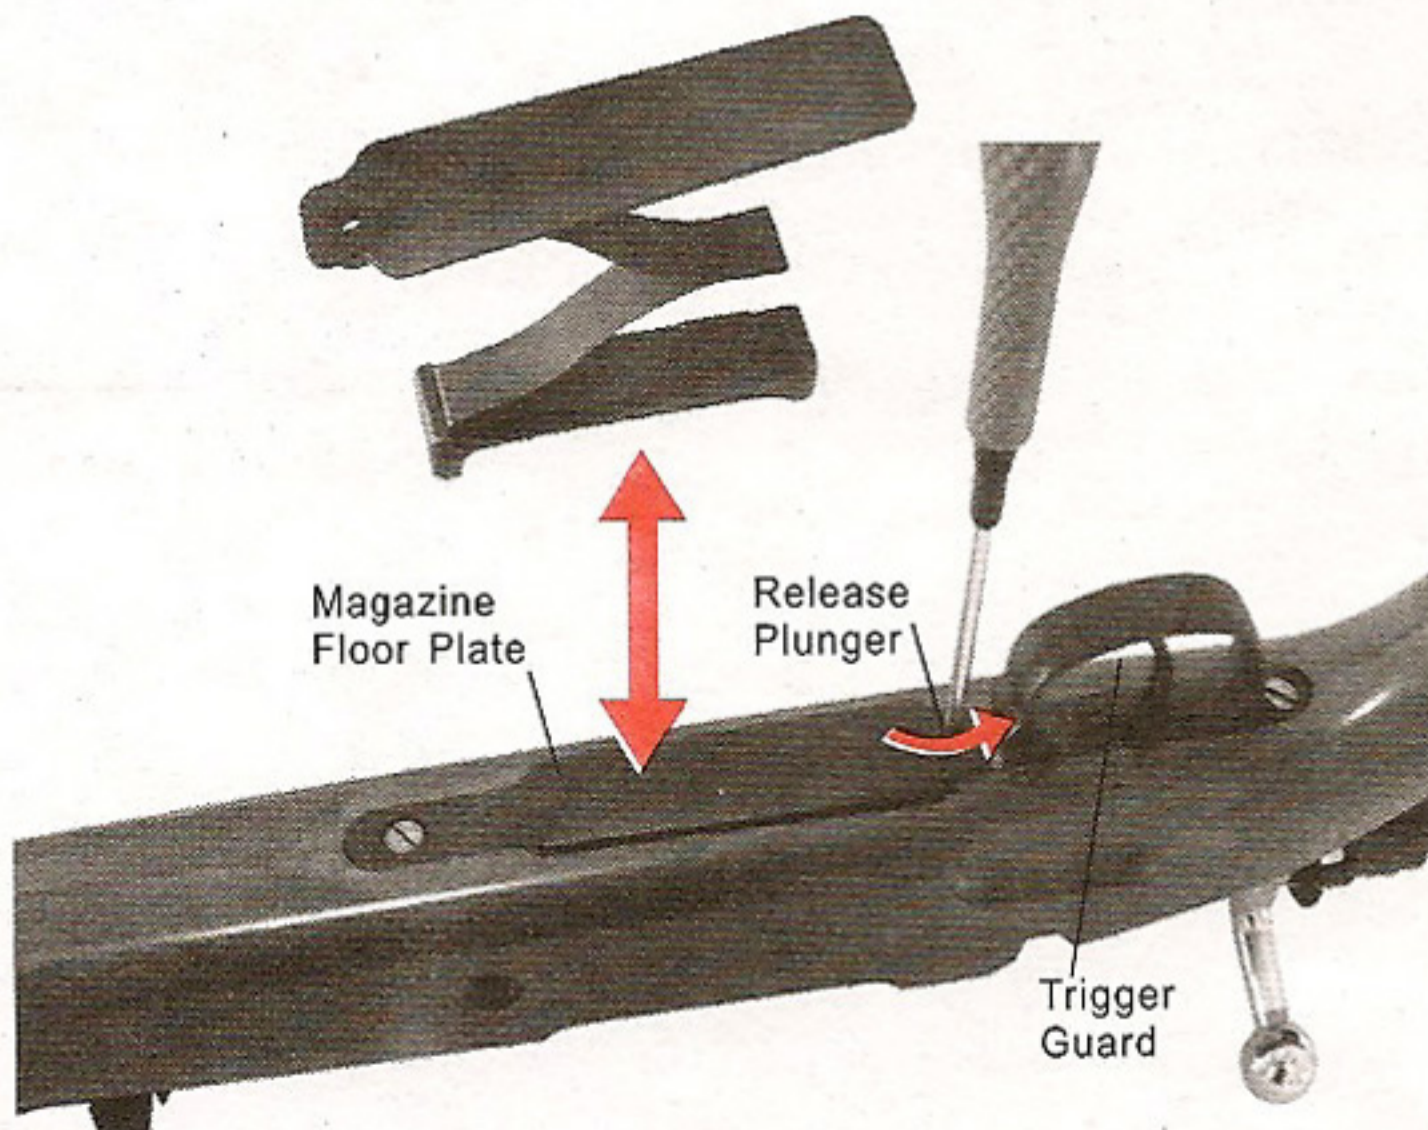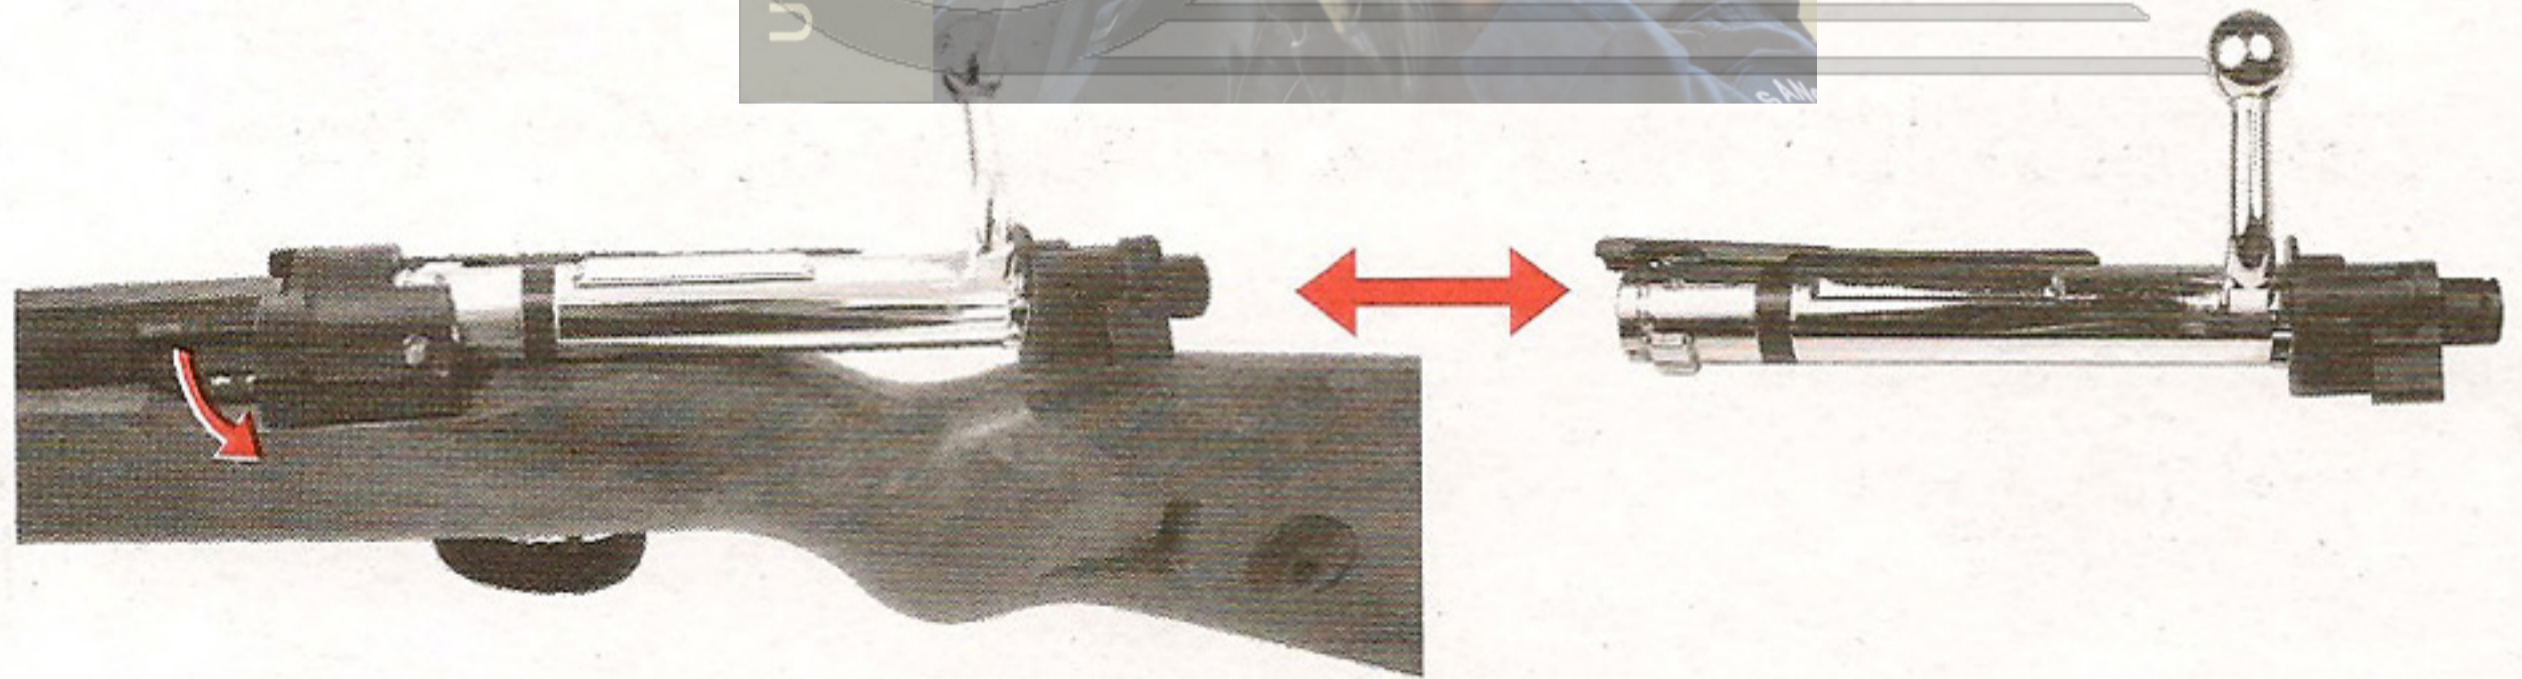


HOW TO SHOOTING




LOAD IN THE BB

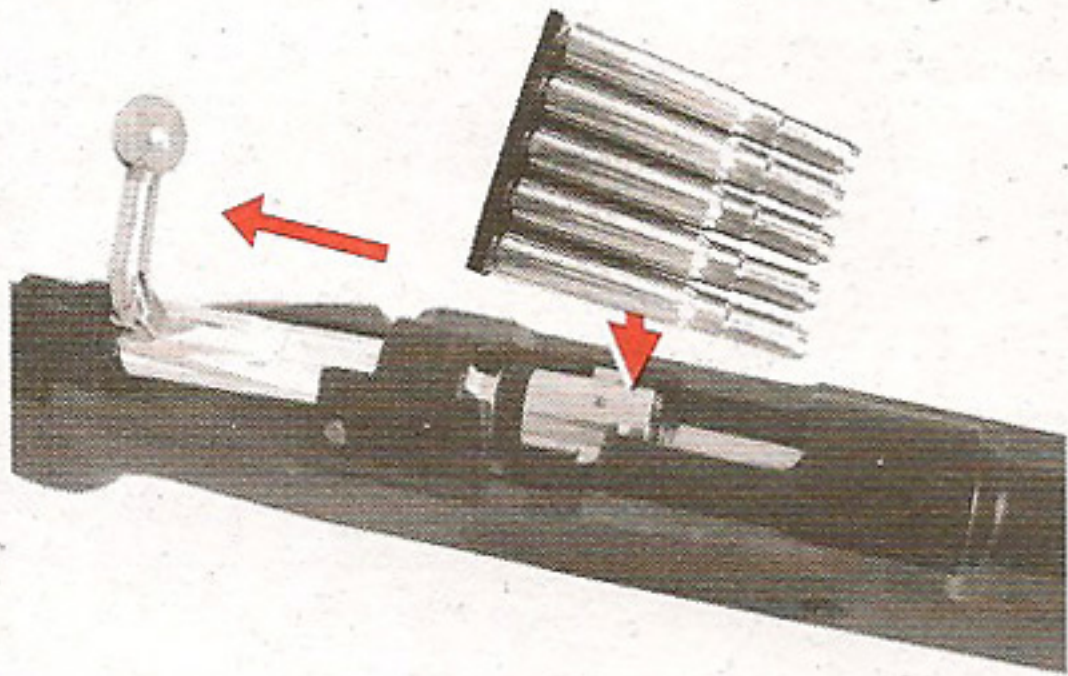


Pull Backward the curved bolt handle. Load In The Bullets (5 shells)

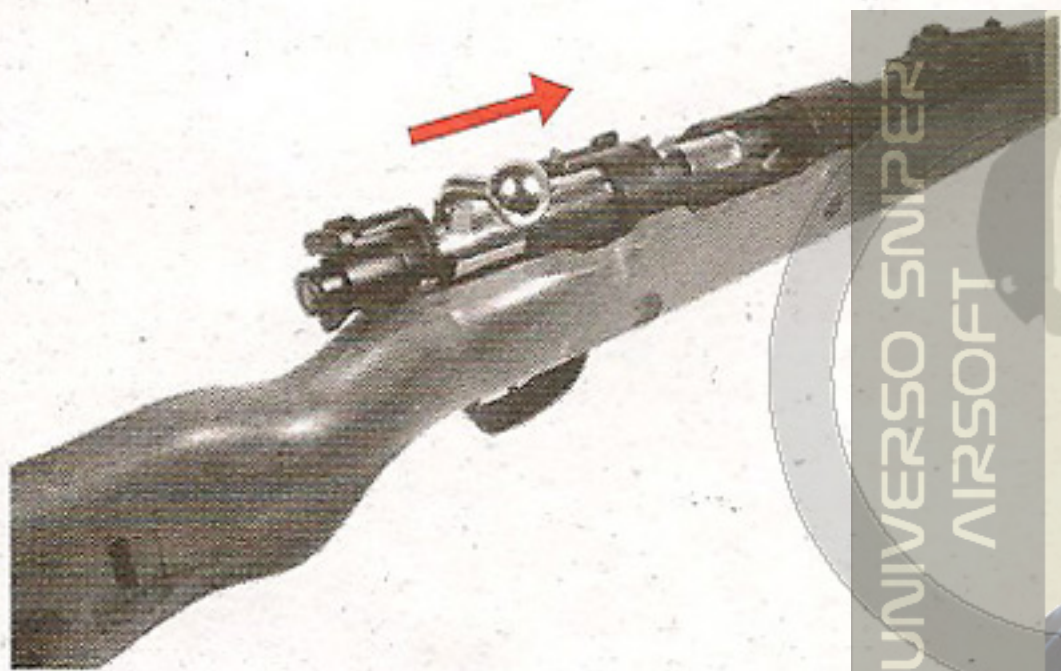

Push forward the curved bolt handle.

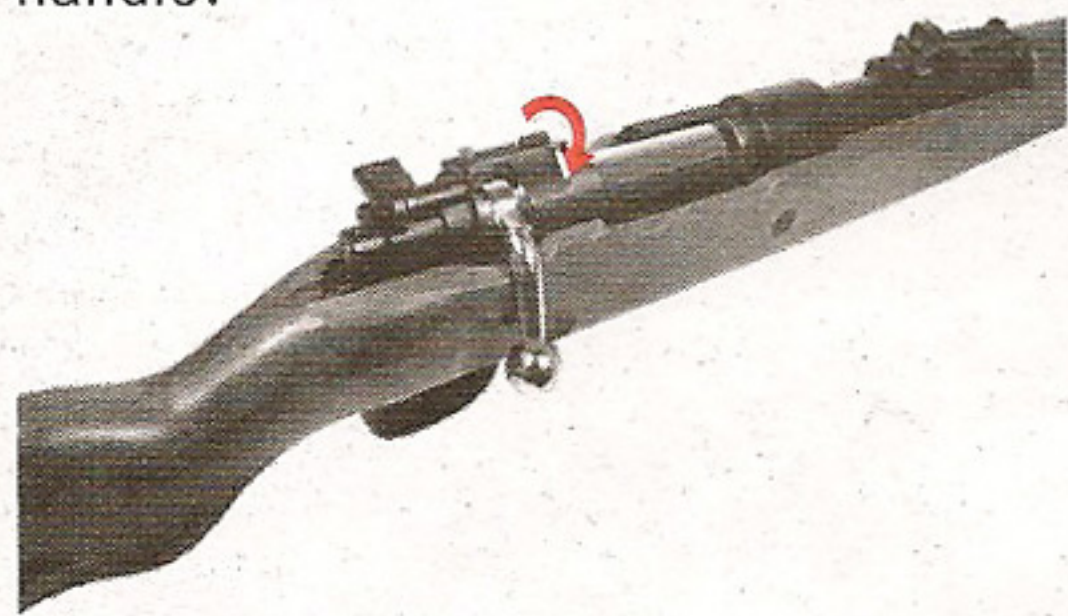


Lock

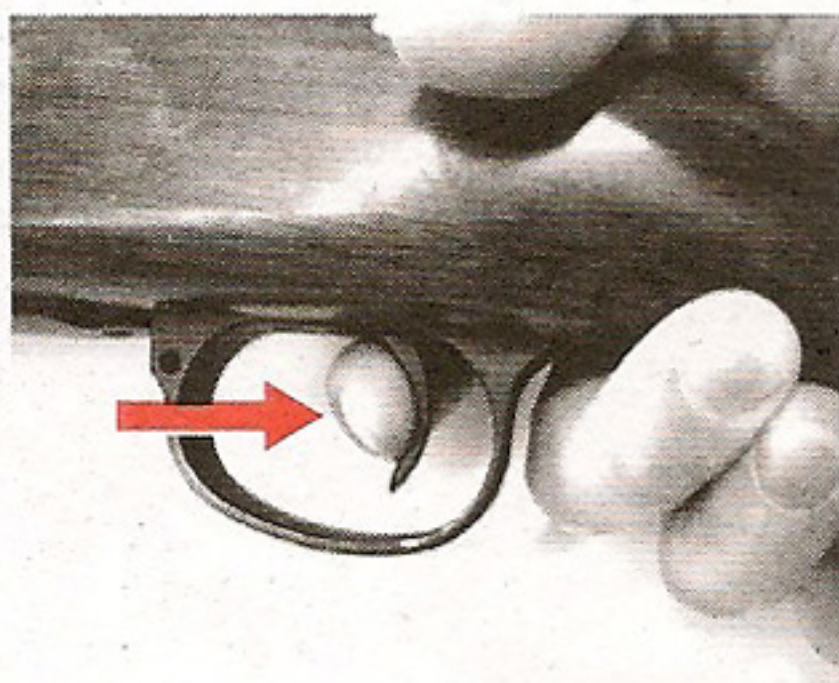

Pull the trigger. Fire

The Correct Sight Picture:

The rear sight has a 'V' notch, and the front sight has an inverted 'V' post. Simply match them up and make sure they are level and centered; the front in the rear and level. That forms the correct sight picture. The inverted 'V' post centered in the rear 'V' notch of the rear sight is the correct (and only) sight picture you should use.

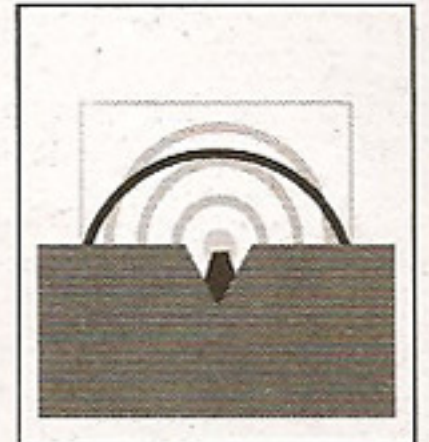

1. Fully safe position: Same as the 'full right' position. With the lever easily swung over to the full right position, the rifle cannot be fired, and the bolt cannot be opened. The rifle is fully safe.


2. Safe-unload position: Same as 'vertical' or 'middle' position. With the lever standing straight up, the rifle cannot be fired but the bolt can be opened for unloading. If you change your mind and choose not to shoot, you can safely unload your rifle without putting it in the fire position (unlike many newer designs). If you attempted to fire your rifle in the 'safe-unload' position, you would quickly see that the vertically standing safety lever would interfere with the sights and at the same time, the trigger is disabled!

3. Fire position: Same as 'full left' position. With the safety lever in the full left position, the rifle is ready to fire. It will fire if the trigger is pulled.

As an added feature, you can tell if your rifle is 'cocked' by just looking at it; without even picking it up! Just look at the rear of the bolt and see how far the firing pin base protrudes rearward from the gas shield. If it protrudes about a half inch, you know it is cocked, so be extra careful. If it protrudes only one quarter inch, you know it is not cocked. The difference is easy to see or even feel, in the dark.



1. Right: Safe & Locked

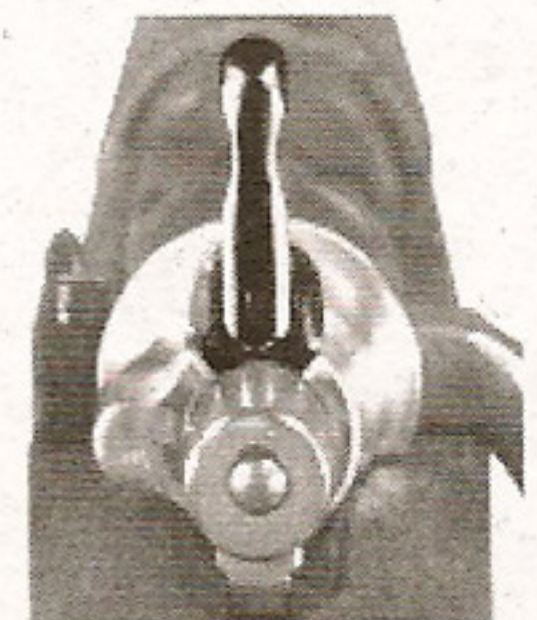


2. Vertical: Safe & Unlocked



3. Full Left: Fire

WWII AIRSOFT SERIES

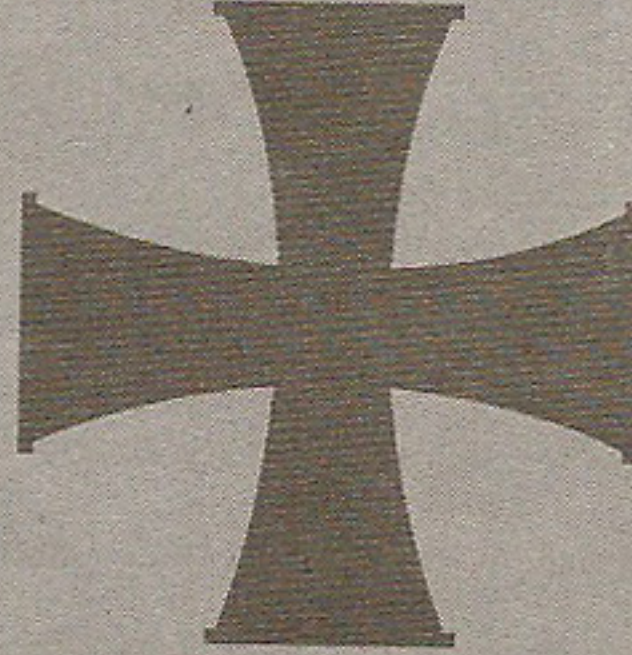

DESCRIPTION OF EVERY PART

